
MIL-F-24646/11(SH)
30 November 1984
SUPERSEDING
(See table I)

MILITARY SPECIFICATION SHEET

FUSE BOXES, FEEDER DISTRIBUTION, WITH SWITCHES, WATERTIGHT (3 FEET), 125 VOLTS, ALTERNATING CURRENT, SINGLE AND THREE PHASE BUSES, SINGLE AND DOUBLE FEEDERS, SINGLE PHASE BRANCHES, 0-30 AMPERE MIDGET FUSES, AND SNAP SWITCHES, SYMBOLS 645, 645.1, 649.1 AND 650.1

This specification sheet is approved for use by the Naval Sea Systems Command, Department of the Navy, and is available for use by all Departments and Agencies of the Department of Defense.

The complete requirements for acquiring the fuse boxes described herein shall consist of this document and the latest issue of MIL-F-24646(SH).

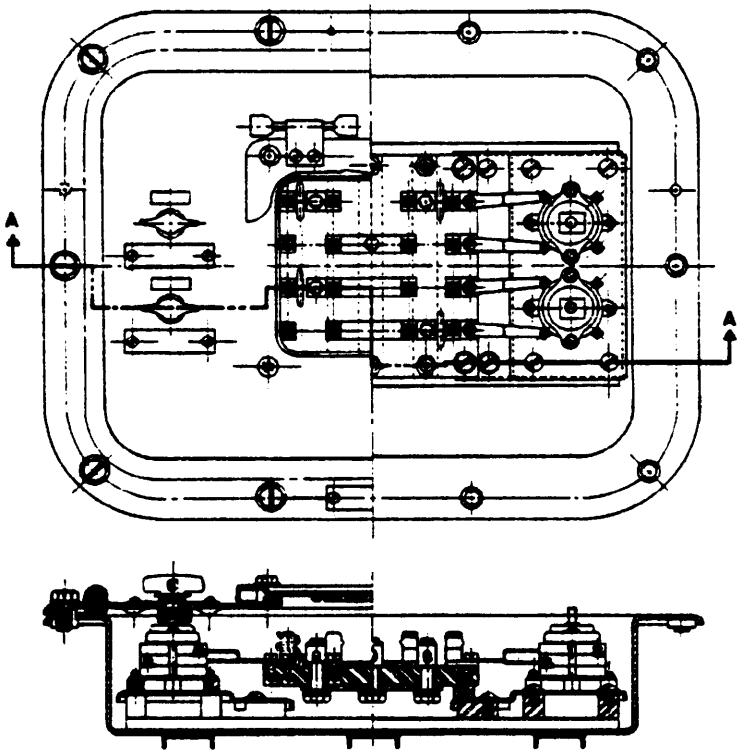

SH 131524

SECTION A-A

FIGURE 1. Fuse box assembly, typical. 01 02 03 04
(Symbol 649.1 shown)


NOTES:

1. Dimensions are in inches.
2. Unless otherwise specified herein, tolerances shall be as follows:
   Two place decimals - plus or minus 0.02.
   Three place decimals - plus or minus 0.005.

FSC 6110

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:34Z
Check the source to verify that this is the current version before use.

SYMBOL NO	DIMENSIONS (REF) A	B	C
645	16.38	13.38	4.62
645.1	16.38	13.38	4.62
649.1	16.38	13.38	4.62
650.1	16.38	15.38	4.62

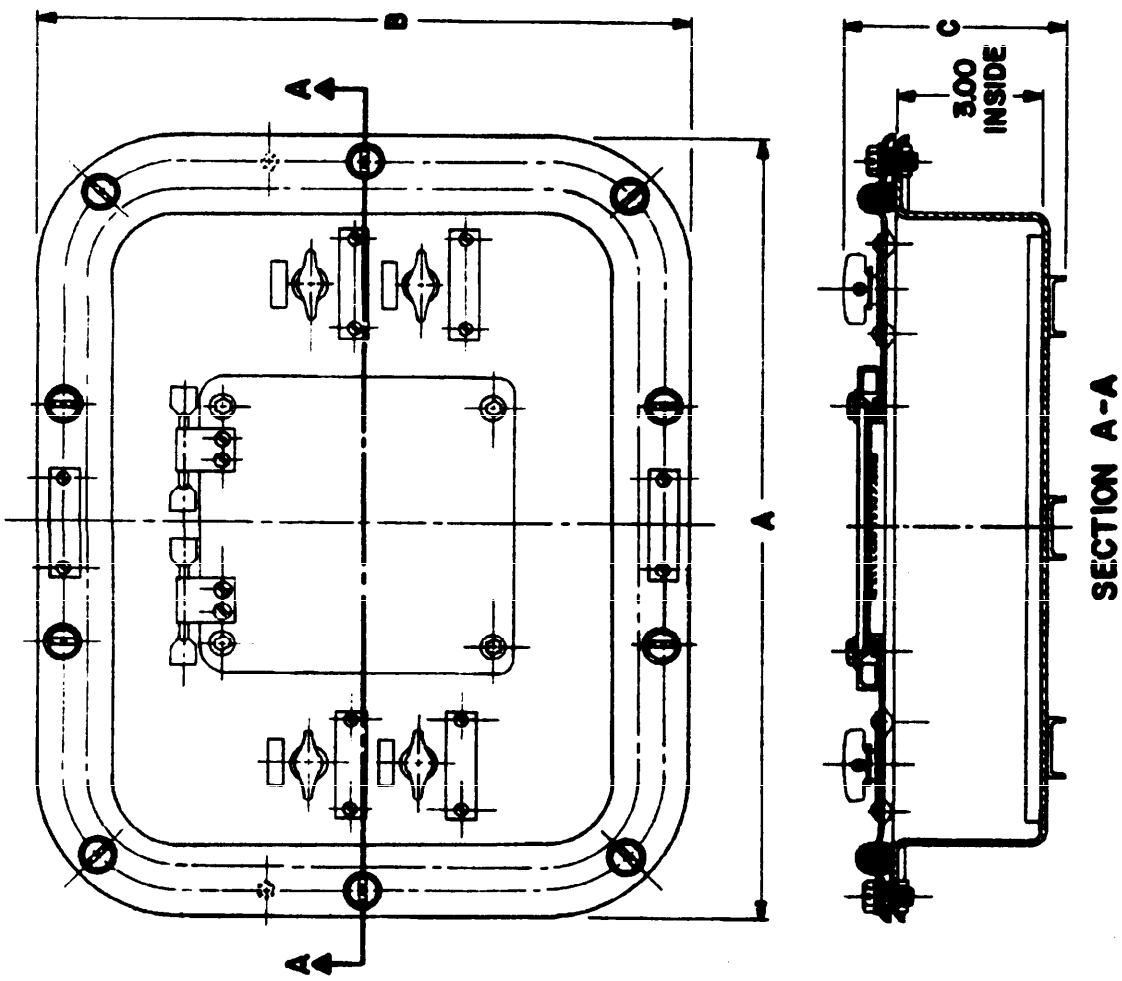


SH 131525

FIGURE 2. Enclosure, overall dimensions. (05) (06) (07)

(Symbols 645, 645.1, 649.1 and 650.1)

Source: https://assist.dla.mil -- Downloaded: 20260-20T00:34Z
Check the source to verify that this is the current version before use.

SYMBOL NO	DIMENSIONS A	B
645	11.44	5.72
645.1	11.44	5.72
649.1	11.44	5.72
650.1	13.44	6.72

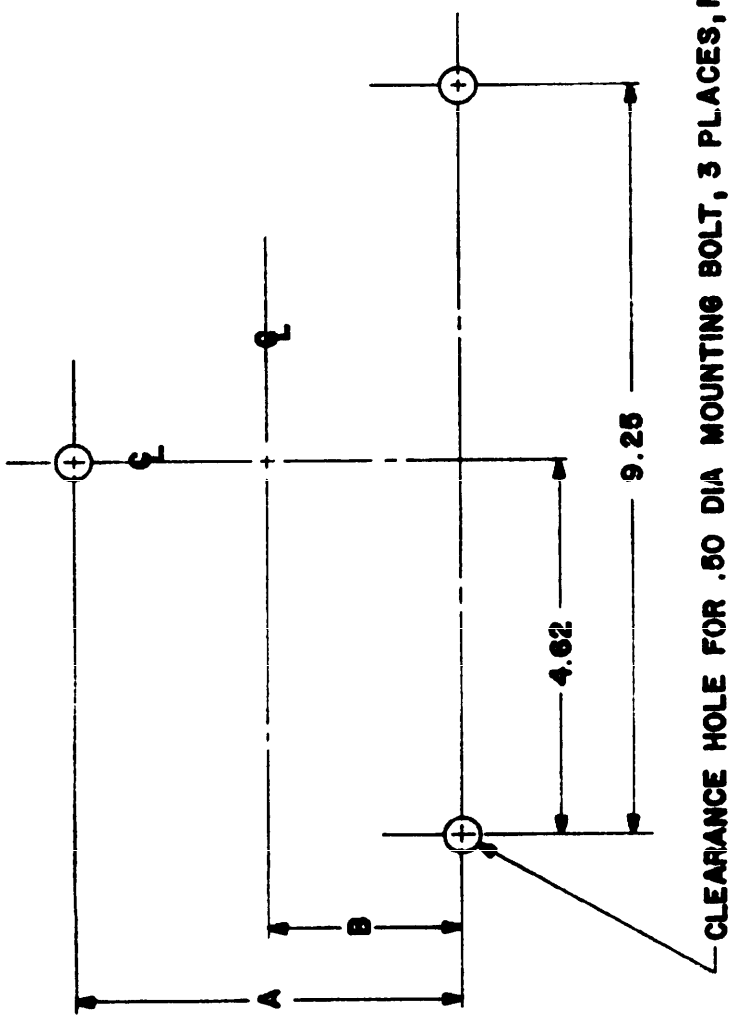



SH 131526

FIGURE 3. Mounting dimensions, ref.

(Symbols 645, 645.1, 649.1 and 650.1)

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:34Z
Check the source to verify that this is the current version before use.

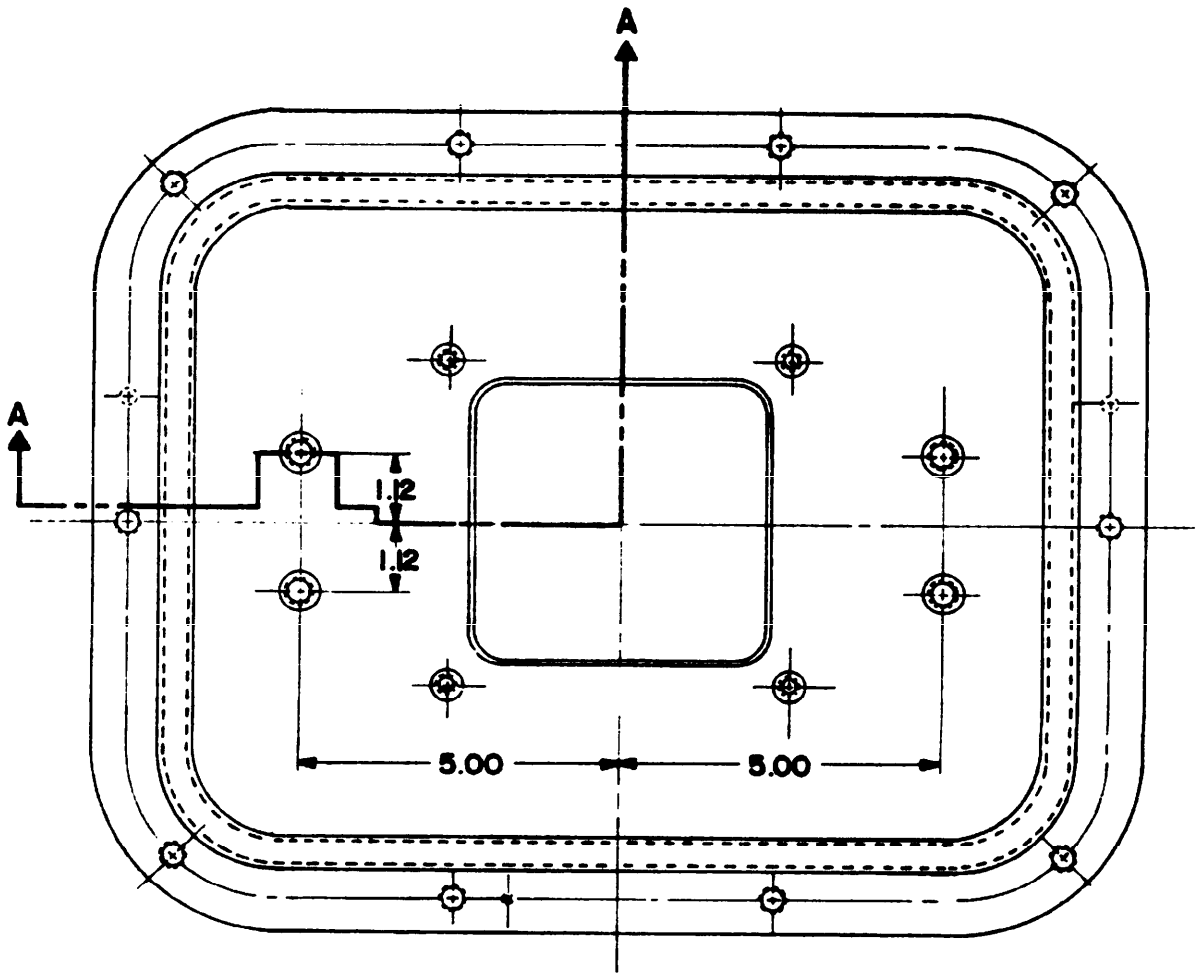

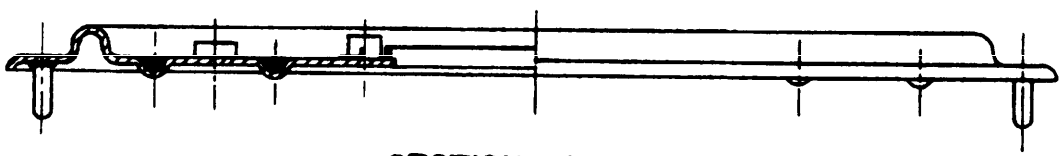


SECTION A-A

SH 131527

FIGURE 4. Cover assembly, typical.

(Symbols 645, 645.1, 649.1 and 650.1)

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:34Z
Check the source to verify that this is the current version before use.

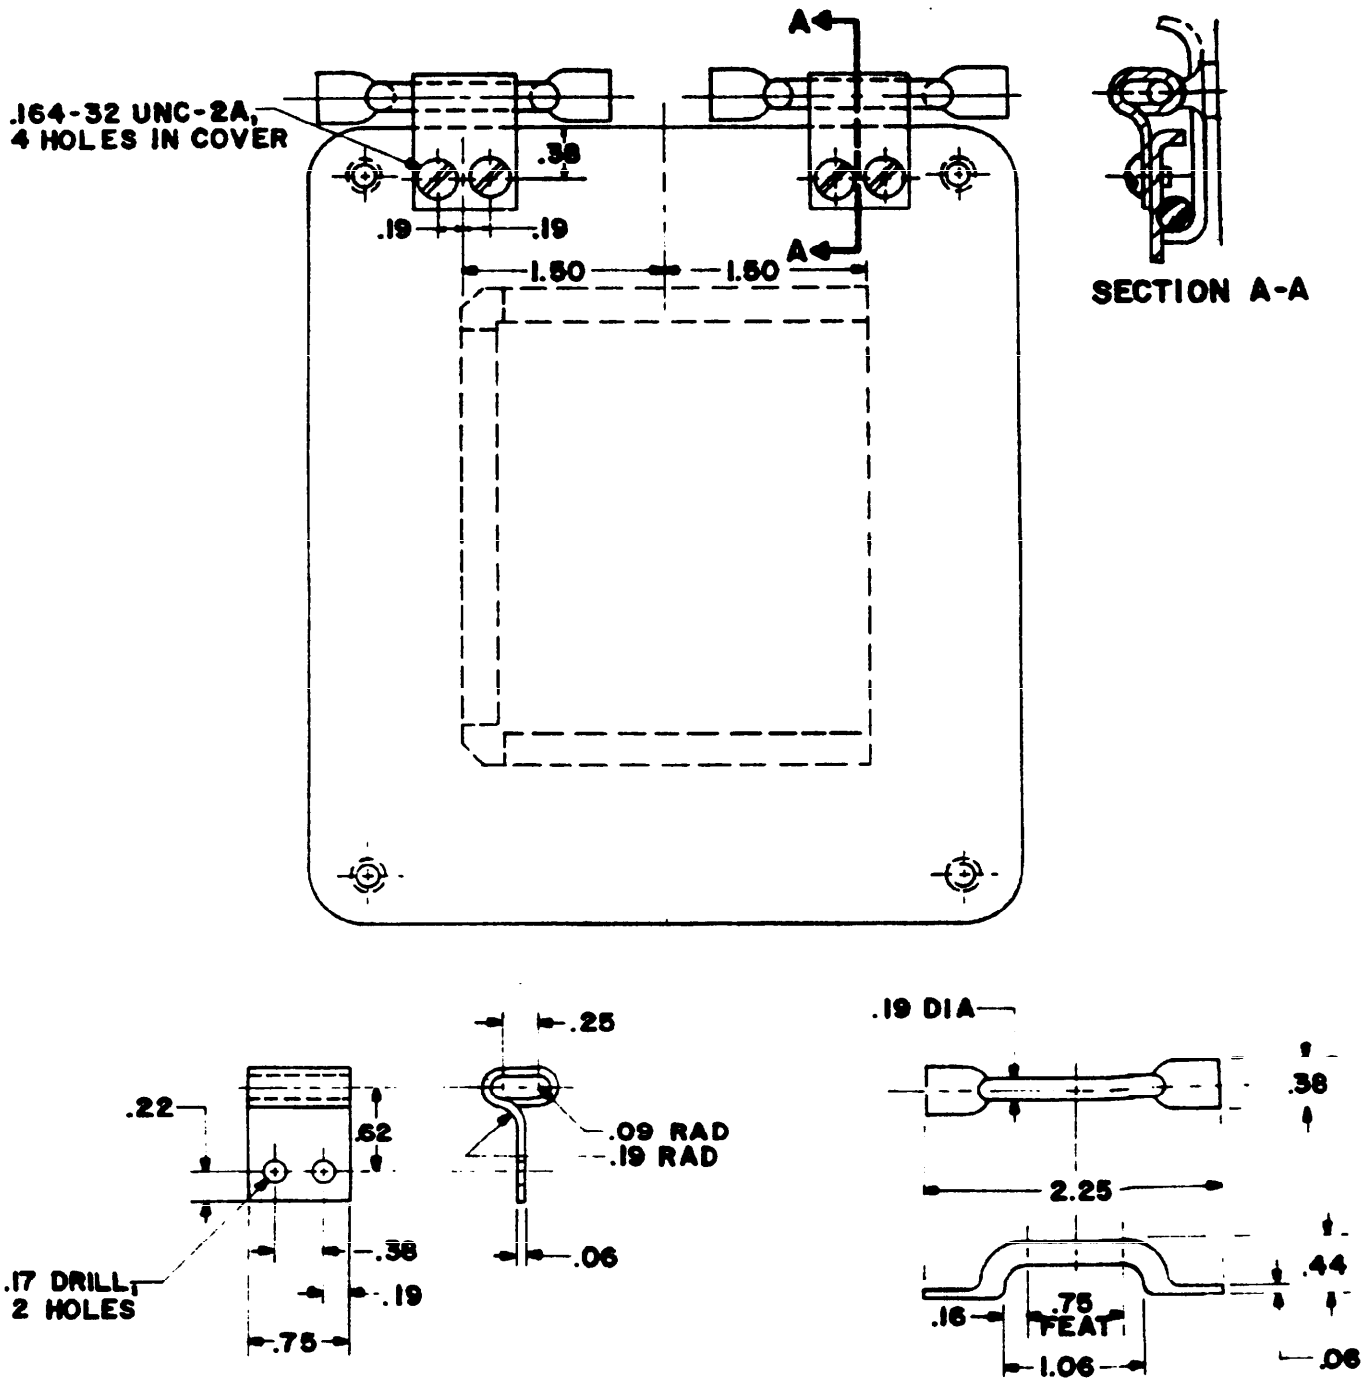


SH 131528

FIGURE 5. Fuse cover assembly, typical.

(Symbols 645, 645.1, 649.1 and 650.1)

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:34Z
Check the source to verify that this is the current version before use.

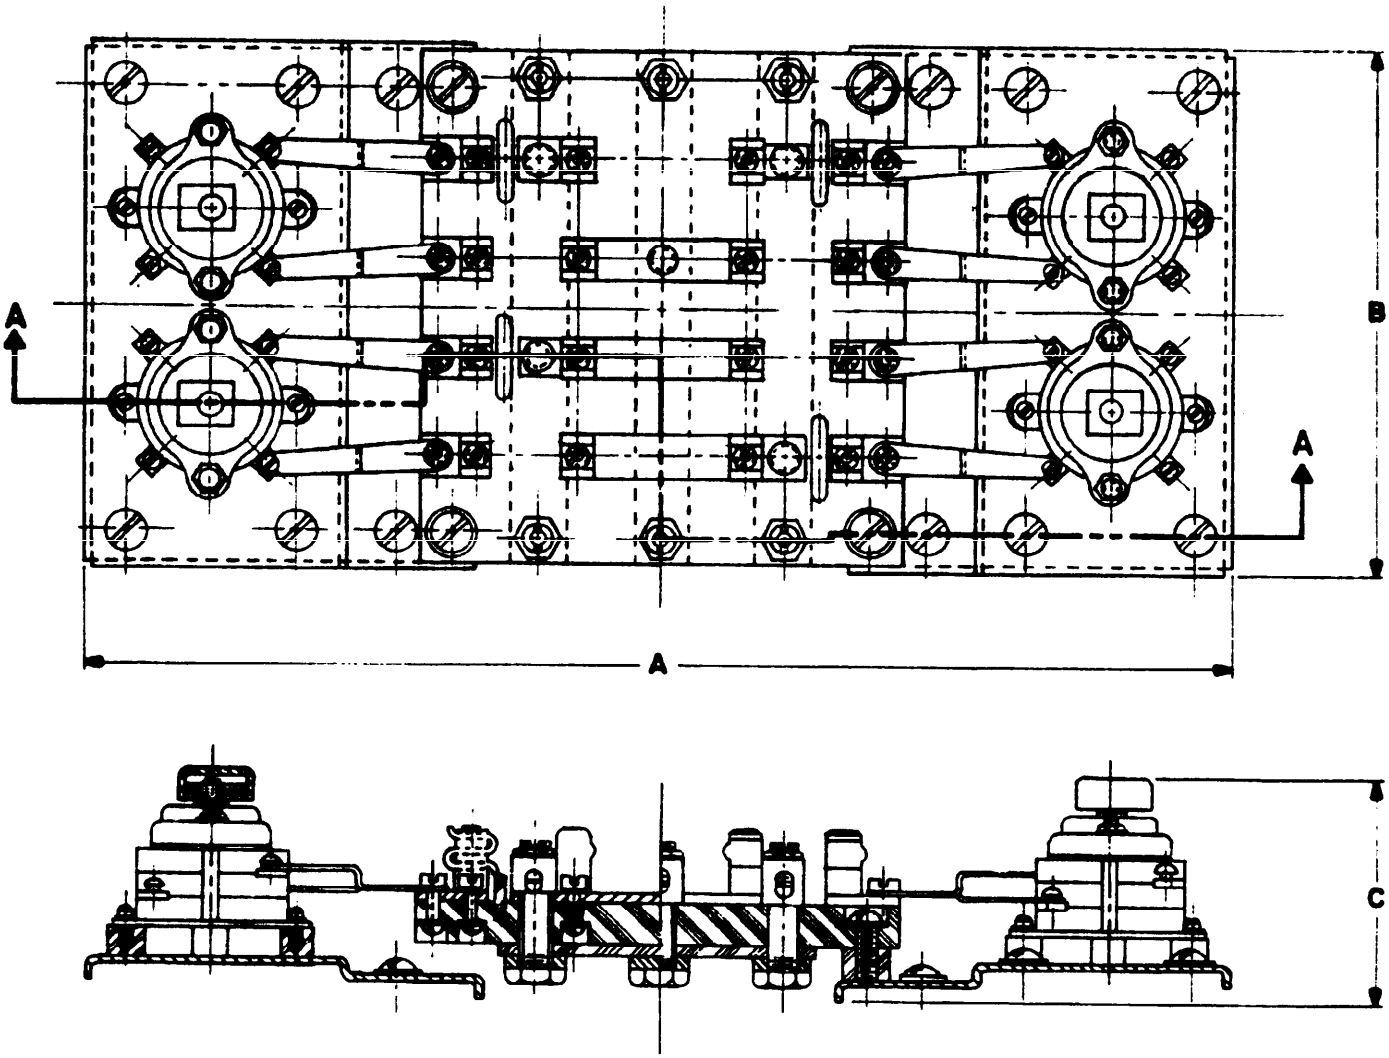

SECTION A-A


SYMBOL NO	DIMENSIONS (MAX)		
	A	B	C
645	12.75	5.88	2.12
645.1	12.75	5.88	2.12
649.1	12.75	5.88	2.12
650.1	12.75	10.75	2.12

SH 131529


FIGURE 6. Fuse block assembly, typical. (09) (10) (11) (12)

(Symbols 645, 645.1, 649.1 and 650.1)


Source: https://assist.dla.mil -- Downloaded: 20260-20T00:34Z
Check the source to verify that this is the current version before use.

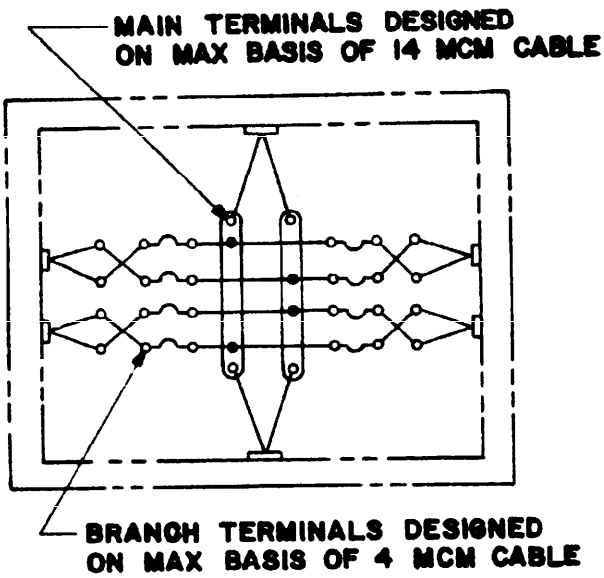


A. Four single-phase branches, single feeder (Symbol 645)

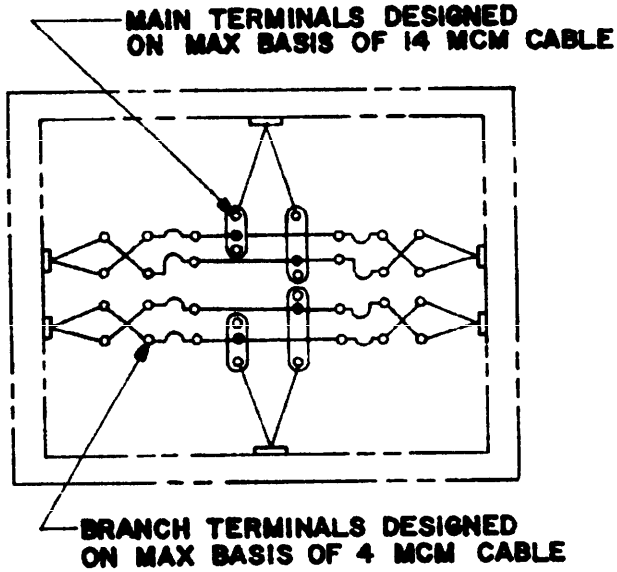

B. Four single-phase branches, double feeder (Symbol 645.1)

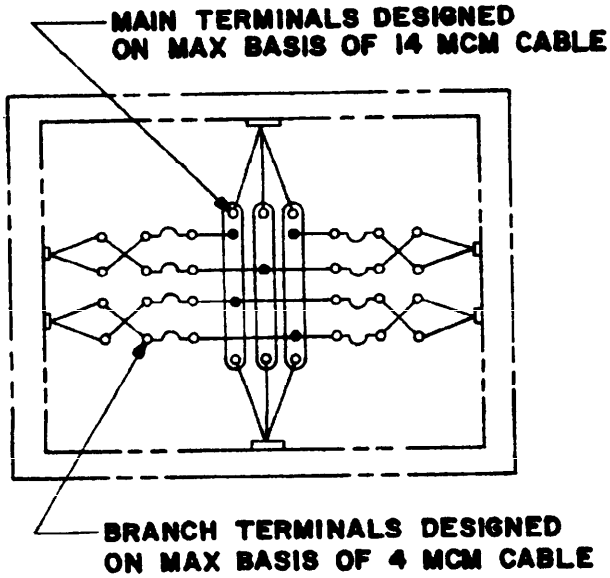

C. Four single-phase branches (Symbol 649.1)

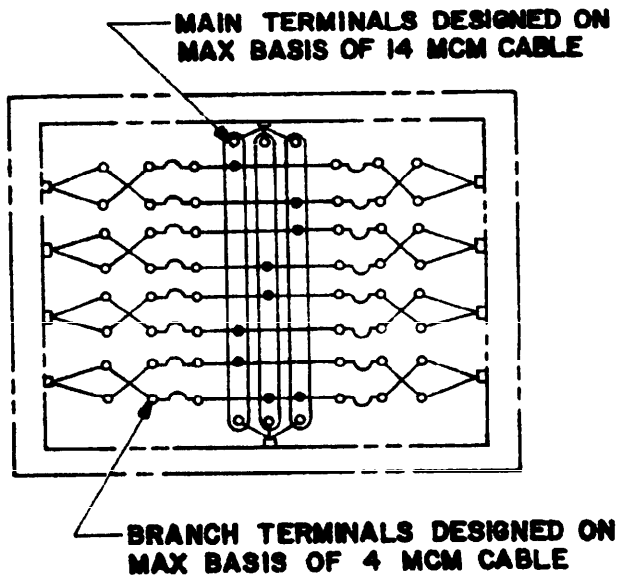

D. Eight single-phase branches (Symbol 650.1)

SH 131530

FIGURE 7. Wiring diagrams. (13) (14) (15) (16)

Source: https://assist.dla.mil -- Downloaded: 202610-20T00:34Z
Check the source to verify that this is the current version before use.

REQUIREMENTS:

Symbol numbers: See table I.

Design:

Electrical rating: 125 volts alternating current, 0-15 ampere, 60 hertz.
Dimensions and configuration: See figures 1, 2, 3, 4, 5 and 6.
Wiring diagrams: See figure 7.
Mounting dimensions: See figure 3.
Degree of enclosure: Watertight (3 feet).
Nonmagnetic enclosure: Nonmagnetic enclosures shall be aluminum in accordance with MIL-E-24142. Attaching hardware shall be nonmagnetic and shall have a magnetic permeability not greater than 2.0.
Designation and marking: See MIL-F-24646(SH).
Parts: The parts listed in table II and specified in MIL-F-24646(SH) shall be used in the construction of the fuse boxes specified herein.

General information:

Military part numbers and general information are as specified in table I.

TABLE I. Military part numbers and general information.

Military part no.	Symbol no.	Weight in pounds	No. of circuits	Feeder MCM	Branch MCM	Fuse size	Bus bar size	Supersedes	
								Drawing no.	Type
1/ M24646/11-001	645	26.8	4	14	4	midget 0-30A	0.62 x 0.12	9-S-74196	18-A
1/ M24646/11-002	645.1	26.8	4	14	4	midget 0-30A	.61 x .12	9-S-74196	18-B
M24646/11-003	649.1	28.2	4	14	4	midget 0-30A	.62 x .12	9-S-74197	D-12A
1/ M24646/11-004	650.1	36.2	8	14	4	midget 0-30A	.62 x .12	9-S-74201	22-A

1/ Nonmagnetic, see requirements.

Source: https://assist.dla.mil -- Downloaded: 202640-20T00:34Z
Check the source to verify that this is the currentversion before use.

TABLE II. Parts list.

Item no.1/	Description	QTY M /- 001	002	003	004	Material/spec	Remarks
01	Fuse box assembly (sym 645)	-				MIL-F-24646/11	See figure 1
02	Fuse box assembly (sym 645.1)		-			MIL-F-24646/11	See figure 1
03	Fuse box assembly (sym 649.1)			-		MIL-F-24646/11	See figure 1
04	Fuse box assembly (sym 650.1)				-	MIL-F-24646/11	See figure 1
2/05 3/	Enclosure (10 x 13 x 3)	1				4/ M24142/6-004	See figures 2 and 4 B, Non-magnetic
2/06 3/	Enclosure (10 x 13 x 3)		1		1	4/ M24142/6-004	See figures 2 and 4 Non-magnetic
2/07	Enclosure (12 x 13 x 3)			1		4/ M24142/6-008	See figures 2 and 4
08	Fuse cover assembly	1	1	1	1	MIL-F-24646/11	See figure 5
09	Wiring diagram	1				MIL-E-2036	See figure 7
10	Wiring diagram		1			MIL-E-2036	See figure 7
11	Wiring diagram			1		MIL-E-2036	See figure 7
12	Wiring diagram				1	MIL-E-2036	See figure 7
13	Fuse clip (midget 30A)	16	16	16	32	M21346/1-04	----
14	Snap switch	4	4	4	8	M15291/3-002	----
15	Identification plate	1	1	1	1	Brass, QQ-B-613	----
16	Information plate	4	4	4	8	Brass, QQ-B-613	----
17	Switch information plate	4	4	4	8	Brass, QQ-B-613	----

1/ Numbers in circles shown on the figures are the same as the item numbers shown in this table.
2/ Enclosure is same as MIL-E-24142/6(SH), except for inside depth which is 3 inches instead of 5 inches shown.
3/ Non-magnetic, see requirements.
4/ Enclosures shall be furnished with flat cover.

Preparing activity:
Navy - SH
(Project 6110-N264-2)

☆U.S. GOVERNMENT PRINTING OFFICE: 1984—605-038/20104

Source: https://assist.dla.mil -- Downloaded: 202640-20T00:34Z
Check the source to verify that this is the currentversion before use.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:34Z
Check the source to verify that this is the current version before use.