
MILITARY SPECIFICATION SHEET

FUSE BOXES, FEEDER JUNCTION, TOTALLY ENCLOSED, 250 VOLTS, ALTERNATING CURRENT, THREE PHASE BUSES, SINGLE AND THREE PHASE BRANCHES, 0-30 AND 31-60 AMPERE FUSES, SYMBOLS 680 AND 681.1

This specification sheet is approved for use by the Naval Sea Systems Command, Department of the Navy, and is available for use by all Departments and Agencies of the Department of Defense.

The complete requirements for acquiring the fuse boxes described herein shall consist of this document and the latest issue of MIL-F-24646(SH).

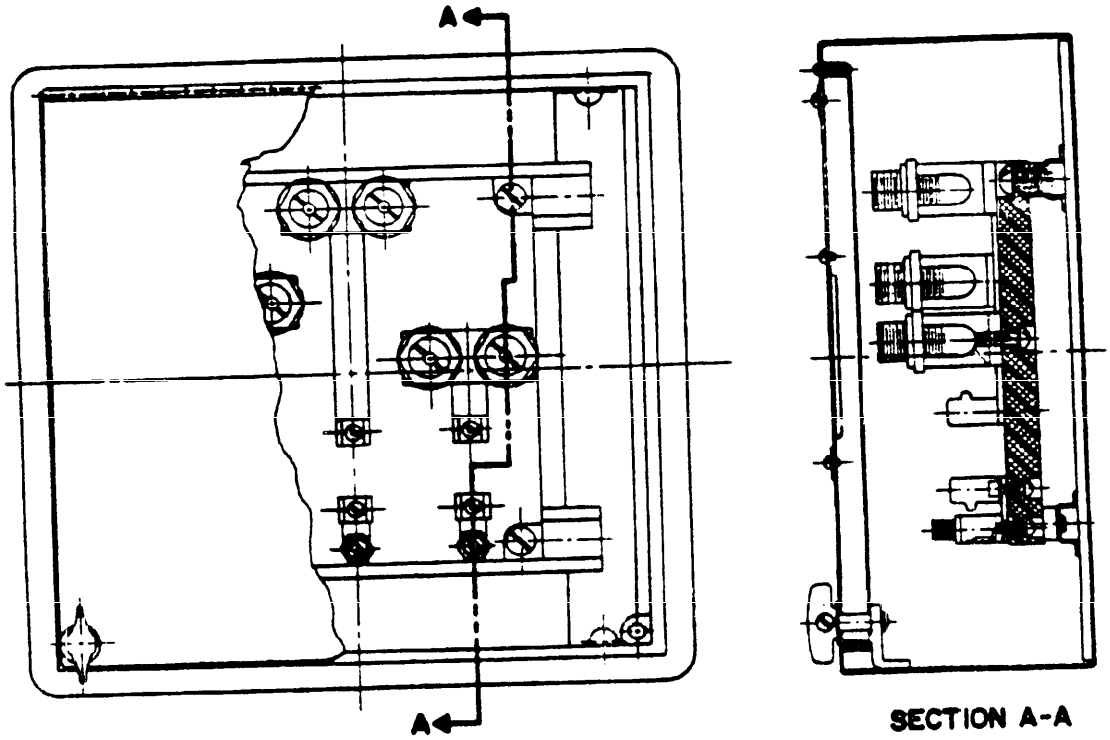

SH 131544


FIGURE 1. Fuse box assembly, typical. (01) (02)
(Symbol 680 shown)

NOTES:

1. Dimensions are in inches.
2. Unless otherwise specified herein, tolerances shall be as follows:
   Two place decimals - plus or minus 0.02.
   Three place decimals - plus or minus 0.005.

FSC 5920

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:35Z
Check the source to verify that this is the current version before use.

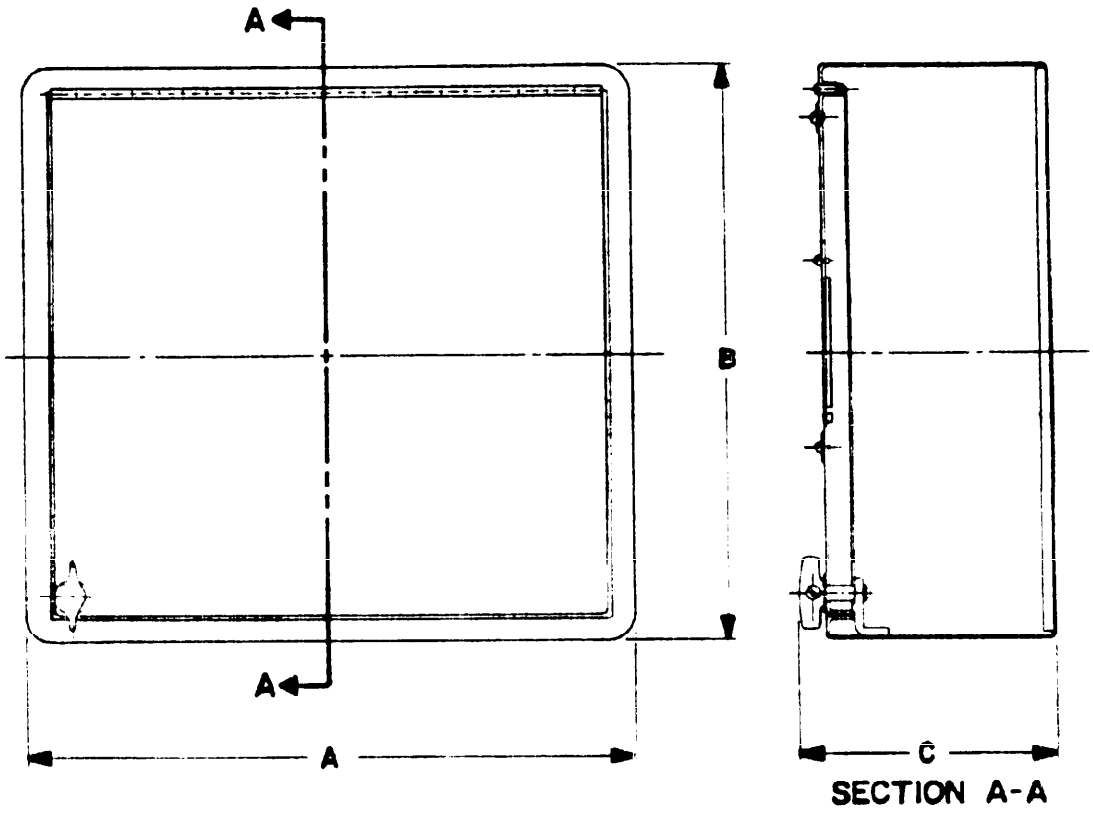

SYMBOL NO	DIMENSIONS (REF)		
	A	B	C
680	12.12	12.12	5.25
681.1	12.12	12.12	4.75

SH 131545

FIGURE 2. Enclosure, overall dimensions. (03) (04)

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:35Z
Check the source to verify that this is the current version before use.

Enclosed are revised procedures for inclusion in your copy of the


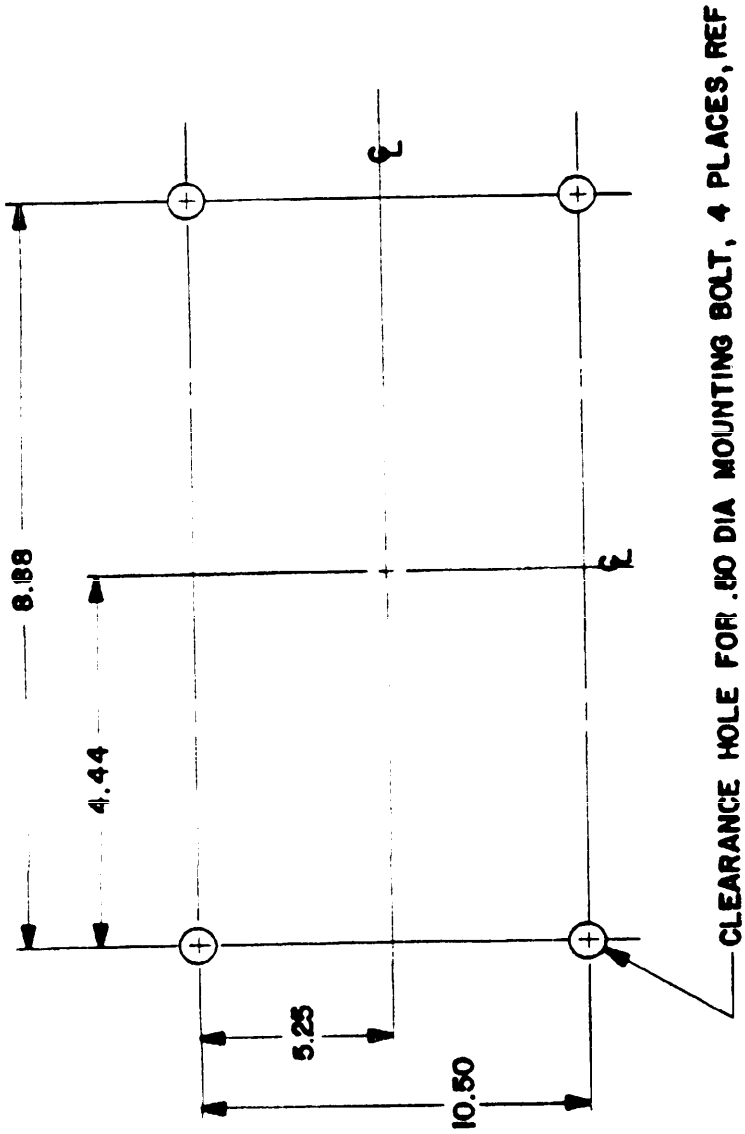


FIGURE 3. Mounting dimensions, ref.
(Symbols 680 and 681.1)

SH 131546

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:35Z
Check the source to verify that this is the current version before use.

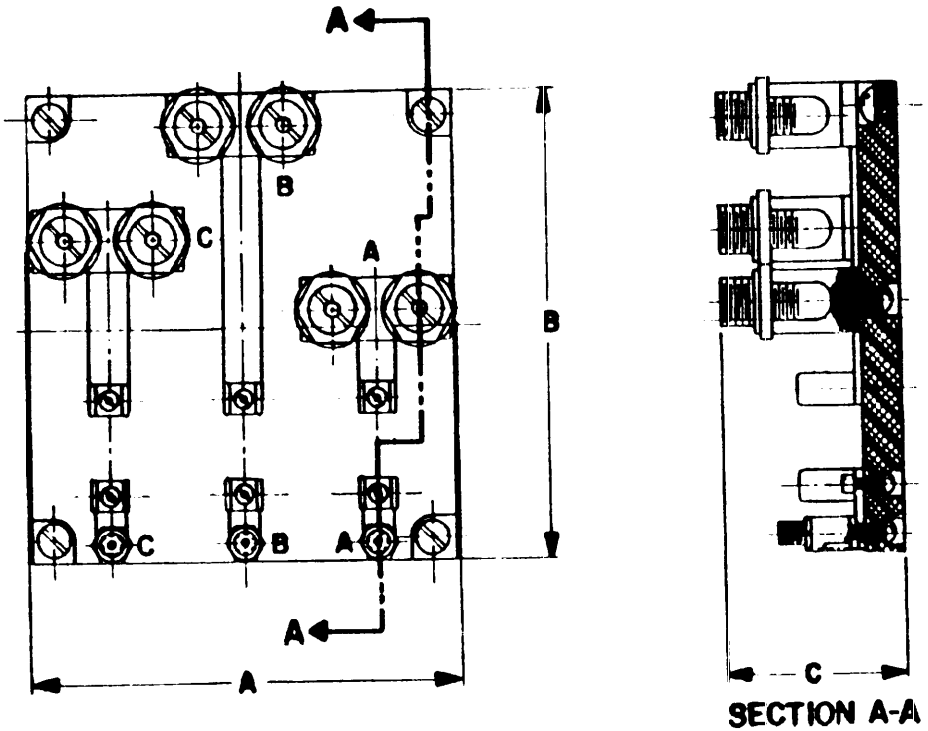


SYMBOL NO	DIMENSIONS (MAX)		
	A	B	C
680	6.75	7.44	2.37
681.1	6.00	7.62	2.06

SH 131547

FIGURE 4. Fuse block assembly, typical. (05) (06)
(Symbols 680 and 681.1)

Source: https://assist.dla.mil -- Downloaded: 2026-02-20T00:35Z
Check the source to verify that this is the current version before use.

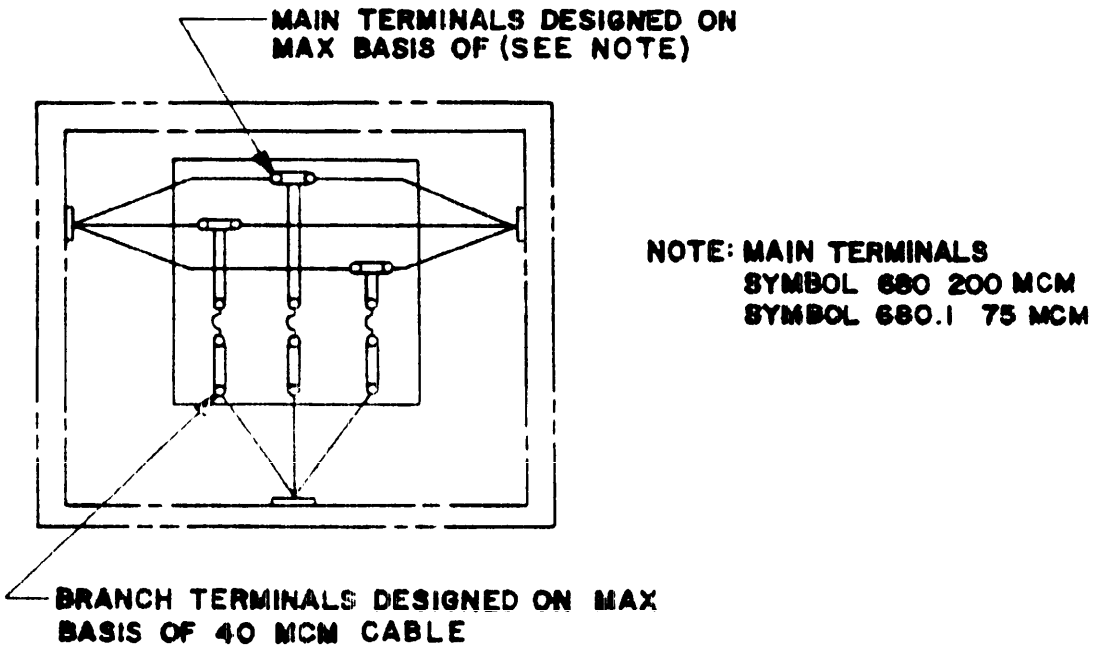

SH 131548

FIGURE 5. Wiring diagram. (07)

(Symbols 680 and 681.1)

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:35Z
Check the source to verify that this is the current version before use.

REQUIREMENTS:

Symbol numbers: See table I.

Design:
Electrical rating: 250 volts alternating current, 0-30 and 31-60 ampere, 60 hertz.
Dimensions and configuration: See figures 1, 2, 3 and 4.
Wiring diagrams: See figure 5.
Mounting dimensions: See figure 3.
Degree of enclosure: Totally enclosed.
Designation and marking: See MIL-F-24646(SH).
Parts: The parts listed in table II and specified in MIL-F-24646(SH) shall be used in the construction of the fuse boxes specified herein.

General information:
Military part numbers and general information are as specified in table I.

TABLE I. Military part numbers and general information.

Military part no.	Symbol no.	Weight in pounds	No. of circuits	Feeder MCM	Branch MCM	Fuse size	Bus bar size	Supersedes	
								Drawing no.	Type
M24646/14-001	680	19.0	1	200	40	0-30A	0.75 x 0.12	9-S-4688-L	JJ-5
M24646/14-002	681.1	10.2	1	75	40	31-60A	.75 x .12	9-S-4740-L	-

Source: https://assist.dla.mil -- Downloaded: 20261O-20T00:35Z
Check the source to verify that this is the current version before use.

TABLE II. Parts list.

Item no. 1/	Description	QTY M /- 001	QTY M /- 002	Material/spec	Remarks
01	Fuse box assembly (sym 680)	-		MIL-F-24646/14	See figure 1
02	Fuse box assembly (sym 681.1)		-	MIL-F-24646/14	See figure 1
03	Enclosure (12 x 12 x 4.5)	1		M24142/14-003 MOD "C" to 4.5 inches	See figure 2 Type E mod
04	Enclosure (12 x 12 x 4)		1	M24142/14-003 MOD "C" to 4.0 inches	See figure 2 Type E mod
05	Fuse block assembly	1		MIL-F-24646/14	See figure 4
06	Fuse block assembly		1	MIL-F-24646/14	See figure 4
07	Wiring diagram	1	1	MIL-E-2036	See figure 5
08	Fuse clip (0-30A)	6	-	M21346/1-06	----
09	Fuse clip (31-60A)	-	6	M21346/1-08	----
10	Main terminal assembly	6	6	NAVSEA/SHIPS 9000-S-6202-73246	----
11	Identification plate	1	1	Brass, QQ-B-613	----
12	Information plate	1	1	Brass, QQ-B-613	----

1/ Numbers in circles shown on the figures are the same as the item numbers shown in this table.

Preparing activity:
Navy - SH
(Project 5920-N163-14)

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:35Z
Check the source to verify that this is the current version before use.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:35Z
Check the source to verify that this is the current version before use.