MIL-C-25830A(USAF)
29 March 1960
Superseding
MIL-C-25830(USAF)
26 August 1959

MILITARY SPECIFICATION

CLIP-IN SUBASSEMBLY MHU-20/C

1. SCOPE.- This specification covers equipment designated as Clip-In Subassembly MHU-20/C. This Clip-In Subassembly shall be a quick-loading device capable of retaining special weapons in a bomb bay without possibility of inadvertent release, and of releasing them without possibility of inadvertent retention.

2. APPLICABLE DOCUMENTS.- The following documents of the issue in effect on the date of invitation for bids, form a part of this specification to the extent specified herein:

SPECIFICATIONS

Federal

PPP-B-601	Boxes, Wood, Cleated Plywood
PPP-B-621	Boxes, Wood, Nailed and Lock-Corner

Military

JAN-P-100	Packaging and Packing for Overseas Shipment, General Specification
MIL-P-116	Preservation, Methods Of
MIL-E-5272	Environmental Testing, Aeronautical and Associated Equipment, General Specification For
MIL-E-7080	Electric Equipment, Piloted Aircraft Installation and Selection of, General Specification For
MIL-I-8500	Interchangeability and Replaceability, Physical, of Component Parts for Aircraft (Including Guided Missiles)
MIL-A-8591	Airborne Stores and Associated Suspension Equipment; General Design Criteria For
MIL-T-9107	Test Reports, Preparation Of
MIL-R-25085	Rack, Bomb, Aircraft, Type MB-3A
MIL-B-25283	Bomb, Loading Practice, Type MD-9
MIL-B-25809	Bomb, Practice, Profile BDU-3/B
MIL-S-25831	Support, Clip-In Subassembly MHU-13/C
MIL-A-25835	Adapter Set, Clip-In Subassembly ADU-14/C
MIL-T-25849	Test Set, Armament Wiring System, Special Weapon AN/GWM-8A

FSC 1190

THE REPUBLICAN PRESS, Hamilton, Ohio
May 17, 1960 1500

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T07:20Z
Check the source to verify that this is the current version before use.

STANDARDS

Military

MIL-STD-129	Marking for Shipment and Storage
MS-33586	Metals - Definition of Dissimilar

PUBLICATIONS

Air Force-Navy Aeronautical Bulletin

143	Specifications and Standards, Use Of

Air Force Specification Bulletin

23	Material and Process Specifications

Air Force Design Manual

80-1	Handbook of Instructions for Aircraft Designers

Index of Specifications and Related Publications (Used By) U. S. Air Force, Volume IV

DRAWINGS

Air Force

58B46479	Clip-In Subassembly MHU-20/C
58J46480	Support, Clip-In Subassembly MHU-13/C
58J46482	Adapter Set, Clip-In Subassembly ADU-14/C
59D45036	Test Set, Armament Wiring System, Special Weapon AN/GWM-8A

NOTE: All Air Force drawings listed in this specification and not listed in section 2 are subsidiary to 58B46479.

Boeing Airplane Company

25-12537	Rack, Clip-In System MAU-6/A
F52897	Fixture Assembly, Bomb Shackle Rigging

(Copies of documents required by contractors in connection with specific procurement functions should be obtained from the procuring activity or as directed by the contracting officer.)

Source: https://assist.dla.mil -- Downloaded: 202610-20T07:20Z
Check the source to verify that this is the current version before use.

3. REQUIREMENTS

3.1 PREPRODUCTION.- This specification makes provision for pre-production testing.

3.2 MAJOR COMPONENTS.- The MHU-20/C Clip-In Subassembly shall consist of two major components:

a. Support, Clip-In Subassembly MHU-13/C
b. Adapter Set, Clip-In Subassembly ADU-14/C

3.2.1 SUPPORT, CLIP-IN SUBASSEMBLY MHU-13/C.- The MHU-13/C Support shall conform to the requirements of MIL-S-25831.

3.2.2 ADAPTER SET, CLIP-IN SUBASSEMBLY ADU-14/C.- The ADU-14/C Adapter Set shall conform to the requirements of MIL-A-25835.

3.3 SELECTION OF SPECIFICATIONS AND STANDARDS.- Specifications and standards for necessary commodities and services not specified herein shall be selected in accordance with ANA Bulletin 143, except as provided in 3.3.1 and 3.3.2; and provided that, for materials and processes, the applicable group I items per ANA Bulletin 143 shall be selected first from USAF Specification Bulletin 23 and, if not included therein, then from the Index of Specifications and Related Publications (Used By), U. S. Air Force, Volume IV.

3.3.1 COMMERCIAL PARTS.- Commercial parts having suitable properties may be used where, on the date of invitation for bids, there are no suitable standard parts. In any case, commercial utility parts like screws, bolts, nuts, cotter pins, etc., having suitable properties may be used provided:

a. They can be replaced by the standard parts (AN or MS) without alteration.

b. The corresponding standard part numbers are referenced in the parts list and, if practical, on the contractor's drawings.

3.3.2 STANDARD PARTS.- Except for use authorized in 3.3.1, AN and MS standard parts shall be used where they suit the purpose. They shall be identified on the drawings by their part numbers.

3.4 MATERIAL.- Materials shall be selected and processed for the various parts in accordance with the applicable specifications and standards as indicated on the drawings.

3.5 DESIGN AND CONSTRUCTION.- The MHU-20/C Clip-In Subassembly shall be designed and constructed in strict conformance with drawing 58B46479 and all subsidiary detail drawings, and shall effect support

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T07:20Z
Check the source to verify that this is the current version before use.

of the weapons, their release, protection against inadvertent release, monitoring and release circuitry, and connections to the weapons.

3.5.1 DISSIMILAR METALS IN CONTACT.- Dissimilar metals in contact as defined by MS-33586 shall be protected from corrosion in accordance with the applicable provisions and references of Air Force Design Manual 80-1 (HIAD), Volume I.

3.6 GENERAL STRUCTURAL CRITERIA

3.6.1 STRUCTURAL LOADS.- The Subassembly shall be capable of withstanding the structural loads specified in figures 1, 2, and 3, and of transmitting these loads to the clip-in points on the MAU-6/A Rack.

3.6.2 LIMIT LOAD.- Unless otherwise specified, the loads resulting from the loading conditions specified herein are limit loads.

3.6.3 YIELD FACTOR OF SAFETY.- The minimum yield factor of safety shall be 1.15. There shall be no permanent set as defined by MIL-S-8591.

3.6.4 ULTIMATE FACTOR OF SAFETY.- The minimum ultimate factor of safety shall be 1.50. Failure shall not occur when loads which are 1.50 times the limit load are applied. (Permanent set permissible).

3.7 PERFORMANCE.- The Subassembly shall be suitable for use in temperatures from -54°C (-65°F) to 71°C (160°F) and under adverse environmental conditions including sand and dust, salt water atmosphere and vibration, and shall meet the following performance requirements.

3.7.1 FUNCTIONAL

3.7.1.1 ELECTRICAL.- The electrical performance requirements shall be in accordance with 4.7.3.1.

3.7.1.2 MECHANICAL LOCK MECHANISM.- The mechanical lock mechanism shall be capable of reversible actuation under limit loads. It shall be impossible to unlock after a release impulse has been applied to a rack in the locked condition. If a lock jams due to inadvertent release of a weapon, any other weapon shall be capable of being unlocked; except that, if a lower weapon lock is jammed, the lock of the weapon above shall not open.

3.7.2 RELEASE.- The Subassembly shall be capable of 10 consecutive successful weapon releases from each MB-3A Rack.

3.7.3 HIGH TEMPERATURE.- The Subassembly shall be capable of satisfactory operation while exposed to a temperature of 71°C (160°F).

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T07:20Z
Check the source to verify that this is the current version before use.

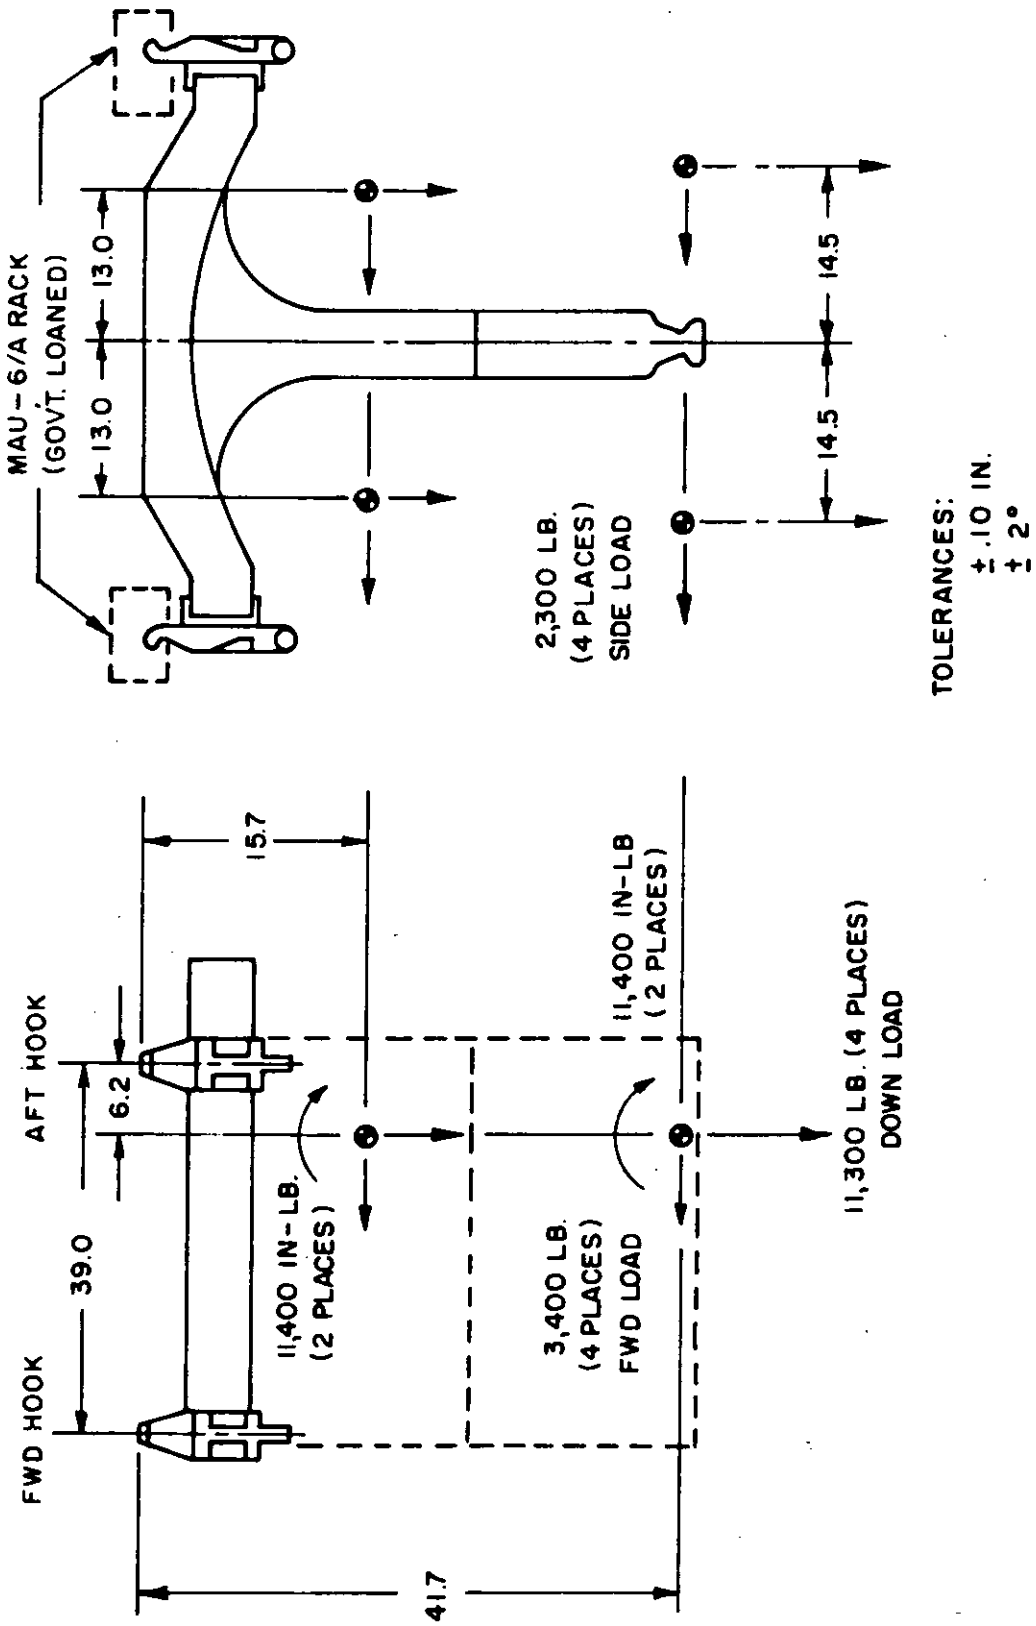


FIGURE 1 STRUCTURAL LIMIT LOADS - CONDITION 1

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T07:20Z
Check the source to verify that this is the current version before use.

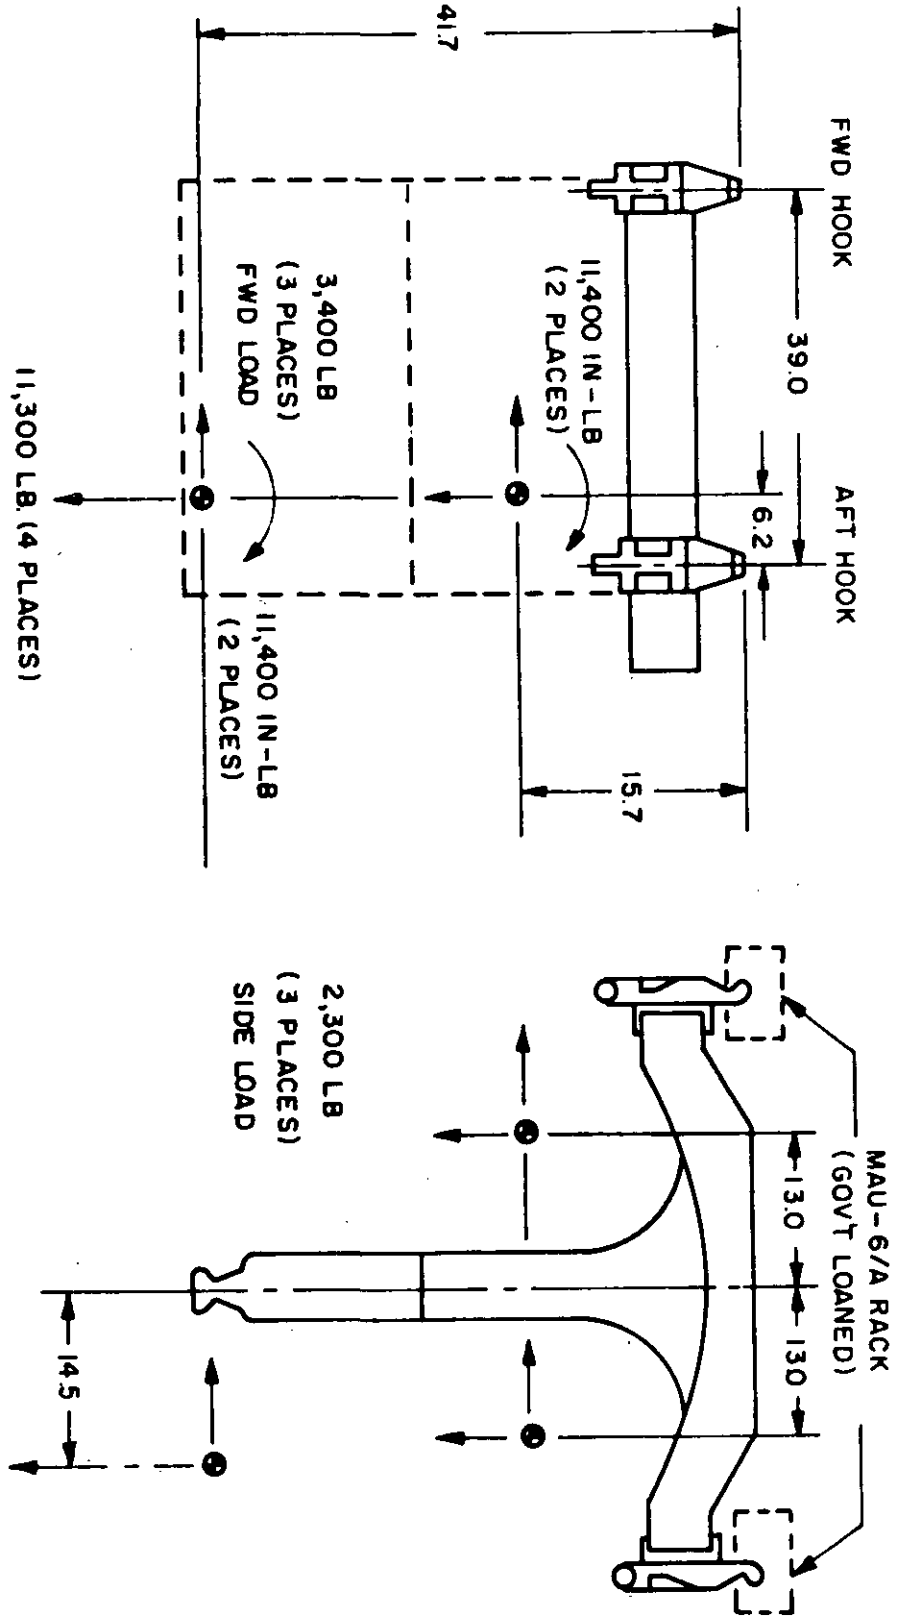


FIGURE 2 STRUCTURAL LIMIT LOADS - CONDITION 2

Source: https://assist.dla.mil -- Downloaded: 2026l0-20T07:20Z
Check the source to verify that this is the currentversion before use.

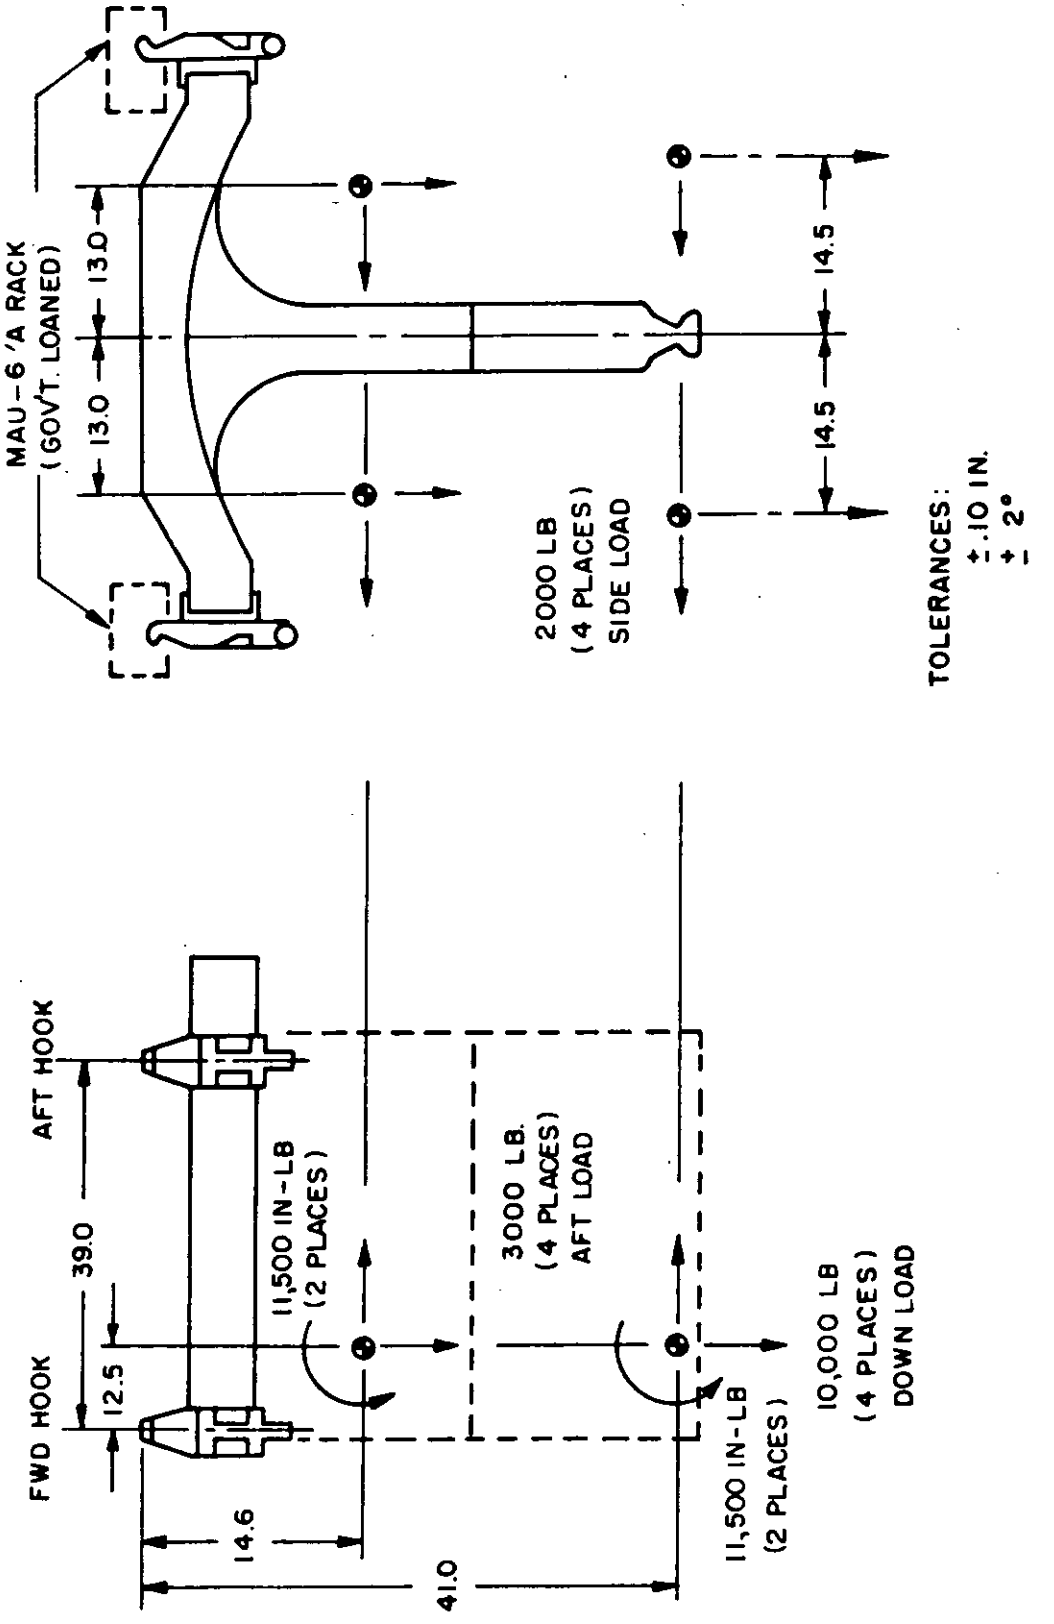


FIGURE 3 STRUCTURAL LIMIT LOADS-CONDITION-3

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T07:20Z
Check the source to verify that this is the current version before use.

3.7.4 LOW TEMPERATURE.- The Subassembly shall be capable of satisfactory operation while exposed to a temperature of -54°C (-65°F).

3.7.5 HUMIDITY.- The Subassembly shall be capable of satisfactory operation while being subjected to the humidity test of this specification.

3.7.6 SALT SPRAY.- The Subassembly shall be capable of satisfactory operation after being exposed to a salt sea atmosphere and spray.

3.7.7 VIBRATION.- The Subassembly shall be capable of satisfactory operation after being subjected to the vibration tests of this specification.

3.7.8 SAND AND DUST.- The Subassembly shall be capable of satisfactory operation after extended exposure to blowing sand and dust.

3.8 ELECTRICAL REQUIREMENTS

3.8.1 Electrical equipment shall be installed in accordance with MIL-E-7080.

3.8.2 Other electrical requirements shall be in accordance with MIL-A-25835.

3.8.3 The Subassembly shall fulfill all operating requirements herein, when operating under any voltage from 18 to 30 volts dc.

3.9 INTERCHANGEABILITY.- All Subassemblies shall be interchangeable in accordance with the requirements of MIL-I-8500.

3.10 IDENTIFICATION OF PRODUCT.- Identification shall be in accordance with the requirements of MIL-S-25831 and MIL-A-25835.

3.11 WORKMANSHIP.- The Subassembly, including all parts and accessories shall be fabricated in a manner that will insure that the criteria of appearance, fit, and adherence to specified tolerances are observed. Particular attention shall be given to neatness and thoroughness of marking of parts and assemblies, plating, painting, riveting, and welding. All parts shall be free from burrs and sharp edges.

3.12 GOVERNMENT LOANED PROPERTY.- The following items of equipment shall be loaned to the contractor, upon his request, as Government loaned property, for the purpose of conducting the tests specified in section 4:

Item No.	Part No.	Item Description	Quantity
1	25-12537 (Boeing Airplane Co.)	Rack, Clip-In System MAU-6/A	As required (See 6.3)

Source: https://assist.dla.mil -- Downloaded: 202640-20T07:20Z
Check the source to verify that this is the currentversion before use.

Item No.	Part No.	Item Description	Quantity
2		Bomb, Loading Practice, Type MD-9 (MIL-B-25283)	4
		or	
2		Bomb, Practice, Profile BDU-3/B (MIL-B-25809)	4
3		Test Set, Armament Wiring System Special Weapon AN/GWM-8A (MIL-T-25849)	1

4. QUALITY ASSURANCE PROVISIONS

4.1 PRIOR TESTING OF MAJOR COMPONENTS.- No major component, either the MHU-13/C Support or ADU-14/C Adapter Set, shall be accepted for assembly into an MHU-20/C Clip-In Subassembly for any testing of the MHU-20/C until after:

a. The MHU-13/C Support has successfully passed the testing required by MIL-S-25831.

b. All components of the ADU-14/C Adapter Set have successfully passed the specific component tests required by MIL-A-25835.

4.2 CLASSIFICATION OF TESTS.- The inspection and testing of the Subassembly shall be as follows:

a. Preproduction Tests
b. Acceptance Tests

4.3 PREPRODUCTION TESTING

4.3.1 PREPRODUCTION TEST SAMPLES.- The preproduction test samples shall be representative of the production units. They shall be tested at a laboratory designated by the procuring activity, or, when so stated in the contract, at the contractor's plant under the supervision of the procuring activity.

4.3.1.1 TEST REPORTS.- In the event that preproduction testing is performed at the contractor's plant, the contractor shall, after completion of the preproduction tests, prepare a preproduction test report according to MIL-T-9107 and furnish three complete copies of the report to the procuring activity.

Source: https://assist.dla.mil -- Downloaded: 202610-20T07:20Z
Check the source to verify that this is the currentversion before use.

4.3.2 PREPRODUCTION TESTS.- Preproduction tests shall consist of all the following tests:

a. Individual

(1) Examination of Product
(2) Conformance to Drawings
(3) Functional Tests

(a) Electrical
(b) Mechanical

b. Static Strength Tests

c. Release Test

d. Environmental Tests

(1) High Temperature
(2) Low Temperature
(3) Salt Spray
(4) Humidity
(5) Vibration
(6) Sand and Dust
(7) Temperature Shock

These tests are described under "4.7 TEST METHODS."

4.4 ACCEPTANCE TESTS.- Acceptance tests shall consist of the following individual tests described under "4.7 TEST METHODS:"

a. Examination of Product
b. Conformance to Drawings
c. Functional Tests

4.5 TEST CONDITIONS

4.5.1 STANDARD CONDITIONS.- Standard conditions for conducting the tests shall be as follows:

a. Temperature: 25°C (70°F) plus or minus 10°C (18°F).

b. Relative Humidity: 90 percent or less.

4.5.2 TEST TEMPERATURE.- The entire Subassembly shall be stabilized at the specified temperature prior to conducting any tests. Temperature stabilization shall be as defined in MIL-E-5272.

Source: https://assist.dla.mil -- Downloaded: 202610-20T07:20Z
Check the source to verify that this is the current version before use.

4.5.3 TEST MEASUREMENTS

4.5.3.1 INSTRUMENTS.- All measurements shall be made with instruments whose accuracy has been verified. Calibration records shall be maintained for submittal in the test report.

4.5.3.2 TOLERANCES.- The maximum allowable tolerances on test condition measurements shall be as follows:

a. Vibration and shock amplitude - plus or minus 5 percent; frequency - plus or minus 2 percent.

NOTE: This tolerance is applicable only to the amplitude and frequency measuring instruments.

b. Applied load - plus or minus 5 percent in pounds.

4.5.3.3 REQUIRED MEASUREMENTS

a. Release time.

b. Release voltage and current.

c. Test load.

4.6 TEST EQUIPMENT REQUIRED.- Test equipment required for performance of testing is as follows:

a. Tester for electrical functional tests (See figures 4 and 5).

b. An 18-30 volt dc power source.

c. Linear measuring equipment.

d. Suitable device for applying load to 58J46420 crank.

e. A loading fixture capable of applying 1,000 pounds on each hook of MB-3A Racks.

f. One MAU-6/A Rack.

g. Four dummy loads, 19.75 plus or minus 0.05 inches in diameter at the sway brace pad locations, with attach lugs (lug cross section per MIL-A-8591) fore and aft 30 inches on center, with provisions for loading per figures 6, 7, and 8.

h. Four MD-9 or BDU-3/B Practice Bombs or four Release Test Loads as shown in figure 9.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T07:20Z
Check the source to verify that this is the current version before use.

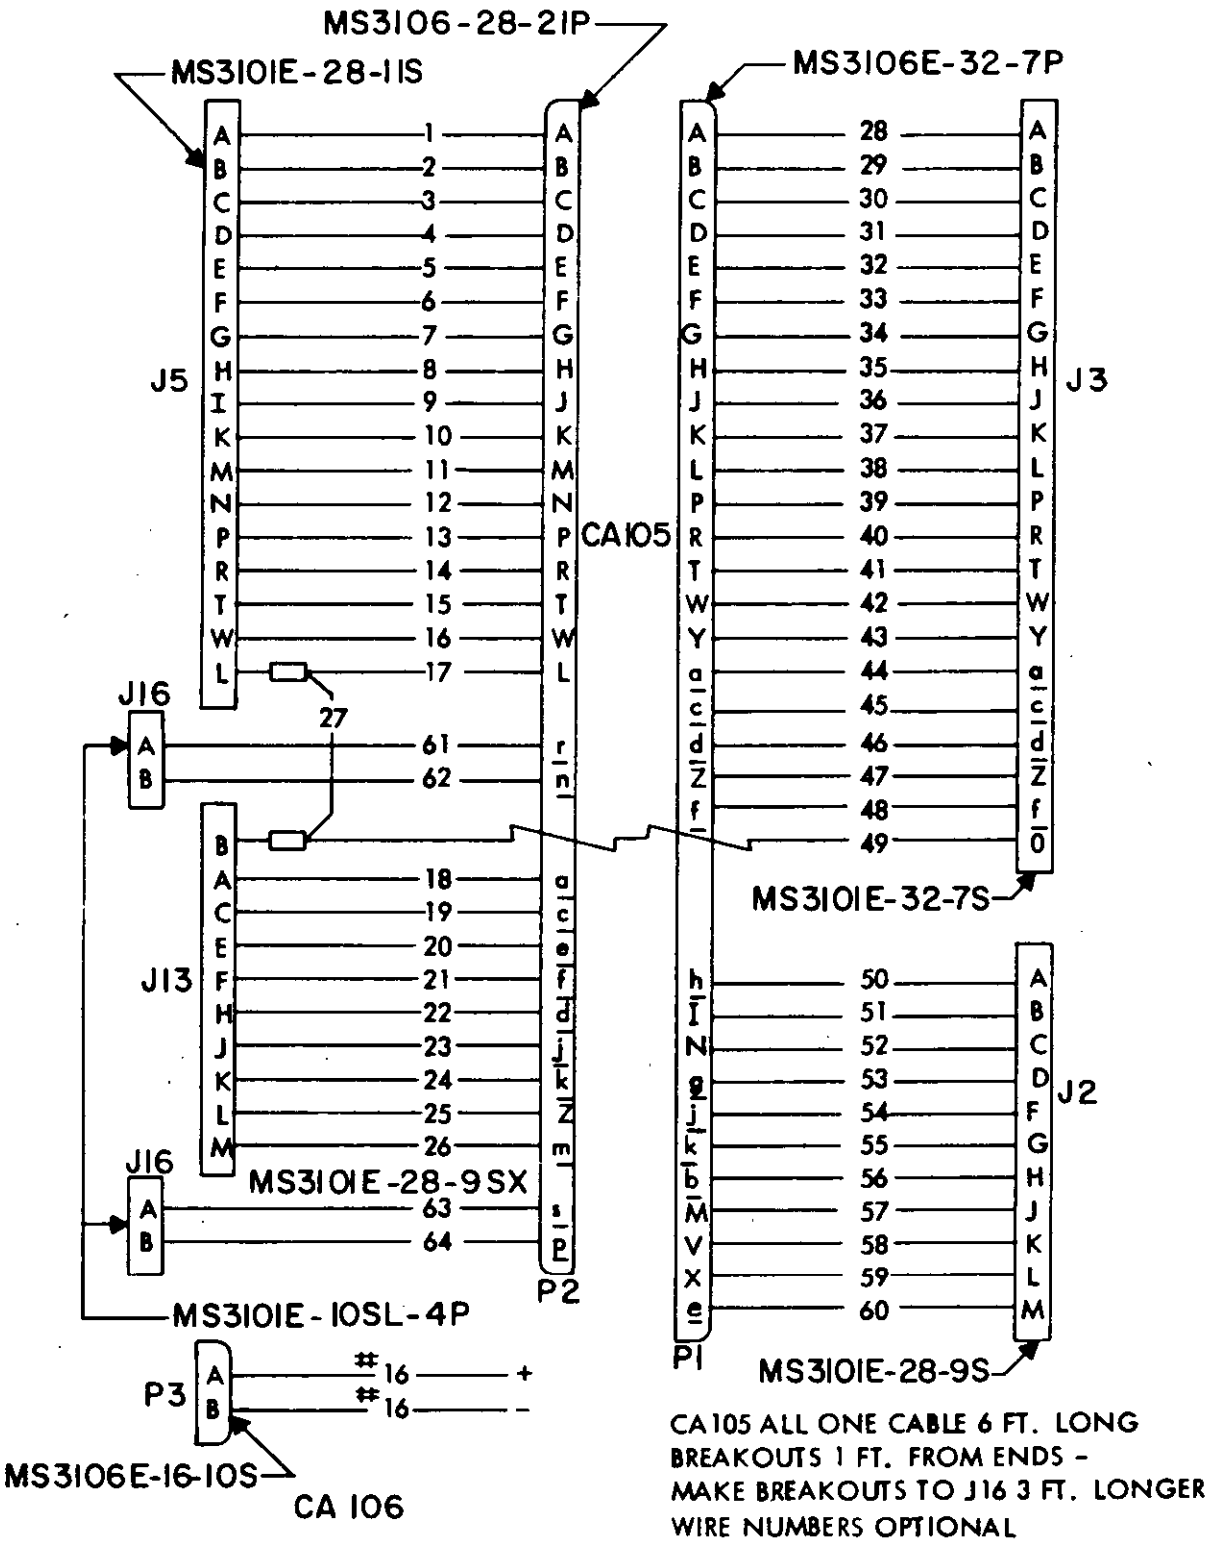


FIGURE 5 TESTER CABLES

Source: https://assist.dla.mil -- Downloaded: 20260-20T07:20Z
Check the source to verify that this is the current version before use.

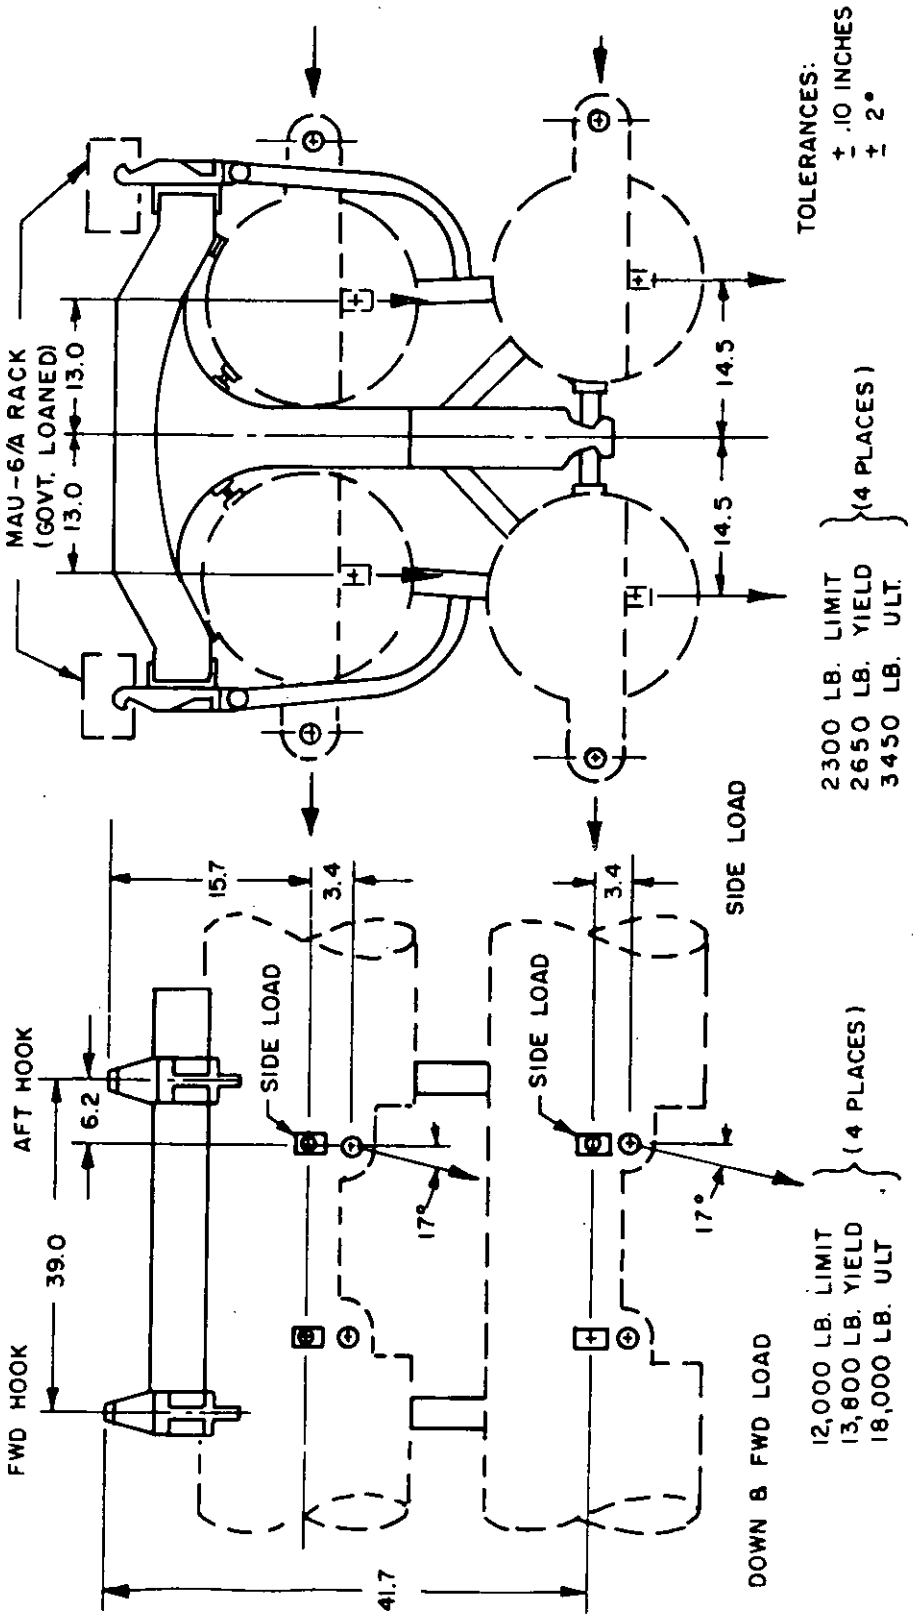


FIGURE 6 STATIC TEST SET-UP ~ CONDITION I

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T07:20Z
Check the source to verify that this is the current version before use.

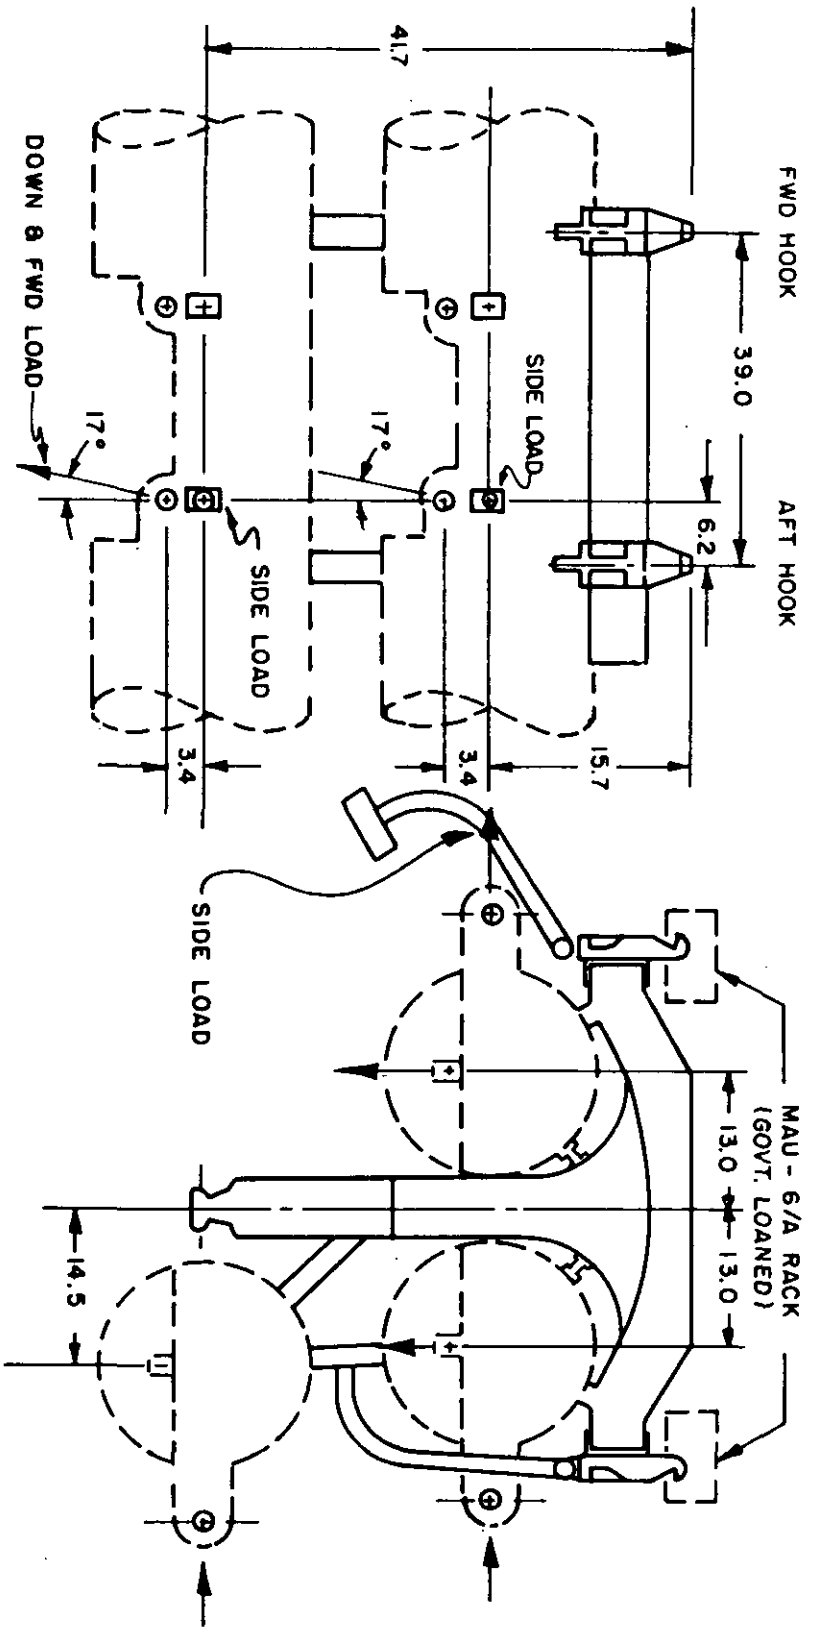


FIGURE 7 STATIC TEST SET-UP ~ CONDITION 2

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T07:20Z
Check the source to verify that this is the current version before use.

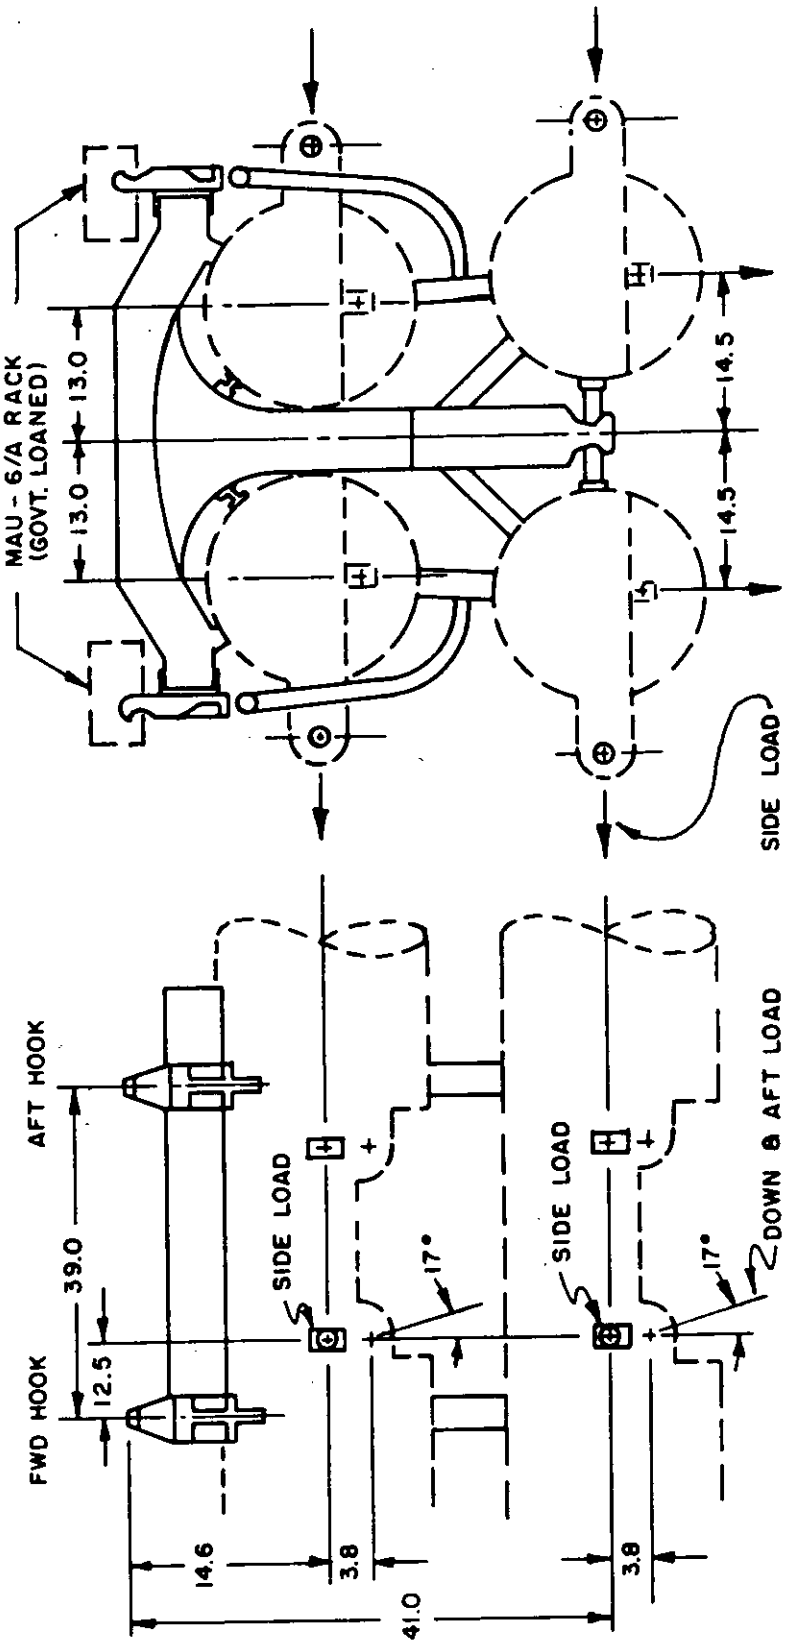


FIGURE 8 STATIC TEST SET-UP ~ CONDITION 3

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T07:20Z
Check the source to verify that this is the current version before use.

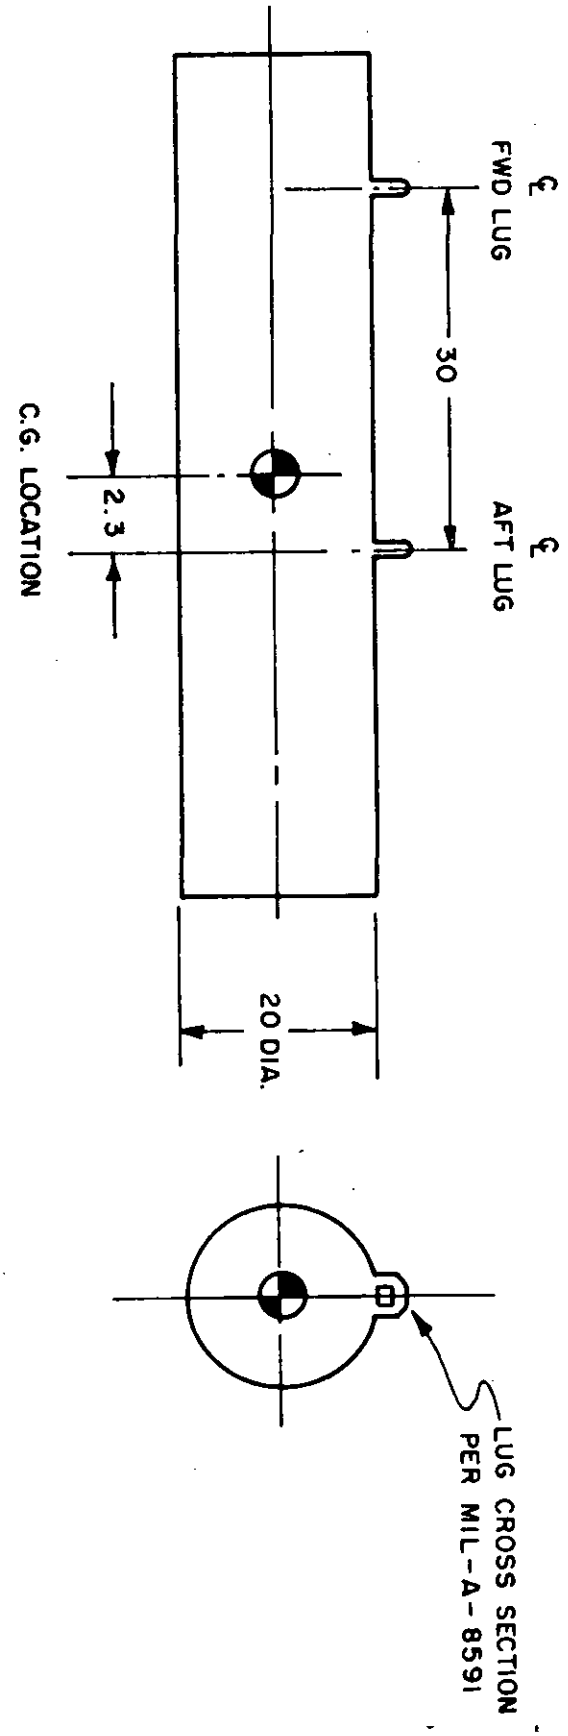


FIGURE 9 RELEASE TEST LOAD

Source: https://assist.dla.mil -- Downloaded: 202640-20T07:20Z
Check the source to verify that this is the current version before use.

i. Test Set, Armament Wiring System, Special Weapons AN/GWM-8A (Reference 59D45036).

4.7 TEST METHODS

4.7.1 EXAMINATION OF PRODUCT.- Each Subassembly shall be given a complete visual examination to determine compliance with the requirements of this specification, including workmanship.

4.7.2 CONFORMANCE TO DRAWINGS.- Each Subassembly shall be inspected for strict conformance to the engineering drawings and all specifications and standards referenced therein.

4.7.3 FUNCTIONAL TESTS

4.7.3.1 ELECTRICAL SYSTEM FUNCTIONAL TESTS.- Electrical system functional tests shall be made by use of a tester. The wiring diagram of the tester is shown on figures 4-A and 4-B. The tester cables are indicated on figure 5.

4.7.3.1.1 PRELIMINARY INSTRUCTIONS

a. Connect test box cable CA105 between tester and plugs P2, P3, and P5 of cable CA104 (Reference 58J46642 and 58D46618 wiring diagram).

b. Mate plugs P1, P10, and P19 of cable CA104 with J1, J10, and J19 on the Subassembly. Lower stores disconnect, P4, shall be mated with J11 (Reference 58D46615).

c. Place all test box switches in the "OFF" position.

d. Connect test box to 28 volts dc power source by means of cable CA106.

e. Close test box circuit breaker.

f. Place test box power switch in the "ON" position.

g. Press-to-test both the "GO" light and the "NO GO" light.

4.7.3.1.2 SWITCH S-1 CHECKOUT PROCEDURE.- Checkout procedures for the S-1 Switch shall be in accordance with Table I.

4.7.3.1.3 SWITCH S-2 CHECKOUT PROCEDURE.- Checkout procedure for the S-2 Switch shall be in accordance with Table II.

4.7.3.2 MECHANICAL LOCK SYSTEM FUNCTIONAL TEST.- Functional testing of the mechanical lock system shall be in accordance with Table III.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T07:20Z
Check the source to verify that this is the current version before use.

TABLE I

SWITCH S1 CHECKOUT PROCEDURE				
OPERATION NOTE: Any steady "NO GO" signal during the following tests is an indication of faulty wiring of the Subassembly.			INDICATION-RESPONSE	
STEP NO.	SWITCH S1 POSITION	OPERATION	GO LIGHT	REMARKS
1.		Cock and lock all MB-3A Rack releases.		
2.				
a.	"1"		shall light	
b.		Pull the Lower Right (LR) pin to unlock position and hold	shall go out	Momentarily, then light.
		(1) Momentarily pull the MB-3A Rack lock lever to the unlock position, then release to locked position.		
		(2) Release the LR lock pin to lock position.	shall go out	Momentarily, then light
3.	"2"			
a.		Push the "RESET" button	shall go out	
b.		Release the "RESET" button	shall light	
c.		Pull the Upper Right (UR) lock pin to unlock position and hold.	shall go out	Momentarily, then light
d.		(1) Momentarily pull the MB-3A Rack lock lever to the unlock position, then release to locked position.		

Source: https://assist.dla.mil -- Downloaded: 202610-20T07:20Z
Check the source to verify that this is the current version before use.

TABLE I

SWITCH S1 CHECKOUT PROCEDURE				
OPERATION			INDICATION-RESPONSE	
STEP NO.	SWITCH S1 POSITION	OPERATION	GO LIGHT	REMARKS
3.d. (Cont'd)		(2) Release the UR lock pin to lock position.	shall go out	Momentarily, then light.
4.	"3"			
a.		Push the "RESET" button	shall go out	
b.		Release the "RESET" button	shall light	
c.		Pull the Upper Left (UL) lock pin to unlock position and hold	shall go out	Momentarily, then light
d.		(1) Momentarily pull the MB-3A Rack lock lever to the unlock position then release it to the locked position.		
		(2) Release the UL lock-pin to lock position	shall go out	Momentarily, then light
5.	"4"			
a.		Push the "RESET" button	shall go out	
b.		Release the "RESET" button	shall light	
c.		Pull the Lower Left (LL) lock-pin to unlock position and hold.	shall go out	Momentarily, then light

Source: https://assist.dla.mil -- Downloaded: 20260-20T07:20Z
Check the source to verify that this is the current version before use.

TABLE I

SWITCH S1 CHECKOUT PROCEDURE				
OPERATION			INDICATION-RESPONSE	
STEP NO.	SWITCH S1 POSITION	OPERATION	GO LIGHT	REMARKS
5.d. (Cont'd)		(1) Momentarily pull the MB-3A Rack lock lever to the unlock position, then release to the locked position		
		(2) Release the LL lock-pin to lock position	shall go out	Momentarily, then light.
6.	"5"			
a.		Momentarily push the "RESET" button	shall go out	
b.		Momentarily push the "RELEASE" button	shall light	The MB-3A Rack releases shall not trip
7.	"6"			
a.		Momentarily push the "RESET" button	shall go out	
b.		Push the "RELEASE" button	shall light	The MB-3A Rack releases shall not trip
8.		Unlock the Subassembly		
9.	"7"		shall go out	
a.		Momentarily push the RESET button	shall remain out	
b.		Momentarily press the RELEASE button	shall light	The LR MB-3A Rack shall release.

Source: https://assist.dla.mil -- Downloaded: 2026-02-20T07:20Z
Check the source to verify that this is the current version before use.

TABLE I

SWITCH S1 CHECKOUT PROCEDURE				
OPERATION			INDICATION-RESPONSE	
STEP NO.	SWITCH S1 POSITION	OPERATION	GO LIGHT	REMARKS
10.	"8"		shall go out	
a.		Push the RESET button	shall remain out	
b.		Momentarily push the RELEASE button	shall light	The UR release shall trip.
11.		Recock the LR and UR on MB-3A Racks	shall go out	
12.	"9"			
a.		Momentarily push the "RESET" button		
b.		Momentarily press the RELEASE button	shall light	The LL MB-3A Rack shall release
13.	"10"		shall go out	
a.		Momentarily push the RESET button		
b.		Momentarily press the RELEASE button	shall light	The UL MB-3A Rack shall release.
14.		Recock the LL and UL MB-3A Racks	shall go out	
15.	"11"			
a.		Momentarily push the RESET button		

Source: https://assist.dla.mil -- Downloaded: 202640-20T07:20Z
Check the source to verify that this is the current version before use.

TABLE I

SWITCH S1 CHECKOUT PROCEDURE				
OPERATION			INDICATION-RESPONSE	
STEP NO.	SWITCH S1 POSITION	OPERATION	GO LIGHT	REMARKS
15. (Cont'd) b.		Momentarily push the RELEASE button	shall light	All releases on MB-3A Rack shall trip.
16.	OFF			

Source: https://assist.dla.mil -- Downloaded: 2026-02-20T07:20Z
Check the source to verify that this is the current version before use.

TABLE II

OPERATION					INDICATION-RESPONSE	
STEP NO.	SWITCH S2 POSITION	AN/GWM-8A SEL SW POSITION	T-249 SIMULATOR SEL SW POSITION	T-249 WARNING LIGHT	T-249 WARNING LIGHT	REMARKS
1.	Place test box power switch in the OFF position.					
2.	Place switch S1 in OFF position.					
3.	Place AN/GWM-8A Tester in the OFF position.					
4.	OFF	OFF				
5.	Connect AN/GWM-8A to RYK-2/A24T-1 disconnect receptacle designated (LL).					
6.	Place test box power switch in "ON" position.					
		NOTE: If the "NO GO" light should light at any time during Switch B positions 1, 2, 3, or 4, it is an indication of a faulted wire in the Rack circuitry. The "GO" light is not used for these positions.				
7.	1					
8.	1	1	OFF		shall not light	
9.	1			press-to-test	shall not light	
10.	1		SAFE		shall not light	
11.	1			press-to-test	shall not light	
12.	1	2			shall not light	

Source: https://assist.dla.mil -- Downloaded: 20260410-20T07:20Z
Check the source to verify that this is the current version before use.

TABLE II

OPERATION					INDICATION-RESPONSE	
STEP NO.	SWITCH S2 POSITION	AN/GWM-8A SEL SW POSITION	T-249 SIMULATOR SEL SW POSITION	T-249 WARNING LIGHT	T-249 WARNING LIGHT	REMARKS
13.	1			press-to-test	shall not light	
14.	1	3			shall light	
15.	1			press-to-test	shall go out	during press-to-test
16.	1	4			shall remain on	
17.	1			press-to-test	shall remain on	after flickering
18.	1	5	GND		shall light	
19.	1			press-to-test	shall remain on	after flickering
20	1	6			shall go out	
21.	1			press-to-test	shall not light	
22.	1	7			shall light	
23.	1			press-to-test	shall go out	during press-to test
24.	1	8			shall remain on	
25.	1			press-to-test	shall go out	during press-to-test

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T07:20Z
Check the source to verify that this is the current version before use.

TABLE II

OPERATION					INDICATION-RESPONSE	
STEP NO.	SWITCH S2 POSITION	AN/GWM-8A SEL SW POSITION	T-249 SIMULATOR SEL SW POSITION	T-249 WARNING LIGHT	T-249 WARNING LIGHT	REMARKS
26.	1	8	AIR		shall remain on	
27. a.				press-to-test	shall remain on	during press-to-test
b.		9			shall remain on	
c.				press-to-test	shall go out	during press-to-test
28.	1	10			shall remain on	
29.	1			press-to-test	shall go out	during press-to-test
30.	1	11			shall remain on	
31.	1			press-to-test	shall go out	during press-to-test
32.	1	OFF	OFF		shall go out	
33.	Place test box power switch in OFF position.					
34.	Place AN/GWM-8A Tester in OFF position.					
35.	Disconnect AN/GWM-8A from (LL) and connect (UL).					

Source: https://assist.dla.mil -- Downloaded: 20260-20T07:20Z
Check the source to verify that this is the current version before use.

TABLE II

OPERATION					INDICATION-RESPONSE	
STEP NO.	SWITCH S2 POSITION	AN/GWM-8A SEL SW POSITION	T-249 SIMULATOR SEL SW POSITION	T-249 WARNING LIGHT	T-249 WARNING LIGHT	REMARKS
36.	Place test	box power switch	in ON position.			
37.	2					
38.	2	1	OFF		shall not light	
39.	2			press-to-test	shall not light	
40.	2		SAFE		Shall not light	
41.	2			press-to-test	shall not light	
42.	2	2			shall not light	
43.	2			press-to-test	shall not light	
44.	2	3			shall light	
45.	2			press-to-test	shall go out	during press-to-test
46.	2	4			shall remain on	
47.	2			press-to-test	shall remain on	after flickering
48.	2	5	GRD		shall light	

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T07:20Z
Check the source to verify that this is the current version before use.

TABLE II

OPERATION					INDICATION-RESPONSE	
STEP NO.	SWITCH S2 POSITION	AN/GWM-8A SEL SW POSITION	T-249 SIMULATOR SEL SW POSITION	T-249 WARNING LIGHT	T-249 WARNING LIGHT	REMARKS
49.	2			press-to-test	shall remain on	after flickering
50.	2	6			shall go out	
51.	2			press-to-test	shall not light	
52.	2	7			shall light	
53.	2			press-to-test	shall go out	during press-to-test
54.	2	8			shall remain on	
55.	2			press-to-test	shall go out	during press-to-test
56.	2		AIR		shall remain on	
57. a.	2			press-to-test	shall remain on	during press-to-test
b.		9			shall remain on	
c.				press-to-test	shall go out	during press-to-test

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T07:20Z
Check the source to verify that this is the current version before use.

TABLE II

OPERATION					INDICATION-RESPONSE	
STEP NO.	SWITCH S2 POSITION	AN/GWM-8A SEL SW POSITION	T-249 SIMULATOR SEL SW POSITION	T-249 WARNING LIGHT	T-249 WARNING LIGHT	REMARKS
58.	2	10			shall remain on	
59.	2			press-to-test	shall go out	during press-to-test
60.	2	11			shall remain on	
61.				press-to-test	shall go out	during press-to-test
62.	2	OFF	OFF		shall go out	
63.	Place AN/GWM-8A in OFF position.					
64.	Place test box power switch in OFF position.					
65.	Disconnect AN/GWM-8A from (UL) and connect to (UR).					
66.	Place test box power switch in ON position.					
67.	3					
68.	3	1	OFF		shall not light	
69.	3			press-to-test	shall not light	
70.	3		SAFE		shall not light	

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T07:20Z
Check the source to verify that this is the current version before use.

TABLE II

OPERATION					INDICATION-RESPONSE	
STEP NO.	SWITCH S2 POSITION	AN/GWM-8A SEL SW POSITION	T-249 SIMULATOR SEL SW POSITION	T-249 WARNING LIGHT	T-249 WARNING LIGHT	REMARKS
71.	3			press-to-test	shall not light	
72.	3	2			shall not light	
73.	3			press-to-test	shall not light	
74.	3	3			shall light	
75.	3			press-to-test	shall go out	during press-to-test
76.	3	4			shall remain on	
77.	3			press-to-test	shall remain on	after flickering
78.	3	5	GND		shall light	
79.	3			press-to-test	shall remain on	after flickering
80.	3	6			shall go out	
81.	3			press-to-test	shall not light	
82.	3	7			shall light	
83.	3			press-to-test	shall go out	during press-to test

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T07:20Z
Check the source to verify that this is the current version before use.

TABLE II

OPERATION					INDICATION-RESPONSE	
STEP NO.	SWITCH S2 POSITION	AN/GWM-8A SEL SW POSITION	T-249 SIMULATOR SEL SW POSITION	T-249 WARNING LIGHT	T-249 WARNING LIGHT	REMARKS
84.	3	8			shall remain on	
85.	3			press-to-test	shall go out	during press-to-test
86.	3		AIR		shall remain on	
87. a.	3			press-to-test	shall remain on	during press-to-test
b.		9			shall remain on	
c.				press-to-test	shall go out	during press-to-test
88.	3	10			shall remain on	
89.	3			press-to-test	shall go out	during press-to-test
90.	3	11			shall remain on	
91.	3			press-to-test	shall go out	during press-to-test
92.	3	OFF	OFF		shall go out	

Source: https://assist.dla.mil -- Downloaded: 202610-20T07:20Z
Check the source to verify that this is the current version before use.

TABLE II

OPERATION					INDICATION-RESPONSE	
STEP NO.	SWITCH S2 POSITION	AN/GWM-8A SEL SW POSITION	T-249 SIMULATOR SEL SW POSITION	T-249 WARNING LIGHT	T-249 WARNING LIGHT	REMARKS
93.	Place test box power switch in the OFF position.					
94.	Place AN/GWM-8A in OFF position.					
95.	Disconnect AN/GWM-8A from (UR) and connect to (LR).					
96.	Place test box power switch in ON position.					
97.	4					
98.	4	1	OFF		shall not light	
99.	4			press-to-test	shall not light	
100.	4		SAFE		shall not light	
101.	4			press-to-test	shall not light	
102.	4	2			shall not light	
103.	4			press-to-test	shall not light	
104.	4	3			shall light	
105.	4			press-to-test	shall go out	during press-to-test
106.	4	4			shall remain on	

Source: https://assist.dla.mil -- Downloaded: 20260-20T07:20Z
Check the source to verify that this is the current version before use.

TABLE II

OPERATION					INDICATION-RESPONSE	
STEP NO.	SWITCH S2 POSITION	AN/GWM-8A SEL SW POSITION	T-249 SIMULATOR SEL SW POSITION	T-249 WARNING LIGHT	T-249 WARNING LIGHT	REMARKS
107.	4			press-to-test	shall remain on	after flickering
108.	4	5	GND		shall light	
109.	4			press-to-test	shall remain on	after flickering
110.	4	6			shall go out	
111.	4			press-to-test	shall not light	
112.	4	7			shall light	
113.	4			press-to-test	shall go out	during press-to-test
114.	4	8			shall remain on	
115.	4			press-to-test	shall go out	during press-to-test
116.	4		AIR		shall remain on	
117. a.	4			press-to-test	shall remain on	during press-to-test

Source: https://assist.dla.mil -- Downloaded: 20260-20T07:20Z
Check the source to verify that this is the current version before use.

TABLE II

OPERATION					INDICATION-RESPONSE	
STEP NO.	SWITCH S2 POSITION	AN/GWM-8A SEL SW POSITION	T-249 SIMULATOR SEL SW POSITION	T-249 WARNING LIGHT	T-249 WARNING LIGHT	REMARKS
117. b.	(Cont'd)	9			shall remain on	
c.				press-to-test	shall go out	during press-to-test
118.	4	10			shall remain on	
119.	4			press-to-test	shall go out	during press-to-test
120.	4	11			shall remain on	
121.	4			press-to-test	shall go out	during press-to-test
122.	4	OFF	OFF		shall go out	
STEP NO.	SWITCH S2 POSITION	AN/GWM-8A SEL SW POSITION	T-249 SIMULATOR SEL SW POSITION	T-249 WARNING LIGHT	GO LIGHT	REMARKS
123.	5				shall light	
124.	6				shall remain on	after flickering

Source: https://assist.dla.mil -- Downloaded: 20260-20T07:20Z
Check the source to verify that this is the current version before use.

TABLE II

OPERATION					INDICATION-RESPONSE	
STEP NO.	SWITCH S2 POSITION	AN/GMM-8A SEL SW POSITION	T-249 SIMULATOR SEL SW POSITION	T-249 WARNING LIGHT	GO LIGHT	REMARKS
125.	7				shall remain on	after flickering
126.	8				shall remain on	after flickering
127.	9				shall remain on	after flickering
128.	10				shall remain on	after flickering
129.	11				shall remain on	after flickering
	NOTE: Positions "12" through "15" are for the purpose of testing diode circuits on subassemblies which have these diodes installed. If position "12" on Switch S2 gives a "NO GO" signal, it is an indication that either the diode package is not installed inside the SWESS Relay Box, and therefore, positions "12" through "15" do not apply and may be omitted. If the diode package is installed, a "NO GO" light is an indication of faulty diodes which must be replaced and test positions "12" through "15" do apply and must be followed:					
130.	12				shall remain on	after flickering
131.	13				shall go out	

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T07:20Z
Check the source to verify that this is the current version before use.

TABLE II

OPERATION					INDICATION-RESPONSE	
STEP NO.	SWITCH S2 POSITION	AN/GWM-8A SEL SW POSITION	T-249 SIMULATOR SEL SW POSITION	T-249 WARNING LIGHT	GO LIGHT	REMARKS
132.	14				shall not light	
133.	15				shall not light	
134.	OFF					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T07:20Z
Check the source to verify that this is the current version before use.

TABLE III

MECHANICAL LOCK SYSTEM FUNCTIONAL TEST		
STEP	OPERATION	RESPONSE
1. a.	Apply a force of 85 pounds to the outboard end of the 58J46420 drive crank	(1) The crank shall move to the fully unlocked position. (2) All lock pins shall be fully retracted.
b.	Release the drive crank	The lock pins shall return to the fully locked position.
2. a.	With a test load as defined in 4.6e or 4.6h on each hook of both MB-3A Racks and the lock pins fully inserted, actuate the manual release of both racks.	The hooks shall not open.
b.	Apply a downward load of 210 pounds to the roller on the outboard end of the 58J46420 drive crank.	The lock pins shall not retract and the loads shall not release.
c.	Release the down load on the drive crank, relieve the test load and re-cock both racks.	
3. a.	With a test load as defined in 4.6e or 4.6h on each hook of both MB-3A Racks and the lock pins fully inserted, pull the manual release on the right hand rack.	The load shall not release.
b.	Apply a down load of 210 pounds to the roller on the outboard end of the 58J46420 drive crank.	(1) The lock pin in the left hand rack shall retract.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T07:20Z
Check the source to verify that this is the current version before use.

TABLE III

MECHANICAL LOCK SYSTEM FUNCTIONAL TEST		
STEP	OPERATION	RESPONSE
3.b. (Cont'd)		(2) The lock pin in the right hand rack shall not retract.
c.	Release the down load on the right hand rack, relieve the test load and re-cock the right hand rack.	
4. a.	With a test load as defined in 4.6e or 4.6h on each hook of both MB-3A Racks and the pins fully inserted, pull the manual release on the left hand rack.	The load shall not release.
b.	Apply a down load of 210 pounds to the roller on the outboard end of the 58J46420 drive crank.	(1) The lock pin in the right hand rack shall retract. (2) The lock pin in the left hand rack shall not retract.
c.	Release the down load on the left hand rack, relieve the test load and re-cock the left hand rack.	
5. a.	(1) With a test load as defined in 4.6e or 4.6h on each hook of both MB-3A Racks, move the roller on the outboard end of the 58J46420 drive crank to the full down position and hold. (2) Pull the manual release on the right hand rack.	The hooks shall open and the load shall release.
b.	Release the drive crank.	The lock pin on the left hand rack will return to the locked position.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T07:20Z
Check the source to verify that this is the current version before use.

TABLE III

MECHANICAL LOCK SYSTEM FUNCTIONAL TEST		
TEST	OPERATION	RESPONSE
5. (Cont'd) c.	Move the drive-crank to the down position and pull the manual release on the left hand rack.	The hooks will open and the load will release.
d.	Reconnect both test loads, recock both racks and release the down load on the drive crank.	
6. a.	(1) With a test load as defined in 4.6e or 4.6h on each hook of both MB-3A Racks, move the roller on the outboard end of the 58J46420 drive crank to the full down position and hold.	
	(2) Pull the manual release on the left hand rack.	The hooks will open and the load will release.
b.	Release the drive crank.	The lock pin on the right hand rack shall return to the locked position.
c.	(1) Move the drive crank to the down position.	
	(2) Pull the manual release on the right hand rack.	The hooks will open and the load will release.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T07:20Z
Check the source to verify that this is the current version before use.

4.7.4 STATIC STRENGTH TESTS

4.7.4.1 STATIC TEST CONDITIONS.- Static loads for the load conditions shown in figures 1, 2, 3, and 10 through 15 shall be applied. The suggested method is shown in figures 6, 7, 8, and 10 through 15.

4.7.4.2 YIELD LOAD TEST.- Yield loads (1.15 times the magnitude of the limit loads) as specified in figures 1, 2, 3, and 10 through 15 shall be applied. The loads shall be applied for a period of not less than 3 minutes and there shall be no permanent set as defined by MIL-A-8591.

4.7.4.3 ULTIMATE LOAD TESTS.- Ultimate loads (1.50 times the magnitude of specified limit loads) shall be applied as in the yield load test. The loads shall be applied for a period of not less than 10 seconds and there shall be no failure of any component as a result of this test. (Permanent set shall be permissible).

4.7.5 RELEASE TESTS.- The drop test program shall consist of 10 consecutive successful drops from each MB-3A Rack, using the test loads of 4.6e or 4.6h. The test loads shall be installed, and the Subassembly shall be hoisted in the drop test rig and clipped into the test fixture. Operation of the mechanical lock system shall be checked in accordance with Table III. Failure to release shall constitute an unsuccessful drop. At the conclusion of the drops, all load carrying members shall be inspected for indications of damage resulting from bomb drop, the occurrence of which shall be cause for rejection.

4.7.6 ENVIRONMENTAL TESTS

4.7.6.1 GENERAL.- The Subassembly shall be loaded with test loads as defined in 4.6e or 4.6h while being subjected to the specified environmental tests. Unless otherwise specified in the following detailed test procedures, operation specified in MIL-E-5272 shall consist of one cycle of the release tests of this specification.


4.7.6.2 HIGH TEMPERATURE.- The Subassembly shall be tested in accordance with the requirements of procedure II of MIL-E-5272.

4.7.6.3 LOW TEMPERATURE.- The Subassembly shall be tested in accordance with the requirements of procedure II of MIL-E-5272.

4.7.6.4 HUMIDITY.- The Subassembly shall be tested in accordance with the requirements of procedure I of MIL-E-5272.

4.7.6.5 SALT SPRAY.- The Subassembly shall be tested in accordance with the requirements of procedure I of MIL-E-5272.

Source: https://assist.dla.mil -- Downloaded: 202610-20T07:20Z
Check the source to verify that this is the currentversion before use.

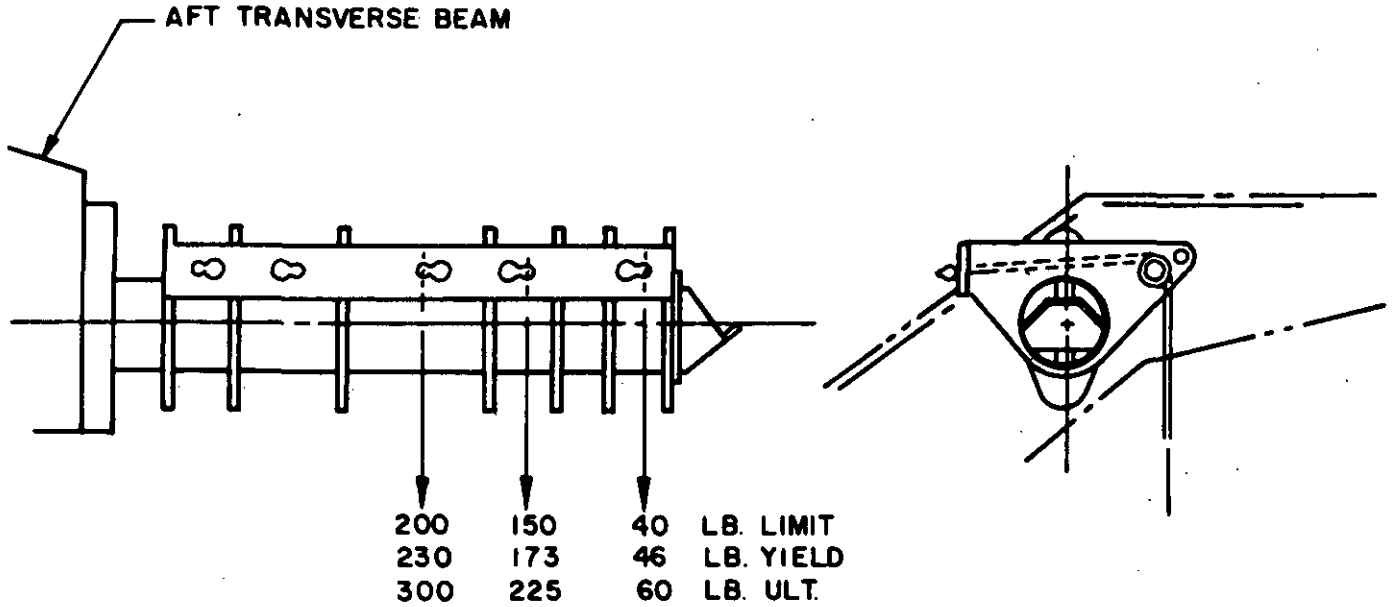


TOLERANCES:
± .10 INCHES

NOTE:
STRUCTURAL LOADS ~ UPPER PULLOUT BEAM LOADS SHOWN ACT SEPARATELY. EACH LOAD CAN ACT AT 10° PULLOFF ANGLE IN ANY DIRECTION FROM THE LINE OF ACTION SHOWN.

FIGURE 10 UPPER PULLOUT BEAM LOADS ~ CONDITION I

Source: https://assist.dla.mil -- Downloaded: 20261020T07:20Z
Check the source to verify that this is the current version before use.

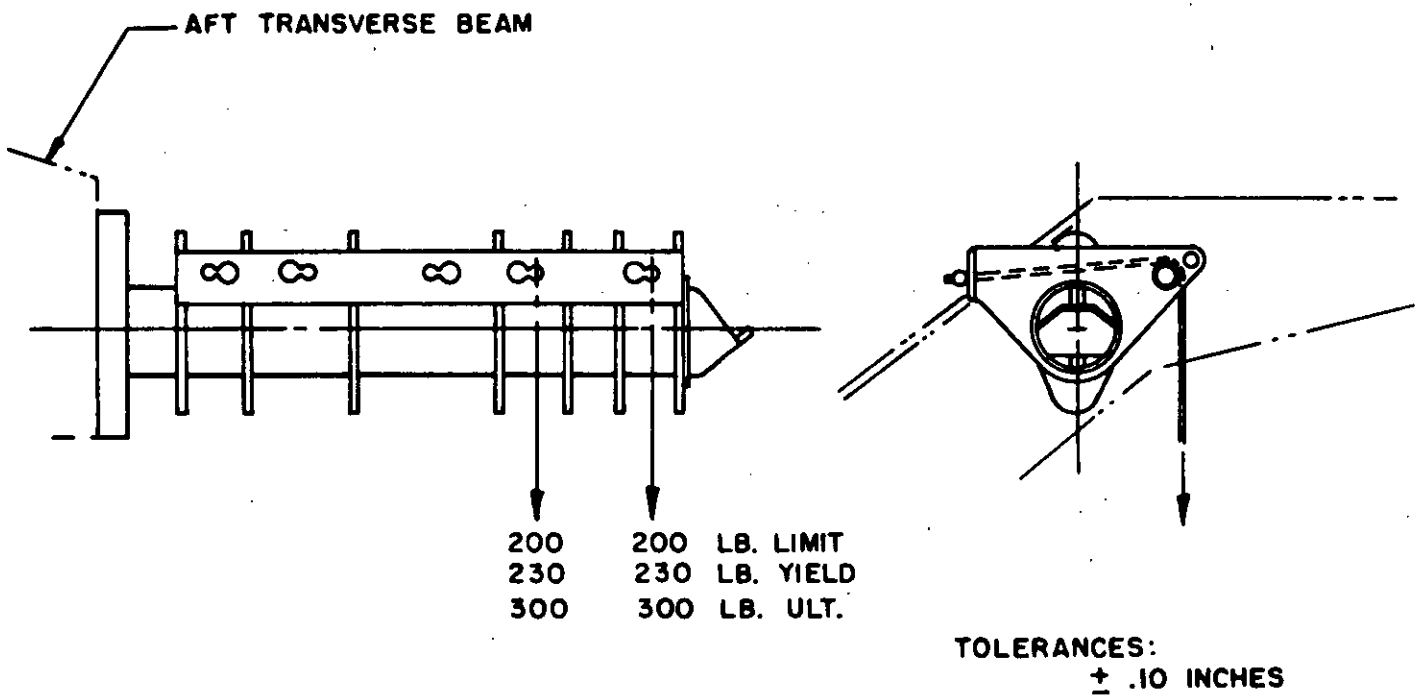


NOTE:

STRUCTURAL LOADS - THE PULLOUT BEAM LOADS SHOWN ACT SEPARATELY. EACH LOAD CAN ACT AT 10° PULLOFF ANGLE IN ANY DIRECTION FROM THE LINE OF ACTION SHOWN.

FIGURE 11 UPPER PULLOUT BEAM LOADS~CONDITION 2

Source: https://assist.dla.mil -- Downloaded: 2026-02-20T07:20Z
Check the source to verify that this is the current version before use.

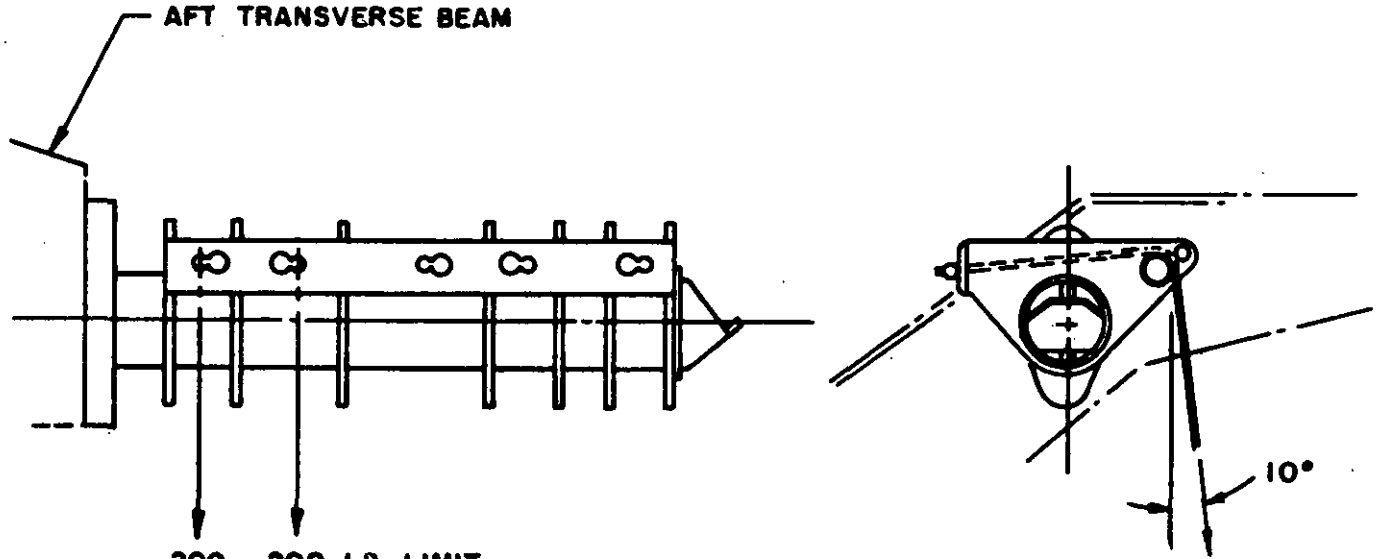

TOLERANCES:

± .10 INCHES


± 2°

NOTE:

STRUCTURAL LOADS ~ UPPER PULLOUT BEAM LOADS SHOWN ACT SEPARATELY. EACH LOAD CAN ACT AT 10° PULLOFF ANGLE IN ANY DIRECTION FROM THE LINE OF ACTION SHOWN.

FIGURE 12 UPPER PULLOUT BEAM LOADS~CONDITION 3


Source: https://assist.dla.mil -- Downloaded: 202610-20T07:20Z
Check the source to verify that this is the current version before use.

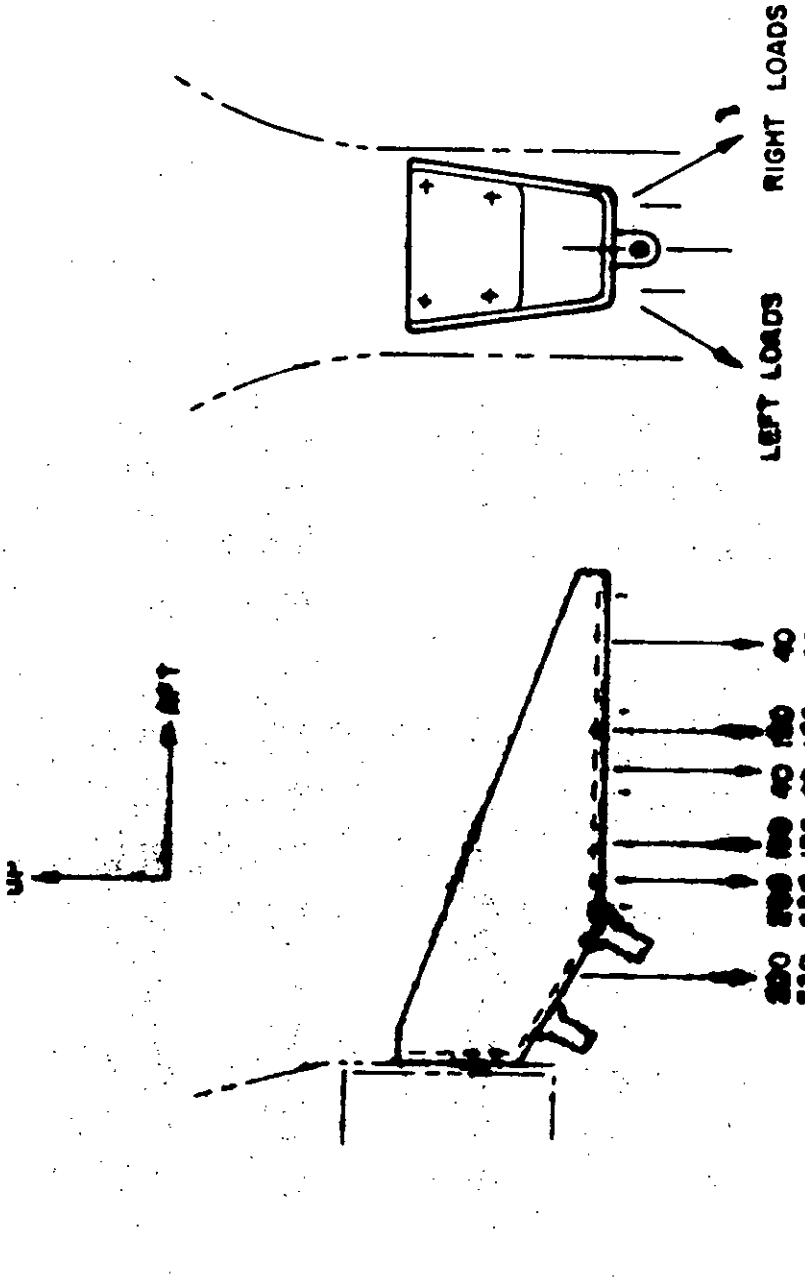

STRUCTURAL LOADS ----- LOWER PULLOUT BEAM LOAD CONDITION. THE LOADS IN EACH PAIR CAN ACT SIMULTANEOUSLY BUT ACT SEPARATELY FROM THE LOADS IN OTHER PAIRS. EACH LOAD CAN ACT IN A 10° PULLOFF ANGLE IN ANY DIRECTION FROM THE LINE OF ACTION SHOWN.

FIGURE 13 LOWER PULLOUT BEAM LOADS ~ CONDITION I


Source: https://assist.dla.mil -- Downloaded: 202610-20T07:20Z
Check the source to verify that this is the current version before use.

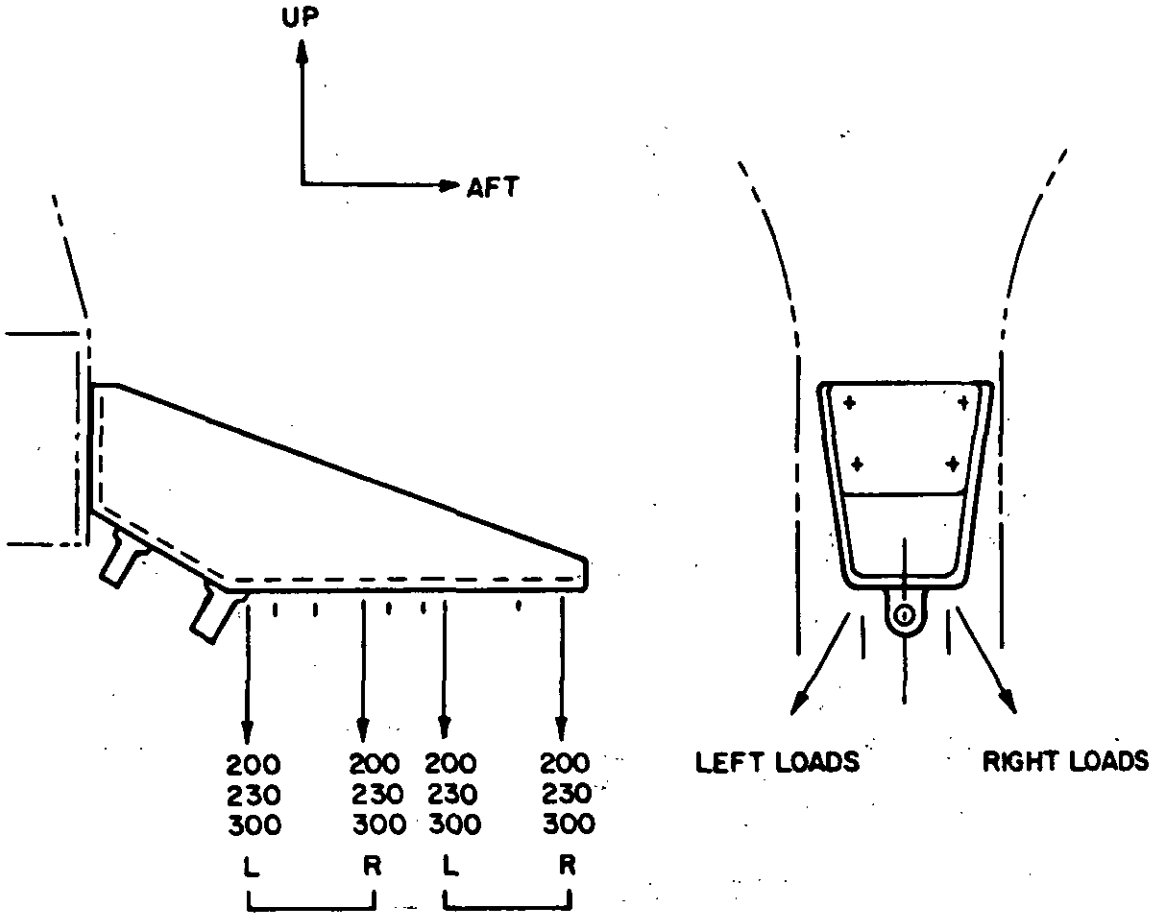

NOTE: STRUCTURAL LOADS--LOWER PULLOUT BEAM LOAD CONDITION. THE LOADS IN EACH PAIR CAN ACT SIMULTANEOUSLY BUT ACT SEPARATELY FROM THE LOADS IN THE OTHER PAIR. EACH LOAD CAN ACT IN A 10° PULLOFF ANGLE IN ANY DIRECTION FROM THE LINE OF ACTION SHOWN.

FIGURE 14 LOWER PULLOUT BEAM LOADS ~ CONDITION 2

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T07:20Z
Check the source to verify that this is the current version before use.

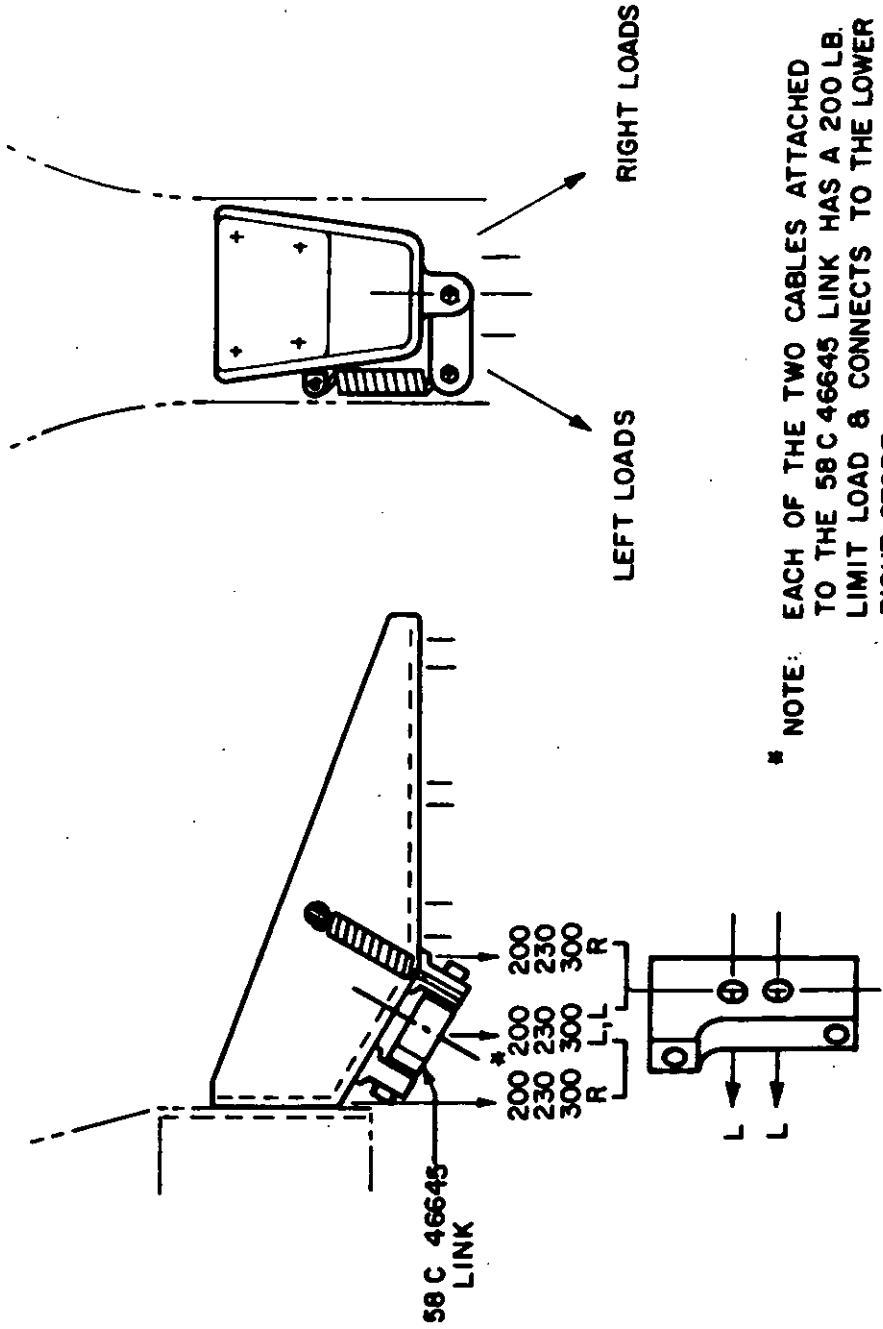

* NOTE: EACH OF THE TWO CABLES ATTACHED TO THE 58 C 46645 LINK HAS A 200 LB. LIMIT LOAD & CONNECTS TO THE LOWER RIGHT STORE.

NOTE: STRUCTURAL LOADS--LOWER PULLOUT BEAM LOAD CONDITION. THE LOADS IN EACH PAIR CAN ACT SIMULTANEOUSLY BUT ACT SEPARATELY FROM THE LOADS IN THE OTHER PAIR. EACH LOAD CAN ACT IN A 10° PULLOFF ANGLE IN ANY DIRECTION FROM THE LINE OF ACTION SHOWN.

FIGURE 15 LOWER PULLOUT BEAM LOADS~CONDITION 3

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T07:20Z
Check the source to verify that this is the current version before use.

4.7.6.6 VIBRATION,- The Subassembly shall be tested in accordance with procedure XII of MIL-E-5272, except that the range of frequencies and vibratory accelerations shown in figure 16 shall apply in lieu of figure 1 of MIL-E-5272. The test shall be conducted in two parts:

a. Each of the MB-3A Racks shall be released at the completion of the resonance frequency vibration test, while the Subassembly is being vibrated at resonant frequency.

b. The Subassembly shall be tested in accordance with Table III subsequent to the completion of the vibration tests.

At the completion of the test, the electrical system shall meet the test requirements of the Electrical System Functional Tests of this specification.

4.7.6.7 SAND AND DUST.- One Subassembly, with test loads (4.6e or 4.6h) installed, shall be subjected to tests in accordance with procedure I, parts I and II of MIL-E-5272. Sand and dust velocity shall be 2500 ± 500 feet per minute. At the end of the exposure period, the equipment shall be removed from the test chamber, and allowed to cool to room temperature. The following test shall then be conducted:

Mechanical Lock System Functional Test, Table III.

4.7.6.8 TEMPERATURE SHOCK.- The Subassembly, with test loads installed, shall be placed in a test chamber and stabilized at -54°C (-65°F). The subassembly shall then be exposed to an atmosphere having a temperature of 73°C (165°F) and a relative humidity of 90 percent for a period of 4 hours. Retaining all condensation practicable, the Subassembly shall be exposed to an atmosphere of -54°C (-65°F) for a period of 4 hours. There shall be three such cycles from 73°C (165°F) to -54°C (-65°F). At the conclusion of the third cycle, the Subassembly shall be subjected to the release tests of this specification, either while still in the chamber, or within 5 minutes after removal from the chamber.

4.7.7 BASIS FOR REJECTION

a. Individual units failing to meet their respective tests shall be rejected. Rejected units either shall be replaced or shall be reworked to correct the defects, after which all specified tests shall be repeated. Rejected units shall not be resubmitted for inspection without furnishing full particulars concerning previous rejection and measures taken to overcome defects.

Source: https://assist.dla.mil -- Downloaded: 20260-20T07:20Z
Check the source to verify that this is the current version before use.

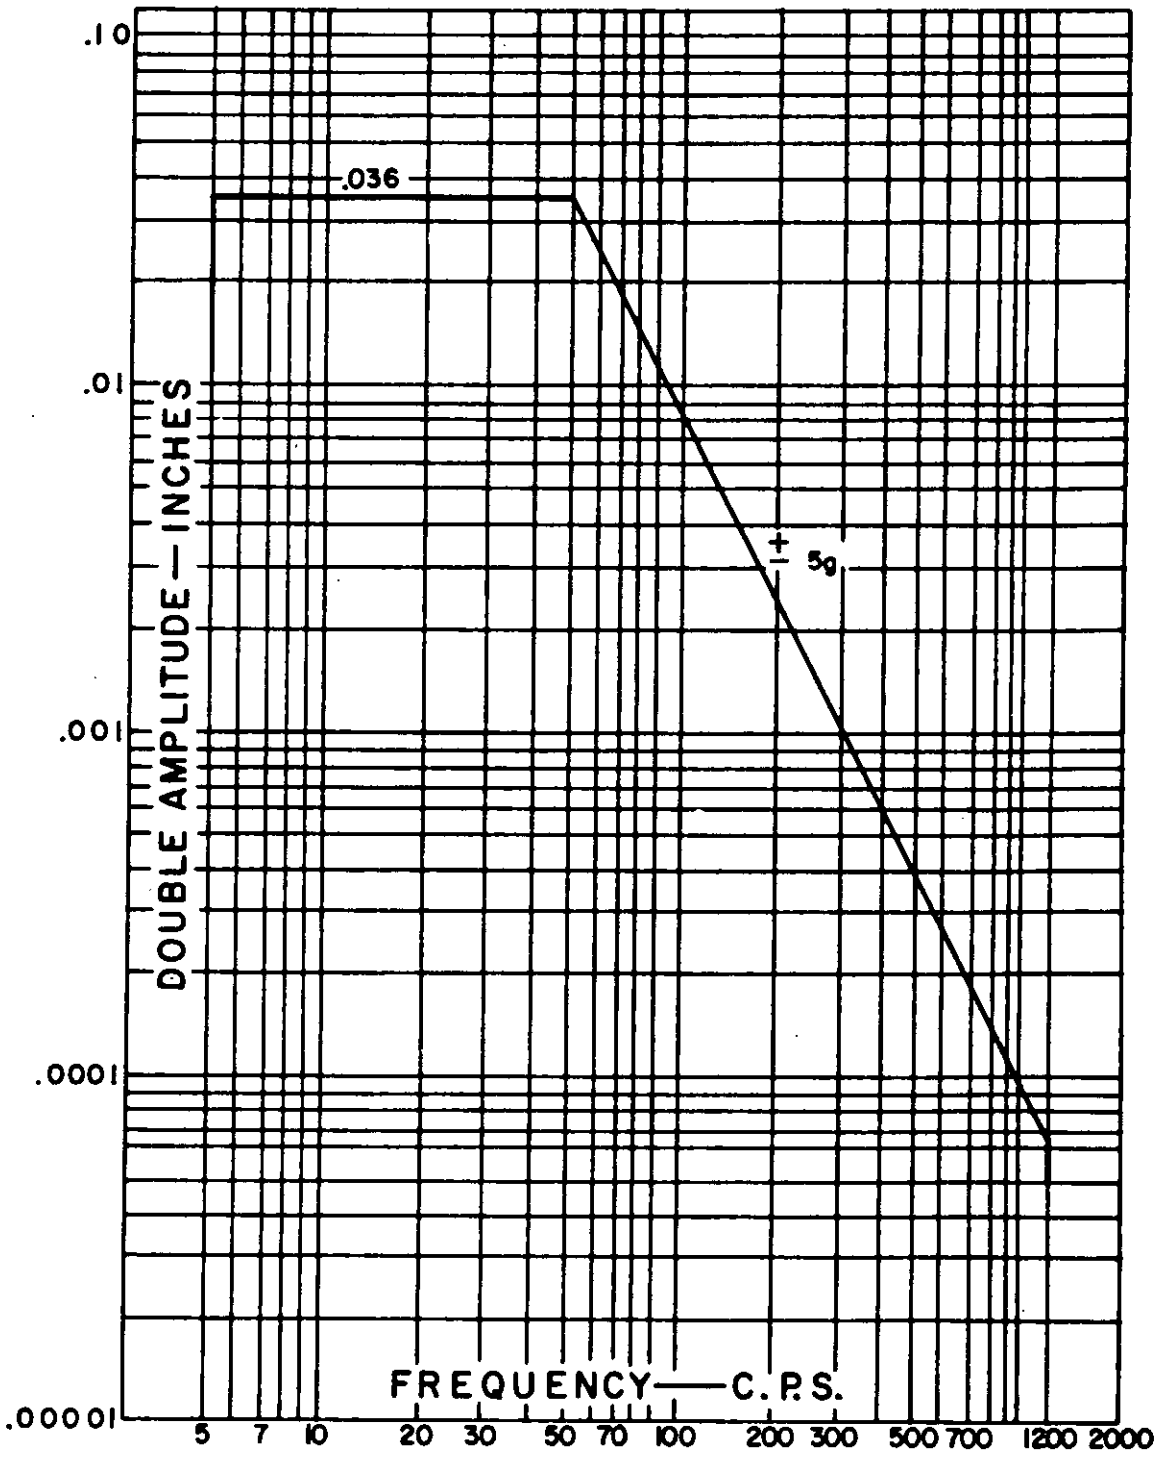


FIGURE 16 RANGE CURVE FOR VIBRATION TEST

Source: https://assist.dla.mil -- Downloaded: 20261O-20T07:20Z
Check the source to verify that this is the current version before use.

b. All parts, specimens or assemblies destroyed in making tests required by this specification shall be in addition to the quantity specified in the order, and shall be furnished to the procuring activity without increasing the cost of the contract. Accepted units shall have such acceptance marking on the unit as specified by the procuring activity.

c. After any test, the occurrence of any of the following conditions shall be sufficient cause for rejection:

Failure to perform within required tolerances.

Failure of structure, whether by deformation, rupture, or misalignment.

Dirty or pitted electrical contact points.

Dirt, metal chips, filings, solder or burrs on any surface.

Parts not properly finished.

Loose connections, badly soldered joints or frayed ends of wires.

5. PREPARATION FOR DELIVERY

5.1 DELIVERY PLAN NO. 1.- The Subassembly shall be shipped assembled for all levels of shipments, except the pullout beam. The pullout beam shall be removed and packaged with the assembly. Attaching hardware shall be placed in a bag and secured to the pullout beam.

5.1.1 PRESERVATION.- Preservation for all shipment levels shall be in accordance with method I of MIL-P-116.

5.1.2 PACKAGING AND PACKING.- The quantity of Subassemblies per container shall be specified by the procuring activity.

5.1.2.1 LEVELS A AND B.- The Subassemblies shall be physically protected in accordance with JAN-P-100 and packed in a box conforming to PPP-B-601 or PPP-B-621.

5.1.2.2 LEVEL C.- The Subassemblies for level C shipment shall be packed in exterior type containers in such a manner as to insure safe transportation at the lowest rate to the point of delivery. Containers shall meet Consolidated Freight Classification Rules, or the regulations of other common carriers as applicable.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T07:20Z
Check the source to verify that this is the current version before use.

5.2 DELIVERY PLAN NO. 2.- Requirements of MIL-S-25831 and MIL-A-25835 shall apply when separate packaging is required by the contract.

5.3 MARKING FOR SHIPMENT AND STORAGE.- Interior packages and exterior shipping containers shall be marked in accordance with MIL-STD-129. The shipment marking nomenclature shall be:

CLIP-IN SUBASSEMBLY MHU-20/C

6. NOTES

6.1 INTENDED USE.- The Subassembly is intended for carrying weapons in high-performance bomber aircraft and maintaining readiness during storage.

6.2 ORDERING DATA.- Procurement documents should specify the following:

a. The title, number, and date of this specification.

b. Delivery plan required.

(1) Levels of shipment in the event delivery plan No. 1 is required.

c. Whether preproduction tests will be conducted by the procuring activity.

6.2.1 PREPRODUCTION TEST SAMPLES.- It is expected that the contract or purchase order will specify that a minimum of two Subassemblies representative of tne production equipment will be submitted to the procuring activity for test and evaluation. The invitation for bids, and the contract or purchase order, should specify the point of inspection for these tests.

6.3 GOVERNMENT LOANED PROPERTY.- The quantity of Government loaned property may be varied according to the production rate.

6.4 PRODUCTION DELIVERY.- No production items should be delivered prior to approval of the preproduction samples.

6.5 DEFINITIONS

a. PREPRODUCTION TESTS.- Preproduction tests are those tests made on samples which have been submitted by a contractor on a production contract or purchase order to prove, prior to his starting production, that the Subassembly meet the

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T07:20Z
Check the source to verify that this is the current version before use.

requirements of this specification. Any production prior to the approval of the preproduction samples shall be at the contractor's risk.

b. ACCEPTANCE TESTS.- Acceptance tests are those tests accomplished on equipment submitted for acceptance under a contract to determine conformance to the requirements of this specification and to determine that the units are equivalent in performance and construction to the approved preproduction samples.

NOTICE: When Government drawings, specifications, or other data are used for any purpose other than in connection with a definitely related Government procurement operation, the United States Government thereby incurs no responsibility nor any obligation whatsoever; and the fact that the Government may have formulated, furnished, or in any way supplied the said drawings, specifications, or other data, is not to be regarded by implication or otherwise as in any manner licensing the holder or any other person or corporation, or conveying any rights or permission to manufacture, use or sell any patented invention that may in any way be related thereto.

SWVEC
CWHjr/rm

Source: https://assist.dla.mil -- Downloaded: 202640-20T07:20Z
Check the source to verify that this is the current version before use.