
MILITARY SPECIFICATION SHEET

FUSE BOXES, FEEDER DISTRIBUTION, TOTALLY ENCLOSED, 125 VOLTS, ALTERNATING CURRENT, SINGLE AND THREE PHASE BUSES, SINGLE PHASE BRANCHES, 0-30 AMPERE MIDGET FUSES, SYMBOLS 600, 601, 612.1, 613, 613.1 AND 614

This specification sheet is approved for use by the Naval Sea Systems Command, Department of the Navy, and is available for use by all Departments and Agencies of the Department of Defense.

The complete requirements for acquiring the fuse boxes described herein shall consist of this document and the latest issue of MIL-F-24646(SH).

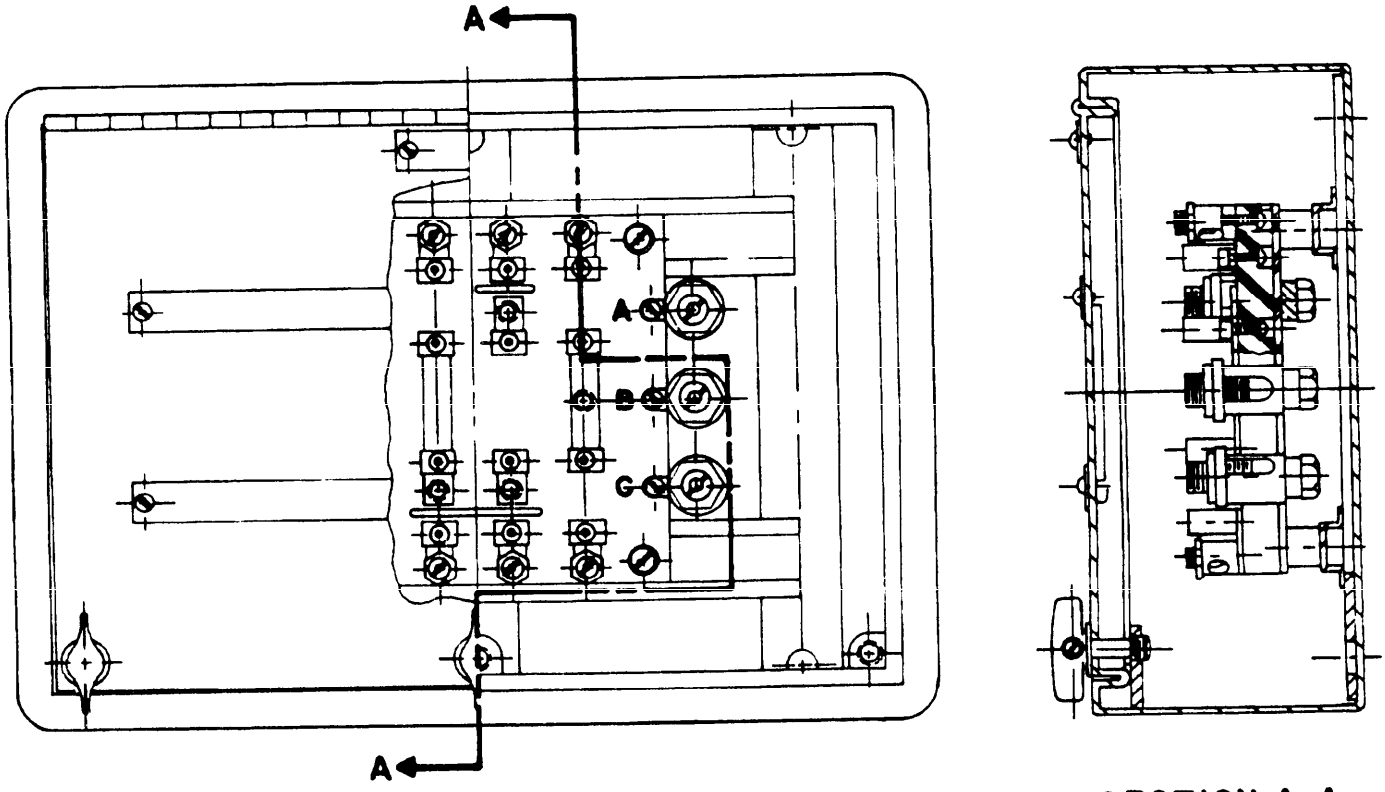

SH 131473

FIGURE 1. Fuse box assembly, typical. (Symbol 612.1 shown)

01 02 03 04 05 06


NOTES:

1. Dimensions are in inches.
2. Unless otherwise specified herein, tolerances shall be as follows:
   Two place decimals - plus or minus 0.02.
   Three place decimals - plus or minus 0.005.

FSC 5920

Source: https://assist.dla.mil -- Downloaded: 202610-20T00:26Z
Check the source to verify that this is the current version before use.

SYMBOL NO	DIMENSIONS (REF) A	B	C
600	14.16	10.16	4.25
601	16.16	10.16	4.25
612.1	14.19	10.25	4.75
613	18.16	10.16	4.25
613.1	18.16	10.15	4.25
614	22.16	10.18	4.25

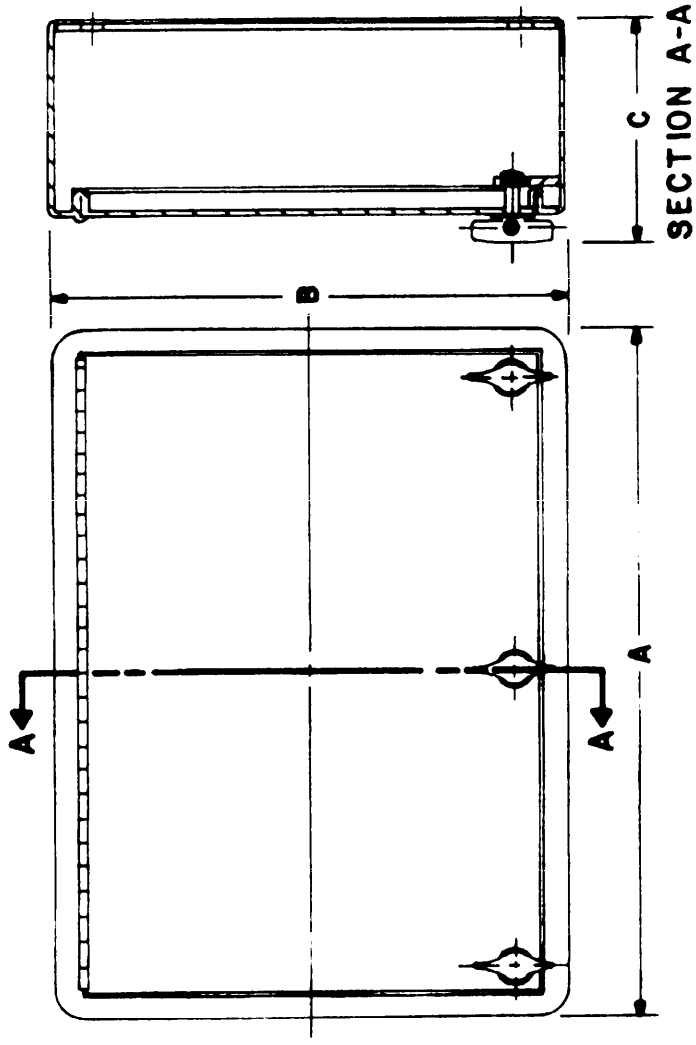


SH 131474


FIGURE 2. Enclosure, overall dimensions. (07)(08)(09)(10)(11)(12)
(Symbols 600, 601, 612.1, 613 and 614)

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:26Z
Check the source to verify that this is the current version before use.

SYMBOL NO	DIMENSIONS A	B
600	5.00	10.00
601	6.50	6.50
612.1	5.00	10.00
613	6.50	6.50
613.1	6.50	6.50

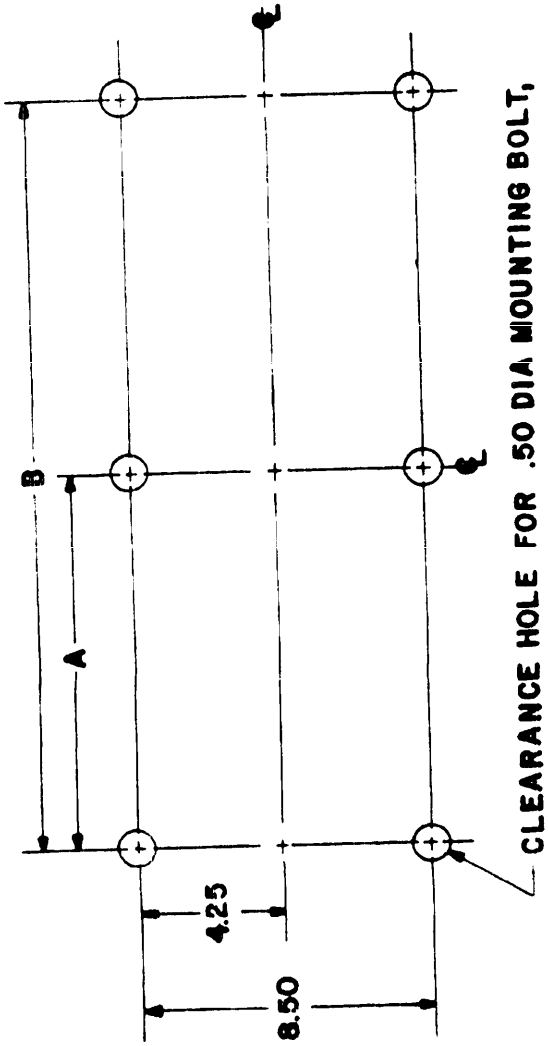

A. Symbols 600, 601, 612.1, and 613

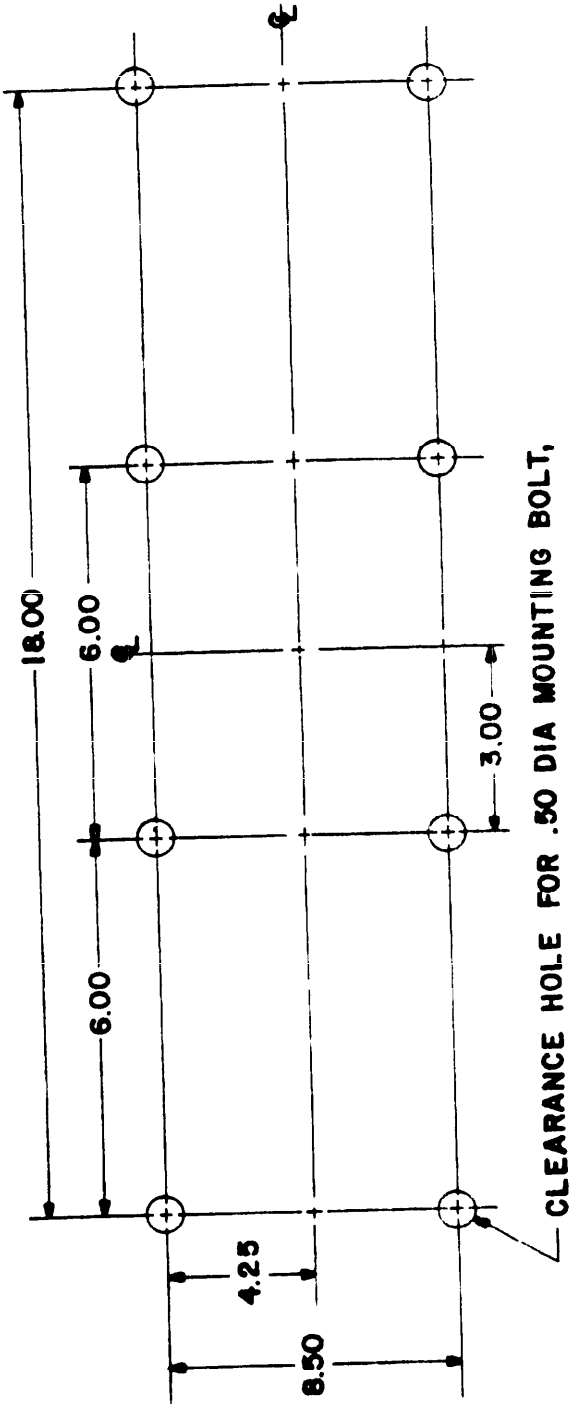


B. Symbol 614

SH 131475

FIGURE 3. Mounting dimensions, ref.

Source: https://assist.dla.mil -- Downloaded: 202610-20T00:26Z
Check the source to verify that this is the currentversion before use.

SYMBOL NO	DIMENSIONS (MAX) A	B	C
600	7.25	5.00	2.30
601	12.38	5.00	2.30
612.1	7.25	5.75	2.30
613	12.38	5.75	2.30
613.1	12.38	5.75	2.30
614	17.25	5.75	2.30

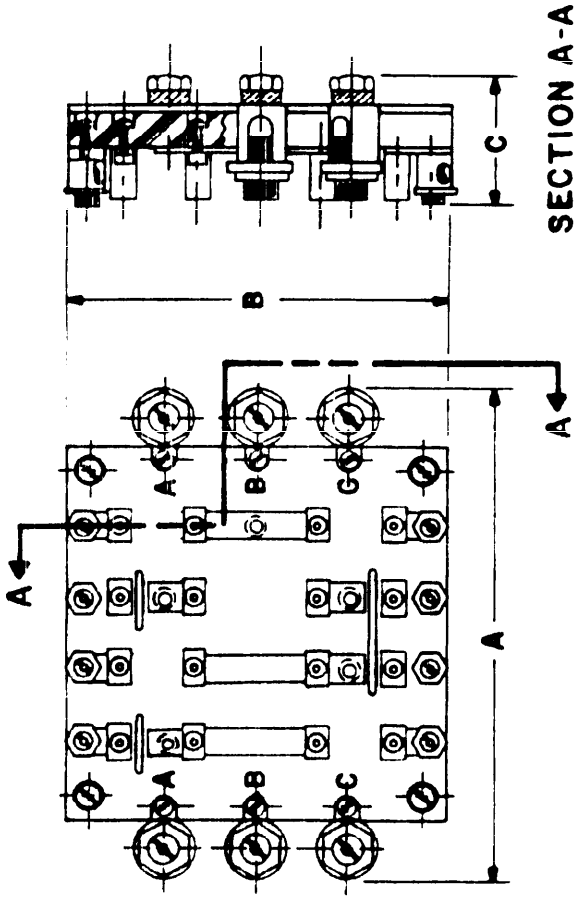


SH 131476

FIGURE 4. Fuse block assembly, typical. (13) (14) (15) (16) (17)

(Symbols 600, 601, 612.1, 613, 613.1, and 614)

Source: https://assist.dla.mil -- Downloaded: 20260-20T00:26Z
Check the source to verify that this is the currentversion before use.

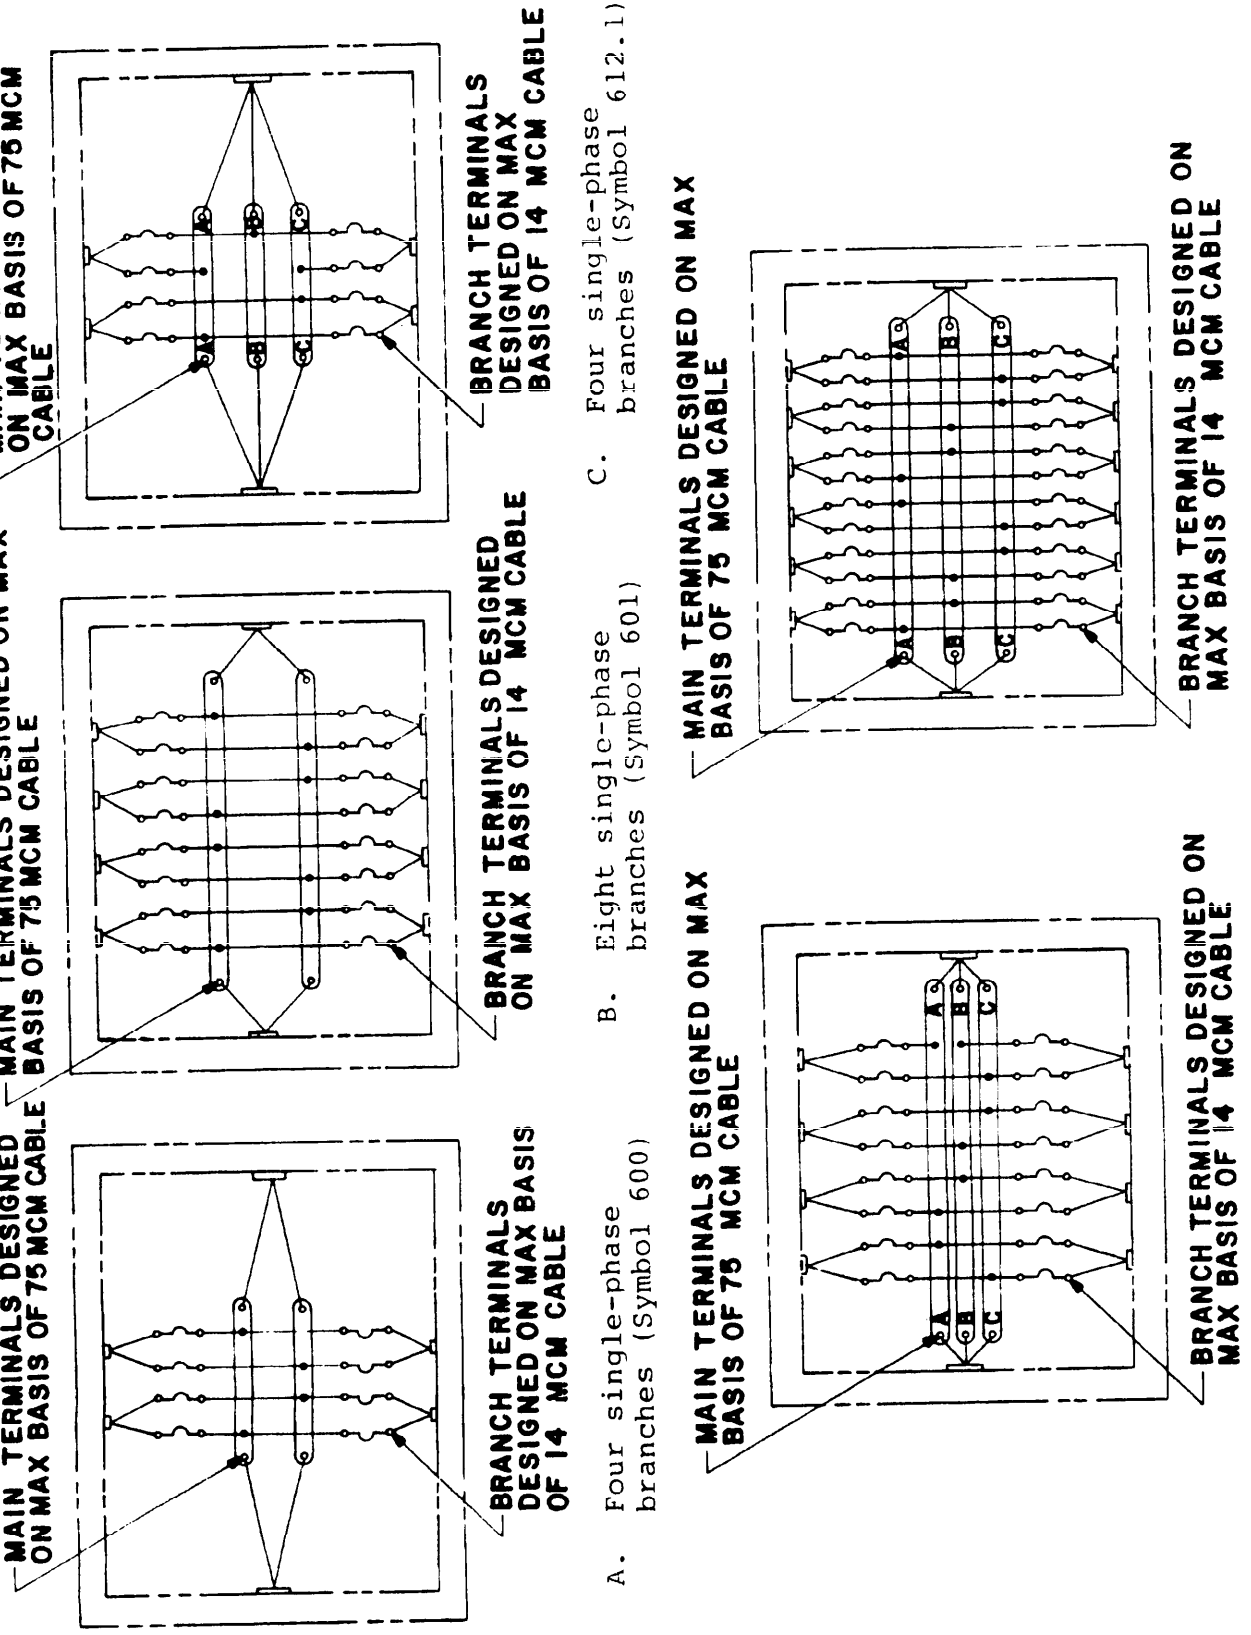

A. Four single-phase branches (Symbol 600)

B. Eight single-phase branches (Symbol 601)

C. Four single-phase branches (Symbol 612.1)

D. Eight single-phase branches (Symbol 613, and 613.1)

E. Twelve single-phase branches (Symbol 614)

FIGURE 5. Wiring diagrams. 18 19 20 21 22

SH 131477

Source: https://assist.dla.mil -- Downloaded: 202610-20T00:26Z
Check the source to verify that this is the currentversion before use.

REQUIREMENTS:

Symbol numbers: See table I.

Design:
Electrical rating: 125 volts alternating current, 0-30 ampere, 60 hertz.
Dimensions and configuration: See figures 1, 2, 3 and 4.
Wiring diagrams: See figure 5.
Mounting dimensions: See figure 3.
Degree of enclosure: Totally enclosed.
Nonmagnetic enclosure: Nonmagnetic enclosures shall be aluminum as specified in MIL-E-24142. Attaching hardware shall be nonmagnetic and shall have a magnetic permeability not greater than 2.0.

Designation and marking: See MIL-F-24646(SH).
Parts: The parts listed in table II and specified in MIL-F-24646(SH) shall be used in the construction of the fuse boxes specified herein.

General information:
Military part numbers and general information are as specified in table I.

TABLE I. Military part numbers and general information.

Military part no.	Symbol no.	Weight in pounds	No. of circuits	Feeder MCM	Branch MCM	Fuse size	Bus bar size	Supersedes	
								Drawing no.	Type
M24646/1-001	600	20.1	4	75	14	midget 0-30A	0.62 x 0.25	9-S-5348-L	-
M24646/1-002	601	22.9	8	75	14	midget 0-30A	.62 x .25	9-S-5349-L	D-29A
1/ M24646/1-003	612.1	10.0	4	75	14	midget 0-30A	.62 x .25	9000-S-6202 -74440	-
M24646/1-004	613	24.5	8	75	14	midget 0-30A	.62 x .25	9-S-5214-L	-
1/ M24646/1-005	613.1	14.5	12	75	14	midget 0-30A	.62 x .25	9-S-5214-L	-
M24646/1-006	614	18.25	12	75	14	midget 0-30A	.62 x .25	9-S-4755-L	18-S

1/ Nonmagnetic, see requirements.

Source: https://assist.dla.mil -- Downloaded: 202610-20T00:26Z
Check the source to verify that this is the current version before use.

TABLE II. Parts list.

Item no. 1/	Description	QTY M /-						Material/spec	Remarks
		001	002	003	004	005	006		
01	Fuse box assembly (sym 600)	1						MIL-F-24646/1	See figure 1
02	Fuse box assembly (sym 601)		1					MIL-F-24646/1	See figure 1
03	Fuse box assembly (sym 612.1)			1				MIL-F-24646/1	See figure 1
04	Fuse box assembly (sym 613)				1			MIL-F-24646/1	See figure 1
05	Fuse box assembly (sym 613.1)					1		MIL-F-24646/1	See figure 1
06	Fuse box assembly (sym 614)						1	MIL-F-24646/1	See figure 1
07	Enclosure (10 x 14 x 3.5)	1						M24142/16-001	See figure 2
08	Enclosure (10 x 16 x 3.5)		1					M24142/16-002	See figure 2
2/ 09	Enclosure (10 x 14 x 3.5)			1				M24142/16-001 Mod	See figure 2 Nonmagnetic
10	Enclosure (10 x 18 x 3.5)				1			M24142/16-003 Mod	See figure 2
2/ 11	Enclosure (10 x 18 x 3.5)					1		M24142/16-003 Mod	See figure 2 Nonmagnetic
12	Enclosure (10 x 22 x 3.5)						1	M24142/18-002	See figure 2
13	Fuse block assembly	1						MIL-F-24646/1	See figure 4
14	Fuse block assembly		1					MIL-F-24646/1	See figure 4
15	Fuse block assembly			1				MIL-F-24646/1	See figure 4
16	Fuse block assembly				1	1		MIL-F-24646/1	See figure 4
17	Fuse block assembly						1	MIL-F-24646/1	See figure 4
18	Wiring diagram	1						MIL-E-2036	See figure 5
19	Wiring diagram		1					MIL-E-2036	See figure 5
20	Wiring diagram			1				MIL-E-2036	See figure 5
21	Wiring diagram				1	1		MIL-E-2036	See figure 5
22	Wiring diagram						1	MIL-E-2036	See figure 5
23	Fuse clip (midget 0-30A)	16	32	16	32	48	48	M21346/1- 04	----
24	Identification plate	1	1	1	1	1	1	Brass, QQ-B-613	----
25	Information plate	4	8	4	8	12	12	Brass, QQ-B-613	----

1/ Numbers in circles shown on the figures are the same as the item numbers shown in this table.
2/ Nonmagnetic, see requirements.

Preparing activity:
Navy - SH
(Project 5920-N163-1)

Source: https://assist.dla.mil -- Downloaded: 202610-20T00:26Z
Check the source to verify that this is the current version before use.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:26Z
Check the source to verify that this is the current version before use.