
MILITARY SPECIFICATION SHEET

FUSE BOXES, FEEDER DISTRIBUTION, WITH SWITCHES, TOTALLY ENCLOSED, 125 VOLTS, ALTERNATING CURRENT, SINGLE AND THREE PHASE BUSES, SINGLE AND DOUBLE FEEDER, SINGLE PHASE BRANCHES, 0-30 AMPERE MIDGET FUSES AND SNAP SWITCHES, SYMBOLS 602, 603, 604, 605, 606, 615, 616 AND 617

This specification sheet is approved for use by the Naval Sea Systems Command, Department of the Navy, and is available for use by all Departments and Agencies of the Department of Defense.

The complete requirements for acquiring the fuse boxes described herein shall consist of this document and the latest issue of MIL-F-24646(SH).

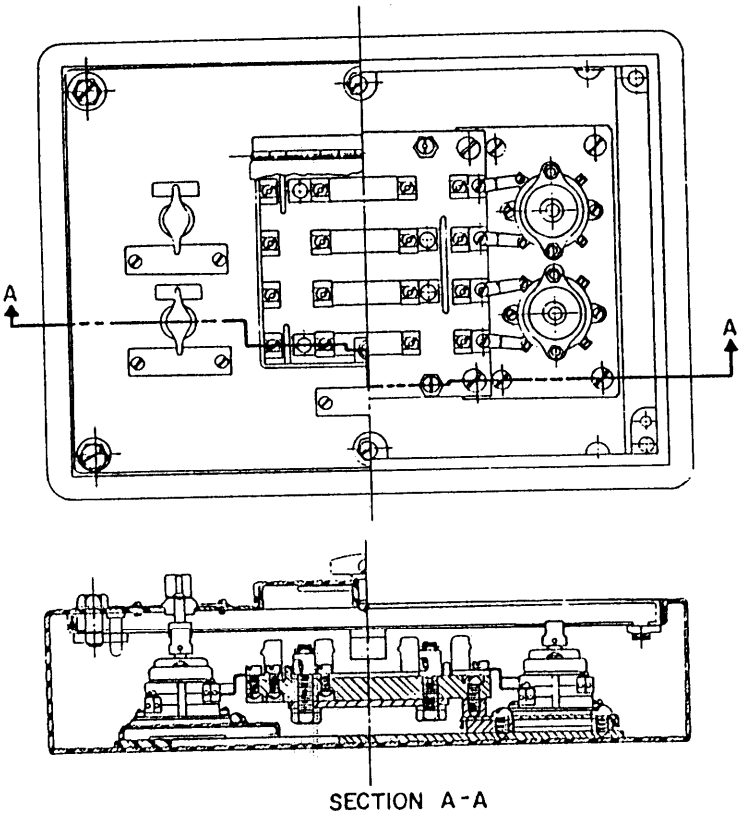

SH 131498

FIGURE 1. Fuse box assembly, typical. (01) (02) (03) (04) (05) (06) (07) (08)
(Symbol 602 shown)

NOTES:

1. Dimensions are in inches.
2. Unless otherwise specified herein, tolerances shall be as follows:
   Two place decimals - plus or minus 0.02.
   Three place decimals - plus or minus 0.005.

FSC 6110

Source: https://assist.dla.mil -- Downloaded: 202610-20T00:30Z
Check the source to verify that this is the current version before use.

SYMBOL NO	DIMENSIONS (REF) A	B	C
602	14.16	10.16	4.25
603	14.16	14.16	4.25
604	14.16	10.16	4.25
605	14.16	14.16	4.25
606	14.16	18.19	4.25
615	14.19	10.19	4.38
616	14.16	14.16	4.25
617	14.16	20.16	4.25

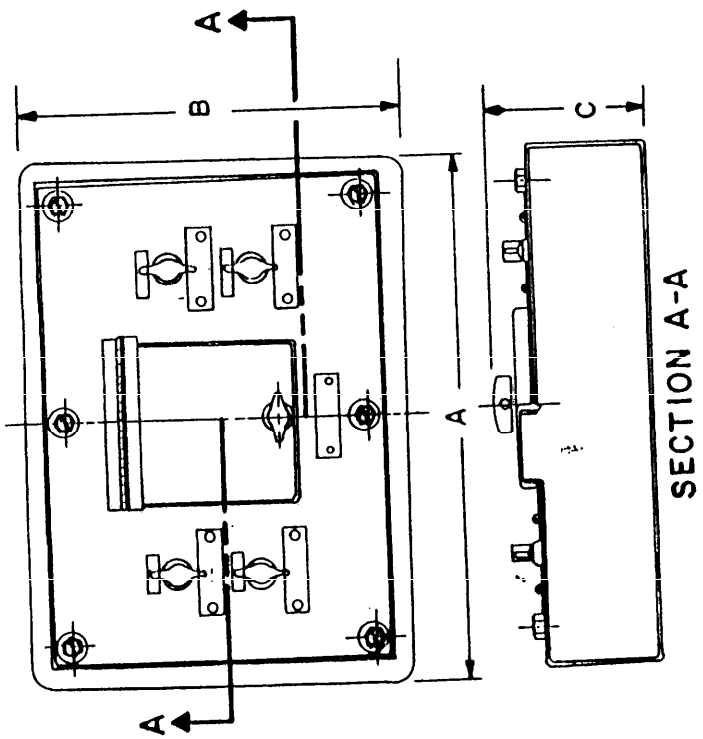


FIGURE 2. Enclosure, overall dimensions. (09) (10) (11) (12)

(Symbols 602, 603, 604, 605, 606, 615, 616 and 617

SH 131499

Source: https://assist.dla.mil -- Downloaded: 20260-20T00:30Z
Check the source to verify that this is the current version before use.

SYMBOL NO	DIMENSIONS			
	A	B	C	D
602	5.00	10.00	4.25	8.50
603	6.25	12.50	5.12	10.25
604	5.00	10.00	4.25	8.50
605	6.25	12.50	5.12	10.25
606	8.00	16.00	6.25	12.50
615	5.00	10.00	4.25	8.50
616	6.25	12.50	5.12	10.25
617	8.00	16.00	5.00	10.00


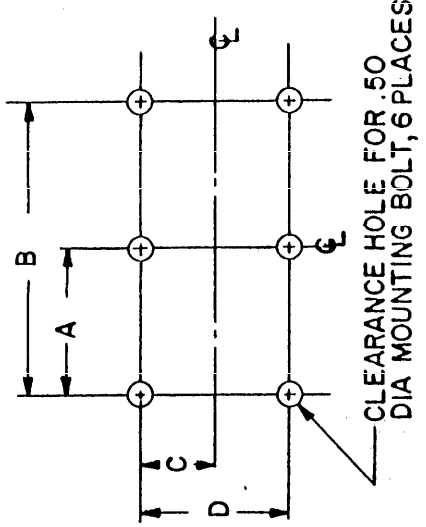



FIGURE 3. Mounting dimensions, ref.

(Symbols 602, 603, 604, 605, 606, 615 and 617)

SH 131500

Source: https://assist.dla.mil -- Downloaded: 202610-20T00:30Z
Check the source to verify that this is the current version before use.

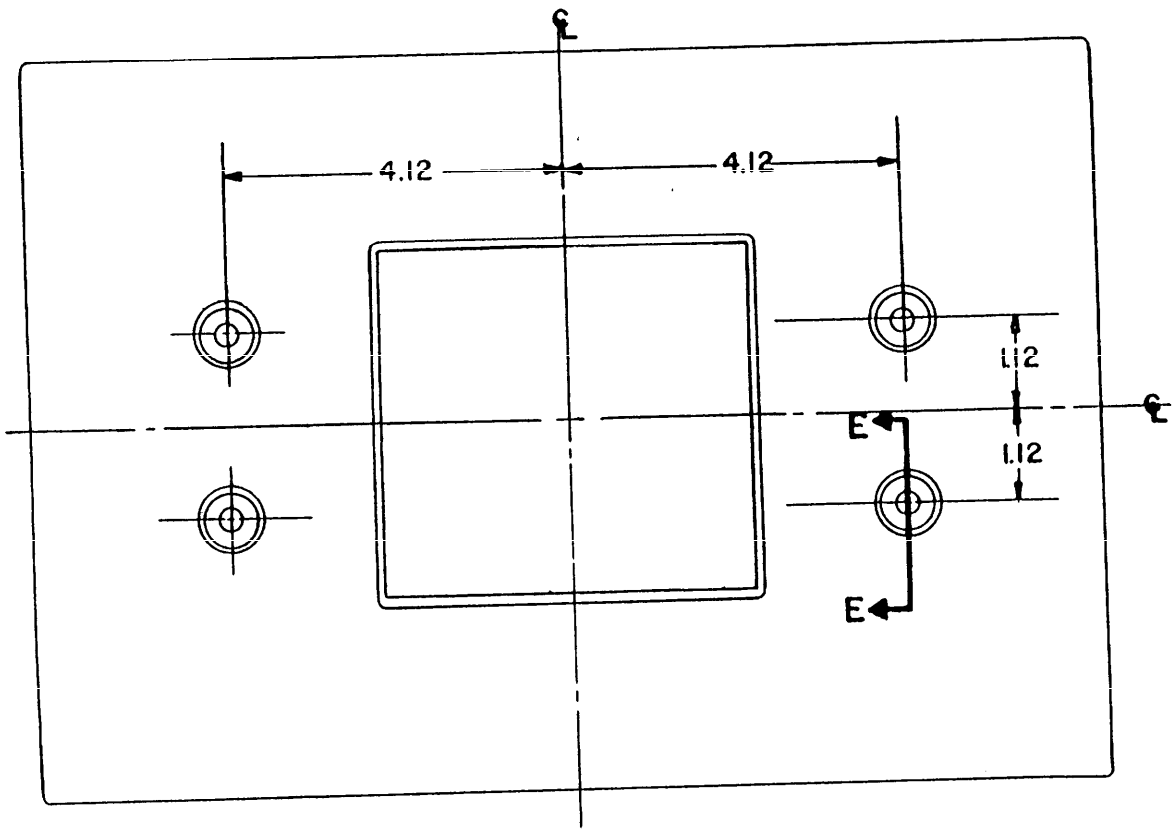

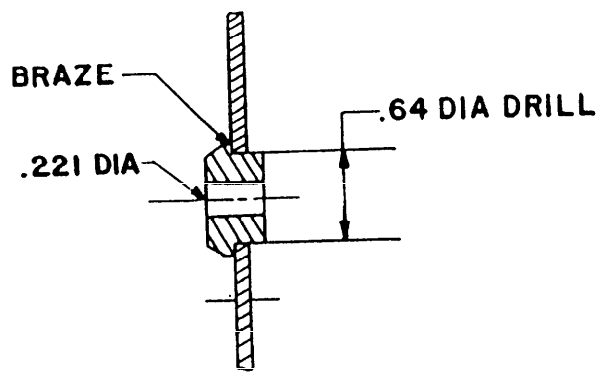


SECTION E-E

SH 131501

FIGURE 4. Cover assembly, typical.

(Symbols 602, 603, 604, 605, 606, 615, 616 and 617)

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:30Z
Check the source to verify that this is the current version before use.

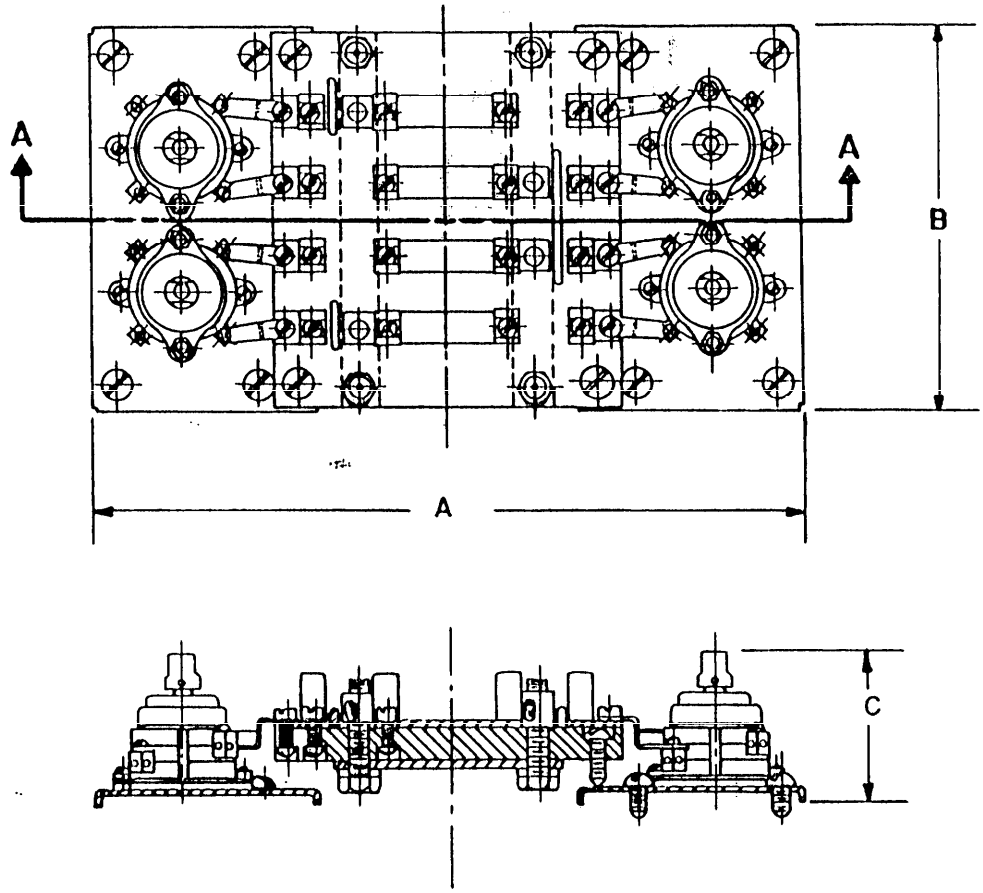


SECTION A-A

SYMBOL NO	DIMENSIONS (MAX)		
	A	B	C
602	10.88	6.00	2.13
603	10.88	10.88	2.13
604	10.88	6.00	2.13
605	10.88	10.88	2.13
606	10.88	15.19	2.13
615	10.88	6.00	2.13
616	10.88	10.88	2.13
617	10.88	15.19	2.13


SH 131502

FIGURE 5. Fuse block, and switch assembly, typical. (Symbols 602, 603, 604, 605, 606, 615, 616 and 617) (13) (14) (15) (16) (17) (18) (19) (20)


Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:30Z
Check the source to verify that this is the current version before use.

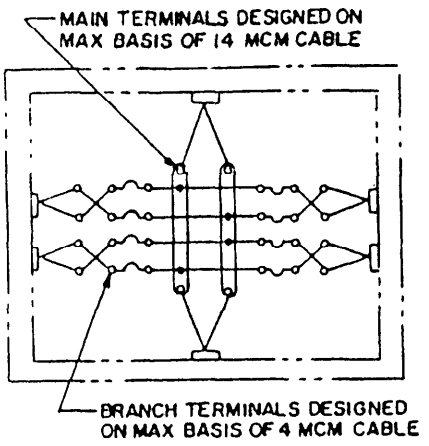


A. Four single-phase branches, single feeder (Symbol 602)

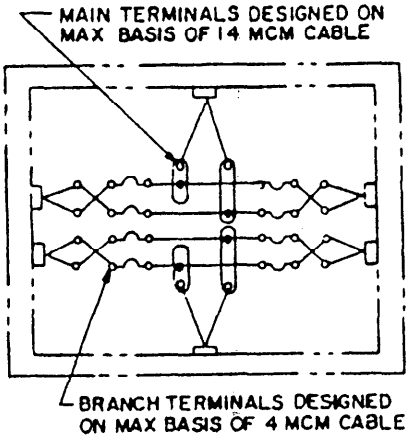


B. Four single-phase branches, double feeder (Symbol 604)

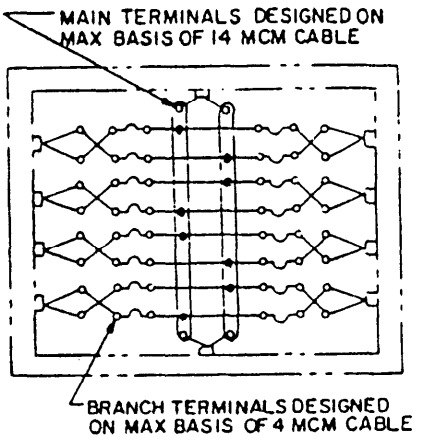


C. Eight single-phase branches, single feeder (Symbol 603)

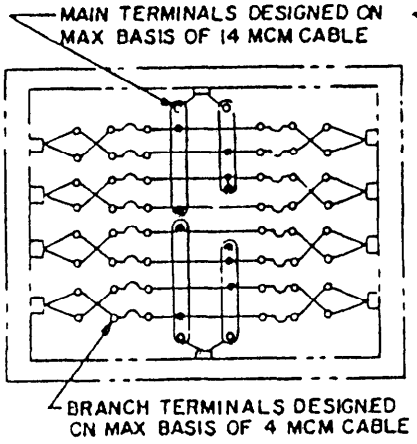


C. Eight single-phase branches, double feeder (Symbol 605)

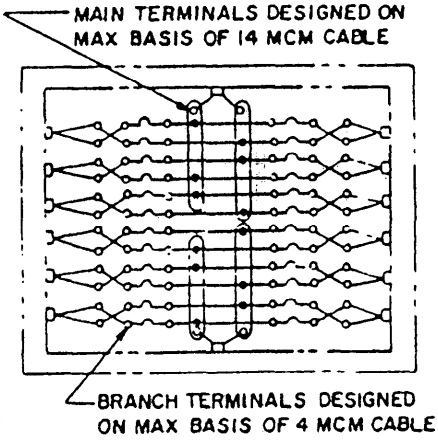


E. Twelve single-phase branches, double feeder (Symbol 606)

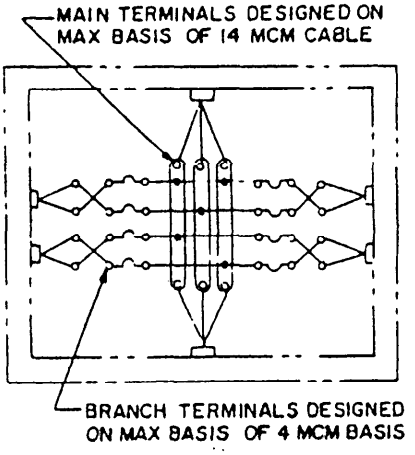

F. Four single-phase branches, single feeder (Symbol 615)

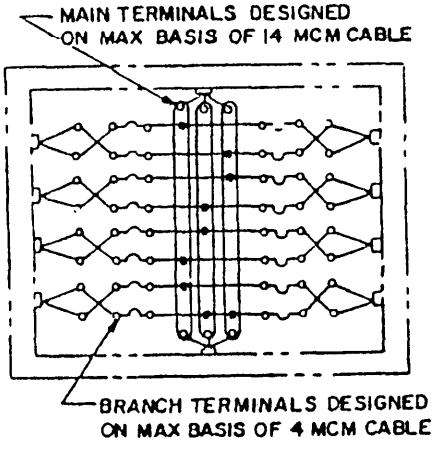

G. Eight single-phase branches, single feeder (Symbol 616)

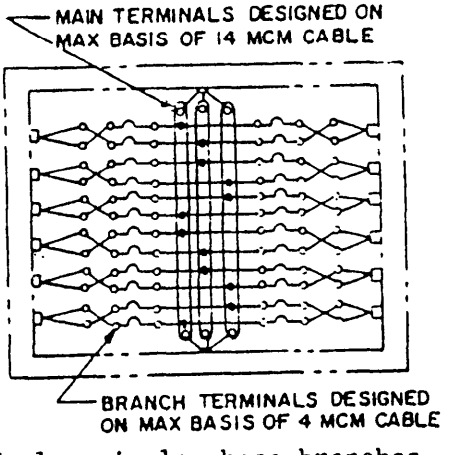

H. Twelve single-phase branches, single feeder (Symbol 617)

SH 131503

FIGURE 6. Wiring diagrams. (21) (22) (23) (24) (25) (26) (27) (28)

Source: https://assist.dla.mil -- Downloaded: 202610-20T00:30Z
Check the source to verify that this is the current version before use.

REQUIREMENTS:

Symbol numbers: See table I.

Design:
Electrical rating: 125 volts alternating current, 0-10 ampere, 60 hertz.
Dimensions and configuration: See figures 1, 2, 3 and 5.
Wiring diagrams: See figure 6.
Mounting dimensions: See figure 3.
Degree of enclosure: Totally enclosed.
Designation and marking: See MIL-F-24646(SH).
Parts: The parts listed in table II and specified in MIL-F-24646(SH) shall be used in the construction of the fuse boxes specified herein.

General information:
Military part numbers and general information are as specified in table I.

TABLE I. Military part numbers and general information.

Military part no.	Symbol no.	Weight in pounds	No. of circuits	Feeder MCM	Branch MCM	Fuse size	Bus bar size	Supersedes	
								Drawing no.	Type
M24646/6-001	602	18.8	4	14	4	midget 0-10A	0.62 x 0.12	9-S-5459-L	D-31A
M24646/6-002	603	21.5	4	14	4	midget 0-10A	.62 x .12	9-S-5460-L	D-33A
M24646/6-003	604	18.8	8	14	4	midget 0-10A	.62 x .12	9-S-5459-L	D-31B
M24646/6-004	605	21.5	8	14	4	midget 0-10A	.62 x .12	9-S-5460-L	D-33B
M24646/6-005	606	29.0	12	14	4	midget 0-10A	.62 x .12	9-S-5461-L	D-61B
M24646/6-006	615	14.5	4	14	4	midget 0-10A	.62 x .12	9-S-4759-L	D-62A
M24646/6-007	616	20.8	8	14	4	midget 0-10A	.62 x .12	9-S-5196-L	D-21A
M24646/6-008	617	30.2	12	14	4	midget 0-10A	.62 x .12	9-S-4761-L	D-17A

Source: https://assist.dla.mil -- Downloaded: 20260-20T00:30Z
Check the source to verify that this is the current version before use.

TABLE II. Parts list.

Item no. 1/	Description	QTY M /-								Material/spec	Remarks
		001	002	003	004	005	006	007	008		
01	Fuse box assembly (sym 602)	-								MIL-F-24646/6	See figure 1
02	Fuse box assembly (sym 603)		-							MIL-F-24646/6	See figure 1
03	Fuse box assembly (sym 604)			-						MIL-F-24646/6	See figure 1
04	Fuse box assembly (sym 605)				-					MIL-F-24646/6	See figure 1
05	Fuse box assembly (sym 606)					-				MIL-F-24646/6	See figure 1
06	Fuse box assembly (sym 615)						-			MIL-F-24646/6	See figure 1
07	Fuse box assembly (sym 616)							-		MIL-F-24646/6	See figure 1
08	Fuse box assembly (sym 617)								-	MIL-F-24646/6	See figure 1
09	Enclosure (10 x 14 x 3)	1		1			1			M24142/17-001	See figure 2
10	Enclosure (14 x 14 x 3)		1		1			1		M24142/00	See figure 2
11	Enclosure (14 x 18 x 3)					1				M24142/00	See figure 2
12	Enclosure (14 x 20 x 3)								1	M24142/00	See figure 2
13	Fuse block and switch assembly	1								MIL-F-24646/6	See figure 5
14	Fuse block and switch assembly		1							MIL-F-24646/6	See figure 5
15	Fuse block and switch assembly			1						MIL-F-24646/6	See figure 5
16	Fuse block and switch assembly				1					MIL-F-24646/6	See figure 5
17	Fuse block and switch assembly					1				MIL-F-24646/6	See figure 5
18	Fuse block and switch assembly						1			MIL-F-24646/6	See figure 5
19	Fuse block and switch assembly							1		MIL-F-24646/6	See figure 5
20	Fuse block and switch assembly								1	MIL-F-24646/6	See figure 5
21	Wiring diagram	1								MIL-E-2036	See figure 6
22	Wiring diagram		1							MIL-E-2036	See figure 6
23	Wiring diagram			1						MIL-E-2036	See figure 6
24	Wiring diagram				1					MIL-E-2036	See figure 6
25	Wiring diagram					1				MIL-E-2036	See figure 6
26	Wiring diagram						1			MIL-E-2036	See figure 6
27	Wiring diagram							1		MIL-E-2036	See figure 6
28	Wiring diagram								1	MIL-E-2036	See figure 6
29	Fuse clip	16	32	16	32	48	18	32	48	M21346/1-04	-----
30	Snap switch	4	8	4	8	12	4	8	12	M15291/3-002	Type 1SR2A4
31	Identification plate	1	1	1	1	1	1	1	1	Brass, QQ-B-613	-----
32	Information plate	4	8	4	8	12	4	8	12	Brass, QQ-B-613	-----
33	Switch information plate	4	8	4	8	12	4	8	12	Brass, QQ-B-613	-----

1/ Numbers in circles shown on the figures are the same as the item numbers shown in this table.

Source: https://assist.dla.mil -- Downloaded: 2026-02-20T00:30Z
Check the source to verify that this is the current version before use.

Preparing activity:
Navy - SH
(Project 6110-N264-1)

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:30Z
Check the source to verify that this is the current version before use.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:30Z
Check the source to verify that this is the current version before use.