MIL-C-27438G(USAF)
30 January 1987
SUPERSEDING
MIL-C-27438F(USAF)
27 February 1975

MILITARY SPECIFICATION

COAT, MEN'S, SERVICE

This specification is approved for use within the Department of the Air Force, and is available for use by all Departments and Agencies of the Department of Defense.

1. SCOPE

1.1 Scope. This specification covers the requirements for a man's tropical polyester/wool service coat.

1.2 Classification. The coat shall be of one type in the following classes as specified (see 6.2):

Class 1 - Polyester/wool - USAF Blue 1578 - 10.00 oz.

Class 2 - Polyester/wool - USAF Blue 1608 - 10.25 oz.

1.2.1 Lengths and sizes. The coats shall be furnished in the following lengths and sizes as specified (see 6.2):

Schedule of lengths and sizes

Extra short		34	35	36	37	38	39	40	41	42	43				
Short	33	34	35	36	37	38	39	40	41	42	43	44	46	48	50
Regular	33	34	35	36	37	38	39	40	41	42	43	44	46	48	50
Long	33	34	35	36	37	38	39	40	41	42	43	44	46	48	50
Extra long		34	35	36	37	38	39	40	41	42	43	44	46		

2. APPLICABLE DOCUMENTS

2.1 Government documents

2.1.1 Specifications and standards. The following specifications and standards form a part of this specification to the extent specified herein. Unless otherwise specified, the issues of these documents shall be those listed in the issue of the Department of Defense Index of Specifications and Standards (DoDISS) and supplement thereto, cited in the solicitation.

Beneficial comments (recommendations, additions, deletions) and any pertinent data which may be of use in improving this document should be addressed to: ASD/ENES, Wright-Patterson AFB, OH 45433-6503 by using the self-addressed Standardization Document Improvement Proposal (DD Form 1426) appearing at the end of this document or by letter.

AMSC N/A FSC 8405

DISTRIBUTION STATEMENT A. Approved for public release; distribution is unlimited.
Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

SPECIFICATIONS

FEDERAL

V-T-276	Thread, Cotton
V-T-280	Thread, Gimp, Cotton, Buttonhole
V-T-285	Thread, Polyester
V-T-295	Thread, Nylon
V-T-301	Thread, Silk
NN-P-71	Pallets, Material Handling, Wood, Stringer Construction, 2-Way and 4-Way (Partial)
CCC-C-438	Cloth, Buckram, Woven and Nonwoven
DDD-L-20	Label: For Clothing, Equipage, and Tentage, (General Use)
DDD-T-86	Tape, Textile; Cotton, General Purpose (Unbleached, Bleached, or Dyed)
PPP-B-636	Boxes, Shipping, Fiberboard

MILITARY

MIL-C-297	Cloth, Interlining, Cotton Warp, and Spun Hair-Wool or Rayon Filling
MIL-C-368	Cloth, Satin, Rayon and Cloth, Twill, Rayon
MIL-B-3461	Button, Insignia, Metal, Uniform and Cap
MIL-P-15011	Pallets, Material Handling, Wood Post Construction, 4-Way Entry
MIL-C-15062	Cloth, Flannel, Wool, Undercollar Cloth
MIL-P-15064	Pads, Shoulder and Sleeve-Head
MIL-C-16375	Cloth, Wigan, Cotton
MIL-C-21115	Cloth, Tropical: Wool, Polyester/Wool
MIL-C-29137	Cloth, Felt, Fabric Composite, Undercollar
MIL-C-29365	Cloth, Nonwoven: Interlining, Fusible, Nylon and Polyester, Polyamid
MIL-T-43548	Cloth, Polyester, Cotton-Covered and Rayon Covered
MIL-C-43718	Cloth, Polyester, Polyester and Cotton; Polyester and Rayon, For Pockets
MIL-C-44192	Container, Shipping and Storage, Coat (Hanger Pack)

STANDARDS

FEDERAL

FED-STD-191	Textile Test Methods
FED-STD-751	Stitches, Seams, and Stitchings

MILITARY

MIL-STD-105	Sampling Procedures and Tables for Inspection by Attributes
MIL-STD-129	Marking for Shipment and Storage
MIL-STD-147	Palletized Unit Loads
MIL-STD-1490	Provisions for Evaluating Quality of Coats, Men's Dress

2.1.2 Other Government documents. The following other Government documents form a part of this specification to the extent specified herein. Unless otherwise specified, the issues shall be those in effect on the date of the solicitation.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

LAWS AND REGULATIONS

Rules and Regulations Under the Wool Product Labeling Act of 1939

(Application for copies should be addressed to the Superintendent of Documents, Government Printing Office, Washington DC 20402.)

U.S. Department of Agriculture (USDA) - Code of Federal Regulations

(Application for copies should be addressed to the U.S. Department of Agriculture, Agriculture Marketing Service, USDA, Washington DC 20250.)

(Copies of specifications, standards, and other Government documents required by contractors in connection with specific acquisition functions should be obtained from the contracting activity or as directed by the contracting activity).

2.2 Other publications. The following documents form a part of this specification to the extent specified herein. Unless otherwise specified, the issues of the documents which are DoD adopted shall be those listed in the issue of the DoDISS specified in the solicitation. Unless otherwise specified, the issues of the documents not listed in the DoDISS shall be the issue of nongovernment documents which is current on the date of the solicitation.

AMERICAN SOCIETY FOR TESTING AND MATERIALS (ASTM)

ASTM D 3951 Standard Practice for Commercial Packaging

(Application for copies should be addressed to the American Society for Testing and Materials, 1916 Race St., Philadelphia PA 19103.)

THE COLOR ASSOCIATION OF THE UNITED STATES

Department of Defense (DoD) Standard Color Card of Official Standardized Shades for Sewing Threads 1968

(Application for copies should be addressed to The Color Association of the United States, 343 Lexington Ave., New York NY 10016.)

(Nongovernment standards and other publications are normally available from the organizations which prepare or which distribute the documents. These documents also may be available in or through libraries or other informational services.)

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

2.3 Order of precedence. In the event of a conflict between the text of this specification and the references cited herein (except for associated detail specifications, specification sheets or MS standards), the text of this specification shall take precedence. Nothing in this specification, however, shall supersede applicable laws and regulations unless a specific exemption has been obtained.

3. REQUIREMENTS

3.1 Standard samples. Standard samples, when furnished (see 6.2), are solely for guidance and information to the contractor. Variations from this specification may appear in the standard sample, in which case the specification shall govern.

3.2 First article. When specified in the contract or purchase order, a sample shall be subjected to first article inspection (see 4.3 and 6.4).

3.3 Materials (see 6.5)

3.3.1 Basic material. The basic material and the material for the front dart strips and the pocket flap linings for the class 1 coat shall be Blue 1578 conforming to type III, class 3 of MIL-C-21115. Material for the class 2 coat shall be Blue 1608 conforming to type III, class 4 of MIL-C-21115.

3.3.2 Rayon material. The material for the body lining, the sleeve lining, the right vent lining, the armhole shields, the yoke, the facing for the inside hanging lower pockets, the facing and the piping for the inside breast pockets shall be Blue 1086 conforming to class 1 of MIL-C-368.

3.3.3 Padding for front interlining. The material used for padding the breast fronts shall be unbleached double-napped cotton flannel cloth conforming to the requirements listed in table I. Felt may be used as padding for the coat fronts. The felt shall be natural-color pressed felt and shall consist of wool and cotton or wool, cotton, and any other cellulose fibers conforming to the requirements listed in table II.

TABLE I. Physical requirements of cotton flannel cloth.

Characteristics	Requirements
Weight, ounces per square yard	4.0 to 5.5
Yarns per inch (minimum)	
Warp	38
Filling	34
Breaking strength, pounds (minimum)	
Warp	30
Filling	25

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE II. Physical requirements of felt.

Characteristics	Requirements
Weight, ounces per square yard	2.6 to 4.5
Breaking strength, pounds (minimum)	
Warp	1.5
Filling	1.5
Thickness, inch	0.020 - 0.050
Wool content, percent (minimum)	15

3.3.4 Interlining for fronts. The material for interlining the fronts of the coat shall conform to type III, class 2 of MIL-C-297.

3.3.5 Shoulder piece material. The material for the shoulder pieces for the front interlining shall be undyed and either two ply cotton warp and natural horsehair filling cloth or two ply cotton warp and 520 denier monofilament nylon filling cloth.

3.3.5.1 Cotton warp and horsehair filling cloth. The cotton warp and natural horsehair filling cloth shall be not less than 60 ends and 40 picks per inch; shall be not less than 4.5 ounces per square yard; and shall contain no sizing. The stiffness shall be a minimum of 0.05 load pound in the warp and 0.155 load pound in the filling. As an alternate to the 60 ends and 40 picks per inch, 50 ends and 50 picks per inch may be used for the cotton warp and natural horsehair cloth. The horsehair shall meet current quarantine laws and pertinent regulations of the U.S. Department of Agriculture as set forth in the Code of Federal Regulations.

3.3.5.2 Cotton warp and nylon filling cloth. The cotton warp and nylon filling cloth shall be not less than 50 ends and 42 picks per inch and shall weigh not less than 5.6 ounces per square yard. The stiffness of the nylon filling shall be 0.13 ±0.01 load pound.

3.3.6 Undercollar. The material for the undercollar shall be Blue 1549 conforming to MIL-C-15062, except that the colorfastness requirements for perspiration and crocking shall not apply. As an alternate, the material may be a felt fabric composite approximating Blue 1690 and conforming to MIL-C-29137. A 100 percent polyester composite fabric may also be used. The polyester fabric shall meet the requirements of MIL-C-29137 except for the following:

Fiber content	100 percent polyester Minimum	Maximum
Weight, ounces per square yard	8.0	10.0
Thickness, inches	0.075	0.095
Stiffness, inches (drape)		
Machine direction	3.0	5.0
Cross direction	3.0	5.0

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

3.3.7 Undercollar interlining. The material for the undercollar interlining shall be natural or bleached conforming to type 1, class 2 of CCC-C-438, except that test method 5580 for shrinkage of FED-STD-191 shall be used.

3.3.8 Shoulder pads. The shoulder pads shall conform to type I, class 1 of MIL-P-15064. The outside curved edge shall be overedge stitched through all plies to prevent ravelling.

3.3.9 Sleeve-head pads. The sleeve-head pads shall conform to type IV of MIL-P-15064. The front part of the sleeve-head pads shall be covered with bias-cut canvas that is 4 inches long by 1-3/4 inches wide conforming to type III of MIL-C-297.

3.3.10 Polyester cloth

3.3.10.1 Pockets, armholes, stays, and reinforcements. The polyester cloth for the lower pockets, the inside breast pocket, the outside breast patch pocket lining, the armholes, the shoulder and the front interlining stays, the pocket stays, and the buttonhole reinforcements for the fronts shall be black conforming to class 1 of MIL-C-43718, except that the requirements for nonfibrous material and seam efficiency in MIL-C-43718 shall not apply. The dyed polyester cloth shall show fastness to wet-dry cleaning only.

3.3.10.2 Cross-cut tape. The material for the cross-cut tape for the back of the neck gorge of the fronts and for the fronts of the coats shall be dyed or undyed, and shall be 4.0 ounces per square yard conforming to class 2 of MIL-C-43718, except that the requirements for nonfibrous materials, seam efficiency, and colorfastness shall not apply. The cloth shall be cut across the width in strips 1/2, ±1/16 inch wide. The ends of the strips shall be abutted or overlapped and stitched with diagonal stitching. The diagonal stitching shall be a minimum of 8 stitches per inch with a bigt (throw) of 1/8 to 3/16 inch. The edges of the tape shall be treated with a synthetic resin to prevent ravelling.

3.3.11 Shoulder loop interlining. The material for interlining the shoulder loops shall be black and shall conform to the requirements specified in 3.3.4 for the front interlining.

3.3.12 Sleeve bottom interlining. The material for interlining the sleeve bottom shall conform to type I of MIL-C-16375 except that the requirements for breaking strength shall not apply and the warp stiffness shall be not less than 0.005 inch pound and not more than 0.015 inch pound.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

3.3.13 Fusible interlining. As an alternate to the material required in 3.3.10.1 for the outside breast patch pockets, a fusible interlining conforming to class 3 of MIL-C-29365 may be used, except the fiber content shall be polyester and the minimum weight shall be 1.6 ounces per square yard or a spunlaced, binder-free, 100 percent polyester non-woven fabric, meeting the requirements specified in table III, having a uniformly distributed dot system of polyvinyl chloride/polyvinyl acetate type fusible adhesive applied to one side in accordance with good commercial practice, may be used. The fusible material shall be fused to the outside breast patch pockets using the following fusing conditions:

a. Temperature between pressing surfaces of 305°F (minimum) and 315°F (maximum) at the fuse level.

b. Pressure between pressing surfaces of 5 pounds per square inch (minimum) and 7 pounds per square inch (maximum).

c. Pressing time of 13 seconds (minimum) and 15 seconds (maximum).

TABLE III. Physical requirements of fusible material.

Characteristics	Requirements
Weight, ounces per square yard	2.7 to 3.2
Breaking strength, pounds per inch (machine direction)	
Warp	25
Filling	10

3.3.14 Tape. The tape for staying the coats shall conform to type I, class 1 of DDD-T-86. The widths of the tape shall be 5/8 inch for the bridle at the breakline of the coat and 1/4 inch for staying the armholes.

3.3.15 Hanger. The material for the hanger shall be either cotton or rayon, tubular, flat braid. The braid shall be 1/8 to 3/16 inch wide and shall have a breaking strength of not less than 50 pounds in the warp direction. The braid shall be black and shall have good colorfastness to crocking and wet drycleaning.

3.3.16 Thread. All colored threads shall be Navy Blue AT, C.A. 66060 (see DoD Standard Color Card of Official Standardized Shades for Sewing Threads 1968) and shall have good colorfastness to wet drycleaning, perspiration, and light.

3.3.16.1 Nylon thread. If an automatic machine which sews shank buttons imitating hand sewing is used, the thread shall be nylon waxed monocord, special No. 4, having a breaking strength of 11 pounds and a minimum length per pound of 3,250 yards and shall be tested for these requirements and for colorfastness in accordance with test methods outlined in V-T-295. The nylon thread for padding lapel and bridle, if used, shall conform to type III, letter size 00 of V-T-295. The nylon thread used for hand felling shall conform to type IV, sizes A and C, 2 ply of V-T-295.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

3.3.16.2 Silk thread. The silk thread for machine stitching, buttonholes, and bartacks shall conform to type I, Ticket Nos. A, B, and C, 3 ply of V-T-301, except that the requirement for extractable material shall not apply. As an alternate, tailoring, soft finish nylon thread may be used. The nylon thread shall conform to the requirements specified in table IV. Testing of the requirements and for colorfastness shall be performed in accordance with test methods outlined in V-T-295. Letter size O nylon thread shall be used in all machine stitching operations wherever letter size A silk thread is specified. The thread for the buttonholes shall be either letter size B for both the needle and looper, or letter size B for the needle and letter size F for the looper. The nylon thread shall have good fastness to wet drycleaning, perspiration, and light.

TABLE IV. Nylon thread.

Letter size	Ply	Length per pounds yards minimum	Breaking force pounds minimum	Elongation percent maximum
O	2	16,000	3.0	35
B	2	11,000	4.0	35
F	2	3,800	12.0	35

3.3.16.3 Polyester thread. The polyester thread for machine felling and blindstitching shall conform to type I, class 1, letter size A, 3 ply of V-T-285.

3.3.16.4 Cotton thread. The cotton thread for seaming and stitching the coats shall conform to V-T-276 and to table V.

TABLE V. Cotton thread.

Type	Ticket No.	Ply	Application
IC2	A or B	3	Seaming coat
IC2	00	3	Edge and top stitching
IA2 or IB2	70	2	Seaming front interlining
IA2 or IB2	30	3	Sleeve and armhole tackings
IA3 or IB3	12, 16, or 20	4	Sewing on buttons
IA2 or IB2	70	2	Serging and blindstitching

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

3.3.16.5 Temporary basting. Except for the option specified in 3.3.16.5.1, the thread for temporary basting shall be a commercial cotton or the same thread used in seaming the coats.

3.3.16.5.1 Monofilament synthetic thread. A monofilament synthetic thread may be used for only the basting operations where the thread is required to be removed. The color of the monofilament synthetic thread used for edge basting and for armhole setting shall be clear. If a monofilament synthetic thread is used, the coat shall subsequently be given a treatment by a dry cleaning agent in which the monofilament synthetic thread is soluble. Any residue remaining on the coat after the dry cleaning process shall be brushed off or removed.

3.3.17 Gimp. The gimp for reinforcing the buttonholes shall be size No. 8, type I or II of V-T-280, approximately matching the basic material in color, and shall have good colorfastness to drycleaning.

3.3.18 Buttons. The buttons shall conform to type I, style 1, hopper back of MIL-B-3461. The size of the buttons shall be 36 lines for the front and 25 lines for the pockets and the shoulder loops. The buttons for the flaps of the inside hanging lower pockets and the flaps of the breast patch pockets shall be furnished with the split-pin or the ring type toggles specified in MIL-B-3461.

3.3.19 Labels. Each coat shall have a size label and a combination personal identification, identification and instruction label conforming to DDD-L-20. The fastness to drycleaning requirements of DDD-L-20 shall apply.

3.3.19.1 Size label. The size label shall conform to type VI, class 2 and shall be not less than 1-1/2 inches by 1 inch. The sizes and lengths (extra short, short, regular, long, and extra long) of the coat may be abbreviated as follows: 34XS, 34S, 34R, 34L, and 34XL.

3.3.19.2 Combination personal identification, identification and instruction label. The combination personal identification, identification and instruction label shall conform to type VI, classes 10 and 15. It shall be 3 inches long by 3 inches wide, including the margins on all four sides for sewing purposes and shall include the following information:

Name:
Service No.:
Coat, Men's, Service
Contract No.: DLA-100-00-0-0000 (Example) 1/
Wool Products Act information as applicable 1/
Supplier's Name: 1/
DRY CLEAN ONLY

1/ The supplier shall include the applicable information.

3.4 Design. The coat shall be four-buttoned, single-breasted, and one-half lined. It shall have notched collar and lapels; front and underarm darts; a two-piece back with vent; two pleated breast patch pockets with flaps and buttons; inside hanging lower pockets with sewed-on flaps; and one inside breast pocket.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

3.5 Patterns. Standard patterns will be furnished by the Government and provide an allowance of 3/16 inch for lapels and front edge seams; 5/8 inch for side seams and center back seams; 1/4 inch for underarm darts and front darts; 3/8 inch for all other seams and lining seams. Except, as otherwise indicated, a seam allowance of 2-1/4 inches for coat sleeve turn up and 1-1/4 inches for coat bottom turn up will be provided. The standard patterns shall not be altered in any way, and are to be used as a guide for cutting the contractor's working patterns. The standard patterns show size, seam allowances, directional lines for cutting and are marked or notched for proper placement and assembly of the component parts. The working patterns shall be identical to the standard parts.

3.5.1 Pattern parts. The components of the coat shall be cut from the materials as specified in accordance with the pattern parts indicated in table VI.

3.6 Construction. The construction of the coat shall conform in all respects to the requirements specified in table VII and herein. Figures 4, 6 and 7 show the general style of the coat and are furnished for information purposes only. Should any inconsistencies exist between the requirements of this specification and the figures, the requirements of this specification shall govern.

3.6.1 Stitches, seams, and stitchings. All stitch, seam, and stitching types specified in table VII shall conform to FED-STD-751. Whenever two or more methods of seam or stitch types are specified for the same operation, any one of them may be used. Where stitch type 401 is used, the looper (underthread) shall be on the inside of the coat.

3.6.1.1 Thread breaks and ends of seams and stitchings. The ends of all seams and stitchings produced with stitch type 301, when not caught in other seams or stitchings, shall be backstitched not less than 1/4 inch. Thread breaks (all stitch types) shall be secured by stitching back of break 1/2 to 1 inch. For those seams with thread breaks, utilizing stitch type 401 and 301 stitch shall be used to secure thread breaks by stitching back of break 1/2 to 1 inch.

3.6.1.2 Repairs of type 301 stitching. Repairs of type 301 stitching shall be as follows:

a. When thread breaks, skipped stitches, run-offs, or bobbin runouts occur during sewing, the stitching shall be repaired by superimposing and restarting the stitching a minimum of 1/4 inch back of the end of the stitching (see NOTE).

b. Except for prestitching, thread breaks, or two or more consecutive skipped or run-off stitches noted during inspection of the item shall be required by overstitching. The stitching shall start a minimum of 1/4 inch in back of the defective area, continue over the defective area, and continue a minimum of 1/4 inch beyond the defective area onto the existing stitching. Loose or excessively tight stitching shall be repaired by removing the defective stitching without damaging the materials, and restitching in the required manner (see NOTE).

NOTE: When making the above repairs, the ends of the repairing stitch must be backstitched and thread ends trimmed close to the coat.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VI. List of pattern parts.

Material	Pattern nomenclature	Cut parts
Basic material (see 3.3.1)	Front	2
	Back	2
	Front facing	2
	Topcollar	2
	Topcollar (alternate construction)	1
	Topsleeve	2
	Undersleeve	2
	Shoulder loop	2
	Breast patch pocket	2
	Breast patch pocket (creased construction)	2
	Breast patch pocket flap	4
	Lower pocket flap	4
	Lower pocket piping	2
	Armhole shields 1/	2
	Front dart strip	2
Rayon material (see 3.3.2)	Front lining	2
	Back yoke	1
	Topsleeve lining	2
	Undersleeve lining	2
	Inside breast pocket facing	1
	Lower pocket facing	2
	Back vent lining	1
	Armhole shields 1/	4
Cotton flannel cloth or felt (see 3.3.3)	Front chest padding	2
Cotton (see 3.3.4) and spun hair-wool interlining cloth (see 3.3.11)	Front interlining	2
	Front chest piece	2
	Shoulder loop interlining	2
	Shoulder wedge	2
Cotton and horse-hair cloth or cotton and nylon cloth (see 3.3.5)	Front interlining shoulder piece	2
Wool flannel cloth or felt composite (see 3.3.6)	Undercollar	2
	Undercollar (alternate and conventional construction)	1
Cotton buckram cloth (see 3.3.7)	Undercollar interlining	2
	Undercollar interlining (alternate and conventional construction)	1

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VI. List of pattern parts. - Continued

Material	Pattern nomenclature	Cut parts
Twill polyester cloth (see 3.3.10) or fusible interlining (see 3.3.13)	Inside breast pocket	1
	Breast patch pocket lining	2
	Lower pocket lining	2
	Lower pocket stay	2
	Inside breast pocket stay	1
	Front buttonhole reinforcement	1
	Front interlining stay	2
	Breast patch pocket stay	2
Cotton wigan cloth (see 3.3.12)	Sleeve bottom interlining	2
Shapers/Markers	Topcollar, conventional construction 2/	
	Topcollar, alternate construction 2/	
	Topcollar marker	
	Undercollar, conventional construction 2/	
	Undercollar, alternate construction 2/	
	Lapel (working shaper)	
	Finished lapel and collar	
	Breast patch pocket	
	Undercollarstand	
	Shoulder loop	
	Finished breast patch pocket flap	
	Finished lower pocket flap	
	Left vent shaper	
	Gorge	

1/ As an option, the armhole shield may be made of the basic material or of the rayon material.

2/ See Operations 15.a, 15.b, 15.c, and NOTE before 15.d.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations.

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
1.	Cutting. a. Spread the basic fabric face to face, that is, place the face of one ply of material over and against the face of the next ply below. Spread the basic fabric not more than 80 single plies (40 coats high). b. The material shall be carefully laid up in uniform widths and lengths. Take care in spreading the material so that the plies are not stretched or full and so that one side of lay is even. Mark each part in the top ply of the main lay with the size of the coat. c. Cut the parts of the coat in strict accordance with patterns furnished, which show size, directional lines, markings, and notches for placement of pockets and flaps, shape, and proper assembling of all parts. d. Except for the front dart strips, the lower pocket piping pieces, the pocket flap linings, and the armhole shields (if not cut from rayon material), which may be cut from ends, cut all parts of the coat out of one piece of the basic fabric.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
1.	Cutting. - (Cont'd) e. Cut the underarm darts as marked on the pattern. NOTE: See alternate Operation 23.b for the cutting/sewing of the vertical front dart. f. Cut the shoulder loops, the pocket flaps, the topcollar, and the flap lining across the width of the material. g. Dress the left back vent and the left facing as indicated by the pattern, or the dressing may be done in the sewing room. Dress the left front during the operation for shaping fronts.					
2.	Cut rayon material (except binding). a. Cut the rayon material for the body lining, the sleeve lining, the armhole shields (if not cut from the basic fabric), the right vent lining, the yoke, and the inside breast pocket facings in the direction of the warp.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
2.	Cut rayon material (except binding). - (Cont'd) b. Cut the inside hanging lower pocket facings in the filling direction and in strict accordance with patterns furnished. The sleeve linings and the inside hanging lower pocket facing may be cut from ends, the parts shall match and the sleeves shall match each other. c. Mark each part in the top ply of the main lay of the rayon material with the size of the coat.					
3.	Cut trimmings. a. Cut the interlining for the fronts, the shoulder loops, and the chest pieces in the direction of the warp. The left front interlining shall not be dressed in the cutting room. b. Cut the polyester twill for the armhole, the shoulder, and the front interlining stays on the bias. Cut the polyester twill for the inside breast pocket, the pocket stays, the vent stays, and the lower inside hanging pockets in the direction of the warp.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
3.	Cut trimmings. - (Cont'd)					
	c. Cut the cloth for the undercollar and cloth for the collar interlining on the bias. The undercollar and the collar interlining may be cut in one piece with the center seam allowance omitted or cut alternate undercollar material (when used) so that maximum spring shall be provided along the edges of the finished collar over the shoulder areas.					
	d. Cut the interlining (wigan) for the sleeve bottom on the bias.					
	e. Cut the binding for the armhole shields (if the armhole shields are cut from the basic fabric) 7/8 to 1 inch wide.					
	f. Cut the cotton flannel cloth for the front interlining in accordance with the pattern.					
4.	Replacement of damaged parts.					
	a. Replace at the time of cutting any parts containing holes or weakening defects, such as smashes, multiple floats, or slubs likely to develop into a hole.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
4.	Replacement of damaged parts. - (Cont'd) b. Replace any parts damaged during the manufacturing process by needle chews, which may be expected to develop into a hole, scissor or knife cuts, tears, holes, mends, burns, pulls, snags, or loops. Drill holes are not permitted to be used.					
5.	Component marking. Except for parts cut from ends, mark all parts of the coat to insure a uniform shade and size throughout the coat. Shade mark the sleeve linings, whether cut from ends or in the main lay. At all times starting from the same position, number all parts of the coat, e.g., if the ply number is used for the top ply, use number 1 for all parts of the top ply and the next ply below facing the top ply (see 3.7.1).					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
6.	Make interlining for fronts.					
	a. Spread the shoulder dart on the front interlining according to the marks at the top of wedge piece and zigzag stitch the wedge piece to the inside of the front interlining at the shoulder dart with the edges overlapping and zigzag stitches shall overcast the edges of the front shoulder dart. The top of the wedge piece shall be on line with the shoulder on front interlining.	304		4-6	70	70
	b. The abutted or overlapped edges of the waist darts, the armhole darts, and the lower waist darts at the back edges of the interlining, respectively, shall be zigzag stitched together through the polyester stay pieces. The abutted or overlapped edges may be stitched together prior to stitching through the polyester stay pieces.	304		4-6	70	70
	c. Spread the shoulder dart on the extra chest piece of the interlining, according to the marks on the wedge piece, and zigzag stitch the wedge piece to the interlining at the shoulder dart, with the edges overlapping and zigzag stitches shall overcast the edges of the extra chest piece shoulder dart. The top of the wedge piece shall be on line with the shoulder on extra chest piece of the interlining.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
6.	Make interlining for fronts. - (Cont'd)					
	d. Zigzag stitch the abutted or overlapped edges of the armhole dart on the extra chest piece together through the polyester stay piece.	304		4-6	70	70
	e. Position the shoulder piece front edge even with the back edge of the chest piece shoulder dart. Spread the shoulder dart and zigzag stitch through the chest piece and the wedge piece, catching the horsehair cloth piece in-between.	304		4-6	70	70
	f. Zigzag stitch on the front and the bottom edges to the front interlining. Place an additional row of zigzag stitching vertically through the center of the chest piece.	304		4-6	70	70
	g. Quilt the flannel padding to the interlining, with rows of stitching 3/8 to 3/4 inch apart, with the flannel padding extending beyond the shoulder, the armhole, and the side of the interlining, leaving the shoulder portion of the interlining open to accommodate the shoulder pad.	304		4-6	70	70

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
6.	Make interlining for fronts.- (Cont'd)					
	h. Zigzag stitch the back edge of the strip of the bias-cut polyester for reinforcing the buttons and the buttonholes. The strip shall be 3 ±1/4 inches wide. The strip of polyester shall be positioned with the top edges even with the step and the front edge 1/4 inch from and parallel to the front edge of the right front interlining. On the left front, position the front edge of the polyester strip even with the lapel edge of the polyester strip even with the lapel edge at the step and aligned with the notch on the bottom of the interlining.	304		4-6	70	70
	i. Press with a heated pressing machine to conform to shape of fronts.					
7.	Mark front interlining.					
	Stamp the size of the coat on the lower end of each left and right front interlining, with indelible black ink in legible figures and letters not less than 1/2 inch in height. The size marking shall include the numerical designation followed by the letter designating the length (see 3.3.19.1).					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
8.	Make shoulder loops.					
	a. Fold each shoulder loop and stitch the raw edges of the side. Spread the seam off center and stitch the point of the shoulder loop.	301 or 401	SSa-1	12-14	A	A
	b. Press the shoulder loop seam open and flat with a heated pressing iron.					
	c. Stitch the interlining to the shoulder loop seam, or blindstitch the interlining to the side edges of the shoulder loop.	301 103 or 301	SSa-1 SSm-1 SSm-1	8-10 4-6 4-6	A A A	A A A
	d. Turn the shoulder loop with the seam on the underside and off center of the shoulder loop and free of the buttonhole.					
	e. Single stitch the shoulder loop around the edges 3/16 inch from the edge. The interlining shall lie smooth in the shoulder loop and shall be caught in the edge stitching.	301	OSf-1 and SSe-2(b)	12-14	A silk or 00	A silk or 00
	f. Press the shoulder loops smooth and flat with a heated pressing iron.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
9.	Make shoulder loop buttonholes.					
	a. Make a cut-first, machine buttonhole in the center of each shoulder loop, with the eyelet placed so that edge of button will be 1/4 +1/4, -1/8 inch from the collar edge when the coat is finished and pressed. The buttonholes shall be through the shoulder loop and the interlining. The buttonholes shall be of the eyelet-end, square-bar type, worked over a silk reinforcement gimp to fit a 25-line button. Pull the gimp through the underside of the buttonhole.	Buttonhole		52 per buttonhole not including tacks	B silk	B or C silk
	b. Bartack the buttonhole by machine. The bartacking shall be a separate operation from the buttonhole making.	Bartack		21 per tack	A silk	A silk
	c. The bartack at the end of the buttonholes may be done by hand and shall be not more than 3/16 inch long.	Hand		10-12 per tack	A nylon	

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
10.	Make two outside breast patch pocket flaps. Seam the lining to the flaps, notch the seam allowance on the bottom edge between the corners, and trim the corners. Turn and single stitch 3/16 inch from the edge. If the lining and the flaps are trimmed during the sewing operations to 3/16 inch or less, notching seam allowances or trimming corners will not be necessary. The lining may be joined to the flap with cotton thread. NOTE: Operations for top and edge stitching shall be accomplished by the use of one type of thread, either Ticket No. A, silk or Ticket No. 00, cotton, as specified.	301	SSe-2	12-14	A silk or 00	A silk or 00
11.	Make two lower pocket flaps. Seam the lining to the flaps; trim the corners; turn and single stitch 3/16 inch from the edge. The lining may be joined to the flap with cotton thread.	301	SSe-2	12-14	A silk or 00	A silk or 00
12.	Press flaps. Press the breast patch pocket flaps and the lower pocket flaps smooth and flat with a heated pressing iron or machine. The flaps shall conform to finished flap shapers.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
13.	Make flap buttonholes.					
	a. Make a buttonhole, in the center of each breast patch pocket flap; cut the eyelet only to accommodate the toggle with the eyelet 5/8 inch from the bottom of the flap. Make a buttonhole in the center of each lower inside hanging pocket flap; cut the eyelet only to accommodate the toggle. The flap buttonholes shall be of the eyelet-end, cut-first, square-bar-type buttonhole, worked over a cotton reinforcement gimp, to fit a 25-line button, with a gimp pulled through to the under-side of the buttonhole and the end of the buttonhole securely bartacked.	buttonhole		52 per buttonhole not including tacks	B silk	B or C silk
	b. Bartack the buttonhole by machine. The bartacking shall be a separate operation from the buttonhole making.	Bartack		21 per tack	A silk	A silk
	c. The bartack at the end of the buttonhole may be done by hand and shall be not more than 3/16 inch long.	Hand		10-12 per tack	A nylon	
14.	Make two breast patch pockets.					
	Finished appearance. The breast patch pockets shall conform to the finished pocket shaper, be uniform in appearance and lie flat and smooth without twists, puckers, or raw edges. The patches shall be lined with polyester (see 3.3.10.1) or non-woven fusible (see 3.3.13) material.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
14.	Make two breast patch pockets.- (Cont'd)					
	a. Machine folded construction (when used):					
	(1) Form a 1-1/2 +1/8 inches wide vertical box pleat on the outside in the center of the pocket by creasing machine. Stitch the pleat closed across the top and bottom, with the inside side edges of the pleat abutted.	301	SSa-1	4-8	A	A
	(2) Blindstitch the abutted edges of the pleat together.	301 103	SSm-1 SSm-1	4-8 4-6	A A	A A
	(3) Press pleat in center of pocket, flat and smooth.					
	b. Hand folded construction (when used):					
	(1) Fold pocket vertically on the outside, matching the cut top edges of pocket, and stitch 1-1/2 +1/8 inches from folded edge.	301	OSf-1	12-14	A	A
	(2) Form a 1-1/2 +1/8 inches wide vertical box pleat to the outside in the center of the pocket and stitch across the top and bottom of pleat 1/8 to 3/16 inch from raw edge.	301	SSa-1	12-14	A	A

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
14.	Make two breast patch pockets. - (Cont'd) (3) Press pleat in center of pocket, flat and smooth. c. Line underside of patch. (1) Place the polyester pieces to the back of the patch pocket (underside) and seam around, at the sides and the bottom, 1/8 to 3/16 inch from the raw edge. OR (2) Fuse the required non-woven fusible material to underside of patch leaving a border along the side and bottom edges wide enough so that when the sides and bottom edges are creased, to conform to proper shape, as shown by the pocket shaper, the non-woven fusible material will not be folded inside the crease. The fusible fabric shall be fused to the basic fabric (outershell) in accordance with the instructions in 3.3.13. d. Trim bottom corners of pockets. e. Turn the sides and bottom edges of the pockets and crease to conform to the finished pocket shaper.	301	SSa-1	12-14	A	A

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
14.	Make two breast patch pockets. - (Cont'd)					
	f. Put the shaper on the pocket and trim top edge if necessary.					
	g. Overedge stitch the top edge of the pocket catching the polyester or non-woven fusible material with the pleat closed.	504 or 505	EFd-1	8-10	A	A
	h. Press pockets smooth and flat.					
15.	Make collar.					
	a. Join the undercollar pieces.	301	SSa-1	12-14	A	A
	b. Join the undercollar interling.	301	LSa-1	12-14	A	A
	c. Open the undercollar seam and stitch one side of the seam allowance to the interlining, or press the undercollar seam open with a heated pressing iron or machine.	301	SSa-1	6-8	A	A
	NOTE: If the undercollar and the interlining are cut in one piece, Operations 15.a, b, and c will not be required. If the undercollar and the interlining are not cut in one piece, Operation 15.d shall be performed before Operations 15.a, b, and c. If composite one piece undercollar is used, no interlining is required.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
15.	Make collar. - (Cont'd)					
	d. Quilt the interlining to the undercollar with seven to eight rows of blindstitching.	103	SSm-7 to SSm-8		70	
	e. Press the undercollar.					
	f. Shape and trim the undercollar, trim the interlining 1/8 inch away from the lower edge of the undercollar. The undercollar may be die shaped to conform to the undercollar shaper.					
	h. Stitch the stand of the undercollar; the stand shall be 1-1/4 ±1/8 inches at both shoulder seams and the center. Stitch the top and the side edges of the undercollar 1/2 ±1/8 inch from the edge.	301 301	SSa-1 SSa-1	12-14 12-14	A A	A A
	i. Mark the topcollar with a pattern shaper. The topcollar may be die cut as indicated by the shaper at the outer edge.					
	j. Position the upper edge of the topcollar between the upper edges of the undercollar and the interlining, matching the notch and seam together. When Operation 15.n is performed by machine, the topcollar does not need to be sewn to the interlining.	301	LSa-1	4-6	A	A
	k. Baste the upper edge of the collar and at the creaseline.	101 or hand				

Source: https://assist.dla.mil - Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
15.	Make collar. - (Cont'd)					
	l. In lieu of Operations 15.j and k, baste the topcollar to the undercollar along the creaseline and the outer edge, matching notch.	101 or hand				
	m. Trim and turn the edges of the topcollar over the interlining, between the undercollar and the interlining and baste the edges.	Hand or machine				
	n. Fell the top and the side edges of the topcollar to the undercollar by hand.	Hand		8-10	A or C nylon	
	OR					
	o. As an option, the top edge only may be machine felled with simulated hand stitching; the corners and the sides shall be felled by hand. When simulated hand stitching is used for the top edges, the operation shall precede the collar basting.	Machine		6-10	A	A
	OR					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
15.	Make collar. - (Cont'd)					
	p. As an option, the side edges may be sewn by machine, 1/8 inch and parallel from the extended edge at the sides of the collar.	301	SSa-1	12-14	A	A
	NOTE: When using the 301 stitch to sew the sides of the collar, the alternate undercollar shaper shall be used. (See Operation 16 for one piece undercollar construction.)					
	q. Press and crease the stand of the topcollar and the undercollar together in one operation to shape, stretching the outer edge of the collar across the shoulders and holding the creaseline short.					
	r. Trim the bottom edge of the topcollar to allow for seaming.					
	As an option to Operations 15.j through 15.r, the collar may be made as follows:					
	s. Insert 1/2 to 3/4 inch bias binding, made of rayon material (see 3.3.2), between the undercollar and the interlining so that the bias binding will extend approximately 1/4 inch from the outer edge of the collar, and stitch through the three plies.	304 or 306		12-14	A	A

Source: https://assist.dla.mil/ -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
15.	Make collar. - (Cont'd)					
	t. Stitch the undercollar to the topcollar, using a 3/16 inch knife attachment, matching the notches and distributing fullness. The interlining edge shall be used as a guide for the finished stitch line and the shape of the collar.	301	SSa-1	12-14	A	A
	u. Turn the collar, and force out the edges. Baste the collar edge, with at least two rows of stitching, distributing the collar fullness evenly and rolling the joining seam to the underside. The first row of stitching shall be 1/4 inch from the edge. The other row of stitching shall be placed along the outside edge of the collar. The rayon bias binding shall not be exposed at the edge of the finished collar.	Hand or machine			Commercial cotton	
16.	Make one piece undercollar.					
	a. Mark and shape undercollar to conform to pattern shaper. Cut in accordance with undercollar shaper, or undercollar may be die cut to conform to pattern shaper.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
16.	Make one piece undercollar. - (Cont'd)					
	b. Mark the break line of undercollar with the undercollar shaper.					
	c. Stitch undercollar at breakline, stand shall be 1-1/4 ±1/8 inches at center.	301	SSa-1	10-14	70	70
	d. Mark topcollar with pattern shaper.					
	e. Baste top edge of finished undercollar along straight top edge of topcollar matching the notches and distributing fullness of topcollar between the notches on outer edge of undercollar and topcollar.	101 or 301 or Hand				
	NOTE: When the top edge of collar is machine felled with simulated hand felling, Operation 16.e may be omitted.					
	f. Baste the topcollar to undercollar along creaseline and outer edge, putting in proper fullness.	Hand or machine				
	g. Trim, turn and baste edges of topcollar.	Hand or machine				

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
16.	Make one piece undercollar. - (Cont'd)					
	h. Fell top and side edges of topcollar to finish undercollar by hand, or top edge may be machine felled with simulated hand. NOTE: When simulated hand stitching is used, the operation shall precede collar basting and fullness of topcollar shall be distributed between the matching notches on outer edge of undercollar and topcollar.	Hand or machine		8-10 6-10	C silk A silk or B nylon	
	i. Trim bottom (neck) edge of topcollar to allow for seaming.					
	j. Press and crease the stand of the topcollar and undercollar together in one operation to shape, holding the creaseline short and stretching the outer edge of the collar across the area of the shoulders.					
17.	Make sleeves.					
	a. Join the forearm seam of the sleeve, distributing fullness between the notches.	301	SSa-1	12-14	A	A

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
17.	Make sleeves. - (Cont'd)					
	b. Press the forearm seam open and flat with a heated pressing iron, holding the folding line short.					
	c. Stitch the interlining to the underarm seam and the sides of the backarm seam. The bottom edge of the cuff interlining shall be 1/2 to 3/4 inch below the turn-up notches.	301	SSa-1	6-14	A	A
	d. Mark and baste the turn-up of the bottom of the sleeve.	101 or Hand				
	e. Press the bottom of the sleeves, and pull out the basting.					
	f. Join the backarm seam of the sleeves.	301	SSa-1	12-14	A	A
	g. Press the backarm seam open and flat with a heated pressing iron, holding the seam short.					
	h. Blindstitch the turn-up of the sleeve to the interlining.	103 or 301 or Hand	EFc-1	4-6 4-6 1-2	70 70 70	70

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
17.	Make sleeves. - (Cont'd)					
	i. Position the top and undersleeve lining pieces in accordance with notches on pattern and join at the forearm and backarm sleeve respectively, with a 3/8 inch seam continuously from top to bottom of each seam. NOTE: The joining seam of the sleeve lining shall be on the inside of the finished sleeve linings.	301	SSa-1	12-14	A	A
	j. The sleeve linings shall extend not less than 3/4 inch or more than 1 inch above the top of the sleeve. Tack the forearm seam and the backarm seam of the sleeve lining to the forearm seam and the backarm seam of the sleeve, respectively, distributing fullness of lining during the tacking operation. Tacking shall extend from not less than 5 inches from the creased bottom edge and terminate not less than midway between the sleeve bottom and the base of the armhole. When tacking is done by hand, both ends of the stitching shall be securely backstitched with not less than three stitches.	301 or Hand	SSa-1	4-6 1/2-1	A 30	A

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
17.	Make sleeves. - (Cont'd)					
	k. Baste the turn-up of the sleeve lining. The turn-up of the sleeve lining shall not be less than 1-1/4 inches and shall not be trimmed. The sleeve lining may be felled to the bottom of the sleeve without basting in accordance with Operation 48.c.	Hand or machine 101				
	l. Turn the sleeves and assemble in pairs.					
18.	Make linings.					
	a. Stitch the underarm darts in the front of the linings.	301 or 401	SSa-1	12-14	A	A
	b. Fold and stitch the dart as indicated by the marks on the pattern.	301 or 401	OSf-1	12-14	A	A
	c. Stitch the forepart linings to the facings distributing fullness along the length of chest area.	301 or 401	SSa-1	12-14	A	A
	d. Form and stitch the pleat at the front of the shoulder as indicated by the patterns, or the pleat may be formed when basting the lining.	Hand or machine				

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
19.	Make inside breast pocket.					
	a. Mark the position as indicated by the pattern for a 3/16 to 1/4 inch, double-piped pocket on the right side through the lining, the facing, and polyester stay. The polyester stay shall extend and shall be caught in the armhole. The opening of the finished pocket shall be not less than 5-1/2 inches nor more than 5-3/4 inches. The depth of the finished pocket shall be not less than 6-1/2 inches.					
	b. Turn in the bottom raw edge of the rayon facing and seam to the polyester pocket, catching the top edge of the combination personal identification, identification, and instruction label in the seaming.	301	LSd-1	12-14	A	A
	c. Turn in the top raw edge of the rayon facing and seam onto the polyester pocket. When either edge is selvage, it does not need to be turned in.	301	LSd-1	12-14	A	A

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
19.	Make inside breast pocket. - (Cont'd)					
	d. Stitch the remaining three sides of the combination personal identification, identification, and instruction label to the polyester pocket.	301	SSa-1	12-14	A	A
	e. Position the polyester pocket on the rayon lining and the polyester/ wool facing, at the marks, with the polyester stay on the underside.					
	f. Seam the polyester pocket, to the lining and the facing through the polyester stay, with two rows of stitching.	301	SSv-2	12-14	A	A
	g. Cut the opening of the pocket. Tongue notch the ends of the opening. The opening of the pocket shall not extend into the facing more than 1-1/2 inches nor into the armhole.					
	h. Turn the pocket through the cut opening. Make the top and the bottom piping, and securely tack the corners. Turn the pocket into position and stitch around the sides and bottom of the polyester pocket. Stitch through the lining and the stay piece from the back end of the pocket opening to the armholes.	301		12-14	A	A

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
19.	Make inside breast pocket. - (Cont'd)					
	i. The pocket opening may be accomplished with a double piped pocket machine which stitches, cuts, and turns piped edges in one operation. When this machine is used, the piping piece may be trimmed to permit insertion into the machine. The joining seams of the piped edges shall be raise stitched. The bottom of the piped edges shall be raise stitched through the lining and the coat facing prior to closing the pocket. The top piped edge shall be raise stitched through all plies (not in piping) in closing the top of the pocket.	101 301		12-16 12-16	A A	 A
	j. Press the seam joining the front body lining to the facing and the dart flat to one side towards the side seam. Press the pockets smooth. Press open the bottom of the joining facing seam.					
20.	Make armhole shields.					
	a. Seam the edges of the armhole shields and turn.	301 or 401	SSa-1	12-14	A	A
	b. Press the armhole shields smooth and flat, or the edges may be stitched 1/16 to 1/8 inch from the edge.	301	SSe-2(b)	12-14	A	A
	OR					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
20.	Make armhole shields. - (Cont'd)					
	c. As an option to the armhole shields made of rayon material as specified in Operations 18.a and 18.b, the armhole shields may be made of the basic fabric. If the armhole shields are made of the basic fabric, bind the bottom raw edge of the armhole shields.	301	BSc-1	8-12	A or B	A or B
21.	Make yoke.					
	a. Hem the bottom edge of the yoke (rayon material) with the raw edges turned in to finish 1/2 inch and stitch 1/16 of an inch from the top of the turned in hem.	301 or 401	EFb-1	12-14	A	A
	b. Fold the pleat in the center back of the yoke as indicated by the pattern notches and press.					
22.	Make backs.					
	a. Turn under the sides and the center back edges of the back 1/4 inch and blindstitch down.	103	EF1-1	4-6	70	
	b. Turn under the back edge of the left vent as indicated by the notches and blindstitch.	103	EF1-1	4-6	70	

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
22.	Make backs. - (Cont'd)					
	c. Join the center back seams with a 5/8 inch seam and continue the stitching across the top of the vent.	301 or 401	SSa-1	12-14	B	B
	d. Notch the right side of center seam allowance at the top of the vent. Press the center seam open and flat. Press the left vent edge.					
	e. Fold the rayon vent lining in the center face in, stitch from the folded edge to the notch at the top of the lining. Turn and force out the seam.	301	SSa-1	12-14	A	A
	f. Join the rayon lining to the right vent, with the raw edges even, turn and stitch 1/8 inch from the edge and continue across the top of the vent lining.	301	SSe-2	12-14	A	A
	g. Tack the top folded edge of the lining vertically 1/8 inch away from the folded edge of the right back seam outlet only.	Hand or machine		6-8	A nylon A	 A
	h. Tack the top of the vent through all plies of materials including the rayon lining. The outside tack shall be diagonal and shall start at the base of and on the center seam and shall be not less than 1 inch long nor more than 1-1/4 inches long.	301		12-14	A silk or 00	A silk or 00

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
22.	Make backs. - (Cont'd)					
	i. Baste yoke to the back allowing fullness on the yoke along the armhole and shoulder areas.	Hand machine 301 hopper				
	j. Sew the hanger and the size label to the center of the back at the collar seam so that the label will be plainly visible. The finished hanger shall be 2 ±1/2 inches long.	301 or 401	SSa-1 SSa-1	12-14 12-14	A A	A 70
	k. Turn back the yoke and sew 1/4 inch tape on the backs of the armhole from the side seam to 3/4 inch from the shoulder seam, holding the tape taut to draw up the material, evenly distributing 1/4 to 3/8 inch of fullness along the back armhole. Seam the 1/4 inch tape across the neck of the back to within 1/2 inch of each shoulder part.	301 or 401	SSa-1 SSa-1	12-14 12-14	A A	A 70
	l. The tape may be sewn on before the yoke is basted.					
	m. Taping the armhole on the fronts and the backs may be done in one operation.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
23.	Make fronts.					
	a. Seam the vertical folded darts, on the fronts, with a 1 inch strip of basic material cut in the warp direction. The seam shall be 1/4 inch gage at the center of the dart, tapering off at each end. The strip shall be stitched so that it faces toward the side seam when the dart is pressed open.	301 or 401	SSa-1	12-14	A	A
	OR					
	b. As an alternate to Operation 23.a, the dart may be cut and sewn with a 1/4 inch gage at the center of dart, tapering off at each end. The 1 inch strip is eliminated when using the cut dart.	301 or 401	SSa-1	12-14	A	A
	c. Seam the cut underarm dart of the fronts, with a 1/4 inch seam tapering to nothing at the bottom.	301 or 401	SSa-1	12-14	A	A
	d. A strip of bias-cut polyester shall be seamed on each front along the shoulder seam 1 to 1-1/2 inches from the gorge to 1/2 to 3/4 inch from the armholes. Seam a 4-1/2 inch strip of bias cut polyester on the armhole 3/8 to 3/4 inch down from the shoulder.	301 or 401	SSa-1 SSa-1	8-12 8-12	A A	A 70

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
23.	Make fronts. - (Cont'd)					
	e. Seam a 1/4 inch tape on the armhole from the side seam to 1 inch above the notch on the fronts, holding the tape taut, except over the underarm dart. Seam the 1/4 inch tape along the gorge from 1/2 inch below the shoulder part to approximately 1 inch forward of the lapel breakline.	301 or 401	SSa-1 SSa-1	8-12 8-12	A A	A 70
	f. Press the dart seams open and flat with a heated pressing iron, holding the front waist dart short and curved toward the front edge at the center.					
	g. Press the fronts individually on a breast pressing machine, keeping the fronts straight from the top step to approximately the bottom end of the front waist dart. The front darts shall curve toward the front edge at the center.					
	h. Mark the fronts for the position of the breast pockets, the breast pocket flaps, the lower pockets, and the lower pocket flaps, as indicated by the patterns.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
23.	Make fronts. - (Cont'd)					
	i. Single stitch the breast pockets on the fronts, at the marks, 3/16 inch from the pocket edges. The pockets shall be backstitched at the start and finish stitch.	301	LSd-1	12-14	A silk or 00	A silk or 00
	j. Seam the breast pocket flaps on the fronts at the marks, with the ends securely tacked; turn down the flap over the pocket opening and raise seam 3/16 inch with the ends securely backstitched. The top of the pocket and the flap shall be stitched through the polyester stay. The point of the flap shall be at the center of the pleat on the breast patch and the raw edge shall be encased between the joining and raising rows of stitching.	301	LSq-2	12-14	A silk or 00	A silk or 00
	k. Tack the flaps to the pockets at each corner. If the flaps are tacked by hand, the hand tacking shall be tacked off with 4-6 stitches. The tacks shall not be visible on the outside of the flaps. The tacked flaps shall lie smooth and flat.	101 or hand		8-12 4-8	70 A silk or C silk	70

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
24.	Make inside hanging lower pockets. Construct the inside hanging pockets in accordance with one of the following methods: a. Double piping construction					
	(1) Position the top edge of the facing piece on the polyester pocket as indicated by the notches on the patterns; turn in the bottom edge of the facing piece and seam to the polyester pocket. The selvage edge need not be turned in.	301	LSd-1	12-14	A	A
	(2) Position the wide piping piece on the polyester pocket with the edge even with the opposite end of the polyester pocket; single stitch 1/4 to 3/8 inch from the edge.	301	SSa-1	12-14	A	A
	(3) Position the piping pieces on the outside of the coat fronts at the mark. Seam through the coat and the polyester stay piece on the underside of the coat. The narrow piping piece shall be used to form the upper piping.	301		12-14	A	A

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
24.	Make inside hanging lower pockets. - (Cont'd)					
	(4) Cut the opening through the coat and the polyester stay on the underside of the coat. Tongue notch the ends of the pocket opening. Turn the pocket through the opening.					
	(5) Open the seam and fold each piping piece to form a firm 1/8 to 1/4 inch piping; seam between the folds through the seam. The stitching shall be imbedded in the seam.	301	SSaf-1	12-14	A	A
	(6) Turn the polyester pocket up. Stitch across the top of the pocket adjacent to piping piece, catching the facing and the polyester pocket in the stitching and closing the top of the pocket.	301	SSa-1	12-14	A	A
	(7) Adjust the pipings, the tongues, and the polyester stay piece. Turn the front at the end of the piping to reveal the tongue notch. Tack the tongue at the ends of the pocket opening as close to the notched end, without pleating the front at ends of pocket opening, with tacking going through the tongue, piping, facing polyester stay piece, polyester pocket material and continue stitching around the polyester pocket.	301		12-14	A	A
	OR					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
24.	Make inside hanging lower pockets. - (Cont'd)					
	b. Double-piping construction with 1/8 to 3/16 inch cord.					
	(1) Position the top edges of the facing piece on the polyester pocket as indicated by the notches on the pattern. Turn in the bottom edge of the facing piece and seam to the polyester pocket. The selvage edge need not be turned in.	301	LSd-1	12-14	A	A
	(2) Position the polyester stay piece on the underside of the coat with the cord piece positioned on the outside of the coat as indicated by the marks on the pattern.					
	(3) Seam through the cord piece, the coat, and the polyester stay piece on the underside of the coat. (A special two-needle pocket machine with cutting knife may be used for this operation.)	301		12-14	A	A

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
24.	Make inside hanging lower pockets. - (Cont'd)					
	(4) Cut the pocket opening through the cord piece, the coat, and the polyester stay piece. Turn the pocket through the opening and stitch to form a 1/8 to 3/16 inch welt at the lower edge of the opening. Seam the polyester hanging pocket to the lower edge of the cord piece.	301		12-14	A	A
	(5) Pull the top cord piece through the pocket opening.					
	(6) Turn up the pocket and position above the top cord and stitch to form a 1/8 to 3/16 inch cord edge, catching through all plies of materials.	301		12-14	A	A
	OR					
	(7) The upper cord edge may be formed separately and the pocket closed as specified in Operation 24.a.(6).	301	SSa-1	12-14	A	A
	(8) Smooth out the pocket cord pieces and the polyester stay pieces, securely tacking the ends of the pocket openings and stitch around the polyester pocket.	301		12-14	A	A
	OR					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
24.	Make inside hanging lower pockets. - (Cont'd)					
	c. Operation 24.b may be accomplished with a double-piped pocket machine which stitches, cuts, and turns piped edges in one operation. When this machine is used, the welt piece may be trimmed to permit insertion into the machine. The joining seam of the bottom piping piece shall be raise stitched through the front, and the piping piece shall be raise stitched through all plies in the closing of the top of the pocket. The ends of the pocket shall be securely tacked. (When this machine is used, the pocket stay material recommended by the manufacturer of the machine may be utilized in addition to the polyester.)	101 and 301		12-14	A A	A
	d. Seam the polyester hanging pocket to lower edge of lower cord pieces so that seam does not finish on the inside of the hanging pocket.					

Source: https://assist.dla.mil - Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
24.	Make inside hanging lower pockets. - (Cont'd)					
	e. Turn up the pocket and position the facing end of the polyester pocket even with the raw edge of the upper cord and stitch across the top of the pocket adjacent to the piping piece, catching the facing and the polyester pocket in the stitching and closing the top of the pocket.					
	f. Bartack each end of the pocket opening, the width of the double piping or the cord edges, through the cords, the front and the pocket facing.	Bartack		28 per bartack	A	A
	g. Seam the two lower flaps on the fronts, at the marks, with the corners securely tacked; turn down the flap over the pocket opening and raise stitch 3/16 inch, with the corners securely backstitched. The raw edge at the top of the flap shall be encased between the joining and raising rows of stitching.	301	LSq-2	12-14	A silk or 00	A silk or 00
	h. Press the pockets and the fronts on a breast machine keeping the front edge straight and the front dart curved toward the front edge.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
25.	Baste fronts to interlining.					
	Finished appearance. The interlining shall extend well beyond the armhole.					
	a. Baste the fronts to the interlining from below the shoulder, along the front dart seam to the bottom of the coat.	301 or hand	Hopper			
	b. Tack the vertical front dart to the interlining. Securely tack the upper pocket stay to the interlining both front and back, and continue tacking down the front of the inside hanging pocket on the seam allowance as far down as the interlining will permit. Securely tack the lower pocket stays to the interlining at the top front corners. The upper pocket stays may be tacked across the top. If the upper pocket stay is tacked across the top, start the middle row of interlining basting at the top of the breast flap.	301 or hand	Hopper	1-2 1-2		
	c. Baste across the shoulder, allowing room for setting the shoulder pads. Baste around the armholes and down the back edge of the interlining. Baste along the breakline of the lapel and down the front edges.	301 or hand	Hopper			

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
25.	Baste fronts to interlining. - (Cont'd)					
	d. Baste the bridle tape 1/4 to 3/8 inch behind the breakline of each lapel, holding the tape taut and holding in and properly distributing breast fullness. The bridle tape shall extend sufficiently above the gorge to permit catching the tape in the gorge seam tacking and to within 1 inch at the bottom. The tape shall be held taut enough to work in not less than 1/4 inch or not more than 1/2 inch fullness. The tape and interlining shall be stamp marked to assure proper fullness. The tape shall be marked 1/4 inch for sizes short and extra short, 3/8 inch for size regular, and 1/2 inch for sizes long and extra long.	301 or hand	Hopper			
	e. Pad the lapels of the coat with six rows of blindstitching, with fullness on the interlining between the rows of stitching to roll lapels.	103 or 301	SSm-6 SSm-6	4-6 4-6	70 or 70 or 00	70 or 00
	f. Blindstitch the bridle tape on the front and the back edges.	103 or 301	SSm-2	4-6 4-6	70 or 00	70 or 00
26.	Join the seams.					
	a. Join the side seams, with a 5/8 inch seam, placing a 3/16 inch fullness evenly distributed on the back, starting 1 inch from the top edge of the step for a distance of 5 to 6 inches.	301 or 401	SSa-1	12-14	B	B

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
26.	Join the seams. - (Cont'd) b. Press the side seam open and flat, holding the seam short and curved towards the back at the blade part of the seam. Press the tape at the armhole, holding the back short.					
27.	Under press lapels and fronts and shape lapels. a. After the lapels are padded, press the left and right fronts of the coats individually on a breast pressing machine to the shape of the body. The front edge of the forepart shall be straight from the top step to the top of the lower flap. The front darts shall curve toward the front edge at the center. b. Position a lapel shaper from the point of the shoulder to the notch at the bottom of the stand and mark both notches. Mark and trim as shown by the shaper. c. Trim the right and left front edge and trim the bottom of the coat, matching the lengths. The left front interlining shall be dressed during the operations for shaping the fronts and not in the cutting room.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
27.	Under press lapels and fronts and shape lapels. - (Cont'd) d. Trim the interlining from the edges of the lapels, the bottoms, and the fronts 1/4 inch. e. The interlining at the bottom may be cut diagonally so that the bottom edge of the interlining is not caught in the tape stitching across the bottom. The polyester button and buttonhole reinforcement pieces shall be trimmed when trimming the interlining. NOTE: The shaping operation may be performed by using dies conforming to the shapers furnished.					
28.	Match and fit facings (first basting). Match, fit, and baste the facings to the coat (first basting), putting in proper breast and lapel fullness and holding the facing taut across the bottom edge of both fronts.	301 or Hand	Hopper			

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
29.	Tape and stitch edges.					
	a. Seam the tape to the edge of the coat from the collar notch, across the top of the lapel, down the front and across the bottom to the back edge of the facing. The width of the seam allowance along the lapel and the front edges shall be 3/16 inch.	301	SSab-1	12-14	A	A
	b. Fell the back edge of the tape to the coat on the fronts and the lapels, or the tape may be felled by hand.	103 or hand	SSm-1	3-4 3-4	70 A	
	c. Press the edges flat and smooth, and the edge seam may be pressed open.					
30.	Turn under bottom edge of coat.					
	Turn under the bottom edge of the coat 1/4 to 3/8 inch to extend from the vent to under the lining of the front and blindstitch down.	103	EF1-1	4-6	70	
31.	Trim, turn, and baste coat.					
	a. Pull the basting and trim. Turn the coat. Work out the lapels and the bottom corners of the fronts. Baste the edges of the fronts and lapels by machine or hand.	101 or hand				

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
31.	Trim, turn, and baste coat. - (Cont'd)					
	b. Turn up the bottom of the coat, as indicated by the notches on the patterns, matching the lengths of the vents opening, and baste by machine or hand.	101 or hand				
	c. Blindstitch the bound bottom turn-up of the backs and the bottom turn-up of the fronts. NOTE: Trim 1/4 inch off of pattern if the coat is bound at the bottom turn-up.	306 or hand	EFc-1	4-6 4-6	A poly-ester A nylon	A poly-ester
32.	Baste facing along fronts (second basting).	301 or hand	Hopper			
	a. Baste the facing 1 inch from the edge.	301 or hand	Hopper			
	b. Place a row of basting diagonally from the break to the point of the lapel, placing proper fullness in the lapel to allow the lapel to roll.	301 or hand	Hopper			
	c. Baste along the breakline of the lapel, allowing fullness in the facing to permit the lapel to roll.	301 or hand	Hopper			
	d. Baste the back edge of the facing, putting fullness over the chest.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
33.	Sew on shoulder pads.					
	Insert the shoulder pads between the interlining, the chest piece, and the felt or the flannel and securely baste to shoulder in proper position.	301 or hand	Hopper	1-2 1-2		
34.	Tack facing to interlining.					
	Tack the back edge of the right facing to the interlining with one row of blindstitching from 2-1/2 inches from the shoulder seam to 2-1/2 inches above the inside pocket opening, and continue from the lower edge of the pocket to within 2 inches of the bottom of the coat. Tack the back edge of the left facing to the interlining not more than 2-1/2 inches below the shoulder seam to within 2 inches of the bottom of the coat.	301 or 103 or hand	SSm-1 SSm-1	3-4 3-4	70 70 A	70
35.	Fit and baste lining of coat.					
	a. Tack the back upper edge of the inside pocket to the interlining.	301 or hand	Hopper	4-6		
	b. Baste the pleat in the shoulder of the fronts.	Hand or 301	Hopper			
	c. Baste across the shoulders, around the armhole, and down the side seam to the bottom and across the bottom.	Hand or 301	Hopper			

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
35.	Fit and baste lining of coat. - (Cont'd)					
	d. Turn in the bottom and the back edge of the lining and baste to the coat. The basting shall allow room for felling of the side seams and the bottom.	Hand or 301	Hopper			
	e. Trim the gorge and the lining of the armholes and the shoulders.					
36.	Fell lining.					
	Fell the bottom and the sides of the lining with a blindstitch.	301	EFc-1	4-6	A poly-ester	A poly-ester
37.	Join shoulder seams.					
	Join the shoulder seams with a 3/8 inch seam, working in proper fullness on the backs. The fullness on the back shall be worked in manually without stretching the front at the shoulder.	301	SSa-1	12-14	A	A
38.	Press shoulder seams.					
	Open and press the shoulder seam, holding the shoulder short, with a heated hand iron or pressing machine over a suitable block.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
39.	Set shoulder loops. Baste or stitch the shoulder loops to the shoulder at the armhole. Trim even with the armhole. The point of the shoulder loop shall be even with the edge of the gorge outlets. The back edge of the shoulder loop shall be 1/2 ±1/8 inch back of the shoulder seam at the armhole. The finished shoulder loops shall be 2-3/8 ±1/8 inches wide at the sleeve head.	301	SSa-1	6-8	A	A
40.	Baste shoulders. a. Position the shoulder, and baste the upper part of each shoulder on the outside. Turn under the edges of the back lining at the shoulders, and baste the upper part of each shoulder, continuing basting across the neck at the back.	Hand or machine				
	OR					
	b. In lieu of basting the lining at the shoulder and hand felling as required in Operation 48.d, the front lining and the yoke lining at the shoulder may be trimmed to allow for thickness of the shoulder pad and stitched on the inside by machine.	301	SSa-1	12-16	A or B	A or B

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
41.	Set in sleeves.					
	Match and stitch in the sleeves, notch to notch, with a 3/8 inch seam, distributing the fullness and catching the end of shoulder loops in the seam.	301	SSa-1	12-14	B	B
42.	Press armhole seam.					
	Press the fullness of the sleeve flat all around the armhole. The armhole seam shall not be pressed open.					
43.	Baste and tack armholes.					
	a. Baste along the shoulder seam from the center of the shoulder to the armhole seam bringing the shoulder seam forward at the armhole seam and tack with three stitches at the armhole end of the shoulder seam. Baste around the outside of the armholes, positioning the lining, the yoke, the shoulder pad, the armhole shields, and the back of the shoulder in proper place and putting fullness of the yoke in proper place. Baste the balance of the shoulder lining. The back part of the armhole may be basted from the lining side.	Hand or 301				

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
43.	Baste and tack armholes. - (Cont'd)					
	b. Tack securely all around each armhole, catching the shields at the base of the armholes. The tacking shall be backstitched every other stitch from the front notch to the side seam across the top of the armhole. The armhole may be tacked by machine with a loosely formed (elastic) stitch. NOTE: When the armholes are tacked by machine, Operation 43.c may be omitted and Operations 43.d and 43.e shall be performed simultaneously with Operation 43.b. The requirements of Operations 43.b and 43.e for backstitching shall be applicable to hand tacking.	Hand or 301		2-4 4-6	30 30	 30
	c. Tack the base of the armhole from the sleeve notch on the front to the side seam.	301	SSa-1	6-8	A	A
	d. Trim away excess lining and interlining.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
43.	Baste and tack armholes. - (Cont'd)					
	e. Tack the sleeve-head wadding to the armhole from the front sleeve notch to the back seam of the sleeve. The sleeve-head wadding shall be positioned with the folded edge adjacent to the edge of the armhole, the backing cloth side against the sleeve and in such a manner to cause it to fold on itself. The tacking shall be not more than 1/8 inch from the armhole seam and fullness shall be properly distributed. The tacking shall be backstitched every other stitch.	Hand		2-3	30	
44.	Set on collar.					
	a. Mark the outlet at the neck with a gorge shaper.					
	b. Seam the topcollar to the front facings at the gorge to a point not less than 1 inch back of the lapel breakline.	301	SSa-1	12-14	A	A
	c. Tack the gorge seam open, catching the bridle tape in the tacking.	Hand or 301		3-4	A	A
	d. Baste the undercollar to the coat by hand or machine, putting in proper fullness over the shoulder area.	Hand or 401		2		
	e. Tack the outlet at the neck.	103 or hand	SSm-1	3-4 3-4	50 C nylon	

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
44.	Set on collar. - (Cont'd)					
	f. Turn under and baste the lower edge of the topcollar at the neck.	Hand or machine				
	g. Fell the lower edge of the undercollar to the coat by hand or machine. The raw edge of the undercollar shall be enclosed within the felling.	Hand or machine (hand-type felling or 306)		8-10	C nylon	
	h. Securely tack the corners of the collar across the juncture point of the collar and the lapel.	Hand		6-8	C nylon	
	i. Fell the lower edge of the topcollar from gorge seam to gorge seam by hand.	Hand		8-10	C nylon	
	OR					
	j. As an alternate method, in lieu of Operations 44.e, 44.f, and 44.i, stitch the lower edge of the topcollar across the neck from gorge seam to gorge seam. Adjust the collar to accommodate a 3/8 inch seam at lower end of topcollar and a 5/8 inch outlet is maintained at neck as required when applying the under collar.	301	SSa-1	12-14	A	A
	NOTE: When basting the undercollar along the gorge line use a 5/8 inch outlet.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
45.	Stitch front and collar edges.					
	Stitch the edges of the coat and the collar 3/16 inch from the edge. The stitching shall extend across the bottom the width of the facings.	301	SSe-2 shows finished seam	12-14	A silk or 00	A silk or 00
46.	Tack breast pocket.					
	Tack the inside breast pocket to the facing and the interlining by hand, from the corner of the pocket down the side for a distance of not less than 5 inches, or notch the top of the polyester pocket at the front edge the full width of the seam allowance. Blindstitch the inner ply of the pocket to the facing, flat and smooth, and the outer ply of the pocket to the front interlining.	Hand or 103	SSm-1 each ply	2-4 4-8	C nylon 50	
47.	Press left front.					
	Press the left front prior to the buttonhole operation.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
48.	Complete hand felling.					
	a. Hand fell the lining all around the armholes. Backstitch the pit of the armhole from the forearm seam of the sleeve to the side seam.	Hand		6-8	C nylon	
	OR					
	b. As an option, the sleeve lining may be stitched to the armhole on the inside from forearm seam of the sleeve to the backarm seam across the under-sleeve. Fell top of the remaining sleeve lining at the armhole with machine duplicated hand felling (See figure 1, stitch type 801, for duplicated hand felling stitch.) with stitching placed over the folded edge of sleeve lining, distributing fullness in accordance with good commercial practice.	301	SSa-1	10-14	70	70
	NOTE: It is required that the duplicated hand stitching produced by machine shall be equal to or better than the hand felling and that the duplicated hand felling shall be accomplished from the outside of the armhole.					
	OR					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
48.	Complete hand felling. - (Cont'd)					
	c. The remaining top portion of the sleeve lining may be felled by hand with the stitching placed over the folded edge of sleeve lining, distributing fullness in accordance with good commercial practice.					
	d. Fell the lining of the shoulder (when the shoulder is basted by hand or machine), the yoke at the side seam, across the side seam outlet at the bottom of the yoke, the corners of the linings and the facings at the bottom, the vent corners, and the turn-up of the sleeve linings. The turn-up of the sleeve lining may be felled to the bottom of the sleeve by machine.	Hand 103		6-8 6-8	C nylon A polyester	A polyester
	e. Tack the bottom edge of the armhole shields on the underside to the lining.	Hand		4	C nylon	

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
49.	Clean coat. a. Pull the basting threads. b. Trim all ends of stitching, and remove the loose threads from the coat. c. Remove all spots and stains. Remove the shade tickets.					
50.	Mark and make front buttonholes. a. Mark the position of the lower front buttonhole on the front as indicated by the pattern. The top front buttonhole shall be aligned with eyelets on the buttonholes of the breast pocket flaps when coat is buttoned on a model form. The two center buttonholes shall be equally spaced between the top and the bottom buttonholes.					
	b. Make four cut-first buttonholes, on the left front as marked, with the eyelets 5/8 inch from the front edge. The buttonholes shall be of the eyelet-end, square bar type, worked over gimp, to fit a 36-line button, with the gimp pulled through to the underside. The finished buttonhole shall be 1-1/8 inches long.	Button-hole		70 per button-hole not including bartack	B silk	B or C silk

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
50.	Mark and make front buttonholes. - (Cont'd)					
	c. Bartack the end of the buttonhole. The bartacking shall be a separate operation from the buttonhole making with the ends of buttonhole abutted and centered within the bartack stitching.	Bartack		21 per tack	A silk	A
	d. The bartack at the end of the buttonholes may be done by hand but shall be not more than 3/16 inch long.	Hand		10-12 per tack	A nylon	
51.	Press.					
	a. Between the first pressing operation and completion of pressing, place the coat on a hanger.					
	b. Press the edges of the lapel fronts, the collar, and the bottom of the coat on an edge pressing machine.					
	c. Press the right and left fronts on right and left chest machines, respectively.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
51.	Press. - (Cont'd) d. Crease the backarm on the backarm seam from the bottom of the sleeve to the lower edge of the breast patch. Roll press the front of the sleeve. e. Press the balance of the fronts, the side seam, and the back of coat (body machine). f. Press the collar on a collar machine, creasing on the breakline and shaping to obtain the proper contour while pressing. g. Press the armholes and shoulders (shoulder machine). h. Crease the armhole solid on the inside of the armhole (armhole machine). i. Block the armholes; shrink in the topsleeve. j. Press the lapels. The creasing of the lapels shall extend a uniform distance from the gorge seam. The lapel shall be rolled pressed from midway between the gorge seam to the bottom of the lapel.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
52.	Finish press.					
	a. Press the coat lining smooth with a hand iron.					
	b. Remove gloss, wrinkles, creases, spots, and impressions on the fronts under the lapels, on the collars, on the right back under the left vent, on the shoulders, and on the patch pockets under the flaps.					
	c. Brush the coat and examine.					
	d. Touch up any spots missed by the machine pressing.					
53.	Mark and sew on buttons.					
	a. Mark the location of the four buttons on the right front of the coat to correspond with the buttonholes on the left front. Sew four 36-line buttons, 1-5/8 to 1-7/8 inches from the front edge, on the right front of the coat as indicated on the patterns and with the stitches caught through the interlining and the front facing. If the buttons are sewn by hand, the sewing shall be backstitched with not less than two stitches, and the ends shall be hidden.	101 or 301 or Hand 801 (see Figure 1)		20-22 per button 14-16 per button 4 per button double thread 12 per button minimum	20 20 12 to 16 No. 4 nylon	 20 No. 4 nylon


Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VII. Sewing operations. - Continued

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin/ Looper
53.	Mark and sew on buttons. - (Cont'd)					
	b. Mark the position and sew a 25-line button on each shoulder to match the corresponding buttonhole in each shoulder loop. Position each button so that the spread wings of the eagle on the button are in line with the shoulder seam, the head of the eagle is in the direction of the back edge of the shoulder loop and the shoulder loop lies flat without bulging. The stitching shall be caught through the interlining and the facing or lining. If the buttons are sewn by hand, the sewing shall be back-stitched with not less than two stitches, and the ends shall be hidden.	101 or		12 per button	20	
		301 or		12 per button	20	20
		Hand		3 per button double thread	12 to 16	
		801 (see Figure 1		12 per button minimum	No. 4 nylon	No. 4 nylon
54.	Insert buttons with toggles.					
	a. Insert a 25-line button with a toggle in the buttonhole eyelet in each breast pocket flap.					
	b. Insert a 25-line button with a toggle in the buttonhole eyelet in each lower pocket flap.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

NOTE: Stitch class 800 shall be formed with one or more needle threads and has for a general characteristic that the thread does not interloop with itself or any other thread or threads. The thread is passed completely through the material by means of a double pointed center eye needle and returned by another path. Stitch class 800 simulates hand stitching.

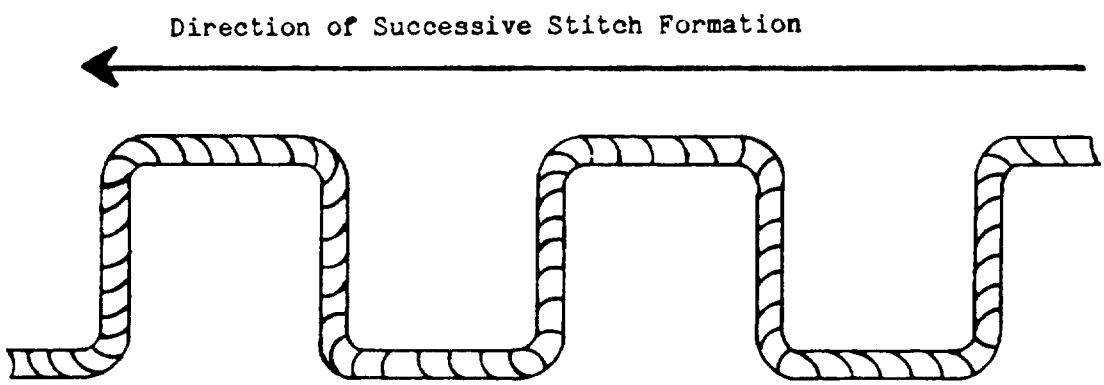

Stitch type 801 shall be formed with one needle thread which is passed completely through the material and returned by another path after the material has been moved forward one stitch length.

FIGURE 1. Stitch type 801.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

3.6.1.3 Types 101, 103, 304, 306, 401, 504, 505, and 801 stitching. Thread tension shall be maintained so that there will be no loose or excessively tight stitching resulting in puckering of the materials sewn. Type 301 stitching may be used to repair type 401 stitching.

3.6.1.4 Automatic stitching. Automatic machines may be used to perform any of the stitch patterns provided the requirements for the stitch pattern, stitches per inch, and size and type of thread are met; and at least three tying, overlapping or backstitches are used to secure the ends of the stitching.

3.6.1.5 Top and edge stitching options. Although options to use silk or cotton threads for top and edge stitching operations are permitted in table VII, one kind of thread shall be used consistently throughout the coat, i.e., a combination of silk and cotton threads shall not be used for top or edge stitching on the outside of the coat.

3.6.1.6 Thread ends. All thread ends shall be trimmed to 1/4 inch maximum length.

3.7 Manufacturing operations requirements. The coats shall be made in accordance with operation requirements specified in table VII. The contractor is not required to follow the exact sequence of operations listed unless otherwise specified. Any additional basting or holding stitches used to facilitate manufacture are permissible provided the thread does not show on the finished coat.

3.7.1 Shade and size marking. The component parts of the coats shall be marked or ticketed to insure uniform shade and size throughout the coats. Any method of shade marking may be used, including the use of a felt-back paper marker, except:

a. Metal fastening devices on the rayon lining and corrosive metal fastening devices on other materials.

b. Sew-on type tickets on rayon lining.

c. Perforated paper markers and plain paper markers shall not be used on the basic fabric.

d. Adhesive type tickets which show discoloration or leaves traces of paper or adhesive mass on the material upon removal of the tickets.

e. Any marking medium which would tend to leave a permanent mark.

f. Drill marking is not permitted for positioning of pockets, flaps, and darts. Drill holes are not permitted in any other area of the garment.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

3.8 Finished measurements. The finished coats shall conform to measurements shown in table VIII.

3.8.1 Methods of measuring. Coats shall be buttoned and measured as follows:

1/2 breast - Measure from folded edge to folded edge at the base of the armhole level.

Sleeve inseam - Measure along the underarm seam, from the armhole seam to the bottom edge of the sleeve.

Back length - Measure along the center back seam, from the undercollar edge at neck on center back seam to the bottom edge of the vent.

3.9 Workmanship. The finished coats shall conform to the quality of product established by this document. As a final step in the contractor's production control plan before formation of a lot, each coat shall be buttoned on a model form and visually examined for selected defects. A coat containing a selected defect shall not be included in the end item lot. Selected defects are those defects listed in MIL-STD-1490, identified by an asterisk (*) in the point value column. The occurrence of defects shall not exceed the maximum acceptable point value or defect limit.

4. QUALITY ASSURANCE PROVISIONS

4.1 Responsibility for inspection. Unless otherwise specified in the contract or purchase order, the contractor is responsible for the performance of all inspection requirements as specified herein. Except as otherwise specified in the contract or purchase order, the contractor may use his own or any other facility suitable for the performance of the inspection requirements specified herein, unless disapproved by the Government. The Government reserves the right to perform any of the inspections set forth in the specification where such inspections are deemed necessary to assure supplies and services conform to prescribed requirements.

4.1.1 Responsibility for compliance. All coats shall meet all requirements of sections 3 and 5. The inspection set forth in this specification shall become a part of the contractor's overall inspection system or quality program. The absence of any inspection requirements in the specification shall not relieve the contractor of the responsibility of assuring that all products or supplies submitted to the Government for acceptance comply with all requirements of the contract. Sampling in quality conformance does not authorize submission of known defective material, either indicated or actual, nor does it commit the Government to acceptance of defective material.

4.1.2 Certificate of compliance. Where certificates of compliance are submitted, the Government reserves the right to check test such items to determine the validity of the certification.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE VIII. Finished measurements (inches).

	1/2 breast					Sleeve inseam					Back length				
Size	XS	S	R	L	XL	XS	S	R	L	XL	XS	S	R	L	XL
33		18-1/2	18-1/2	18-1/2			17	18	19			28-1/2	29-3/4	31-1/2	
34	19	19	19	19	19	16	17	18	19	20	27-3/4	28-3/4	30	31-3/4	33-1/4
35	19-1/2	19-1/2	19-1/2	19-1/2	19-1/2	16	17	18	19	20	28	29	30-1/4	31-3/4	33-1/4
36	20	20	20	20	20	16	17	18	19	20	28	29	30-1/2	32	34
37	20-1/2	20-1/2	20-1/2	20-1/2	20-1/2	16	17	18	19	20	28	29-1/4	30-1/2	32	34
38	21	21	21	21	21	16	17	18	19	20	28-1/4	29-1/4	30-3/4	32-1/4	34-1/4
39	21-1/2	21-1/2	21-1/2	21-1/2	21-1/2	16	17	18	19	20	28-1/2	29-1/2	30-3/4	32-1/4	34-1/4
40	22	22	22	22	22	16	17	18	19	20	28-1/2	29-3/4	31	32-1/2	34-1/2
41	22-1/2	22-1/2	22-1/2	22-1/2	22-1/2	16	17	18	19	20	28-3/4	29-3/4	31	32-1/2	34-1/2
42	23	23	23	23	23	16	17	18	19	20	28-3/4	30	31-1/4	32-3/4	34-3/4
43	23-1/2	23-1/2	23-1/2	23-1/2	23-1/2	16	17	18	19	20	29	30	31-1/4	32-3/4	34-3/4
44		24	24	24	24		17	18	19	20		30-1/4	31-1/2	33	35
46		25	25	25	25		17	18	19	20		30-1/4	31-3/4	33-1/4	35
48		26	26	26			17	18	19			30-1/2	31-3/4	33-1/4	
50		27	27	27			17	18	19			30-3/4	32	33-1/2	
Tolerance	±1/2	±1/2	±1/2	±1/2	±1/2	±1/2	±1/2	±1/2	±1/2	±1/2	+1/2 -3/4	+1/2 -3/4	+1/2 -3/4	+1/2 -3/4	+1/2 -3/4

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

4.2 Classification of inspections. The inspection requirements specified herein are classified as follows:

a. First article inspection (see 4.4).

b. Quality conformance inspection (see 4.5).

4.3 Inspection conditions. Unless otherwise specified, all inspections shall be performed in accordance with test conditions specified in FED-STD-191 and the AATCC Technical Manual, as applicable.

4.4 First article inspection. When a first article is required (see 6.2), it shall be examined for the defects specified in MIL-STD-1490. The presence of any defect shall be cause for rejection of the first article.

4.5 Quality conformance inspection. Unless otherwise specified, sampling for inspection shall be in accordance with MIL-STD-105.

4.5.1 Component and material inspection. In accordance with 4.1, components and materials shall be inspected in accordance with all the requirements of referenced documents unless otherwise excluded, amended, modified, or qualified in this document or applicable purchase document.

4.5.1.1 Component testing. In addition to any testing required by 4.5.1, components shall be tested as shown in table IX. The methods of testing specified in FED-STD-191 and the AATCC Technical Manual, wherever applicable and as listed in table IX, shall be followed. All test reports shall contain the individual values used in expressing the final results. The sample size shall be as follows:

Lot size	Sample size
800 or less	2
801 up to and including 22,000	3
22,001 and over	5

The lot shall be unacceptable if one or more sample units fail to meet any test requirement specified. The lot size units and the sample units shall be as follows:

Component	Lot size unit	Sample unit
Cotton flannel	Yard	1 yard full width
Felt padding	Yard	1 yard full width
Interlining	Yard	1/2 yard full width
Shoulder piece	Yard	1 yard full width
Twill	Yard	1/4 yard full width
Braid	Yard	1-1/2 linear yards
Gimp	Bobbins when used (see NOTE)	Sufficient number of bobbins to total a minimum of 360 yards

NOTE: When threads are purchased in the form of cones or spools and on bobbins, thread from each shall be tested.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE IX. Component tests.

Component	Characteristic	Requirement paragraph	Test method
Cotton flannel cloth	Material identification	3.3.3	1200 1/
	Weight	3.3.3	5041
	Yarns per inch	3.3.3	5050
	Breaking strength	3.3.3	5100
Felt padding	Material identification	3.3.3	1100 and 1200 1/
	Weight	3.3.3	5041
	Breaking strength	3.3.3	5100
	Thickness	3.3.3	5030
	Wool content	3.3.3	2101
Interlining	Colorfastness to:		
	Wet-dry cleaning	3.3.4	5622
	Perspiration	3.3.4	5680
	Steam pressing	3.3.4	5640
	Dye identification and after treatment	3.3.4	1/
Shoulder piece	Material identification	3.3.5	1200 and 1530 1/
	Monofilament	3.3.5	Visual 1/
	Yarn ply, warp	3.3.5	Visual
	Yarns, per inch:		
	Cotton-horsehair cloth	3.3.5	5050
	Cotton-nylon cloth	3.3.5	5050
	Weight	3.3.5	5041
	Sizing content of horsehair cloth	3.3.5	2611 2/
	Denier	3.3.5	4010 1/
	Stiffness	3.3.5	5202
Twill cloth	Colorfastness to:		
	Wet-dry cleaning	3.3.10.1	5622
Fusible interlining	Material identification	3.3.13	1/
	Weight	3.3.13	5041
	Adhesive	3.3.13	1/
	Breaking strength	3.3.13	5100
	Shrinkage:		
	After fusing to basic cloth	3.3.13	5556
	After five dry cleanings	3.3.13	5556
	Adhesion (bond strength):		
	Original	3.3.13	5951
	After 5 dry cleanings	3.3.13	5580-5951

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

TABLE IX. Component tests. - Continued

Component	Characteristic	Requirement paragraph	Test method
Braid	Material identification	3.3.15	1200 or 1500 1/
	Size (width)	3.3.15	Measurement
	Color	3.3.15	Visual
	Breaking strength	3.3.15	5102
	Colorfastness to:		
	Wet-dry cleaning	3.3.15	5622
	Crocking	3.3.15	5651
Gimp	Material identification	3.3.17	1100 and 1200 1/
	Finish	3.3.17	Visual
	Weight	3.3.17	4010
	Color		Visual
	Colorfastness to:		
	Wet-dry cleaning	3.3.17	5622

1/ A certificate of compliance will be acceptable for this requirement.
2/ The following formula shall be used to calculate the nonfibrous material:

$$\text{Nonfibrous material in percent} = \frac{O - S}{O} \times 100$$

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

4.5.2 In-process inspection. Inspection shall be made at any point or during any phase of manufacturing to determine whether operations or assemblies are accomplished as specified and to verify that the working patterns conform to the Government patterns in all respects. The Government reserves the right to exclude from consideration for acceptance any material for which in-process inspection had indicated nonconformance.

4.5.2.1 Examination of operations. Examination shall be made of the following operations (see table VII) to establish conformance to specified requirements. Whenever nonconformance is noted, correction shall be made to the items affected, the lot in progress, and to the operation. Parts which cannot be corrected shall be removed from production.

a. Visual and dimensional examination of the cut parts to determine that they are properly cut with respect to size, material directional requirements (warp and filling); that location marks and notches on the parts are located correctly; and that parts containing material defects and damages have been removed (see operations 1 through 4).

b. Visual examination of cut parts during assembly of the coat to determine proper shade matching (see operation 5).

c. Visual examination of pressed fronts to determine that pressing is performed correctly and proper pressing machine is used (see operation 27a).

d. Visual examination of sleeves (prior to basting lining to armhole, side seams, and bottom of coat) to determine that sleeves are set uniformly with fullness at armhole distributed without pleats or puckers (see operation 41 and NOTE).

e. Visual examination of collar gorge seam to determine seam is tacked open and the bridle tape is caught in the tacking (see operation 44c and NOTE).

NOTE: For this examination the contractor shall establish an inspection station. Periodic examination shall be made during each work shift to determine that the requirements are being met.

4.5.2.2 Examination of coat fronts. The right and left coat fronts after stitching darts, making lower pockets, attaching breast pockets, pocket flaps, coat front interlinings, and bridle tape shall be examined for the defects listed below (see figures 2 and 3 for guidance). The lot shall be all pairs (matched right and left) of coat fronts submitted for inspection at one time. The sample unit shall be one pair of coat fronts (right and left). The inspection level shall be II and the acceptable quality level (AQL) shall be 2.5 defects per hundred units.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

Examine	Defects
Darts, underarm 1/ and waist 2/	One or more omitted. One or more not as specified. One or more not pressed as specified.
Front interlining 1/	Not attached or positioned as specified. Basting and tacking of front to interlining omitted or insecure. Padding of lapel not blind stitched with six rows of stitching with fullness on the interlining between each row of blind-stitching. Reinforcement button/buttonhole omitted. Reinforcement color not as specified (black).
Bridle tape 1/	Omitted. Not held taut causing lapel breakline to be stretched. Misplaced at gorge: - more than 5/8 inch behind breakline. - onto or extending beyond breakline on lapel side. - not within 1 to 1-1/2 inches from bottom of lapel. Tape and interlining not stamp marked for fullness of bridle.
Breast pockets 2/	One or more out of alignment or not parallel with front edge at buttonhole positions.
Breast and lower pocket flaps 2/	One or more out of alignment or not parallel with front edge at buttonhole positions.
Breast pocket flaps button with buttonhole 2/	One or more out of horizontal alignment thru center of buttons. Not centered on patch pocket pleat.
Lower pocket flaps 2/	Top edge positioned less than 3/4 inch or more than 1 inch below bottom front buttonhole. Front edge NOT parallel with front edge at buttonhole positions.
Front dart strips 1/	One or more omitted (when not cut open).
Front dart 1/	Not pressed open with dart curved edge toward front (when not cut open).
Pocket stays (breast pockets, lower pocket and inside breast pockets) 1/	One or more omitted. Not positioned as specified.
Front interlining (canvas) 1/	Not matching coat size such as XS, S, R, L, or XL.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

Examine	Defects
Back tape/stay piece (see operation 22k)	One or more not as specified. One or more omitted.
Front tape (see operations 23d and e)	One or more not as specified. One or more omitted.

1/ For location on coat front see figure 2 for information only.
2/ For these locations a template and a standard tailor square will be required on all exept waist darts.

The template for the coat right and left front, for locating the buttons/buttonholes during this stage of the examination, is on a master gage.

Place the gage on the coat front edge, with the top of gage in alignment with the coat label breakline. Mark location of top button/buttonhole position (see figure 3).

Tailor square: Breast pocket defects only - Place the back edge of the long side of the square on the top and the short side toward the breast pocket.

Lower pocket defects only - Place the back edge of the long side of the square on the top and lower buttonhole position and the short side toward the lower pocket flap.

Figure 4 may be used for information only.

4.5.2.3 Examination of fronts and backs after joining. The fronts and backs after joining shall be examined for the defects listed below. The lot shall be all joined fronts and backs submitted for inspection at one time. The sample unit shall be one coat. The inspection level shall be II and the AQL shall be 1.5 defects per hundred units.

Examine	Defects
Fronts, lapels, and bottoms	One or more not shaped in accordance with shaper patterns. Interlining of lapels, bottoms, and front edges (including the button and buttonhole reinforcements) not trimmed as specified (see figure 2).
Left front	Not dressed from bottom notch to base of lapel after the bottoms are shaped (see figure 3).

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

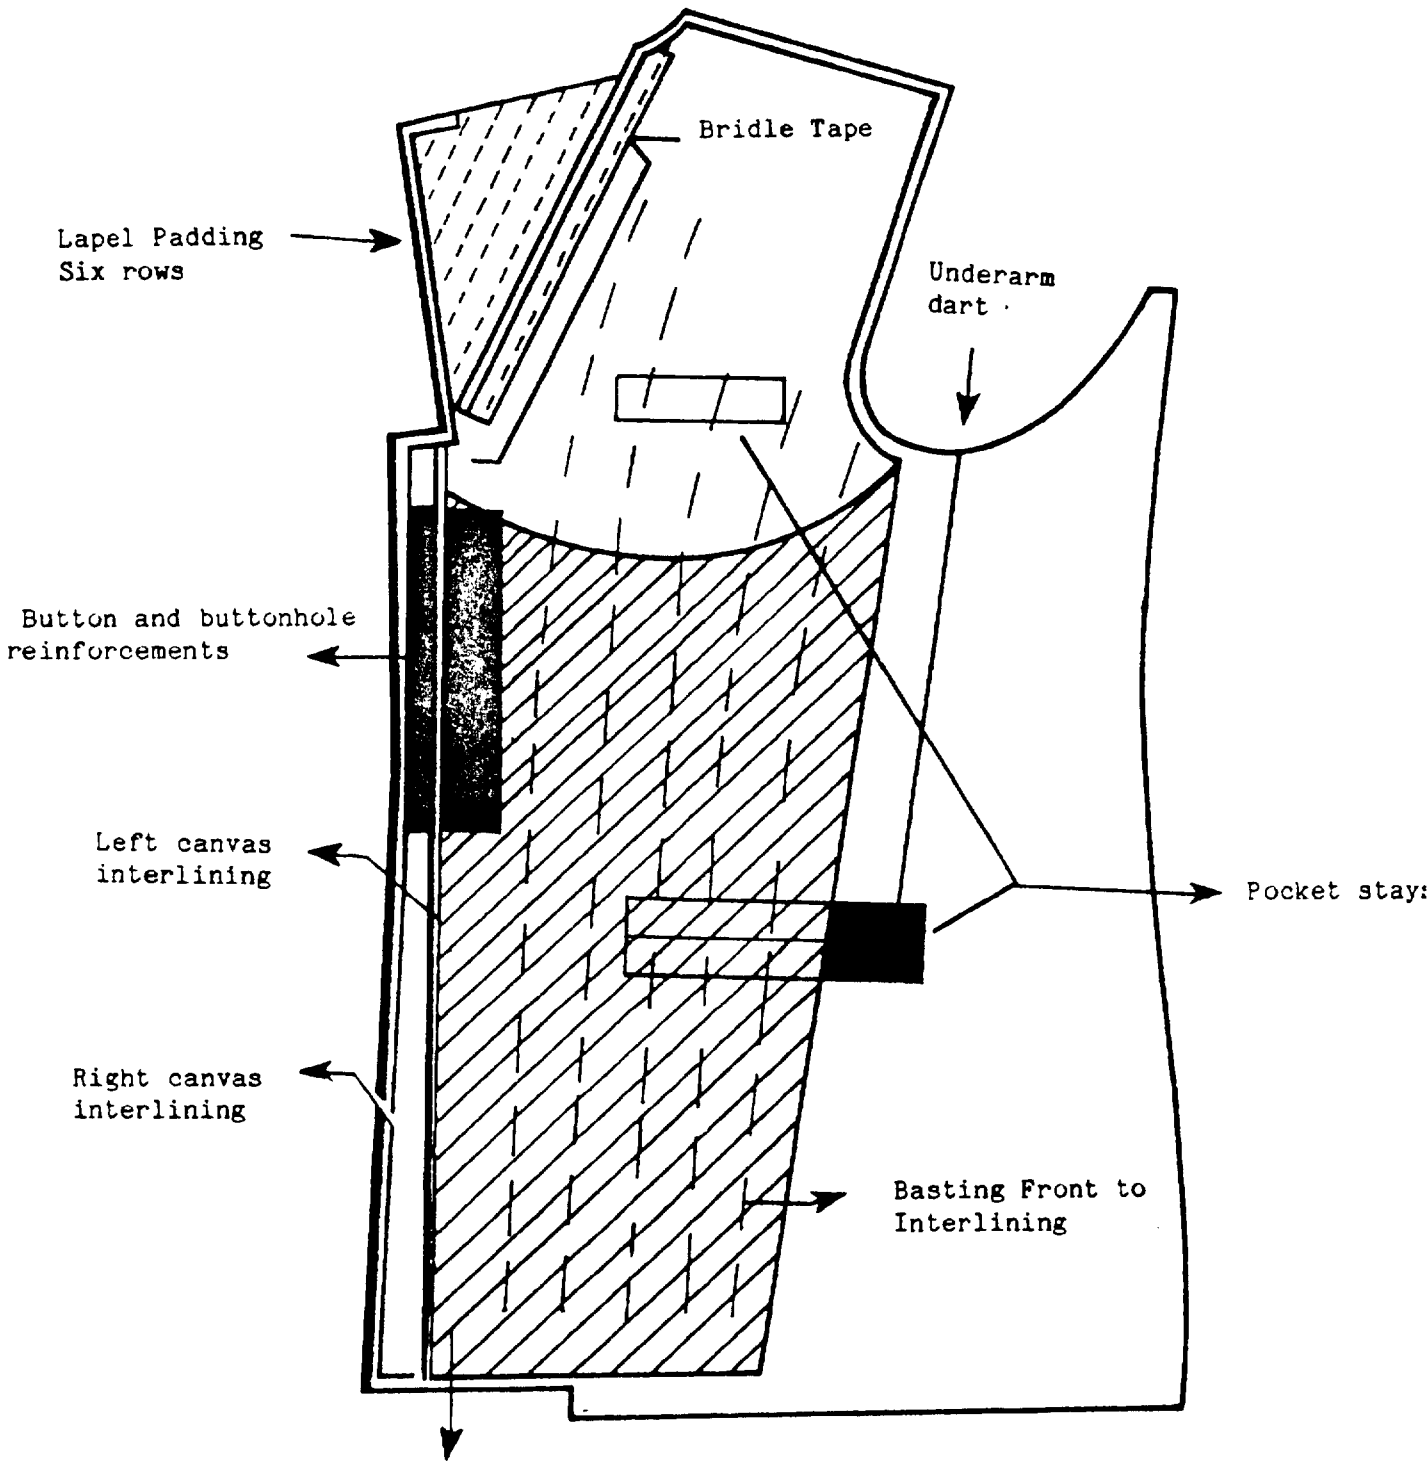


FIGURE 2. Coat front, in-process inspection.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.


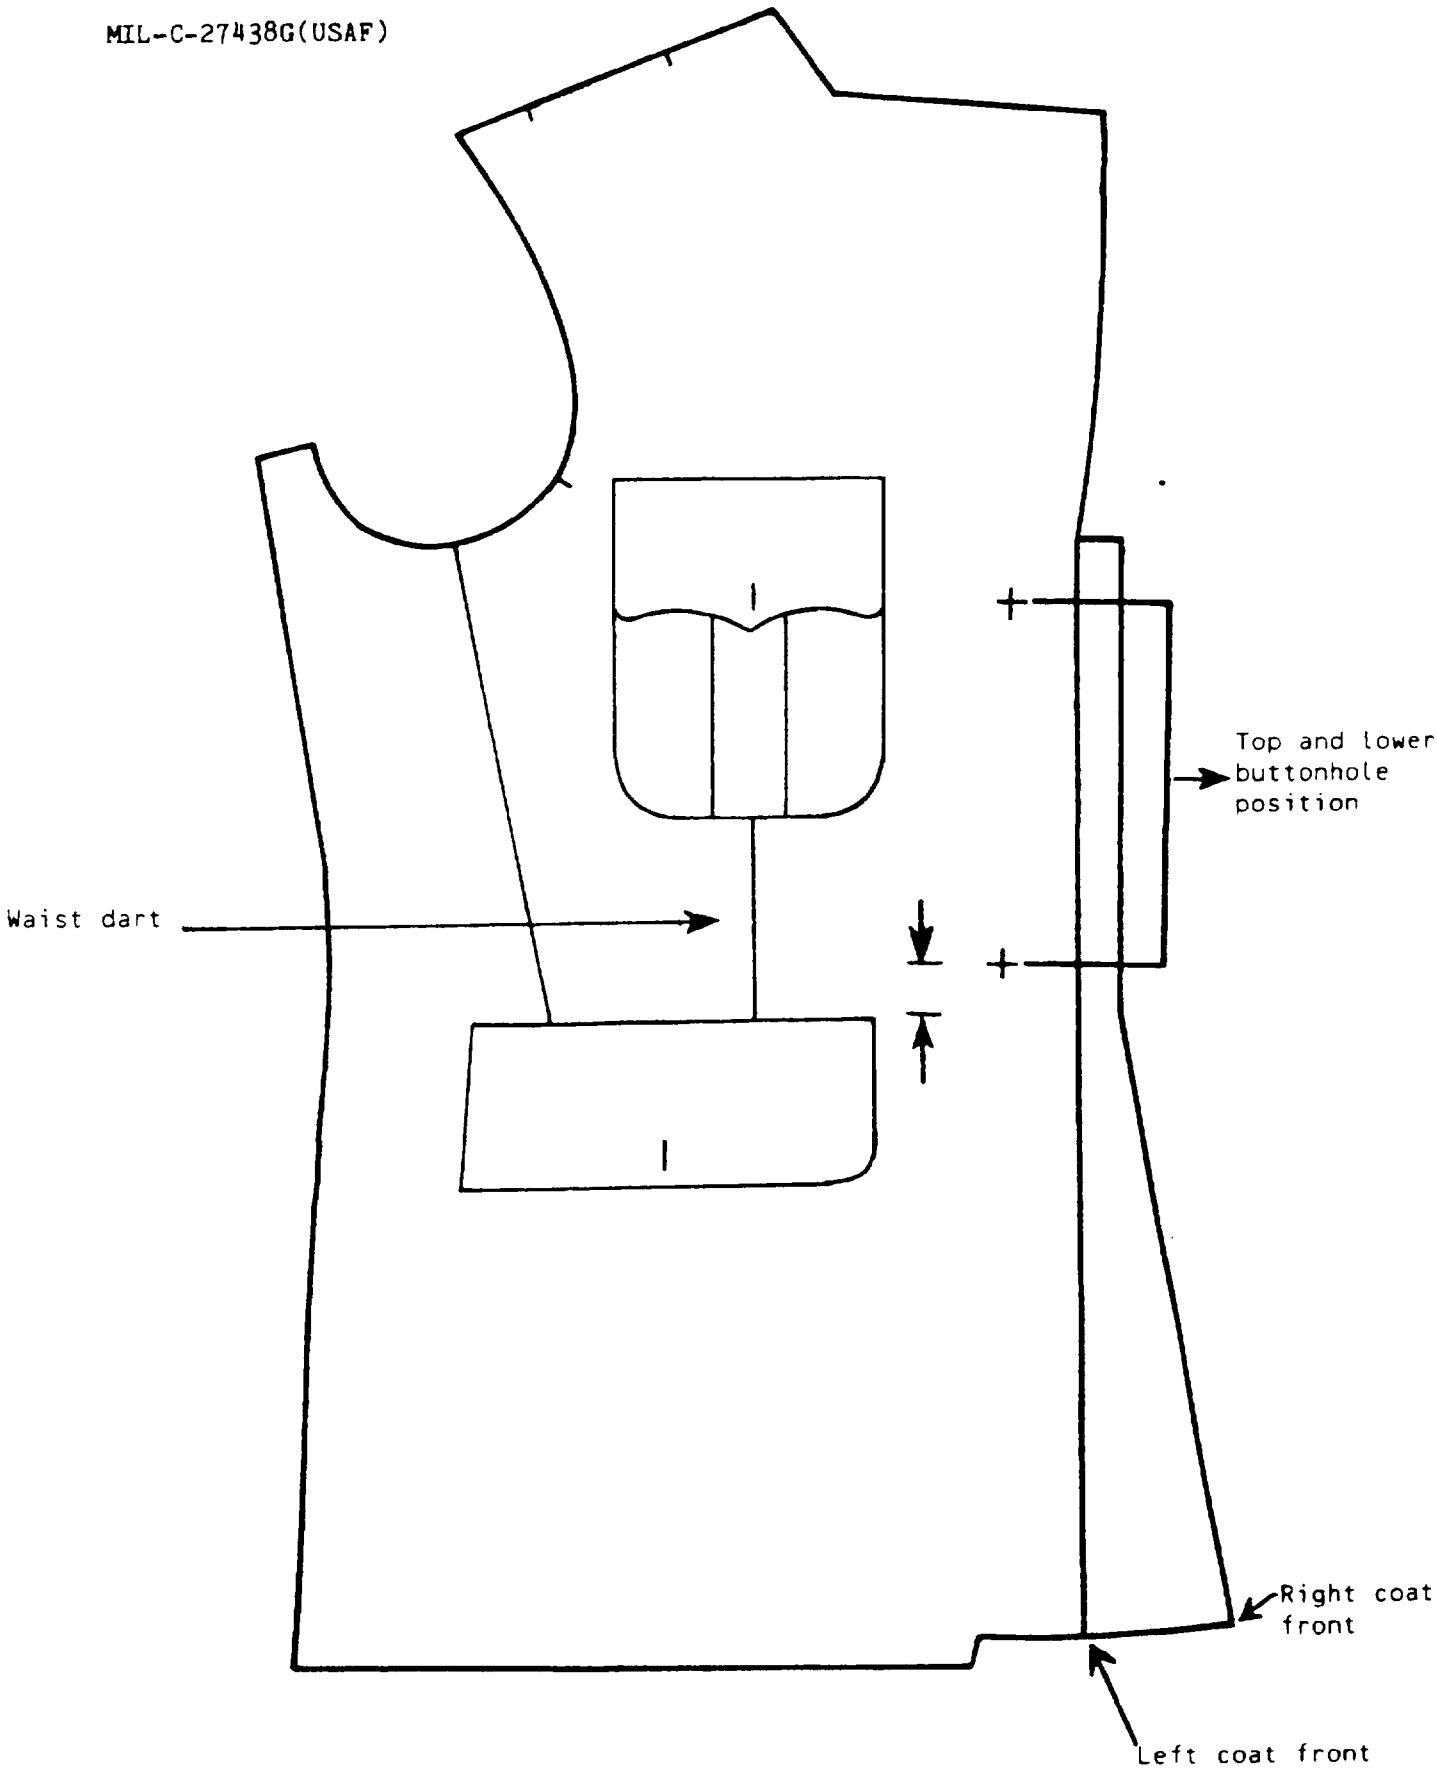



FIGURE 3. Coat front, in-process inspection.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

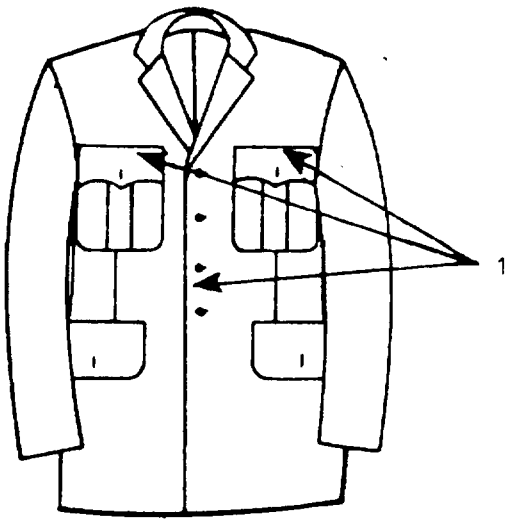

VIEW A


(1) TOP EDGE OF BREAST POCKET FLAPS SHALL BE AT A RIGHT ANGLE WITH THE FRONT EDGE OF COAT WHEN BUTTONED.

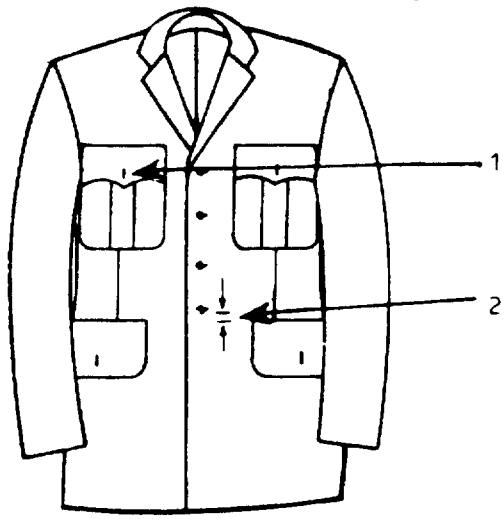

VIEW B

(1) BREAST POCKET FLAP BUTTONS & TOP FRONT BUTTON SHALL BE IN HORIZONTAL ALIGNMENT THRU CENTER OF BUTTONS.


(2) BOTTOM BUTTONHOLE OF FRONT SHALL BE POSITIONED 3/4 TO 1 INCH ABOVE TOP EDGE OF LOWER POCKET FLAPS.

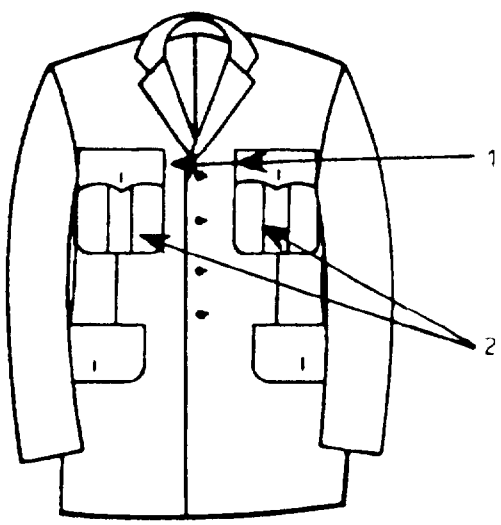

VIEW C

(1) FRONT EDGE OF FLAPS AND PATCH POCKETS SHALL BE PARALLEL TO FRONT EDGE OF COAT WHEN BUTTONED.

(2) PATCH POCKET SHALL BE PARALLEL TO FRONT EDGE OF COAT WHEN BUTTONED.

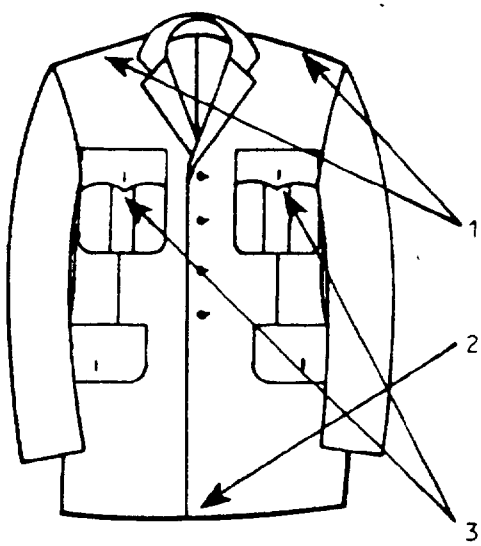

VIEW D

(1) SHOULDER LOOPS SHALL BE FLAT AND SMOOTH WITHOUT DISTORTION.

(2) LEFT FRONT BOTTOM EDGE SHALL BE EVEN WITH RIGHT, AND ROLL INWARD.

(3) POINT OF BREAST POCKET FLAPS SHALL BE CENTERED ON PATCH POCKET PLEAT.

FIGURE 4. Men's service coat.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

4.5.3 End item inspection

4.5.3.1 Individual examination. As a final step in the contractor's production control plan and before formation of a lot, each coat shall be buttoned on a model form and examined for the selected defects listed in MIL-STD-1490. Any coat that contains a selected defect shall not be included in an end item lot.

4.5.3.2 Point count inspection. After the coats have been subjected to the individual examination, sampling and inspection provisions for end item examination of group A coats, dimensional examination, and packaging inspection shall be performed in accordance with MIL-STD-1490. Packaging inspection of hanger packs shall be in accordance with MIL-C-44192. The occurrence of defects during these examinations shall not exceed the applicable point value or defect limit specified.

4.5.3.3 Palletization examination. An examination shall be made to determine that the palletization complies with the section 5 requirements. Defects shall be scored in accordance with the list below. The sample unit shall be one palletized unit load fully packaged. The lot size shall be the number of palletized unit loads in the inspection lot. The inspection level shall be S-1 and the AQL, expressed in terms of defects per hundred units, shall be 6.5.


Examine	Defects
Finished dimensions	Length, width, or height exceeds specified maximum requirements.
Palletization	Pallet pattern not as specified. Interlocking of loads not as specified. Load not bonded with required straps or film as specified.
Weight	Exceeds maximum load limits.
Marking	Omitted; incorrect; illegible; of improper size, location, sequence, or method of application.

5. PACKAGING

5.1 Preservation. Preservation shall be level A or Industrial, as specified (see 6.2).

5.1.1 Level A. Each coat shall be laid back down. A pad of nonbending paperboard conforming to figure 5 shall be inserted into the coat so that it fits snugly into the collar and shoulders. The buttonhole front shall overlap the button front. The sleeves shall be positioned full length so that the ends of the sleeves rest over the pockets. The coat shall then be folded in half by bringing the collar down even with the bottom edge so that the folded coat measures not more than 21 inches by 16 inches.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

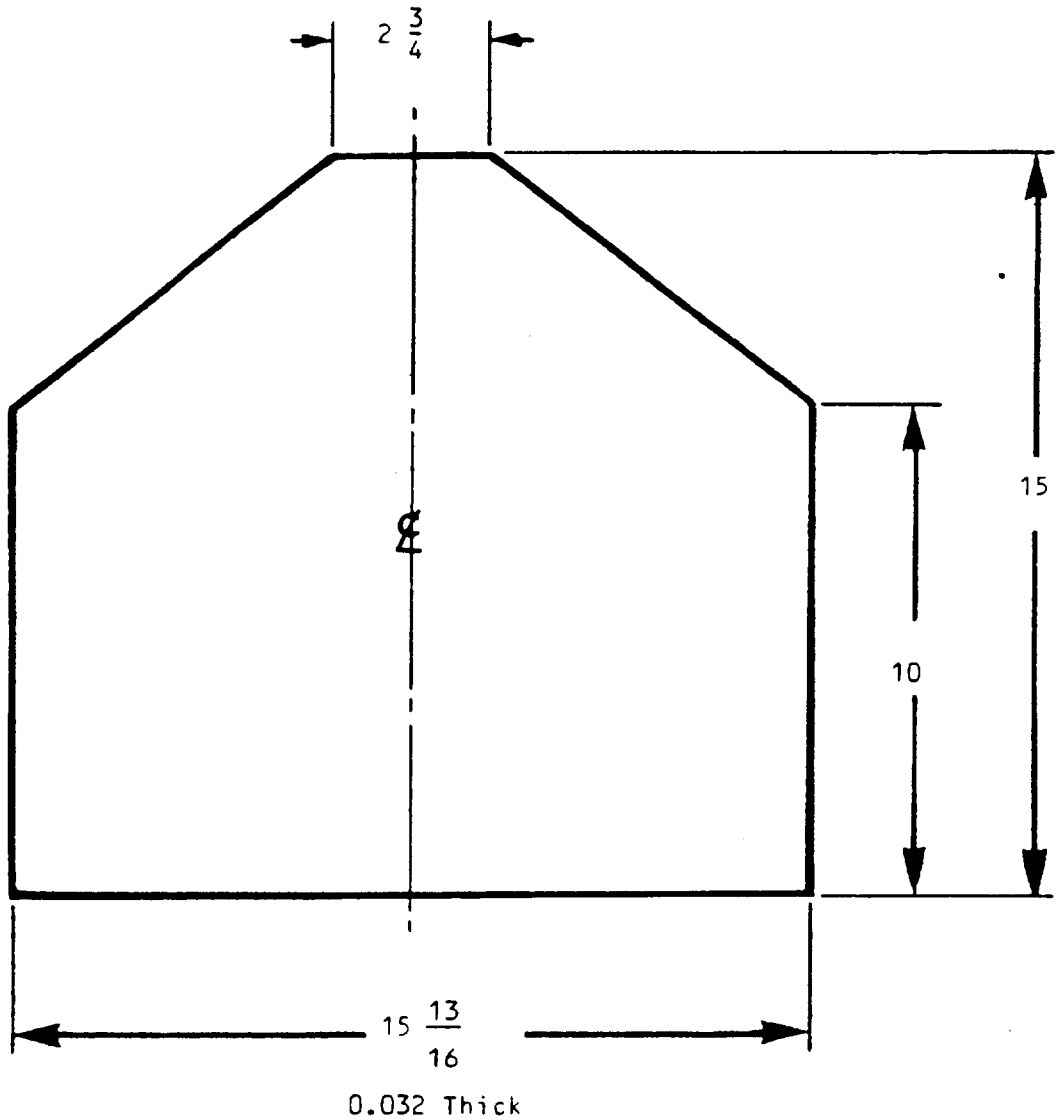

DIMENSIONS ARE IN INCHES

FIGURE 5. Paperboard pad.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

5.1.2 Industrial. Coats shall be preserved in accordance with ASTM D 3951.

5.1.3 Hanger pack. Coats shall be preserved as specified in the appendix of MIL-C-44192.

5.2 Packing. Packing shall be level B or Industrial, as specified (see 6.2).

5.2.1 Level B. Prior to packing, the shipping container shall be provided with an interior case liner made from polyethylene film having a minimum thickness of 0.003 inch. The open top of the liner shall be of sufficient length to completely cover the stack of coats when closed. The liner shall be closed by folding the top down onto the stack and securing with pressure sensitive tape or by means of a mechanical tie prior to closure onto the container. Fifteen coats of one size only (see 5.4.1) shall be packed flat in a box conforming to type CF or SF, class domestic, style RSC-L of PPP-B-636. The minimum bursting strength of the fiberboard shall be 275 psi. All flaps of the box shall be securely sealed with tape or by a combination of metal stitching the bottom flaps and sealing the top flaps with tape. The tape shall be a minimum of 2 inches wide and shall be centered on the joint, extend full length, or within 3/8 inch of full length, and shall adhere over not less than 90 percent of area of contact. The inside box dimensions shall be approximately 23 inches in length, 18 inches in width, and 19 inches in depth. Approximate dimensions are furnished as a guide only. Towards the end of the contract or when there are less than the quantity of the same size required per container (see 5.4.1), mixed sizes may be packed in the same container.

5.2.2 Industrial. Coats, preserved as specified in 5.1, shall be packed in accordance with ASTM D 3951.

5.2.3 Hanger packs. Twelve coats of one size only, preserved as specified in 5.1, shall be packed in a type I container, using a style A or B hanger bar, in accordance with MIL-C-44192. Coat sizes 33 through 37 shall use a 16 inch long hanger and sizes 38 through 50 shall use a 17 inch long hanger.

5.3 Palletization. When specified (see 6.2), coats packed as specified in 5.2, shall be palletized on a 4-way, type I, style 1, 1A, or 1B, size A, class 1 pallet fabricated in accordance with MIL-P-15011 or on a 4-way, type IV, V, or VIII, class 1, size 2, grade A pallet fabricated in accordance with NN-P-71. Each prepared load shall be in accordance with load type I or Ia and bonded with the applicable strap bonding or film bonding means specified in MIL-STD-147. The pallet pattern shall be in accordance with the appendix of MIL-STD-147. Interlocking of loads shall be effected by reversing the pattern of each course. If the container is of a size which does not conform to any of the patterns specified in MIL-STD-147, the pallet pattern used shall be approved by the contracting officer.

5.3.1 Hanger packs. When specified (see 6.2), coats packed as specified in 5.2, shall be palletized in accordance with the appendix of MIL-C-44192 using pallet load pattern number 95.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

5.4 Marking. In addition to any special markings required by the contract or purchase order, the shipping containers or the bagged unit packs and hanger packs as specified (see 6.2) and the palletized unit loads shall be marked in accordance with MIL-STD-129, ASTM D 3951, or the appendix of MIL-C-44192, as applicable.

5.4.1 Labels, mixed sizes. Each shipping container or hanger pack that is packed with mixed sizes shall have securely attached to the end and side, directly under the printing, stenciling or arrows, a white paper label 5 by 4 inches with the words "MIXED NSN'S" plainly stamped or printed thereon and under these words shall be legibly stamped or printed the correct quantity and NSN's contained therein.

6. NOTES

6.1 Intended use. The service coat is intended for use as a component of the dress uniform worn by male personnel of the Department of the Air Force.

6.2 Ordering data

6.2.1 Acquisition requirements. Acquisition documents should specify the following:

a. Title, number, and date of this specification.

b. Class, size and length required (see 1.2).

c. When a first article is required (see 3.2).

d. Selection of applicable levels of preservation and packing (see 5.1 and 5.2).

e. When palletization is required (see 5.3).

f. When bar code markings are required (see 5.4).

6.2.2 First article. When a first article inspection is required, the item should be a first article sample, inspected and approved under the appropriate provisions of FAR 52.209-4. The first article should consist of one coat. The contracting officer should include specific instructions in acquisition documents regarding arrangements for examinations, approval of first article test results and disposition of first article. Invitations for bids should provide that the Government reserves the right to waive the requirement for samples for first article inspection to those bidders offering a product which has been previously acquired or tested by the Government, and that bidders offering such products, who wish to rely on such production or test, must furnish evidence with the bid that prior Government approval is presently appropriate for the pending contract.

6.3 Samples. For access to samples of the end item and shade samples, address the contracting activity issuing the invitation for bids.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

6.4 Subject term (key word) listing.

Coat, men's
Coat, service
Uniform, dress

6.5 Recycled material. It is encouraged that recycled material be used when practical as long as it meets the requirements of this document (see 3.3).

6.6 Changes from previous issue. Asterisks are not used in this revision to identify changes with respect to the previous issue due to the extensiveness of the changes.

Custodian:
Air Force - 11

Review activities:
Air Force - 82, 99
DLA - CT

User activity:
Air Force - 45

Preparing activity:
Air Force - 11

Project No. 8405-F966

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

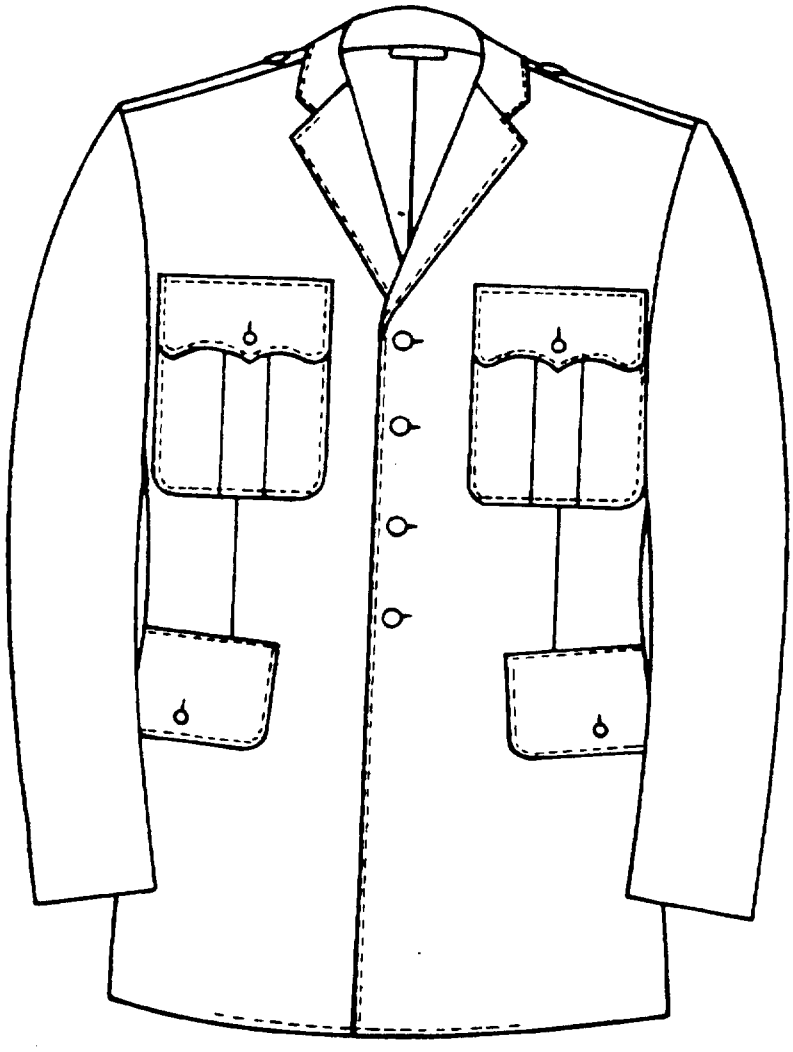


FIGURE 6. Coat, front view.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

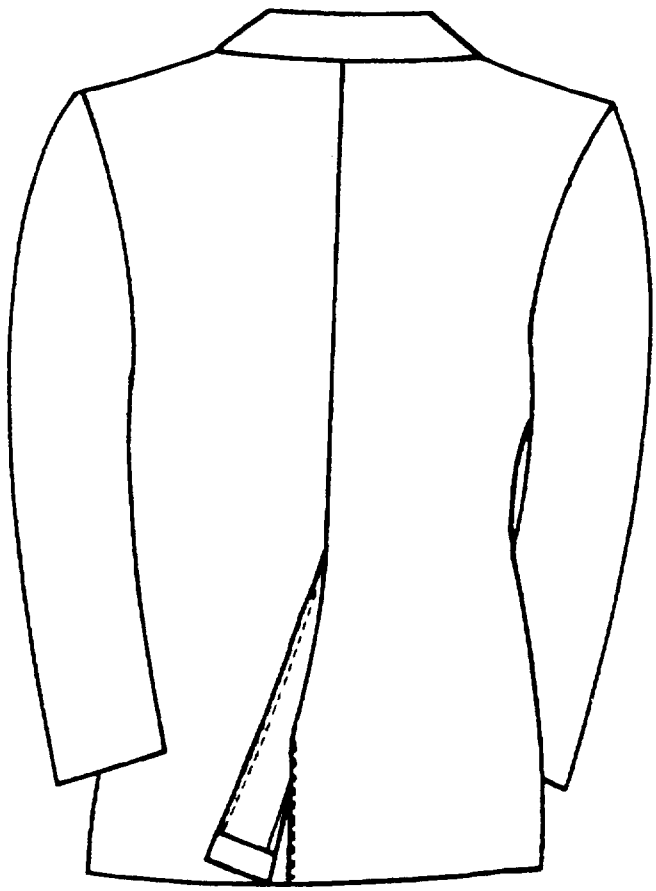


FIGURE 7. Coat, back view.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

(TO DETACH THIS FORM, CUT ALONG THIS LINE.)

STANDARDIZATION DOCUMENT IMPROVEMENT PROPOSAL

(See Instructions – Reverse Side)

1. DOCUMENT NUMBER	2. DOCUMENT TITLE
MIL-C-27438G(USAF)	Coat, Men's, Service

3a. NAME OF SUBMITTING ORGANIZATION	4. TYPE OF ORGANIZATION *(Mark one)*
	☐ VENDOR ☐ USER ☐ MANUFACTURER ☐ OTHER *(Specify)*:
b. ADDRESS *(Street, City, State, ZIP Code)*	

5. PROBLEM AREAS

a. Paragraph Number and Wording:

b. Recommended Wording:

c. Reason/Rationale for Recommendation:

6. REMARKS

7a. NAME OF SUBMITTER *(Last, First, MI)* – Optional	b. WORK TELEPHONE NUMBER *(Include Area Code)* – Optional
c. MAILING ADDRESS *(Street, City, State, ZIP Code)* – Optional	8. DATE OF SUBMISSION *(YYMMDD)*

DD FORM 82 MAR 1426 PREVIOUS EDITION IS OBSOLETE. ASD/ENES OVERPRINT, JAN 85

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T12:01Z
Check the source to verify that this is the current version before use.

INSTRUCTIONS: In a continuing effort to make our standardization documents better, the DoD provides this form for use in submitting comments and suggestions for improvements. All users of military standardization documents are invited to provide suggestions. This form may be detached, folded along the lines indicated, taped along the loose edge *(DO NOT STAPLE)*, and mailed. In block 5, be as specific as possible about particular problem areas such as wording which required interpretation, was too rigid, restrictive, loose, ambiguous, or was incompatible, and give proposed wording changes which would alleviate the problems. Enter in block 6 any remarks not related to a specific paragraph of the document. If block 7 is filled out, an acknowledgement will be mailed to you within 30 days to let you know that your comments were received and are being considered.

NOTE: This form may not be used to request copies of documents, nor to request waivers, deviations, or clarification of specification requirements on current contracts. Comments submitted on this form do not constitute or imply authorization to waive any portion of the referenced document*(s)* or to amend contractual requirements.

(Fold along this line)

(Fold along this line)

DEPARTMENT OF THE AIR FORCE
ASD/ENES
Wright-Patterson AFB OH 45433-6503

NO POSTAGE NECESSARY IF MAILED IN THE UNITED STATES

BUSINESS REPLY MAIL
FIRST CLASS PERMIT NO. 73236 WASHINGTON D. C.
POSTAGE WILL BE PAID BY THE DEPARTMENT OF THE AIR FORCE

ASD/ENES
Wright-Patterson AFB OH 45433-6503