
MILITARY SPECIFICATION

SWITCH, ROTARY, CLOSED CONSTRUCTION, 1 AMPERE AND LOW LEVEL

STYLE SR28

This specification is approved for use by all Departments and Agencies of the Department of Defense.

The complete requirements for acquiring the switch described herein shall consist of this specification and the latest issue of MIL-S-3786.

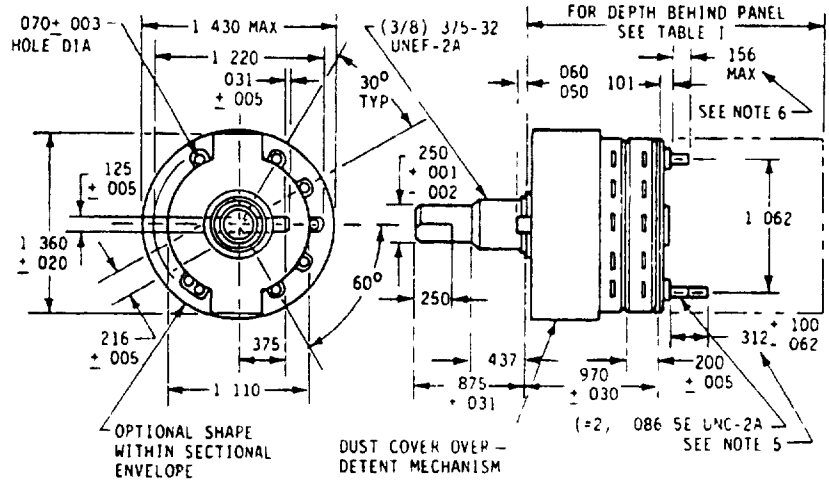

Style SR28-1 Single shaft


INCHES	MM	INCHES	MM	INCHES	MM	INCHES	MM
.001	.02	.031	.79	.101	2.56	.437	11.10
.002	.05	.050	1.27	.125	3.18	.875	22.22
.003	.08	.052	1.32	.156	3 96	.970	24.64
.005	.13	.060	1.52	.157	3.99	1.062	26.97
.010	.25	.062	1.57	.200	5.08	1.110	28.19
.018	.46	.063	1.60	.216	5.49	1.220	30.99
.020	.51	.070	1.78	.250	6.35	1.250	31.75
.030	.76	.093	2.36	.312	7.92	1.360	34.54
		.100	2.54	.375	9.52	1.430	36.32

NOTES:
1. Dimensions are in inches.
2. Metric equivalents are given for general information only and are based upon 1.00 inch = 25.4 mm.
3. Unless otherwise specified, tolerances are ±.015 (.38 mm) for three place decimals, ±3° on angles and fractions ±.015 (.38 mm).
4. Switches having more than 2.750 inch (69.85 mm) length from mounting surface are provided with through bolts extended .250 inch (6.35 mm) minimum beyond the nuts securing the last switch section at the rear of the switch to provide means to support the rear of the switch.
5. Dimensions to provide rear support for switches with eleven or more wafers.
6. Applied to switches having ten wafers or less
7. Odd and even wafers are counted from shaft end (front) of switch.

FIGURE 1. Switch.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:38Z
Check the source to verify that this is the current version before use.

FSC 5930

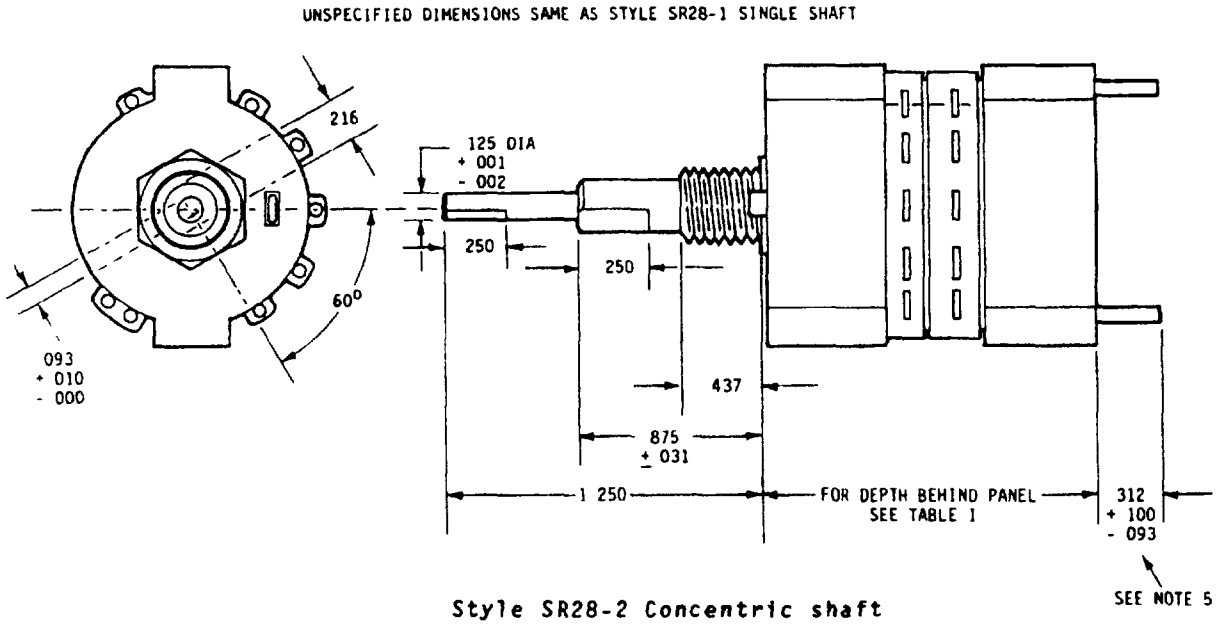


Style SR28-2 Concentric shaft

NOTES:
1. Dimensions are in inches.
2. Metric equivalents are given for general information only and are based upon 1.00 inch = 25.4 mm.
3. Unless otherwise specified, tolerances are ±.015 (.38 mm) for three place decimals, ±3° on angles and fractions ±.015 (.38 mm).
4. Switches having more than 2.750 inch (69.85 mm) length from mounting surface are provided with through bolts extended .219 inch (5.50 mm) minimum beyond the nuts securing the last switch section at the rear of the switch to provide means to support the rear of the switch.
5. Dimensions to provide rear support for switches with eight or more wafers.
6. Bushing keyway .066 (1.67 mm) ±.005 (.13 mm) wide by .036 (.91 mm). ±.003 (.08 mm) deep measured from a .375 (9.53 mm) diameter is provided for sealed shaft and bushing switches (construction symbol F).
7. For sealed shaft and bushing switches (construction symbol F), integral tab shall not be furnished.
8. Odd and even wafers are counted from shaft end (front) of switch.

FIGURE 1. Switch - Continued.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:38Z
Check the source to verify that this is the current version before use.

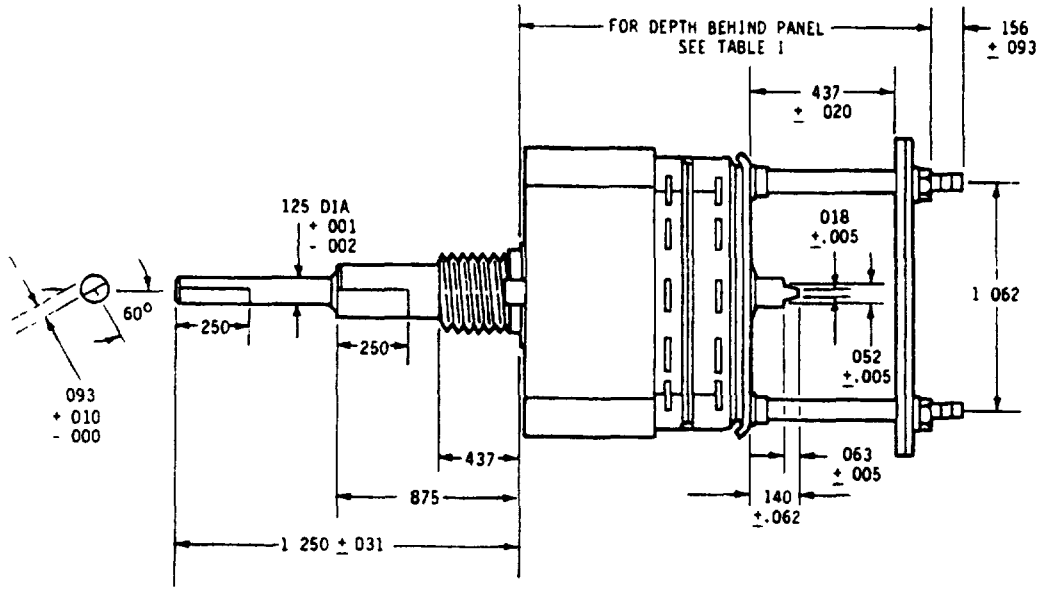

UNSPECIFIED DIMENSIONS SAME AS STYLE SR28-1 SINGLE SHAFT
Style SR28-3 ADD-A-POT

NOTES:
1. Dimensions are in inches.
2. Metric equivalents are given for general information only and are based upon 1.00 inch = 25.4 mm.
3. Unless otherwise specified, tolerances are ±.015 (.38 mm) for three place decimals, ±3° on angles, (non-accumulative).
4. Bushing keyway .066 (1.67 mm) ±.005 (.13 mm) wide by .036 (.91 mm) ±.003 (.08 mm) deep measured from .375 (9.53 mm) diameter is provided for sealed shaft and bushing switches (construction symbol F).
5. For sealed shaft and bushing switches, integral tab shall not be furnished.
6. RESISTOR MOUNTING PLATES: Two resistor mounting plates shall be made of corrosion resistant steel, and shall be of the configuration shown on figure 2. These plates are designed to allow alinement of switch position 1 with full counterclockwise stop of resistor (viewed from shaft end). Only one of the two plates provided with switch is to be used in adapting switch to resistor.
7. VARIABLE RESISTORS: Variable resistors shall be in accordance with the styles covered in MIL-R-94/3, MIL-R-94/5, MIL-R-23285/2, and MIL-S-23285/3 with N (standard type bushings, and SL type operating shafts for MIL-R-94/3, MIL-R-23285/2, and MIL-R-23285/3, and SB type operating shafts for MIL-R-94/5.
8. Switches having more than 2.750 inch (69.85 mm) length from mounting surface are provided with through bolts extended .250 inch (6.35 mm) minimum beyond the nuts securing the last switch section at the rear of the switch to provide means to support the rear of the switch.

FIGURE 1. Switch - Continued.


Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:38Z
Check the source to verify that this is the current version before use.

Decks 1/	Depth behind panel-inches, max.		
	SR28-1	SR28-2	SR28-3 2/
1	.895 (22.73)	-----	1.635 (41.53)
2	1.100 (27.94)	1.605 (40.77)	1.840 (46.74)
3	1.305 (33.15)	1.810 (45.97)	2.045 (51.94)
4	1.510 (38.35)	2.015 (51.18)	2.250 (57.15)
5	1.715 (43.56)	2.220 (56.39)	2.455 (62.36)
6	1.920 (48.77)	2.425 (61.60)	2.660 (67.56)
7	2.125 (53.98)	2.630 (66.80)	2.865 (72.77)
8	2.330 (59.18)	2.835 (72.01)	3.070 (77.98)
9	2.535 (64.39)	3.040 (77.22)	3.275 (83.19)
10	2.740 (69.60)	3.245 (82.42)	3.480 (88.39)
11	2.945 (74.80)	3.450 (87.63)	3.685 (93.60)
12	3.150 (80.01)	3.655 (92.84)	3.890 (98.81)
14	3.660 (90.42)	4.065 (103.25)	-----
16	3.970 (100.84)	4.475 (113.67)	-----
20	4.790 (121.67)	-----	-----
22	5.200 (132.08)	-----	-----
24	5.610 (142.49)	-----	-----

1/ Total number of decks.
2/ As supplied with both mounting plates (figure 1); subtract .042 inch (1.07 mm) from dimension when one plate is removed.

FIGURE 1. Switch - Continued.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:38Z
Check the source to verify that this is the current version before use.

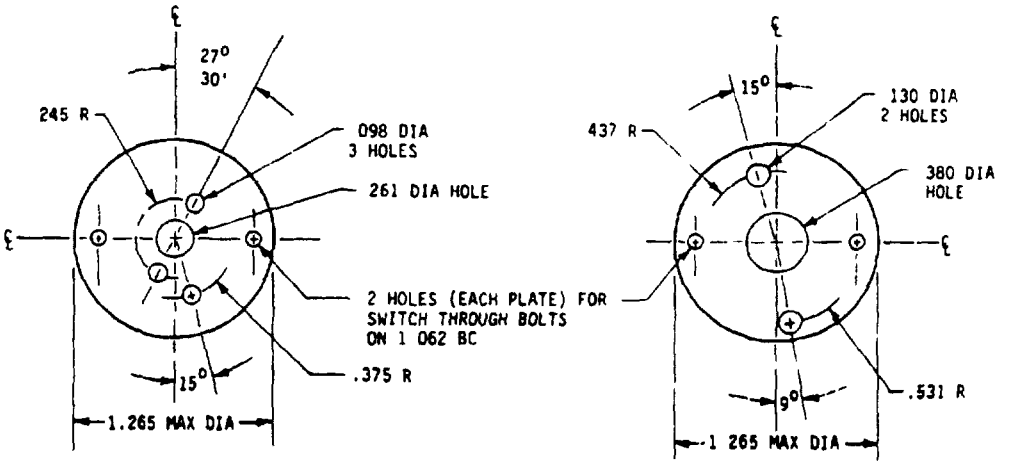

VARIABLE RESISTOR MOUNTING PLATE "A"
FOR USE WITH MIL-R-94/2 (RV5) and
MIL-R-94/3 (RV6) RESISTORS


VARIABLE RESISTOR MOUNTING PLATE "B"
FOR USE WITH MIL-R-94/4 (RV2) and
MIL-R-94/5 (RV4) RESISTORS

INCHES	MM
.098	2.49
.130	3.30
.245	6.22
.261	6.63
.375	9.53
.380	9.65
.437	11.10
.531	13.49
1.062	26.97
1.265	32.13

NOTES:
1. Dimensions are in inches
2. Metric equivalents are given for general information only and are based upon 1.00 inch = 25.4 mm.
3. Unless otherwise specified, tolerances are ±.015 (.38 mm) and ±3° on angles.

FIGURE 2. Resistor mounting plates, for SR28-3.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:38Z
Check the source to verify that this is the current version before use.

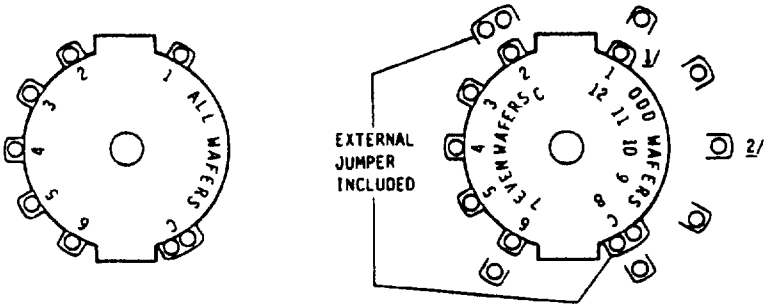

1 DECK PER POLE
2 THRU 6 POSITIONS

2 DECKS PER POLE
7 THRU 12 POSITIONS

1/ Inner diagram shows terminal locations for odd number decks.
2/ Outer diagram shows terminal locations for even number decks.

FIGURE 3. Rear view of terminal configuration with nonturn device at nine o'clock.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:38Z
Check the source to verify that this is the current version before use.

REQUIREMENTS:

Dimensions and configuration: See figures 1 through 3.

Angle of throw: 30 degrees.

Terminals: The terminal tabs shall extend from the section in a plane perpendicular to the axis of the switch.

Construction type: Symbol E. Explosion proof, totally closed construction, without sealed shaft and panel seal.

Symbol F. Same as E with sealed shaft and panel seal.

Insulation material: Symbol P: Plastic

Temperature-life characteristic: Symbol C. 25,000 cycles -65°C to +125°C.

Altitude: Symbol C. Up to 70,000 ft.

Contact resistance:

Initial and after vibration and shock: 10 milliohms, maximum.

After moisture resistance and salt spray: 10 milliohms, maximum.

After initial soak and completion of life test: 15 milliohms, maximum.

During thermal shock: 1 ohm maximum.

Low level circuit is applicable.

Rotational torque: See table I.

Vibration grade: Symbol 3. 10-2,000 Hz.

Shock type: Symbol M (medium impact) and H (high impact).

Dielectric withstanding voltage·

At atmospheric pressure: 1,000 V rms.

At reduced barometric pressure: 450 V rms, except 350 V rms after life.

Life (rotational): See table II.

Low level switching: Applicable; see note 2 of table II.

Special features: Symbol A. Both shaft grounding and EMI/RFI capability, and both high and low level contact load rating.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:38Z
Check the source to verify that this is the current version before use.

TABLE I. Rotational-torque limits. 1/

Total number of switch poles	Temperature	Torque (lb-in)	
		Minimum	Maximum
Less than 4	Room	.5	2.5
	Minimum	.5	3.5
4 through 8	Room	1.2	4.5
	Minimum	1.2	6.0
More than 8	Room	2.5	7.5
	Minimum	2.5	9.0

1/ The rotational torque shall not change more than 40 percent from the initial value after rotational life testing.

TABLE II. Electrical loads.

Environmental condition	Inductive load (2.8 H)		Resistive loads 1/	
	mA	V dc	mA	V dc
Elevated temperature 125°C:				
At atmospheric pressure	100	28	10 max 2/ 750 250	0.030 dc max or peak ac 2/ 28 dc 115 ac
Room temperature (25°C):				
At atmospheric pressure	100 3/	28 3/	1000 4/ 350 4/	28 dc 4/ 115 ac 4/
At reduced barometric pressure 25°C	40	28	250 40	28 dc 115 ac

1/ Each of the loads specified shall be switched by at least one rotor of the switch.

2/ Low level switching is applicable. Low level shall be conducted as one of the electrical loads tested during life (rotational) testing. The test circuit, power source, and monitoring apparatus shall be in accordance with method 311 of MIL-STD-202. Contact resistance shall not exceed 7.5 milliohms. At the beginning of the test and every 5,000 cycles thereafter, the contact resistance shall be measured.

3/ Reference only.

4/ Two sample units shall be tested using the load specified. Testing shall be performed the same as for other loads at atmospheric pressure, except the ambient temperature shall be room temperature.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:38Z
Check the source to verify that this is the current version before use.

Test samples to be used for qualification testing:

Qty	Part no.
5	M3786/28-0055
5	M3786/28-0132
5	M3786/28-1187
5	M3786/28-1264
2	M3786/28-2132
2	M3786/28-3132

Part number: See table IV. The military part number shall consist of the prefix M3786/28- and a dash number consisting of four numbers sequentially assigned. The numbers fall into the general pattern outlined on table III:

TABLE III. Dash number identification.

Dash numbers	Style	Construction
0001-0264	SR28-1	E
1001-1264	SR28-1	F
2001-2264	SR28-2	E
3001-3264	SR28-2	F
4001-4132	SR28-3	E
5001-5132	SR28-3	F

TABLE IV. Switching characteristics and part numbers.

Part no. M3786/28- Construction: E Style SR28-1	Part no. M3786/28- Construction: F Style SR28-1	Angle of throw	No. of poles	No. of decks	Pos. per pole	Switch Charac-teristic N or S
0001	1001	30°	1	1	2	N
0002	1002	"	"	"	3	"
0003	1003	"	"	"	4	"
0004	1004	"	"	"	5	"
0005	1005	"	"	"	6 1/	"
0006	1006	"	"	2	7	"
0007	1007	"	"	"	8	"
0008	1008	"	"	"	9	"
0009	1009	"	"	"	10	"
0010	1010	"	"	"	11	"
0011	1011	"	"	"	12 2/	"
0012	1012	"	2	"	2	"
0013	1013	"	"	"	3	"
0014	1014	"	"	"	4	"
0015	1015	"	"	"	5	"

See footnotes at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:38Z
Check the source to verify that this is the current version before use.

TABLE IV. Switching characteristics and part numbers - Continued.

Part no. M3786/28- Construction: E Style SR28-1	Part no. M3786/28- Construction: F Style SR28-1	Angle of throw	No. of poles	No. of decks	Pos. per pole	Switch Characteristic N or S
0016	1016	30°	2	2	6 1/	N
0017	1017	"	"	4	7	"
0018	1018	"	"	"	8	"
0019	1019	"	"	"	9	"
0020	1020	"	"	"	10	"
0021	1021	"	"	"	11	"
0022	1022	"	"	"	12 2/	"
0023	1023	"	3	3	2	"
0024	1024	"	"	"	3	"
0025	1025	"	"	"	4	"
0026	1026	"	"	"	5	"
0027	1027	"	"	"	6 1/	"
0028	1028	"	"	6	7	"
0029	1029	"	"	"	8	"
0030	1030	"	"	"	9	"
0031	1031	"	"	"	10	"
0032	1032	"	"	"	11	"
0033	1033	"	"	"	12 2/	"
0034	1034	"	4	4	2	"
0035	1035	"	"	"	3	"
0036	1036	"	"	"	4	"
0037	1037	"	"	"	5	"
0038	1038	"	"	"	6 1/	"
0039	1039	"	"	8	7	"
0040	1040	"	"	"	8	"
0041	1041	"	"	"	9	"
0042	1042	"	"	"	10	"
0043	1043	"	"	"	11	"
0044	1044	"	"	"	12 2/	"
0045	1045	"	5	5	2	"
0046	1046	"	"	"	3	"
0047	1047	"	"	"	4	"
0048	1048	"	"	"	5	"
0049	1049	"	"	"	6 1/	"
0050	1050	"	"	10	7	"
0051	1051	"	"	"	8	"
0052	1052	"	"	"	9	"
0053	1053	"	"	"	10	"
0054	1054	"	"	"	11	"
0055	1055	"	"	"	12 2/	"
0056	1056	"	6	6	2	"
0057	1057	"	"	"	3	"
0058	1058	"	"	"	4	"
0059	1059	"	"	"	5	"
0060	1060	"	"	"	6 1/	"
0061	1061	"	"	12	7	"
0062	1062	"	"	"	8	"
0063	1063	"	"	"	9	"

See footnotes at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:38Z
Check the source to verify that this is the current version before use.

TABLE IV. Switching characteristics and part numbers - Continued.

Part no. M3786/28- Construction: E Style SR28-1	Part no. M3786/28- Construction: F Style SR28-1	Angle of throw	No. of poles	No. of decks	Pos. per pole	Switch Characteristic N or S
0064	1064	30°	6	12	10	N
0065	1065	"	"	"	11	"
0066	1066	"	"	"	12 2/	"
0067	1067	"	7	7	2	"
0068	1068	"	"	"	3	"
0069	1069	"	"	"	4	"
0070	1070	"	"	"	5	"
0071	1071	"	"	"	6 1/	"
0072	1072	"	"	14	7	"
0073	1073	"	"	"	8	"
0074	1074	"	"	"	9	"
0075	1075	"	"	"	10	"
0076	1076	"	"	"	11	"
0077	1077	"	"	"	12 2/	"
0078	1078	"	8	8	2	"
0079	1079	"	"	"	3	"
0080	1080	"	"	"	4	"
0081	1081	"	"	"	5	"
0082	1082	"	"	"	6 1/	"
0083	1083	"	"	16	7	"
0084	1084	"	"	"	8	"
0085	1085	"	"	"	9	"
0086	1086	"	"	"	10	"
0087	1087	"	"	"	11	"
0088	1088	"	"	"	12 2/	"
0089	1089	"	9	9	2	"
0090	1090	"	"	"	3	"
0091	1091	"	"	"	4	"
0092	1092	"	"	"	5	"
0093	1093	"	"	"	6 1/	"
0094	1094	"	"	18	7	"
0095	1095	"	"	"	8	"
0096	1096	"	"	"	9	"
0097	1097	"	"	"	10	"
0098	1098	"	"	"	11	"
0099	1099	"	"	"	12 2/	"
0100	1100	"	10	10	2	"
0101	1101	"	"	"	3	"
0102	1102	"	"	"	4	"
0103	1103	"	"	"	5	"
0104	1104	"	"	"	6 1/	"
0105	1105	"	"	20	7	"
0106	1106	"	"	"	8	"
0107	1107	"	"	"	9	"
0108	1108	"	"	"	10	"
0109	1109	"	"	"	11	"
0110	1110	"	"	"	12 2/	"

See footnotes at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:38Z
Check the source to verify that this is the current version before use.

TABLE IV. Switching characteristics and part numbers - Continued.

Part no. M3786/28- Construction: E Style SR28-1	Part no. M3786/28- Construction: F Style SR28-1	Angle of throw	No. of poles	No. of decks	Pos. per pole	Switch Characteristic N or S
0111	1111	30°	11	11	2	N
0112	1112	"	"	"	3	"
0113	1113	"	"	"	4	"
0114	1114	"	"	"	5	"
0115	1115	"	"	"	6 1/	"
0116	1116	"	"	22	7	"
0117	1117	"	"	"	8	"
0118	1118	"	"	"	9	"
0119	1119	"	"	"	10	"
0120	1120	"	"	"	11	"
0121	1121	"	"	"	12 2/	"
0122	1122	"	12	12	2	"
0123	1123	"	"	"	3	"
0124	1124	"	"	"	4	"
0125	1125	"	"	"	5	"
0126	1126	"	"	"	6 1/	"
0127	1127	"	"	24	7	"
0128	1128	"	"	"	8	"
0129	1129	"	"	"	9	"
0130	1130	"	"	"	10	"
0131	1131	"	"	"	11	"
0132	1132	"	"	"	12 2/	"
0133	1133	"	1	1	2	S
0134	1134	"	"	"	3	"
0135	1135	"	"	"	4	"
0136	1136	"	"	"	5	"
0137	1137	"	"	"	6 1/	"
0138	1138	"	"	2	7	"
0139	1139	"	"	"	8	"
0140	1140	"	"	"	9	"
0141	1141	"	"	"	10	"
0142	1142	"	"	"	11	"
0143	1143	"	"	"	12 2/	"
0144	1144	"	2	2	2	"
0145	1145	"	"	"	3	"
0146	1146	"	"	"	4	"
0147	1147	"	"	"	5	"
0148	1148	"	"	"	6 1/	"
0149	1149	"	"	4	7	"
0150	1150	"	"	"	8	"
0151	1151	"	"	"	9	"
0152	1152	"	"	"	10	"
0153	1153	"	"	"	11	"
0154	1154	"	"	"	12 2/	"
0155	1155	"	3	3	2	"
0156	1156	"	"	"	3	"
0157	1157	"	"	"	4	"
0158	1158	"	"	"	5	"
0159	1159	"	"	"	6 1/	"
0160	1160	"	"	6	7	"

See footnotes at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:38Z
Check the source to verify that this is the current version before use.

TABLE IV. Switching characteristics and part numbers - Continued.

Part no. M3786/28- Construction: E Style SR28-1	Part no. M3786/28- Construction: F Style SR28-1	Angle of throw	No. of poles	No. of decks	Pos. per pole	Switch Characteristic N or S
0161	1161	30°	3	6	8	S
0162	1162	"	"	"	9	"
0163	1163	"	"	"	10	"
0164	1164	"	"	"	11	"
0165	1165	"	"	"	12 2/	"
0166	1166	"	4	4	2	"
0167	1167	"	"	"	3	"
0168	1168	"	"	"	4	"
0169	1169	"	"	"	5	"
0170	1170	"	"	"	6 1/	"
0171	1171	"	"	8	7	"
0172	1172	"	"	"	8	"
0173	1173	"	"	"	9	"
0174	1174	"	"	"	10	"
0175	1175	"	"	"	11	"
0176	1176	"	"	"	12 2/	"
0177	1177	"	5	5	2	"
0178	1178	"	"	"	3	"
0179	1179	"	"	"	4	"
0180	1180	"	"	"	5	"
0181	1181	"	"	"	6 1/	"
0182	1182	"	"	10	7	"
0183	1183	"	"	"	8	"
0184	1184	"	"	"	9	"
0185	1185	"	"	"	10	"
0186	1186	"	"	"	11	"
0187	1187	"	"	"	12 2/	"
0188	1188	"	6	6	2	"
0189	1189	"	"	"	3	"
0190	1190	"	"	"	4	"
0191	1191	"	"	"	5	"
0192	1192	"	"	"	6 1/	"
0193	1193	"	"	12	7	"
0194	1194	"	"	"	8	"
0195	1195	"	"	"	9	"
0196	1196	"	"	"	10	"
0197	1197	"	"	"	11	"
0198	1198	"	"	"	12 2/	"
0199	1199	"	7	7	2	"
0200	1200	"	"	"	3	"
0201	1201	"	"	"	4	"
0202	1202	"	"	"	5	"
0203	1203	"	"	"	6 1/	"
0204	1204	"	"	14	7	"
0205	1205	"	"	"	8	"
0206	1206	"	"	"	9	"
0207	1207	"	"	"	10	"
0208	1208	"	"	"	11	"
0209	1209	"	"	"	12 2/	"
0210	1210	"	8	8	2	"

See footnotes at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:38Z
Check the source to verify that this is the current version before use.

TABLE IV. Switching characteristics and part numbers - Continued.

Part no. M3786/28- Construction: E Style SR28-1	Part no. M3786/28- Construction: F Style SR28-1	Angle of throw	No. of poles	No. of decks	Pos. per pole	Switch Characteristic N or S
0211	1211	30°	8	8	3	S
0212	1212	"	"	"	4	"
0213	1213	"	"	"	5	"
0214	1214	"	"	"	6 1/	"
0215	1215	"	"	16	7	"
0216	1216	"	"	"	8	"
0217	1217	"	"	"	9	"
0218	1218	"	"	"	10	"
0219	1219	"	"	"	11	"
0220	1220	"	"	"	12 2/	"
0221	1221	"	9	9	2	"
0222	1222	"	"	"	3	"
0223	1223	"	"	"	4	"
0224	1224	"	"	"	5	"
0225	1225	"	"	"	6 1/	"
0226	1226	"	"	18	7	"
0227	1227	"	"	"	8	"
0228	1228	"	"	"	9	"
0229	1229	"	"	"	10	"
0230	1230	"	"	"	11	"
0231	1231	"	"	"	12 2/	"
0232	1232	"	10	10	2	"
0233	1233	"	"	"	3	"
0234	1234	"	"	"	4	"
0235	1235	"	"	"	5	"
0236	1236	"	"	"	6 1/	"
0237	1237	"	"	20	7	"
0238	1238	"	"	"	8	"
0239	1239	"	"	"	9	"
0240	1240	"	"	"	10	"
0241	1241	"	"	"	11	"
0242	1242	"	"	"	12 2/	"
0243	1243	"	11	11	2	"
0244	1244	"	"	"	3	"
0245	1245	"	"	"	4	"
0246	1246	"	"	"	5	"
0247	1247	"	"	"	6 1/	"
0248	1248	"	"	22	7	"
0249	1249	"	"	"	8	"
0250	1250	"	"	"	9	"
0251	1251	"	"	"	10	"
0252	1252	"	"	"	11	"
0253	1253	"	"	"	12 2/	"
0254	1254	"	12	12	2	"
0255	1255	"	"	"	3	"
0256	1256	"	"	"	4	"
0257	1257	"	"	"	5	"
0258	1258	"	"	"	6 1/	"
0259	1259	"	"	24	7	"

See footnotes at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:38Z
Check the source to verify that this is the current version before use.

TABLE IV. Switching characteristics and part numbers - Continued.

Part no. M3786/28- Construction: E Style SR28-1	Part no. M3786/28- Construction: F Style SR28-1	Angle of throw	No. of poles	No. of decks	Pos. per pole	Switch Charac- teristic N or S
0260	1260	30°	12	24	8	S
0261	1261	"	"	"	9	"
0262	1262	"	"	"	10	"
0263	1263	"	"	"	11	"
0264	1264	"	"	"	12 2/	"

1/ May be used for all 2 to 6 position applications using field adjustable stops that are supplied.

2/ Continuous rotation-may be used for all 7 to 12 position applications using field adjustable stops that are supplied.

TABLE IV. Switching characteristics and part numbers - Continued.

Part no. M3786/28- Construction: E Style SR28-2	Part no. M3786/28- Construction: F Style SR28-2	Angle of throw	No. 1/ of poles	No. 1/ of decks	Pos. per pole	Switch Charac- teristic N or S
2001	3001	30°	1/1	1/1	2	N
2002	3002	"	"	"	3	"
2003	3003	"	"	"	4	"
2004	3004	"	"	"	5	"
2005	3005	"	"	"	6 2/	"
2006	3006	"	"	2/2	7	"
2007	3007	"	"	"	8	"
2008	3008	"	"	"	9	"
2009	3009	"	"	"	10	"
2010	3010	"	"	"	11	"
2011	3011	"	"	"	12 3/	"
2012	3012	"	2/1	2/1	2	"
2013	3013	"	"	"	3	"
2014	3014	"	"	"	4	"
2015	3015	"	"	"	5	"
2016	3016	"	"	"	6 2/	"
2017	3017	"	"	4/2	7	"
2018	3018	"	"	"	8	"
2019	3019	"	"	"	9	"
2020	3020	"	"	"	10	"
2021	3021	"	"	"	11	"
2022	3022	"	"	"	12 3/	"
2023	3023	"	3/1	3/1	2	"
2024	3024	"	"	"	3	"
2025	3025	"	"	"	4	"
2026	3026	"	"	"	5	"
2027	3027	"	"	"	6 2/	"
2028	3028	"	"	6/2	7	"
2029	3029	"	"	"	8	"
2030	3030	"	"	"	9	"

See footnotes at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:38Z
Check the source to verify that this is the current version before use.

TABLE IV. Switching characteristics and part numbers - Continued.

Part no. M3786/28- Construction: E Style SR28-2	Part no. M3786/28- Construction: F Style SR28-2	Angle of throw	No. 1/ of poles	No. 1/ of decks	Pos. per pole	Switch Charac-teristic N or S
2031	3031	30°	3/1	6/2	10	N
2032	3032	"	"	"	11	"
2033	3033	"	"	"	12 3/	"
2034	3034	"	4/1	4/1	2	"
2035	3035	"	"	"	3	"
2036	3036	"	"	"	4	"
2037	3037	"	"	"	5	"
2038	3038	"	"	"	6 2/	"
2039	3039	"	"	8/2	7	"
2040	3040	"	"	"	8	"
2041	3041	"	"	"	9	"
2042	3042	"	"	"	10	"
2043	3043	"	"	"	11	"
2044	3044	"	"	"	12 3/	"
2045	3045	"	5/1	5/1	2	"
2046	3046	"	"	"	3	"
2047	3047	"	"	"	4	"
2048	3048	"	"	"	5	"
2049	3049	"	"	"	6 2/	"
2050	3050	"	"	10/2	7	"
2051	3051	"	"	"	8	"
2052	3052	"	"	"	9	"
2053	3053	"	"	"	10	"
2054	3054	"	"	"	11	"
2055	3055	"	"	"	12 3/	"
2056	3056	"	6/1	6/1	2	"
2057	3057	"	"	"	3	"
2058	3058	"	"	"	4	"
2059	3059	"	"	"	5	"
2060	3060	"	"	"	6 2/	"
2061	3061	"	"	12/2	7	"
2062	3062	"	"	"	8	"
2063	3063	"	"	"	9	"
2064	3064	"	"	"	10	"
2065	3065	"	"	"	11	"
2066	3066	"	"	"	12 3/	"
2067	3067	"	1/2	1/2	2	"
2068	3068	"	"	"	3	"
2069	3069	"	"	"	4	"
2070	3070	"	"	"	5	"
2071	3071	"	"	"	6 2/	"
2072	3072	"	"	2/4	7	"
2073	3073	"	"	"	8	"
2074	3074	"	"	"	9	"
2075	3075	"	"	"	10	"
2076	3076	"	"	"	11	"
2077	3077	"	"	"	12 3/	"
2078	3078	"	2/2	2/2	2	"
2079	3079	"	"	"	3	"
2080	3080	"	"	"	4	"

See footnotes at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:38Z
Check the source to verify that this is the current version before use.

TABLE IV. Switching characteristics and part numbers - Continued.

Part no. M3786/28- Construction: E Style SR28-2	Part no. M3786/28- Construction: F Style SR28-2	Angle of throw	No. 1/ of poles	No. 1/ of decks	Pos. per pole	Switch Characteristic N or S
2081	3081	30°	2/2	2/2	5	N
2082	3082	"	"	"	6 2/	"
2083	3083	"	"	4/4	7	"
2084	3084	"	"	"	8	"
2085	3085	"	"	"	9	"
2086	3086	"	"	"	10	"
2087	3087	"	"	"	11	"
2088	3088	"	"	"	12 3/	"
2089	3089	"	3/2	3/2	2	"
2090	3090	"	"	"	3	"
2091	3091	"	"	"	4	"
2092	3092	"	"	"	5	"
2093	3093	"	"	"	6 2/	"
2094	3094	"	"	6/4	7	"
2095	3095	"	"	"	8	"
2096	3096	"	"	"	9	"
2097	3097	"	"	"	10	"
2098	3098	"	"	"	11	"
2099	3099	"	"	"	12 3/	"
2100	3100	"	4/2	4/2	2	"
2101	3101	"	"	"	3	"
2102	3102	"	"	"	4	"
2103	3103	"	"	"	5	"
2104	3104	"	"	"	6 2/	"
2105	3105	"	"	8/4	7	"
2106	3106	"	"	"	8	"
2107	3107	"	"	"	9	"
2108	3108	"	"	"	10	"
2109	3109	"	"	"	11	"
2110	3110	"	"	"	12 3/	"
2111	3111	"	5/2	5/2	2	"
2112	3112	"	"	"	3	"
2113	3113	"	"	"	4	"
2114	3114	"	"	"	5	"
2115	3115	"	"	"	6 2/	"
2116	3116	"	"	10/4	7	"
2117	3117	"	"	"	8	"
2118	3118	"	"	"	9	"
2119	3119	"	"	"	10	"
2120	3120	"	"	"	11	"
2121	3121	"	"	"	12 3/	"
2122	3122	"	6/2	6/2	2	"
2123	3123	"	"	"	3	"
2124	3124	"	"	"	4	"
2125	3125	"	"	"	5	"
2126	3126	"	"	"	6 2/	"
2127	3127	"	"	12/4	7	"
2128	3128	"	"	"	8	"
2129	3129	"	"	"	9	"
2130	3130	"	"	"	10	"

See footnotes at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:38Z
Check the source to verify that this is the current version before use.

TABLE IV. Switching characteristics and part numbers - Continued.

Part no. M3786/28- Construction: E Style SR28-2	Part no. M3786/28- Construction: F Style SR28-2	Angle of throw	No. 1/ of poles	No. 1/ of decks	Pos. per pole	Switch Characteristic N or S
2131	3131	30°	6/2	12/4	11	N
2132	3132	"	"	"	12 3/	"
2133	3133	"	1/1	1/1	2	S
2134	3134	"	"	"	3	"
2135	3135	"	"	"	4	"
2136	3136	"	"	"	5	"
2137	3137	"	"	"	6 2/	"
2138	3138	"	"	2/2	7	"
2139	3139	"	"	"	8	"
2140	3140	"	"	"	9	"
2141	3141	"	"	"	10	"
2142	3142	"	"	"	11	"
2143	3143	"	"	"	12 3/	"
2144	3144	"	2/1	2/1	2	"
2145	3145	"	"	"	3	"
2146	3146	"	"	"	4	"
2147	3147	"	"	"	5	"
2148	3148	"	"	"	6 2/	"
2149	3149	"	"	4/2	7	"
2150	3150	"	"	"	8	"
2151	3151	"	"	"	9	"
2152	3152	"	"	"	10	"
2153	3153	"	"	"	11	"
2154	3154	"	"	"	12 3/	"
2155	3155	"	3/1	3/1	2	"
2156	3156	"	"	"	3	"
2157	3157	"	"	"	4	"
2158	3158	"	"	"	5	"
2159	3159	"	"	"	6 2/	"
2160	3160	"	"	6/2	7	"
2161	3161	"	"	"	8	"
2162	3162	"	"	"	9	"
2163	3163	"	"	"	10	"
2164	3164	"	"	"	11	"
2165	3165	"	"	"	12 3/	"
2166	3166	"	4/1	4/1	2	"
2167	3167	"	"	"	3	"
2168	3168	"	"	"	4	"
2169	3169	"	"	"	5	"
2170	3170	"	"	"	6 2/	"
2171	3171	"	"	8/2	7	"
2172	3172	"	"	"	8	"
2173	3173	"	"	"	9	"
2174	3174	"	"	"	10	"
2175	3175	"	"	"	11	"
2176	3176	"	"	"	12 3/	"
2177	3177	"	5/1	5/1	2	"
2178	3178	"	"	"	3	"
2179	3179	"	"	"	4	"
2180	3180	"	"	"	5	"

See footnotes at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:38Z
Check the source to verify that this is the current version before use.

TABLE IV. Switching characteristics and part numbers - Continued.

Part no. M3786/28- Construction: E Style SR28-2	Part no. M3786/28- Construction: F Style SR28-2	Angle of throw	No. 1/ of poles	No. 1/ of decks	Pos. per pole	Switch Characteristic N or S
2181	3181	30°	5/1	5/1	6 2/	S
2182	3182	"	"	10/2	7	"
2183	3183	"	"	"	8	"
2184	3184	"	"	"	9	"
2185	3185	"	"	"	10	"
2186	3186	"	"	"	11	"
2187	3187	"	"	"	12 3/	"
2188	3188	"	6/1	6/1	2	"
2189	3189	"	"	"	3	"
2190	3190	"	"	"	4	"
2191	3191	"	"	"	5	"
2192	3192	"	"	"	6 2/	"
2193	3193	"	"	12/2	7	"
2194	3194	"	"	"	8	"
2195	3195	"	"	"	9	"
2196	3196	"	"	"	10	"
2197	3197	"	"	"	11	"
2198	3198	"	"	"	12 3/	"
2199	3199	"	1/2	1/2	2	"
2200	3200	"	"	"	3	"
2201	3201	"	"	"	4	"
2202	3202	"	"	"	5	"
2203	3203	"	"	"	6 2/	"
2204	3204	"	"	2/4	7	"
2205	3205	"	"	"	8	"
2206	3206	"	"	"	9	"
2207	3207	"	"	"	10	"
2208	3208	"	"	"	11	"
2209	3209	"	"	"	12 3/	"
2210	3210	"	2/2	2/2	2	"
2211	3211	"	"	"	3	"
2212	3212	"	"	"	4	"
2213	3213	"	"	"	5	"
2214	3214	"	"	"	6 2/	"
2215	3215	"	"	4/4	7	"
2216	3216	"	"	"	8	"
2217	3217	"	"	"	9	"
2218	3218	"	"	"	10	"
2219	3219	"	"	"	11	"
2220	3220	"	"	"	12 3/	"
2221	3221	"	3/2	3/2	2	"
2222	3222	"	"	"	3	"
2223	3223	"	"	"	4	"
2224	3224	"	"	"	5	"
2225	3225	"	"	"	6 2/	"
2226	3226	"	"	6/4	7	"
2227	3227	"	"	"	8	"
2228	3228	"	"	"	9	"
2229	3229	"	"	"	10	"
2230	3230	"	"	"	11	"

See footnotes at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:38Z
Check the source to verify that this is the current version before use.

TABLE IV. Switching characteristics and part numbers - Continued.

Part no. M3786/28- Construction: E Style SR28-2	Part no. M3786/28- Construction: F Style SR28-2	Angle of throw	No. 1/ of poles	No. 1/ of decks	Pos. per pole	Switch Characteristic N or S
2231	3231	30°	3/2	6/4	12 3/	S
2232	3232	"	4/2	4/2	2	"
2233	3233	"	"	"	3	"
2234	3234	"	"	"	4	"
2235	3235	"	"	"	5	"
2236	3236	"	"	"	6 2/	"
2237	3237	"	"	8/4	7	"
2238	3238	"	"	"	8	"
2239	3239	"	"	"	9	"
2240	3240	"	"	"	10	"
2241	3241	"	"	"	11	"
2242	3242	"	"	"	12 3/	"
2243	3243	"	5/2	5/2	2	"
2244	3244	"	"	"	3	"
2245	3245	"	"	"	4	"
2246	3246	"	"	"	5	"
2247	3247	"	"	"	6 2/	"
2248	3248	"	"	10/4	7	"
2249	3249	"	"	"	8	"
2250	3250	"	"	"	9	"
2251	3251	"	"	5/2	10	"
2252	3252	"	"	"	11	"
2253	3253	"	"	"	12 3/	"
2254	3254	"	6/2	6/2	2	"
2255	3255	"	"	"	3	"
2256	3256	"	"	"	4	"
2257	3257	"	"	"	5	"
2258	3258	"	"	"	6 2/	"
2259	3259	"	"	12/4	7	"
2260	3260	"	"	"	8	"
2261	3261	"	"	"	9	"
2262	3262	"	"	"	10	"
2263	3263	"	"	"	11	"
2264	3264	"	"	"	12 3/	"

1/ First number is for front switch (.250 shaft), second number is for rear switch (.125 shaft).

2/ May be used for all 2 to 6 position applications using field adjustable stops that are supplied.

3/ Continuous rotation may be used for all 7 to 12 position applications using field adjustable stops that are supplied.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:38Z
Check the source to verify that this is the current version before use.

TABLE IV. Switching characteristics and part numbers - Continued.

Part no. M3786/28- Construction: E Style SR28-3	Part no. M3786/28- Construction: F Style SR28-3	Angle of throw	No. of poles	No. of decks	Pos. per pole	Switch Charac- teristic N or S
4001	5001	30°	1	1	2	N
4002	5002	"	"	"	3	"
4003	5003	"	"	"	4	"
4004	5004	"	"	"	5	"
4005	5005	"	"	"	6 1/	"
4006	5006	"	"	2	7	"
4007	5007	"	"	"	8	"
4008	5008	"	"	"	9	"
4009	5009	"	"	"	10	"
4010	5010	"	"	"	11	"
4011	5011	"	"	"	12 2/	"
4012	5012	"	2	"	2	"
4013	5013	"	"	"	3	"
4014	5014	"	"	"	4	"
4015	5015	"	"	"	5	"
4016	5016	"	"	"	6 1/	"
4017	5017	"	"	4	7	"
4018	5018	"	"	"	8	"
4019	5019	"	"	"	9	"
4020	5020	"	"	"	10	"
4021	5021	"	"	"	11	"
4022	5022	"	"	"	12 2/	"
4023	5023	"	3	3	2	"
4024	5024	"	"	"	3	"
4025	5025	"	"	"	4	"
4026	5026	"	"	"	5	"
4027	5027	"	"	"	6 1/	"
4028	5028	"	"	6	7	"
4029	5029	"	"	"	8	"
4030	5030	"	"	"	9	"
4031	5031	"	"	"	10	"
4032	5032	"	"	"	11	"
4033	5033	"	"	"	12 2/	"
4034	5034	"	4	4	2	"
4035	5035	"	"	"	3	"
4036	5036	"	"	"	4	"
4037	5037	"	"	"	5	"
4038	5038	"	"	"	6 1/	"
4039	5039	"	"	8	7	"
4040	5040	"	"	"	8	"
4041	5041	"	"	"	9	"
4042	5042	"	"	"	10	"
4043	5043	"	"	"	11	"
4044	5044	"	"	"	12 2/	"
4045	5045	"	5	5	2	"
4046	5046	"	"	"	3	"
4047	5047	"	"	"	4	"
4048	5048	"	"	"	5	"
4049	5049	"	"	"	6 1/	"
4050	5050	"	"	10	7	"

See footnotes at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:38Z
Check the source to verify that this is the current version before use.

TABLE IV. Switching characteristics and part numbers - Continued.

Part no. M3786/28- Construction: E Style SR28-3	Part no. M3786/28- Construction: F Style SR28-3	Angle of throw	No. of poles	No. of decks	Pos. per pole	Switch Charac- teristic N or S
4051	5051	30°	5	10	8	N
4052	5052	"	"	"	9	"
4053	5053	"	"	"	10	"
4054	5054	"	"	"	11	"
4055	5055	"	"	"	12 2/	"
4056	5056	"	6	6	2	"
4057	5057	"	"	"	3	"
4058	5058	"	"	"	4	"
4059	5059	"	"	"	5	"
4060	5060	"	"	"	6 1/	"
4061	5061	"	"	12	7	"
4062	5062	"	"	"	8	"
4063	5063	"	"	"	9	"
4064	5064	"	"	"	10	"
4065	5065	"	"	"	11	"
4066	5066	"	"	"	12 2/	"
4067	5067	"	1	1	2	S
4068	5068	"	"	"	3	"
4069	5069	"	"	"	4	"
4070	5070	"	"	"	5	"
4071	5071	"	"	"	6 1/	"
4072	5072	"	"	2	7	"
4073	5073	"	"	"	8	"
4074	5074	"	"	"	9	"
4075	5075	"	"	"	10	"
4076	5076	"	"	"	11	"
4077	5077	"	"	"	12 2/	"
4078	5078	"	2	2	2	"
4079	5079	"	"	"	3	"
4080	5080	"	"	"	4	"
4081	5081	"	"	"	5	"
4082	5082	"	"	"	6 1/	"
4083	5083	"	"	4	7	"
4084	5084	"	"	"	8	"
4085	5085	"	"	"	9	"
4086	5086	"	"	"	10	"
4087	5087	"	"	"	11	"
4088	5088	"	"	"	12 2/	"
4089	5089	"	3	3	2	"
4090	5090	"	"	"	3	"
4091	5091	"	"	"	4	"
4092	5092	"	"	"	5	"
4093	5093	"	"	"	6 1/	"
4094	5094	"	"	6	7	"
4095	5095	"	"	"	8	"
4096	5096	"	"	"	9	"
4097	5097	"	"	"	10	"
4098	5098	"	"	"	11	"
4099	5099	"	"	"	12 2/	"
4100	5100	"	4	4	2	"

See footnotes at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:38Z
Check the source to verify that this is the current version before use.

TABLE IV. Switching characteristics and part numbers - Continued.

Part no. M3786/28- Construction: E Style SR28-3	Part no. M3786/28- Construction: F Style SR28-3	Angle of throw	No. of poles	No. of decks	Pos. per pole	Switch Charac- teristic N or S
4101	5101	30°	4	4	3	S
4102	5102	"	"	"	4	"
4103	5103	"	"	"	5	"
4104	5104	"	"	"	6 1/	"
4105	5105	"	"	8	7	"
4106	5106	"	"	"	8	"
4107	5107	"	"	"	9	"
4108	5108	"	"	"	10	"
4109	5109	"	"	"	11	"
4110	5110	"	"	"	12 2/	"
4111	5111	"	5	5	2	"
4112	5112	"	"	"	3	"
4113	5113	"	"	"	4	"
4114	5114	"	"	"	5	"
4115	5115	"	"	"	6 1/	"
4116	5116	"	"	10	7	"
4117	5117	"	"	"	8	"
4118	5118	"	"	"	9	"
4119	5119	"	"	"	10	"
4120	5120	"	"	"	11	"
4121	5121	"	"	"	12 2/	"
4122	5122	"	6	6	2	"
4123	5123	"	"	"	3	"
4124	5124	"	"	"	4	"
4125	5125	"	"	"	5	"
4126	5126	"	"	"	6 1/	"
4127	5127	"	"	12	7	"
4128	5128	"	"	"	8	"
4129	5129	"	"	"	9	"
4130	5130	"	"	"	10	"
4131	5131	"	"	"	11	"
4132	5132	"	"	"	12 2/	"

1/ May be used for all 2 to 6 position applications using field adjustable stops that are supplied.

2/ Continuous rotation may be used for all 7 to 12 position applications using field adjustable stops that are supplied.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:38Z
Check the source to verify that this is the current version before use.

Revision letters are not used to denote changes due to the extensiveness of the changes.

Custodians:
Army - ER
Navy - EC
Air Force - 85

Review activities:
Army - MI, AR
Navy - AS, OS
Air Force - 11, 17
DLA - ES

User activities:
Army - ME, AT, SM
Navy - MC, CG
Air Force - 19

Agent:
DLA - ES

Preparing activity:
Air Force - 85

(Project 5930-1214-1)

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:38Z
Check the source to verify that this is the current version before use.

STANDARDIZATION DOCUMENT IMPROVEMENT PROPOSAL

INSTRUCTIONS. This form is provided to solicit beneficial comments which may improve this document and enhance its use. DoD contractors, government activities, manufacturers, vendors, or other prospective users of the document are invited to submit comments to the government. Fold on lines on reverse side, staple in corner, and send to preparing activity. Attach any pertinent data which may be of use in improving this document. If there are additional papers, attach to form and place both in an envelope addressed to preparing activity. A response will be provided to the submitter, when name and address is provided, within 30 days indicating that the 1426 was received and when any appropriate action on it will be completed.
NOTE. This form shall not be used to submit requests for waivers, deviations or clarification of specification requirements on current contracts. Comments submitted on this form do not constitute or imply authorization to waive any portion of the referenced document(s) or to amend contractual requirements.

DOCUMENT IDENTIFIER *(Number)* AND TITLE
MIL-S-3786/28D - Switch, Rotary, Closed Construction, 1 Ampere & Low Level Style SR28

NAME OF ORGANIZATION AND ADDRESS OF SUBMITTER

☐ VENDOR ☐ USER ☐ MANUFACTURER

1. ☐ HAS ANY PART OF THE DOCUMENT CREATED PROBLEMS OR REQUIRED INTERPRETATION IN PROCUREMENT USE? ☐ IS ANY PART OF IT TOO RIGID, RESTRICTIVE, LOOSE OR AMBIGUOUS? PLEASE EXPLAIN BELOW.

A. GIVE PARAGRAPH NUMBER AND WORDING

B. RECOMMENDED WORDING CHANGE

C. REASON FOR RECOMMENDED CHANGE(S)

2. REMARKS

SUBMITTED BY *(Printed or typed name and address — Optional)*	TELEPHONE NO.
	DATE

DD FORM 1 OCT 78 1426 PREVIOUS EDITION WILL BE USED.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:38Z
Check the source to verify that this is the current version before use.

FOLD

DEPARTMENT OF THE AIR FORCE

OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE $300

NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

BUSINESS REPLY MAIL

FIRST CLASS PERMIT NO. 73236 WASHINGTON D. C

POSTAGE WILL BE PAID BY THE DEPARTMENT OF THE AIR FORCE

AFALD/PTS Standardization
Gentile AFS OH 45444

FOLD

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:38Z
Check the source to verify that this is the current version before use.