BY ORDER OF THE COMMANDER
RAF MILDENHALL (USAFE)

RAF MILDENHALL INSTRUCTION 13-204

1 OCTOBER 2024

Nuclear, Space, Missile, Command and Control

AIRFIELD OPERATIONS INSTRUCTION

COMPLIANCE WITH THIS PUBLICATION IS MANDATORY

ACCESSIBILITY: This publication is available for downloading or ordering on the e-Publishing website at www.e-Publishing.af.mil.

RELEASABILITY: There are no releasability restrictions on this publication.

OPR:	100 OSS/OSA	Certified by: 100 OG/CC Colonel Thomas A. Hutton
Supersedes:	MILDI 13-204, 08 March 2021	Pages: 88

This instruction implements AFPD 13-2, *Air Traffic Control, Airspace and Range Management,* prescribing procedures for air traffic management, control and operation of aircraft at RAF (Royal Air Force) Mildenhall, England. The procedures contained herein are supplemental to AFMAN 13-204v1, *Management of Airfield Operations*, AFMAN 13-204v2, *Airfield Management*, AFMAN 13-204v3, *Air Traffic Control*, AFMAN 13-204v4, *Radar, Airfield and Weather Systems*, AFMAN 11-202V3, *Flight Operations*, Federal Aviation Administration (FAA) Joint Order (JO) 7110.65, *Air Traffic Control*, UK Civil Aviation Pamphlet (CAP) 774, UK Flight Information Services, Regulatory Articles – Manual of Air Traffic Management, MAA 3000, *Military Flying Regulations, Royal Air Force Military Radar and Military Air Traffic Operation (MATO) Procedures and Patterns for East Anglia*. It is applicable to all organizations, permanent or transient, operating aircraft at RAF Mildenhall (RAFM). Deviation is authorized only in emergencies where adherence would jeopardize safe aircraft operations. Ensure all records generated as a result of processes prescribed in this publication adhere to Air Force Instruction (AFI) 33-322, *Records Management and Information Governance Program*, and are disposed in accordance with the Air Force Records Disposition, which is located in the Air Force Records Information Management System. Refer recommendations for improvements and/or changes to 100 OSS/OSA, RAFM.

SUMMARY OF CHANGES

This document is substantially revised and must be completely reviewed. This document has been updated to reflect changes in USAF procedures and policies. It further removes helicopter/tilt-rotor Reduced Visibility Procedures (RVP).

Chapter 1 7

GENERAL INFORMATION 7

1.1 Command and Control 7

1.2 Authority for Imposing Airfield Restrictions 7

Chapter 2 9

AIRFIELD INFORMATION 9

2.1 Airfield Facilities Operating Hours 9

2.2 Airfield Closure/Opening Procedures Outside of Published Times 9

2.3 Runways 9

2.4 Opening, Closing, Suspending and Resuming Runway Operations 10

2.5 Runway Selection Procedures 11

2.6 Runway Surface Condition (RSC) and Runway Condition Reading (RCR) 11

2.7 Taxiways 11

2.8 Controlled Movement Area (CMA) 12

2.9 Aircraft Parking Plan/Restrictions and Hangar Allocation 13

2.10 Permanently Closed/Unusable Portions of the Airfield/Hardstands 16

2.11 Restricted-Use (High-Risk) Hardstands 16

2.12 Rotary Wing/Tilt Rotor Helicopter Operating Areas 17

2.13 Air Traffic Control Facilities 17

2.14 Land Mobile Radios (LMR) 17

2.15 Radio Frequencies See Attachment 3. Radio Frequencies 18

2.16 Automatic Terminal Information Service (ATIS) 18

2.17 Radar, Airfield, Weather Systems (RAWS) 18

2.18 Airfield Lighting System and Operations 18

2.19 Perimeter Road Traffic Lights 20

2.20 Aircraft Arresting Systems (AAS) 21

2.21 Airfield Restricted Areas 21

2.22 Airfield Photography in Restricted Areas 21

2.23 Smoking on the Airfield 22
2.24 Wear of Hats and Badges on the Airfield 22
2.25 Airfield Quiet Hours 22
2.26 Base Quiet Hours for Unit or Host-Nation Functions 23
2.27 Noise Abatement Procedures 24
2.28 Airfield Pavement 24
2.29 Airfield Work Requests and Obstruction Management 24
2.30 Non-Standard Airfield Markings 26

Chapter 3 ..... **27**

FLYING AREAS **27**
3.1 Local Flying Area/Designation of Airspace 27
3.2 VFR Training Areas 27
3.3 Rotary wing/Tilt-rotor Helicopter Operations 27

Chapter 4 ..... **29**

FLIGHT PLANNING PROCEDURES **29**
4.1 Flight Planning procedures 29

Chapter 5 ..... **31**

GROUND OPERATIONS **31**
5.1 Aircraft Taxiing Requirements/Routes/Restrictions 31
5.2 Forward Area Refueling Point (FARP) and Hot Refueling (HR) 32
5.3 Aircraft Engine Runs 33
5.4 Protection of Precision Approach Critical Areas 35
5.5 Arm/De-Arm Procedures 36
5.6 Transient Alert Services 36
5.7 Aircraft Towing 36
5.8 Airfield Inspections and Checks 37
5.9 Airfield Sweeper Operations 37
5.10 Airfield Mowing Operations 38
5.11 Airfield Snow Removal Operations 38
5.12 Engines Running Crew Change (ERCC) 38
5.13 Engine Running On/Off-Loads (EROs) 38
5.14 Combat off-loads 38
5.15 Radiation Hazards 39

5.16 Mattress Landing Operations 39

Chapter 6 ..... **40**

DEPARTURE PROCEDURES **40**

6.1. Standard Climb Out Procedures 40

6.2. NUGTU Departure Procedure 40

6.3. VFR Departure Procedures 40

6.4. Intersection Departures 40

6.5 Local Climb Out Procedures 41

6.6. Formation Departures 41

6.7. Silent Launch Procedures 41

Chapter 7 ..... **43**

ARRIVAL PROCEDURES **43**

7.1. VFR Traffic Patterns 43

7.2. VFR Weather Minima 43

7.3. VFR Pattern Restrictions (See Attachment 5) 43

7.4. IFR Traffic Patterns 44

7.5. Reduced Same Runway Separation (RSRS) 44

7.6. Breakout Procedures 45

7.7. Go-Around/Missed Approach Procedures 45

7.8. Altitude Restricted Low Approaches 45

7.9. Random Steep Recovery 46

7.10. Random Shallow Beam Procedures 46

7.11. Self-Contained Approaches (SCA) 46

7.12. Landing Zone Procedures 47

7.13. Surveillance (ASR) and Precision Approach Radar (PAR) 47

Chapter 8 ..... **48**

EMERGENCY PROCEDURES **48**

8.1. Primary Crash Alarm System (PCAS) 48

8.2. Secondary Crash Net (SCN) 49

8.3. On/Off-Base Crash Notification Procedures 50

8.4. In-Flight Emergency (IFE) Coordination 50

8.5. Ground Emergency (GE) Coordination 50

8.6. RAFM Emergency Frequency (UHF 307.250) 50

8.7. Autorotation Procedures 51
8.8. Hot Brakes Procedures 51
8.9. Hot Gun Procedures 51
8.10. Hung Flares/Ordnance Procedures 52
8.11. Live Ordnance Jettison Procedures 52
8.12. Airborne Fuel Dumping Procedures 52
8.13. Aircraft Arresting System (AAS) Procedures 52
8.14. Jettison of External Stores 54
8.15. Predetermined Bailout Procedures 54
8.16. Refueling Hose Jettison Procedures 54
8.17. Hydrazine Procedures 54
8.18. Simulated Flameout Procedures 55
8.19. Unlawful Seizure of Aircraft/Hijack Procedures 55
8.20. Lost Communication Procedures 55
8.21. Emergency Locator Transmitter (ELT) Procedures 56
8.22. Reduced Fire Fighting Capabilities 56
8.23. Evacuation of Tower/Airfield Management Operations (AM Ops) Facilities 56

Chapter 9 ..... **58**

MISCELLANEOUS PROCEDURES **58**
9.1 Airfield Operations Board (AOB) Miscellaneous 58
9.2 Notice to Air Missions (NOTAM) 59
9.3 Flight Information Publication (FLIP) 59
9.4 Waivers to Airfield/Airspace Criteria 59
9.5 Prior Permission Required (PPR) 59
9.6 Bird Aircraft Strike Hazard (BASH) Program 60
9.7 Aircraft Priorities 61
9.8 Air Evacuation (AIREVAC) Notification Procedures 61
9.9 Distinguished Visitors (DV) 61
9.10 Weather Dissemination and Coordination 62
9.11 Hazardous Cargo/Explosive Laden Aircraft 63
9.12 Unmanned Aerial System (UAS)/drone/laser procedures 63
9.13 Opposite Direction Operations (ODO) 63
9.14 Airfield Blackout/Night Vision Device (NVD) Operations 64

9.15 Paradrop/Parachute Drop Zone (DZ) Procedures 66
9.16 Unusual Maneuvers/Functional Check Flights (FCF) 69
9.17 Drag Chutes 70
9.18 Rapids Training (RT) 70
9.19 Unscheduled Aircraft Arrivals 71
9.20 Generator Procedures for Building 669 71
9.21 Airfield Exercise Participation/Coordination 71
9.22 Use of RAFM by Civil Aircraft/Aero Club Operations 72
9.23 Supervisor of Flying (SOF) 73
9.24 Movement of Aircraft 74
9.25 Human/Dignified Remains (HR) Transfer 74
9.26 Host Nation Farming Operations 75
Attachment 1 ..... **76**
GLOSSARY OF REFERENCES AND SUPPORTING INFORMATION **76**
Attachment 2 ..... **83**
AIRFIELD DIAGRAM **83**
Attachment 3 ..... **84**
RADIO FREQUENCIES **84**
Attachment 4 ..... **85**
PRECISION APPROACH CRITICAL AREAS **85**
Attachment 5 ..... **86**
VFR TRAFFIC PATTERNS/CV-22 TRAFFIC PATTERNS **86**
Attachment 6 ..... **87**
RAF MILDENHALL/RAF LAKENHEATH RADAR TRAFFIC PATTERNS **87**
Attachment 7 ..... **88**
TILTROTOR FCF AREA **88**

Chapter 1
GENERAL INFORMATION

1.1 Command and Control

1.1.1 The 100th Air Refueling Wing Commander (100 ARW/CC) is responsible for airfield and air traffic control operations. The Airfield Operations Flight (100 OSS/OSA) executes Airfield Management Operations (AMOPS), Air Traffic Control (ATC), and Radar, Airfield, Weather Systems (RAWS) operations.

1.1.2 Recommendations for improving this instruction are encouraged and should be forwarded to the RAFM Airfield Operations Board (AOB) through 100 OSS/OSA or the Airfield Operations Flight Commander (AOF/CC). When necessary, all provisional changes will be initiated and coordinated with/by 100 OSS/OSA.

1.1.3 This instruction will be reviewed by 100 OSS/OSA annually. Review will determine currency and accuracy of the instruction. If updates are required, 100 OSS/OSA will initiate a revision/rewrite.

1.1.4 It is imperative all base agencies with procedures tasking Airfield Operations (ATC, AMOPS, RAWS) allow 100 OSS/OSA to review and coordinate on any/all Letters of Procedures and OPLANS prior to implementation. AFMAN 13-204v1 requires a familiarization period for all LOP or OPLANs.

1.1.5 In addition to AMOPS and ATC services outlined in this instruction, the 100th Air Refueling Wing (ARW), 352nd Special Operations Wing (352 SOW) and attached units will abide by procedures outlined in the Letter of Agreement between RAFM, RAF Lakenheath (RAFL) and 752 SOG.

1.2 Authority for Imposing Airfield Restrictions

1.2.1 AMOPS may impose airfield restrictions as outlined in AFMAN 13-204v2. RAFM ATC Tower (Tower) and AMOPS may temporarily suspend runway or taxiway operations in the interest of safety; however, only the following personnel have the authority to open or close the runway, a taxiway or apron:

1.2.1.1 100 ARW/CC/CV or designated representatives.

1.2.1.2 Airfield Manager or designated representative.

1.2.2 Runway operations are automatically suspended, pending possible closure, when:

1.2.2.1 An aircraft is disabled on or near the runway.

1.2.2.2 An aircraft engages an aircraft arresting system (AAS).

1.2.2.3 Any emergency aircraft lands. Exceptions: low fuel, electrical or physiological.

1.2.3 When runway or taxiway operations are suspended or closed, AMOPS must perform an airfield/Foreign Object Damage (FOD) check of the area before operations are resumed.

1.2.4. Any request to conduct operations, exercises, or any airfield event will require coordination with airfield users via current approved OSS eSSS process and approval from the 100 ARW/CC or designated representative. Completed coordination will be sent to AMOPS no later than 72 hours prior to event so an applicable Notice to Airmen (NOTAM) can be submitted.

Chapter 2
AIRFIELD INFORMATION

2.1 Airfield Facilities Operating Hours

2.1.1 The airfield is open 24 hours a day, 7 days a week unless a NOTAM has been issued for an approved closure period. AMOPS will issue a closure NOTAM 72 hours before the closure.

2.2 Airfield Closure/Opening Procedures Outside of Published Times:

2.2.1 The AOF/CC will establish standby procedures for AO personnel in accordance with AFMAN 13-204v1.

2.2.2 The AOF/CC will send via email, an OSA Standby (On-Call) closure letter NLT 24 hours till closure advising at a minimum 100 Current Operations (OSO), 100 Air Refueling Wing (ARW)/Command Post (CP), 100 ARW/Maintenace Operations Center (MOC), 100 Security Forces (SFS)/Base Defense Operations Center (BDOC), 352 SOW/Joint Air Operations Center (JAOC), 95 Reconnaissance Squadron (RS), 752/Special Operations Group (SOG), 727 Air Mobility Squadron (AMS) and 48 Airfield Operations (OSA).

2.2.3 All flights not already pre-approved during the NOTAM closure times must have an operational necessity or be a higher headquarters directed mission. Furthermore, they must be approved by 100 OG/CC. For all requests not already pre-coordinated, aircrew are to contact CP for approval.

2.2.4 When opening for pre-approved missions, the airfield will be open 1 hour prior to the first departure or arrival and Tower and AMOPS will begin to offer services at that time. Airfield Management will open 1 hour prior to airfield opening.

2.2.5 The airfield and aerodrome will close 30 minutes after an aircraft arrives or shuts down engines and/or 30 minutes after an aircraft departs. If multiple aircraft operations are scheduled within a two hour period, both facilities will remain open during that time.

2.3 Runways

2.3.1 Runway 10/28: 9,214 X 200 feet. The field elevation is 32’ MSL. The first 500’ of each end of the runway is grooved concrete with approximately 160’ of Marshal Asphalt before the concrete and the remainder is a porous friction asphalt surface. The runway is marked 146’ wide (white side stripe to white side stripe) but is weight bearing the full width of 200’.

2.3.2 No aircraft will execute 180-degree turns on the asphalt portion of the runway.

2.3.3 To the maximum extent possible, all aircraft will enter and exit the runway via Taxiway Alpha, Bravo and Echo. Any aircraft turning on/off runway at Taxiway Charlie or Delta must use only appropriate taxi lines in order to minimize the angle of turns on the asphalt.

2.3.3.1 The Tower Watch Supervisor can approve the use of Taxiway Charlie North to enter/exit the runway as operational needs dictate. Reference paragraph 2.7.1. for limitations.

2.3.3.2 When operational needs dictate, the OG/CC is the approving authority for using Taxiway Delta North to enter/exit the runway when the temperature exceeds 29 degrees Celsius. To mitigate porous friction surface wear concerns, turns onto or off the runway at Taxiway Delta are restricted to C-130 and smaller type aircraft, excluding F-15s and F-35s. All other aircraft must enter or exit the runway from the approach end of Runway 10 unless operational necessity dictates.

2.3.4 To mitigate the necessity to use Taxiway Delta North, the following steps shall be followed:

2.3.4.1 Aircraft larger than a C-130 (wingspan of 133'), F-15s and F-35s landing Runway 28 are to exit at the end of the runway onto Taxiway Alpha or Taxiway Bravo.

2.3.4.2 If a heavy aircraft advises the turn cannot be made, Tower will provide instructions for an alternative runway exit point.

2.3.5 Overruns/Underruns are 1,000' long at each end of the runway and are concrete and are painted with displaced threshold markings. They have the same weight bearing capacity as the runway.

2.3.6 Underruns are available for departures. Overruns do not meet departure clearance criteria and cannot be used in any calculations as additional runway available for takeoff.

2.3.7 The 100 OG/CC, on a case-by-case basis, may approve utilization of the Runway 28 1,000' overrun (overrun only not approach end underrun) for full-stop landing distance calculations for 24 ERS, RC-135 aircraft and 100 OG KC-135 aircraft during Day/VMC.

2.4 Opening, Closing, Suspending and Resuming Runway Operations

2.4.1 When the runway is closed/suspended AMOPS will issue a NOTAM immediately and will notify chain of command for closures. When suspensions last more than one hour, Tower will broadcast over all Tower frequencies and inform applicable agencies.

2.4.2 AMOPS will perform a check of the runway before opening/resuming operations and inform RAFM Tower of the time operations were resumed. When the runway is opened/resumed, Tower will broadcast over all Tower frequencies, notify RAFL RAPCON and Tower.

2.5 Runway Selection Procedures

2.5.1 Runway 28 is the primary instrument and calm wind runway. Runway 28 will be used when the wind speed is less than five knots, unless using Runway 10 aligns RAFM with the prevailing traffic flow at RAFL for operational efficiency and safety.

2.5.2 Tower Watch Supervisor (WS) selects the runway in use and may modify the selection for aircraft training requirements and Navigational Aid (NAVAID) status. Any aircraft whose performance is not compatible with the tailwind component should request an opposite direction departure or arrival.

2.5.3 Tower shall notify AMOPS, Base Weather, Fire Department (FD), RAFL RAPCON and RAFL Tower when the active runway direction changes.

2.5.4 AMOPS shall notify Command Post (CP), Transient Alert (TA) and Bird Control of any active runway change. CP shall notify the 100th Maintenance Operations Flight (MOF)/Maintenance Operations Center (MOC).

2.6 Runway Surface Condition (RSC) and Runway Condition Reading (RCR)

2.6.1 RSC and RCR will be determined by AMOPS IAW AFMAN 13-204v2 and T.O. 33-1-23. A chart of RCR values can be found in the *Flight Information Handbook.*

2.6.2 The runway consists of two significantly different friction characteristics, concrete and porous friction asphalt. Separate RSC and RCR will be reported for each surface.

2.6.3 An RCR will only be reported when ice or snow is present on the runway. Pilots will determine braking action when the runway is wet, or slush is on the runway.

2.6.4 RSC and RCR will be reported to Tower, Base Weather Station, CP and RAF Lakenheath (RAFL) RAPCON.

2.6.5 When RSC is anything other than dry, AMOPS will issue a safety NOTAM.

2.7 Taxiways

2.7.1 Taxiway Alpha and Bravo are 74’ wide at their narrowest points. Taxiways Charlie South and Delta North are 150' wide. Taxiway Charlie North is 50' at is narrowest point Taxiway Delta South is 50’ wide. Taxiway Echo is 75’ wide. Hammerhead dimensions are as follows:

2.7.1.1 Taxiway Alpha Northwest Hammerhead: 470’ long, 205’ wide.

2.7.1.2 Taxiway Bravo Southwest Hammerhead: 213’ long, 260’ wide.

2.7.1.3 Taxiway Alpha Northeast Hammerhead: 377’ long, 298’ wide.

2.7.1.4 Taxiway Bravo Southeast Hammerhead: 297’ long, 266’ wide.

2.7.2 Use of taxiways for takeoffs and landings by fixed wing aircraft is not authorized. Use during real-world emergencies or contingency operations not exceeding six months must be approved by 100 ARW/CC. For requests exceeding six months, seek MAJCOM approval in accordance with USAFE-AFAFRICAI 32-1007 A2.7. Rotary wing/tilt-rotor aircraft may use taxiways for departures and landings as specified in this document.

2.7.3 Taxiway Delta South is a tactical transport taxi-track and is restricted to AFSOC C-130 operations only. EXCEPTION: Transient C-130 aircraft are authorized with approval from 352 SOMXG/CC/CD for maintenance purposes.

2.7.4 Taxiway Charlie North is a fighter and tactical transport taxi-track. The taxi line on the northern portion of the taxiway is 25' from the eastern edge of pavement. KC-135, KC-10, KC-46, C-17 and C-5 aircraft are prohibited from using taxiway Charlie North. All other aircraft must remain on taxiway guidance lines (centerline and parking spot lead-in).

2.7.5 Wide-body aircraft exiting runway 28 at Alpha West use caution due to restricted taxiway width of 74 feet. Aircrews are advised that strict compliance with taxiway centerline marking is required in order to keep landing gear on the weight bearing pavement. Also note that the wind cone northwest of the taxiway is 155 feet from the taxiway centerline.

2.8 Controlled Movement Area (CMA)

2.8.1 The CMA includes the runway, both overruns, and 180' of all areas adjacent to the runways and overruns. Personnel and vehicles operating on the infields will use the barrier shacks as a visual reference. See Attachment 2.

2.8.2 Anytime Tower is open, all aircraft, vehicles and personnel must establish and maintain two-way radio communications with the Tower and obtain Tower's approval prior to entering the CMA. Operators can contact Tower via ground net or ground frequencies. Only vehicles in direct support of mission essential activities are authorized to operate within the CMA. Aircraft, vehicles, and personnel must also report to Tower when they have exited the CMA.

2.8.3 When Tower is closed, the Flight Data Ground Controller will broadcast on all frequencies, Ground Net, and Crash Net to all aircraft and personnel (to include vehicles on the airfield), that "RAF Mildenhall Tower is now closed." Please reference the RAFM ATC Quick Reaction Checklist(s).

2.8.4 When Tower is closed, all authorized vehicles requiring access to the runway should follow the following procedures:

2.8.4.1 Attempt to contact Tower on applicable frequency/nets.

2.8.4.2 When Tower does not answer, verify Tower/airfield closure with CP. Once verified, announce vehicle call sign and intentions (Example: *"Crash 1 is proceeding across Runway 10/28 at Taxiway Charlie"*).

2.8.4.3 Cross or enter the runway.

2.8.4.4 When off the runway, make another radio transmission to announce you are *"off the runway."*

2.8.4.5 Normal emergency lighting should still be used when on or crossing the runway to enhance vehicle visibility.

2.8.5 Specific procedures for airfield driving, privately owned vehicle passes, airfield driving violations and penalties, vehicle traffic (to include bicycle traffic), vehicular call signs, gaining CMA access, emergency vehicle operations, airfield construction restrictions, and miscellaneous procedures are prescribed in MILDENHALLI 13-213, *Airfield Driving* and are IAW DAFI 13-213, *Airfield Driving*.

2.8.6 Taxiways (except for portions within 180' mentioned above) and aprons are not part of the CMA. Radio contact with the Tower and Tower's approval are not normally required in these areas; however, personnel operating in areas which may impact aircraft operations outside the CMA may be required to establish/maintain radio contact as directed by AMOPS.

2.8.7 Tower will record all CMA violations in its daily events log.

2.8.7.1 Vehicle violations will be reported to AMOPS and 100 SFS/BDOC. Violations will be managed IAW MILDENHALLI 13-213, *Airfield Driving*, and reported IAW DAFI 91-202, *The Department of the Air Force Mishap Prevention Program*. In all cases, Wing Safety will be notified by AMOPS.

2.8.8 When personnel and vehicles are recalled from the CMA, they will withdraw to a safe distance from the runway (at least 180' from the runway/overrun edge). If radio contact is lost, Tower will flash the runway lights on and off. Personnel will immediately depart the CMA and look at the Tower for light gun instruction.

2.9 Aircraft Parking Plan/Restrictions and Hangar Allocation

2.9.1 The base comprehensive parking plan applies to all assigned and tenant organizations.

2.9.2 AMOPS is the office of primary responsibility (OPR) for the development of the aircraft parking plan, to include engine run-up areas. The parking plan will be reviewed annually by the Airfield Manager (AFM) and coordinated IAW AFMAN 13-204v2.

2.9.2.1 AMOPS will notify Tower of aircraft parking location via the AFAS per LKH/MLD MOU. NOTE: Parking spots are subject to short notice changes which will be coordinated with AMOPS.

2.9.2.2 Base-assigned aircraft will advise Tower of parking location prior to aircraft arrival.

2.9.2.3 MOC/TA will advise Tower whenever an aircraft will require pushback or tow parking onto a hardstand.

2.9.3 As the OG/CC designated representative, AMOPS is responsible for the allocation of all ramp space. Requests for reallocation or changes to apron marking schemes must be submitted to 100 OSS/OSAA. The AFM will coordinate any changes to the base parking plan with 100 CES/CENPL and 100 CES/CEF (Fire Department), 100 MOF (Maintenance Operations Flight), 100 MXS (Maintenance Squadron), 100 AMXS (Aircraft Maintenance Squadron), 100 ARW/SE (Safety) and applicable tenant unit agencies prior to submitting to 100 OG/CC and 100 Maintenance Group (MXG)/CC for approval.

2.9.4 Day-to-day operational control of hardstands and hangars are delegated per Mildenhall Aircraft Parking Plan Matrix. As such, the organization designated as the primary user of a hardstand or hangar will manage it as necessary to support their organization's flying and maintenance operations.

2.9.5 Operations outside of a unit's allocated area must be prior coordinated with the unit allocated the area.

2.9.6 In the event of an emergency or contingency, AMOPS has the authority to allocate unused hardstands. AMOPS will notify the affected organizations to de-conflict any potential problems.

2.9.6.1 The applicable MOC/TA will advise Tower whenever an aircraft will require pushback or tow parking onto any hardstand.

2.9.7 Primary User Allocations:

2.9.7.1 100 MOF Plans, Scheduling and Documentation Section provides centralized scheduling for the following joint-use Hangars: 711, 715, 769, 772, 774 and 814.

2.9.7.1.1 All requests for hangar use shall be routed through 100 MOF PS&D and approved by 100 MXG top 3 as well as other required agencies via standard eSSS processes.

2.9.8 TA and 727 AMS: Hardstands 3, 5, 6, 8, 10, 11, 12, 40-51, 65, and 75 (Taxiway Delta North). Prior coordination with AMOPS is required for HS 65.

2.9.9 Parking Plan Restrictions.

2.9.9.1 Aircraft with a wingspan greater than 131 feet shall not be parked on Hardstand 37A to protect the ILS Critical Area.

2.9.9.2 Aircraft may only taxi onto Hardstand 12 from the west and taxi off to the east. Operations from other directions require tow on/off. At no time will jet blast be directed towards the ILS Glide Slope antenna.

2.9.9.3 Aircraft may only taxi onto Hardstand 5 from the east and taxi off to the west. Aircraft with a wingspan of 78 feet or less, example C-20s, may turn left out of parking but must use minimum power settings due to Privately Owned Vehicle (POV) parking lot behind the spot. All other operations from other directions require tow on/off.

2.9.9.4 Left turns onto Hardstand 3 from the northwest entrance are restricted to aircraft with a wingspan of 78 feet or less, example C-20s, using minimum power settings due to close proximity to Building 669.

2.9.9.5 When aircraft taxi off either side or when aircraft are parking on the east side of Hardstand 26, maintenance personnel must stop traffic on road west of hardstand to avoid jet blast damage to passing vehicles.

2.9.9.6 Hardstand 24 is restricted to tow only when hardstands 22 or 23 are occupied. No immediate right turn allowed when taxiing off hardstand.

2.9.9.7 Aircraft parked on HS 33 can only execute a right turn out of parking and aircraft parked on 35B can only execute a left turn out of parking due to jet blast and the proximity of the SOW POV parking area.

2.9.9.8 Aircraft parking on Hardstand 43 shall face west to the maximum extent possible. C-5, KC-10, B-747, B-757 and/or B-767 may park facing east with prior coordination and approval from AMOPS. Anytime a wide-body aircraft parks facing east on Hardstand 43 Hardstands 73 and 74 are closed.

2.9.9.9 Hardstand 35 is restricted to tow on/off only. No engine runs permitted.

2.9.9.10 Hardstand 32 aircraft are permitted to taxi on/off only. No engine runs permitted.

2.9.9.11 Taxiway Delta North is primarily used by the 352 SOW for Hot Gas operations. It may be utilized as Hardstand 75 to park aircraft requiring maintenance in order to open up parking on other primary AMC hardstands to avoid exceeding parking maximum-on-ground. This will take precedence over Hot Refueling operations.

2.9.9.12 Aircraft parked on Hardstand 65 must remain on the nose wheel marking to avoid asphalt shoulder damage.

2.9.9.13 Parking spots and hardstands with parked aircraft that violate airfield imaginary surfaces, specifically the transitional surface, are Hardstands 10, 11, 12, 14, 15, 17, 24, 51, and 65.

2.9.9.13.1 Any mobile obstructions that extend beyond the height of the controlling obstruction on these spots must be identified to Airfield Management. Notifications may be via phone call or email (see 4.1.4. for contact information).

2.9.9.13.2 The tallest fixed obstruction on each hardstand is the controlling obstruction. In the absence of a fixed obstruction the tail height of the tallest aircraft that will be parked on the hardstand becomes the controlling obstruction. The following are the controlling obstruction heights by each hardstand:

2.9.9.13.2.1 Hardstand 10: 58’

2.9.9.13.2.1 Hardstand 11: 58’

2.9.9.13.2.1 Hardstand 12: 58’

2.9.9.13.2.1 Hardstand 14: 42’

2.9.9.13.2.1 Hardstand 15: 42’

2.9.9.13.2.1 Hardstand 17: 42’

2.9.9.13.2.1 Hardstand 24: 42’

2.9.9.13.2.1 Hardstand 51: 39’

2.9.9.13.2.1 Hardstand 64: 39’

2.9.9.13.2.1 Hardstand 65: 66’

2.9.9.14 Reduced wingtip clearances exist on CV-22 Ramp taxi lanes. Wingtip clearances reduced to 24 feet when aircraft are present on Hardstands 72 and 73. Use caution taxiing in or out of Hardstands 70, 71, or 74.

2.9.10 Aircraft jacking and refuel/defuel operations will be IAW AFI 21-101 MILDENHALL_SUP. Approved aircraft jacking locations are identified in the Mildenhall Aircraft Parking Plan Matrix.

2.9.11 Clean water rinse (CWR) activities can be conducted on Hardstands 29, 31-35 and 37. Use of Hardstand 37 must be previously coordinated with AMOPS.

2.9.11.1 Due to increased oil water separator inspections, maintenance and sampling for hardstands supporting CWR activities and to eliminate operational costs and hardstand down times, the primary CWR location will be on hardstand 34. All rinses shall not exceed 4 hours to limit time on the high-risk hardstands. Use of any other location requires prior coordination with the primary user and AMOPS. Utilization of this hardstand must be prior coordinated with AMOPS and 100 SFS during Force Protection Condition (FPCON) Bravo or higher.

2.9.12 Water used for the CWR cannot contain detergent, degreaser or chemical additives.

2.10 Permanently Closed/Unusable Portions of the Airfield/Hardstands

2.10.1 No vehicle parking or equipment storage on 37B to protect ILS Critical Area.

2.10.2 Hardstands 4, 7, 9, 28, 30, 36, and Apron adjacent Hangar 814 are designated AGE sub-pools and Material Handling Equipment (MHE) parking areas.

2.11 Restricted-Use (High-Risk) Hardstands

2.11.1 Due to close proximity to the perimeter fence, the 100 ARW/CC has designated hardstands 5, 8, 12, 18, 19, 34 and 37 as high-risk hardstands.

2.11.2 Use of hardstands 5, 8, 12, 18 and 19 are necessary to support the daily flying mission. Utilization of these hardstands are only restricted during FPCON Charlie or Delta.

2.11.3 To utilize a High-Risk Hardstand during FPCON Charlie or Delta, the requesting agency will contact AMOPS 72 hours prior and provide justification for the request. AMOPS will then coordinate with 100 SFS/Antiterrorism Program Manager (ATPM). If both agencies concur, AMOPS will initiate a request for 100 ARW/CC approval. Once the 100 ARW/CC approves, AMOPS will advise the requesting agency.

2.12 Rotary Wing/Tilt Rotor Helicopter Operating Areas

2.12.2 Pad Alpha is located on the Northwest Hammerhead at the approach end of Runway 10.

2.12.3 Pad Charlie is located north of the runway on Taxiway Charlie between Hardstand 51 and the runway hold line.

2.12.4 Pad Delta, is located on Taxiway Delta, north of the intersection of Taxiway Alpha and Delta and south of the Air Mobility Command (AMC) ramp. (See airfield diagram)

2.12.5 Tilt-rotor aircraft should limit departures and landings to the runway, Pad Alpha, the southeast hammerhead and Pad Delta to prevent damage on untreated pavement. However, Tower may approve VFR departures and landings for rotary/tilt-rotor aircraft at any point on the airfield if they deem it reasonable.

2.12.5.1 Rotary/tilt-rotor aircraft requesting Standard/Local Climb-out must depart from the runway. If an aircraft requests to depart from a non-controlled movement area, or they request to depart from an intersection that is not depicted on the airfield diagram indicating runway length available, then the pilot will be instructed to maintain VFR on departure, and to expect further clearance with Lakenheath departure once airborne.

2.12.6 Per RAF/Ministry of Defense (MOD) explosive safety restrictions, rotary wing/tilt-rotor aircraft will not overfly the munitions storage/maintenance facilities on the airfield (Buildings 1376, 1377, 1378 and 1381).

2.13 Air Traffic Control Facilities

2.13.1 RAFM Tower is a USAF military-operated facility located on RAFM, open 24 hours a day, 7 days a week unless aerodrome is NOTAM'ed closed.

2.13.2 Tower is delegated the Mildenhall Aerodrome Traffic Zone (ATZ) as outlined in section 3.1.

2.14 Land Mobile Radios (LMR)

2.14.1 The following LMR nets are controlled by Tower: Ground, Ramp and Crash.

2.14.2 Ground Net is the main air traffic net used for runway operations, vehicle operation, tows, and engine runs. This is the only net continuously monitored by Tower.

2.14.2.1 AMOPS is authorized to transmit high priority/emergency messages to vehicles currently on the Ground net to expedite transmissions.

2.14.3 Tower will monitor the Crash Net during emergencies (or when requested by FD). The Crash Net is the primary means of communication between the Tower and responding FD vehicles.

2.15 Radio Frequencies See Attachment 3. Radio Frequencies.

2.16 Automatic Terminal Information Service (ATIS)

2.16.1 ATIS is a broadcast of recorded RAFM airfield and weather information and frequency is available in the FLIPs.

2.16.2 ATIS is available 24 hours a day, 7 days a week.

2.16.3 Pilots will use the ATIS to the maximum extent possible and report the received ATIS code to Tower upon initial contact to verify receipt of most current information.

2.17 Radar, Airfield, Weather Systems (RAWS)

2.17.1 The following RAWS are available at RAFM:

2.17.1.1 Instrument Landing System (ILS) consisting of a localizer and glide slope for Runway 10 and Runway 28.

2.17.1.2 Tactical Air Navigation (TACAN) System. The TACAN checkpoints are at the Runway 28 northeast run-up pad, MLD 108/0.6 DME and Runway 28 southeast run-up pad, MLD 120/0.7 DME.

2.17.2 RAWS Preventative Maintenance Inspection (PMI). The following standardized times and weather criteria will be used for RAWS PMIs unless the aerodrome is NOTAM closed:

2.17.2.1 NAVAIDS (ILS & TACAN): 2300L – 0600L each day Sun thru Fri. Minimum CIG/VIS: 1000'/3 statute miles forecasted for the duration of PMI plus one hour.

2.17.2.2 Prior to removing any RAWS from service and upon restoring RAWS to service, maintenance personnel will notify and/or receive approval from the Tower WS.

2.17.2.3 Only one NAVAID may be shut down for maintenance at any one time.

2.17.2.4 Any unscheduled PMI outside of published times shall be coordinated with 100 OSS/OSA for OG/CC approval at least 72 hours in advance. RAWS will coordinate through the Tower Chief Controller or representative on a case-by-case basis for equipment with redundant backups.

2.17.3 RAWS generator testing and operating procedures will be IAW the *ATCALS Equipment Restoral Procedures Operations Letter*.

2.17.4 Tower shall immediately report all outages of RAWS to AMOPS for NOTAM action.

2.18 Airfield Lighting System and Operations

2.18.1 RAFM Tower is equipped with a STANAG 3316 lighting system. Airfield lighting is turned on, off and adjusted by Tower based on time of day and visibility. With the exception of the runway wig-wag and obstruction lights, airfield lighting should be turned off, to the

maximum extent possible, when not being used by aircraft unless needed for RVR measurements, lighting activation checks or ground emergencies.

2.18.2 The following airfield lighting systems are available at RAFM.

2.18.2.1 North Atlantic Treaty Organization (NATO) Standard Type 1 Approach Lighting System.

2.18.2.2 Sequenced Flashing Lights (SFL).

2.18.2.3 Precision Approach Path Indicators (PAPI).

2.18.2.4 Threshold and Runway End Lights.

2.18.2.5 High Intensity Runway Lights (HIRL).

2.18.2.6 Runway Centerline Lighting.

2.18.2.7 Touchdown Zone Lighting (TDZL) (Runway 28 only).

2.18.2.8 Runway Distance Markers and Arresting Gear Markers or "Moon markers".

2.18.2.9 Taxiway Lights.

2.18.2.10 Taxiway Guidance Signs.

2.18.2.11 Runway and Mandatory Signs

2.18.2.12 Obstruction Lights.

2.18.2.13 Runway Guard Lights (Wig-Wags).

2.18.3 AMOPS shall document and report airfield lighting outages per standards of tolerance established in AFMAN 13-204v2 and the Air Force Flight Standards Agency Lighting Guide and issue NOTAMs as required. Lighting outages will be reported to 100th Civil Engineer Squadron (CES) Airfield Lighting during duty hours and after hours emergency outages to the FD.

2.18.4 Anytime an outage exceeds standards of tolerance, in addition to following procedures outlined in AFMAN 13-204v2, AMOPS will notify Tower, Airfield Manager (AFM) and RAFL RAPCON. Tower shall inform arriving aircraft of any approach lighting problems.

2.18.5 CES Airfield Lighting section will activate airfield lighting systems upon Tower request when Tower does not possess the capability to control lighting systems (e.g. switch disabled, Tower evacuation, etc.).

2.18.6 CES Airfield Lighting section will check on and off-base airfield approach lighting systems Monday – Friday (excluding holiday periods) and notify AMOPS after completing these checks. Additionally, AMOPS will complete a daily check of on-base airfield lighting systems and monitor status of off-base approach lights during weekends and/or holiday

periods. AMOPS will annotate in the DAF Form 3616, events log whenever this check is unable to be performed.

2.19 Perimeter Road Traffic Lights

2.19.1 Tower controls the perimeter road traffic lights on the east and west ends of the airfield to prevent vehicles from entering the ILS Critical Area and protect vehicles from jet blast. It takes approximately 5 minutes for vehicle traffic to exit the area. Tower will activate the appropriate perimeter road lights for the following situations:

2.19.1.1 Underrun departure use is as follows to ensure jet blast safety.

2.19.1.1.1 Runway 28: Activate light for aircraft larger than KC-135.

2.19.1.1.2 Runway 10: Activate light for all departures.

2.19.1.2 Any time a heavy aircraft enters the west end over/underrun to conduct a 180 degree turn.

2.19.1.3 An aircraft is flying an ILS approach when the weather conditions are less than reported ceiling 800' and/or the visibility is less than 2 miles. The approach-end perimeter road light shall be turned on before the arriving aircraft reaches 15 miles to allow vehicles time to vacate the area.

2.19.1.4 Both ends when an emergency aircraft is 15 miles on IFR final or as soon as practical if the emergency aircraft is in the VFR pattern until touchdown and/or no longer poses a threat to the area.

2.19.1.5 The east end perimeter road when aircraft are conducting FARP/HR operations in the Southeast Hammerhead.

2.19.1.6 The west end perimeter road when aircraft hold in the Southwest Hammerhead in a position that directs jet blast across west end perimeter road.

2.19.1.7 The controller deems it necessary in the interest of safety.

2.19.1.8 The perimeter road traffic lights will <u>not</u> be activated for VFR operations to either runway.

2.19.2 The perimeter road lights are normally green. Vehicle operators must remain highly alert and avoid driving on perimeter road behind departing aircraft using the underrun.

2.19.3 Whenever Tower cannot turn the lights to red (malfunction, loss of control, etc.), Tower will immediately notify AMOPS of the outage. AMOPS will contact CE Service Call Desk for a priority work request.

2.19.3.1 If both the east and west ends of perimeter road are open, AMOPS will coordinate with CES and SFS to close and block the affected end of perimeter road until the lights return to service.

2.19.3.2 If a road needs to be blocked, Tower will notify AMOPS 20 minutes prior to any aircraft operation that will require the road to be blocked in lieu of using the lights.

2.19.3.2.1 AMOPS will notify the 100 SFS and request a patrol stand-by at the applicable runway end, north perimeter road traffic light location.

2.19.3.2.2 AMOPS will respond to the applicable runway end south perimeter road traffic light location.

2.19.3.2.3 Five minutes prior to aircraft operation, Tower will advise AMOPS and BDOC to block traffic. Immediately after aircraft operation is complete, Tower will advise AMOPS and BDOC to resume normal operations.

2.19.4 SFS can only support immediate blocking of the perimeter road when the perimeter lights are out of service and should only be used for a limited period of time or the lights are back in service. If the lights will be out of service for any extended period of time, or multiple requests will be made due to operations, weather, 100 OSS/OSA will then coordinate with 100 OG/CC to request augmentation support from CES to block the road and curtailment of operations to limit the number the closures required (e.g., restricting multiple IFR approaches when the critical area has to be protected).

2.20 Aircraft Arresting Systems (AAS)

2.20.1 BAK-12 operational arresting systems are located:

2.20.1.1 1,975' beyond the landing threshold of Runway 28.

2.20.1.2 1,921' beyond the landing threshold of Runway 10.

2.20.2 Normal configuration is for all cables to be deactivated/disconnected. NOTE*:* In addition to some transient aircraft, all RC-135 operations require all cables to be disconnected.

2.21 Airfield Restricted Areas

2.21.1 Restricted areas and entry control procedures are described in the 100th ARW Plan 31-101, Integrated Defense Antiterrorism Plan (IDATP). Restricted areas on the airfield are identified by a red marking on the pavement that must not be crossed. To enter and exit the restricted areas member must use the entry control point's (ECP's).

2.22 Airfield Photography in Restricted Areas

2.22.1 IAW 100 ARW IDATP, Video recording and photography of restricted areas is strictly prohibited, unless approval has been received through coordination with 100 ARW/PA and the commander whose unit owns resources or assets within the restricted area. A video recording and photography authorization letter must be in one's possession while recording or photographing the restricted area(s).

2.23 Smoking on the Airfield

2.23.1 IAW AFOSH STD 91-100, *Aircraft Flight Line Ground Operations and Activities*, smoking is prohibited on the airfield. Smoking adjacent to the airfield must be in designated areas.

2.24 Wear of Hats and Badges on the Airfield

2.24.1 Only cold weather caps/hats, or berets may be worn while on the airfield.

2.24.2 Cap/hat (other than cold weather caps or berets), wigs, hairpieces, metal hair fasteners, earrings, or any other jewelry that may fall off without notice, are not authorized on the airfield.

2.24.3 Metal insignias/badges will not be worn on the airfield. Escorts of visiting personnel will ensure that FOD prevention measures are taken.

2.24.4 Restricted area badges (or AF Entry Control Cards) will be properly secured to the uniform or the person at all times. In the vicinity of running aircraft, the badge will be secured/stowed to minimize FOD potential.

2.25 Airfield Quiet Hours

2.25.1 Refer to USAFE Instruction 11-201, *Flying Operations Conducted at USAF Occupied RAF Installations in the United Kingdom*, for quiet hour times and operating restrictions. Instructions remain in effect until replaced by a USAFE Instruction. Waivers are required for any activity not expressly exempted in USAFE Instruction 11-201, *Flying Operations Conducted at USAF Occupied RAF Installations in the United Kingdom*.

2.25.2 100 ARW/CC is the approving authority of all Quiet Hours waivers. A request is required through the 100 ARW CP from the Group/Partner Unit/CC, stating requirement and mission impact if waiver not granted. CP will use the SharePoint located at: https://usaf.dps.mil/sites/100ARW/100DS/CP/SitePages/Home.aspx to track all approved takeoffs, landings, mission essential engine runs and checks. CP will pass monthly quiet hour waiver reports to USAFE-UK/A3. AMOPS will verify Quiet Hours Request decisions via 100 ARW/CP's Quiet Hour Waiver e-mail distribution or telephone. NOTE: Aircrew will notify Airfield Management upon approval or disapproval of quiet hours waiver

2.25.2.1 The 100 ARW/CC has delegated approval of quiet hour waivers for maintenance engine runs to 100 MXG/CC/CD/CCC or designated representative. The 100 MOF/MOC must report any approved engine run waivers to CP.

2.25.2.2 The 100 ARW/CC has delegated approval of quiet hour waivers for 100 OG assets and transient aircraft to the 100 OG CC/CD.

2.25.2.3 The 100 ARW/CC has delegated approval of quiet hour waivers for 352 SOW assets to the 352 SOW CC/CD. The 352 SOW/CC has delegated approval of quiet hour waivers to the 352 SOG/CC/CD.

2.25.3 HQ USAFE/A3/10 has granted a standing Quiet Hour waiver for specified DV flights at all USAFE Installations: COMUSAFE directs flights by SACEUR, DCDRUSEUCOM, CCMDs, NAF/CCs, USAFE/CV and Deputy Commander Air Headquarters Ramstein (DCOM) to be granted standing waiver authority for operations during NAF, Wing or lower echelon/tilt-rotor organization quiet hours at all USAFE installations. Aircraft providing support to the above listed commanders are granted relief from USAFE organizational quiet hour policies and associated ARW/CC waiver requirements.

2.25.4 Group/Partner Unit Commanders may request delegated authority from 100 ARW/CC to approve quiet hour waivers for their unit operations. Delegation requests must be staffed to 100 ARW/CC for consideration. If approved, commanders will ensure the 100 ARW/CP is notified of all unit approved quiet hour waivers for reporting purposes.

2.25.5 Standard Exceptions to Quiet Hour Operations.

2.25.5.1 The following operations during quiet hours are permitted on weekends and UKBH/UKNH between 0900L and 1800L without approval from local commanders, USAFE-UK/A3 and/or MOD UK:

2.25.5.2 Higher Headquarters (HHQ) directed missions and aero-medical flights.

2.25.5.3 Transient arrivals and departures.

2.25.5.4 Aircraft operations supporting MOD UK recognized air shows or other HQ USAFE/A3 and/or MOD UK approved flying events. Aircrews are not permitted to conduct local training flights or takeoff from and recover to the same RAF base during quiet hours unless aircraft operations are supporting MOD UK or HQ USAFE/A3 approved aerial events.

2.25.5.5 Aircraft deployments to or from USAF occupied RAF bases that will support and/or participate in North Atlantic Treaty Organization (NATO)/MOD UK/HQ USAFE/A3 sponsored squadron exchanges and exercises.

2.25.5.6 CV-22 may conduct engine runs without rotors engaged to facilitate maintenance.

2.26 Base Quiet Hours for Unit or Host-Nation Functions

2.26.1 The requesting agency will initiate coordination with all airfield users via approved e-SSS teams site and must be approved by 100 ARW/CC or designated representative.

2.26.2 Coordination requests must be initiated at least 3 weeks prior to the event, with suspense of one week prior to the event.

2.26.2.1 Requests must stipulate restrictions requested; e.g. straight-in full stop landings only, no takeoff's, no taxiing, no aircraft engine or AGE running, etc. Standard special event quiet hours are as follows:

2.26.2.1.1 Aircraft departures restricted to Priority 2C1 and higher. Aircraft arrivals restricted to full stop only; no practice approaches. No aircraft taxi or engines running in the vicinity of the special event unless Priority 2C1 or higher (verbiage will vary depending upon location of event).

2.26.3 Once quiet hours are approved, the requesting agency will forward the completed e-SSS to 100 OSS/OSA to issue required NOTAMs.

2.27 Noise Abatement Procedures

2.27.1 Aircraft will avoid flying over Mildenhall Town, Barton Mills (to include the corridor over the Lark River between Mildenhall and Barton Mills), Worlington, Tuddenham, Red Lodge, Beck Row, Isleham, Newmarket, West Row, Ely and other towns and villages in the local area below 2,000' above ground level (AGL) unless safety of flight is a factor.

2.27.2 Aircraft departing Runway 28 or making approaches to Runway 10 will avoid flying over Ely and Ely Cathedral on the Mildenhall TACAN 286 radial/8.6 DME below 2,000' AGL unless safety of flight is a factor. Aircraft on radar vectors should expect to be restricted by Lakenheath RAPCON until clear of area.

2.27.3 Aircraft are not authorized unrestricted climbs.

2.28 Airfield Pavement

2.28.1 Airfield personnel that find deteriorating pavement will immediately notify AMOPS. AMOPS will respond and inspect the area. AMOPS will annotate and manage the discrepancy via airfield inspection/check procedures.

2.28.2 Owning unit maintenance personnel are responsible for cleaning up any fuel, no matter what the amount is spilled/leaked on an airfield surface immediately after the fuel reaches the pavement. Fuel seriously damages pavement surfaces, especially asphalt, so immediate clean-up action is required. If the spill is classified as a ground emergency (GE), the appropriate MOC will contact the Tower via landline for PCAS activation.

2.28.3 Maintenance personnel will notify AMOPS of all fuel spill incidents so pavement can be monitored for possible repair actions.

2.29 Airfield Work Requests and Obstruction Management

2.29.1 Airfield work requests, maintenance and repair work, and construction projects are managed by the Base Civil Engineer IAW USAFEI 32-1007. An approved AF IMT 103, *Base Civil Engineer Work Clearance Request* and an approved construction waiver (if necessary) is required for all activities before clearance to proceed is given by the Airfield Manager. Emergency maintenance and repair requirements, as well as routine maintenance

activities (mowing, snow removal, rubber removal and maintenance of airfield systems), are exempt from this requirement. However, the BCE will coordinate with the Airfield Manager (or designated representative), flight safety, and flight operations offices to ensure implementation of appropriate safety measures, including NOTAMs.

2.29.1.1 Temporarily assigned personnel/non-base assigned contractors requiring unescorted driving privileges must possess a valid home unit issued AF IMT 483 and a completed Temporarily Assigned Personnel/Non-Based Assigned Contractors Training Checklist. Temporarily assigned personnel/non-base assigned contractors are required to coordinate with Airfield Management prior to entering and upon exiting the airfield.

2.29.2 Airfield imaginary surfaces, clear zones, frangibility zones, and accident potential zones are defined in USAFEI 32-1007, *Airfield and Heliport Planning and Design*. This instruction governs required distances for obstacles (fixed or mobile) in relation to runways, taxiways and aprons (hardstands). Airfield Criteria not defined in 32-1007 are defined in UFC 3-260-1, UFC 3-260-04, and UFC 3-535-01.

2.29.3 Certain facilities, equipment, and operations essential to the operation of an airfield may violate airfield obstruction criteria. These permissible deviations are listed in USAFEI 32-1007, *Airfield and Heliport Planning and Design*. Fixed and mobile obstructions not cited as a permissible deviation are not authorized without a 100 ARW/CC and USAFE/CV waiver processed IAW USAFEI 32-1007, *Airfield and Heliport Planning and Design*.

2.29.4 Any agency wishing to conduct operations or place fixed or mobile obstacles (anywhere on the airfield), even if they are permissible deviations, must coordinate and receive approval from AMOPS. Temporary construction waivers are required for any construction project that violates airfield criteria or affects airfield operations. Non-standard marking requests will be coordinated through Airfield Management for consideration and work order submission.

2.29.4.1 Ground Support Equipment (Mobile). Mobile ground support equipment is exempt from apron clearance distance criteria within 3 hours before or after proposed aircraft service time, but not taxilane or taxiway requirements. Examples of ground support equipment exempt under this category are aerospace ground equipment, electrical carts, forklifts, tow bar trailers, fire extinguisher carts, material handling equipment, airfield maintenance stands and portable floodlights. Similar equipment may be included in this category.

2.29.4.2 When support equipment is not in use, it must be removed from aircraft parking areas and stored in areas that do not violate lateral clearance requirements, taxilane/taxiway clearance requirements or other imaginary surfaces. Equipment in use is defined as support equipment in place not more than three hours before aircraft arrival or three hours after aircraft departure.

2.29.5 Airfield vehicles are exempt from apron clearance criteria while directly supporting aircraft operations. Vehicles will not violate taxilane/taxiway clearance requirements. When not required, relocate vehicles away from aircraft parking aprons.

2.29.6 Taxiing aircraft, emergency vehicles and authorized maintenance vehicles are exempt from runway lateral clearance zone criteria when approved by the Tower and two-radio communications are maintained.

2.30 Non-Standard Airfield Markings

2.30.1 Non-standard marking requests will be coordinated through Airfield Management for consideration and work order submission. Non-standard markings are approved by the USAF Major Command Director of Operations (MAJCOM/A3).

Chapter 3
FLYING AREAS

3.1 Local Flying Area/Designation of Airspace

3.1.1 Mildenhall Aerodrome Traffic Zone (ATZ): RAFM Tower controls the Mildenhall Aerodrome Traffic Zone. The ATZ radius is 2.5 nautical miles (NM) from the midpoint of the runway and extends vertically from the aerodrome surface to 2,000' AGL. Aircraft shall not takeoff, land or fly within the ATZ without permission from Tower. ATZ procedures apply to both military and civilian aircraft.

3.1.2 Mildenhall Military ATZ (MATZ): located within the Lakenheath/Mildenhall Combined (CMATZ). The Mildenhall MATZ has been established to provide a volume of airspace within which increased protection may be given to aircraft in the critical stages of circuit, approach and climb-out. A MATZ acquires the status of the airspace classification within which it lies (uncontrolled Class G. airspace); however, additional ATC requirements are applicable to military pilots. In the airspace outside the ATZ, observation of MATZ procedures is not compulsory for civil pilots.

3.1.2.1 Mildenhall MATZ dimensions are as follows:

3.1.2.1.1 The airspace within 5 NM radius of the midpoint of the runway, from the surface to 3000ft above aerodrome level.

3.1.2.1.2 The MATZ has two stubs extending 10 NM from the ends of the runway with a width of 2 NM north and 5 NM south of extended centerline. The stubs extend vertically from 1,000-3,000' AGL.

3.1.3 CMATZ: Consists of the Lakenheath MATZ, Mildenhall MATZ and the extensions to each.

3.1.4 CAUTION: Civil aircraft may fly through the CMATZ and MATZ, but not the ATZ, without approval from a Mildenhall or Lakenheath ATC. Because of the close proximity of various airfields in the CMATZ, aircrews should make every effort to see and avoid and remain aware of other traffic, especially when Lakenheath is using Runway 24 and Mildenhall is using Runway 28.

3.2 VFR Training Areas

3.2.1 RAFM does not have predetermined VFR Training Areas.

3.3 Rotary wing/Tilt-rotor Helicopter Operations

3.3.1 There are two helicopter landing zones (HLZ) located on the airfield: Vandegeer (Vandy) and Foss. Operations must be coordinated through airfield management via current approved OSS eSSS process and approval from the AOF or coordinated through airfield management via e-mail a minimum 1 hour prior to use. If approved by tower, airfield management will issue an applicable NOTAM.

3.3.1.1 Vandy HLZ is a grassy area 353' south of RAFM runway (Attachment 2).

3.3.1.1.1 Operations in Vandy will be conducted a minimum of 200' from the edge of the runway.

3.3.1.1.2 Simultaneous non-352 SOW aircraft arrival or departure operations to the runway and Vandy are not authorized. Helicopters/tilt-rotor may be on the ground while operations are in progress to or from the runway.

3.3.1.2 Foss HLZ is a grassy area east of Taxiways Alpha and Delta, north of the runway and south of the AMC Ramp (Attachment 2). Non-participating aircraft may not utilize Taxiway Alpha between the hammerhead and AMC ramp when airborne operations at Foss are in progress.

3.3.1.2.1 Simultaneous non-352 SOW aircraft arrival and departure operations to the runway and Foss are authorized.

3.3.2 HLZs on the airfield are not intended as the primary training areas; other training areas should be scheduled first. The operations planned at airfield HLZs include fast-rope, rope-ladder, hoist, air/land and helicopter coupled approaches. Any on/off-load of personnel/equipment must be pre- announced to Tower.

3.3.3 Helicopters/tilt-rotor may utilize the HLZs to conduct operations including NVD operations, provided weather requirements stipulated in paragraph 9.14.5 are met.

3.3.4 Helicopters/tilt-rotor will maintain two-way communications with Tower and will not over-fly aircraft in parking or on taxiways.

3.3.5 Tower shall maintain final approval authority for Vandy and Foss operations based on traffic. Helicopters/tilt-rotor will notify Tower, stating type of operation and expected duration time, a minimum of 1 hour prior to use. This notification ensures Tower can adjust operations in the ATZ to meet the needs of all aircraft.

3.3.6 Tower will utilize the terms Vandy or Foss during coordination of all operations on the HLZs.

3.3.7 Vandy and Foss are classified as a non-movement area for airfield operations purposes. Therefore, Tower will not issue landing/takeoff clearances to participating helicopters/tilt-rotor.

Chapter 4
FLIGHT PLANNING PROCEDURES

4.1 Flight Planning procedures

4.1.1 All aircraft departing RAFM must have a flight plan on file (regardless if operating under IFR/VFR). All flight plans to be filed must be completed IAW FLIP *General Planning*, Chapter 4. Departure routes must comply with United Kingdom Standard Route Document, available online at the UK National Air Traffic Services website at https://www.nats.aero/. Those not filing preferred routes per this publication may experience departure delays.

4.1.2 European airspace is very congested and especially saturated during the summer months and holidays. To better manage the airspace, the Central Flow Management Unit in Brussels, Belgium, frequently issues a Calculated Take-Off Time (CTOT) to an aircraft departing on a General Air Traffic (GAT) flight plan.

4.1.2.1 A CTOT is defined as the time when the aircraft must takeoff. In order to reduce the impact and chances of receiving a CTOT, all aircrews must file their flight plans as early as possible.

4.1.2.2 Once a CTOT is issued, the aircraft must take off no earlier than 5 minutes prior, and no later than 10 minutes after the issued CTOT time.

4.1.2.3 AMOPS will notify Tower and RAFL RAPCON of CTOTs.

4.1.2.4 If an aircraft cannot meet the CTOT, AMOPS may request a delay. However, if aircraft cannot meet the new CTOT, the aircrew must refile their flight plan with the originating agency or AMOPS.

4.1.2.5 CTOTs are issued on a last filed basis. Anything less than 4 hours significantly increases the need for a CTOT to be issued. Any changes made after an aircraft's flight plan is filed, other than altitudes and minor changes with ATC, will cause the flight plan to be re-filed and subject to a CTOT.

4.1.2.6 General Air Traffic (GAT) is defined as traffic that can file an IFR flight plan, follow ATC instructions, communicate with ATC, and has necessary equipment to follow a prescribed route. GAT flight plans must be filed with AMOPS at least 4 hours prior to Estimated Block Out Time (EBOT).

4.1.2.7 Operational Air Traffic (OAT) is defined as traffic that cannot comply with provisions of GAT. OAT flight plans must be filed with AMOPS at least 1 hour prior to EBOT.

4.1.3 352 SOW, 95 RS, 351 ARS and prior coordinated flights from RAF Fairford may digitally sign and email to AMOPS **(100oss.osaa@us.af.mil**) in lieu of filing in person. Temporary Duty Units may utilize the procedures with an LOA and AFM approval. Any emailed flight plan must be followed up with a phone call to AMOPS (DSN 238-2275 or 238-7674 or Comm 01638-54-4030) to ensure receipt and accuracy.

4.1.3.1 Tenant units listed above may file their own digitally generated flight plans (via GDSS, Foreflight, etc.) but must maintain an original copy of the flight plan.

4.1.4 Units that file flight plans by scan/email must maintain all original flight planning forms for disposition IAW AFRIMS Records Disposition Schedule (RDS), Table 13-07, Rule 3.00.

4.1.5 Original flight plans may not be accepted via radio; however, flight plans filed with AMOPS can be amended via any means. Transient aircraft on a stopover flight may re-file with AMOPS via the radio, provided AMOPS can verify the original flight plan is on file at another base. AMOPS will contact original departure location for confirmation and then enter requested flight plan information. AMOPS cannot amend flight plans filed by TACC IAW AFMAN 13-204v2, *Airfield Operations Procedures and Programs*.

4.1.6 AMOPS shall relay the following information to Tower and RAFL RAPCON on all proposed departures and actual inbounds:

4.1.6.1 Type of flight plan: Instrument Flight Rules (IFR) or Visual Flight Rules (VFR).

4.1.6.2 Call sign.

4.1.6.3 Type aircraft.

4.1.6.4 Proposed departure or estimated arrival time.

4.1.6.5 Requested altitude.

4.1.6.6 First three points in the route of flight. (RAFL RAPCON only).

4.1.6.7 Destination airport (departures only) or estimated time en-route (round robin and IFR local flight plans only).

4.1.6.8 Special information or instructions relating to hazardous cargo, DV, medical evacuation flights.

4.1.7 Royal Flights. Royal flights are either civil or military aircraft carrying members of the UK Royal Family, flights with foreign dignitaries, or heads of state. To protect these DV aircraft, the airspace surrounding the route of flight is restricted. Aircrew are responsible for filing flight plans that adhere to all Royal Flight restrictions. Refer to UK AIP ENR 1.1, 4.4 at website https://nats-uk.ead-it.com/cms-nats/opencms/en/Publications/AIP/ for information on Royal Flight procedures within the UK.

Chapter 5
GROUND OPERATIONS

5.1 Aircraft Taxiing Requirements/Routes/Restrictions

5.1.1 Aircraft Ground Operations.

5.1.1.1 All taxi operations require Tower (Ground) approval.

5.1.1.2 Any aircraft performing a taxi check must first coordinate with AMOPS prior to any ground operation. AMOPS will then coordinate with Tower and provide all pertinent information concerning taxi check operation. No flight plan is required for any taxi check aircraft.

5.1.1.3 White Apron Safety Lines are painted on all hammerheads, hardstands, access roads to taxiways and the runway at a point on the surface that will, when adhered to, ensure aircraft wing-tip clearance. No equipment or parked aircraft shall be positioned past the white lines (toward the movement area, taxiway or runway) in order to protect the path of taxiing or towed aircraft.

5.1.2 Tower visual blind spots: Taxiway Bravo, Taxiway Delta South and behind (southside) hangars 715, 711, 772, 774 and 775.

5.1.3 Taxiway Bravo between Delta South and Hardstand 31 (pinch point) is restricted to aircraft with wingspan less than 135’ due to close proximity of perimeter road. (Attachment 2).

5.1.3.1 During periods of restricted visibility of less than 1000 ft/300 meters, aircrew are responsible to coordinate with maintenance production supervisor when transitioning through the pinch-point to post personnel at both stop locations.

5.1.4 For both training and operational missions, locally assigned aircrews will not taxi until the runway visual range (RVR) is reported at or above the RVR required for takeoff. For conversion purposes, RVR 1,000’ equates to approximately 300 meters, and RVR 1,600’ equates to approximately 490 meters. All taxiing aircraft are required to have all external lights illuminated, except for blackout/NVD operations.

5.1.5 Aircraft with a wingspan greater than 133' (larger than a C-130) will not utilize Taxiway Charlie North when an aircraft is parked on the associated hardstands, unless specifically approved by the Operations Group Commander, through the Airfield Manager or designated representative. KC-135, C-5, KC-46, C-17 and KC-10 type aircraft cannot taxi on Taxiway Charlie North.

5.1.6 Tower will not authorize taxi operations for aircraft with a wingspan greater than 150’ (C-5, KC10, KC-46, C-17 and B-747 types) on Taxiway Bravo between the Southeast Hammerhead and Taxiway Charlie South. Exception for special events, wing-walker assisted (KC-10, KC-46 and C-17 types only) and towing operations must be approved by AMOPS. Heavy aircraft parking on Hardstand 65 may need to back-taxi on the runway.

5.1.7 KC-10 aircraft cannot make turns greater than 90 degrees entering or leaving parking (due to the narrow width of the taxiways) except on Hardstands 43-45 and 65. NOTE: Does not apply to KC-46.

5.1.8 KC-10 aircraft assigned parking on Hardstands 3-8, 10-12 and 14-18 must be taxied to ensure the aircraft enter those hardstands with the unloading door side of the aircraft towards the main taxiway. KC-10 aircraft may need to back-taxi on the runway or make a 180-degree turn on a hammerhead or ramp area to achieve the proper orientation. NOTE: Does not apply to KC-46.

5.1.9 KC-10 aircraft may also need to back-taxi or make a 180-degree turn on a hammerhead or ramp area to get to the active runway. NOTE: Does not apply to KC-46.

5.1.10 When visibility is less than (RVR 1000') 300 meters, all aircraft must coordinate and follow an escort vehicle to ensure uncontrolled vehicles and pedestrians are not in the taxi path. Transient aircraft may request an escort vehicle through the CP or Tower, who will request a follow-me vehicle from TA.

5.1.11 Heavy jets (e.g. C-5, B-747) should avoid using outboard engines for thrust to the maximum extent possible to minimize Foreign Object Damage (FOD).

5.1.12 CV-22 aircraft shall not hold in areas that are not concrete, unless Tower (with AMOPS approval) directs otherwise.

5.1.13 All aircraft that request departure from the Runway 28 Underrun shall taxi via Taxiway Echo to the maximum extent possible. 180 degree turns in the Runway 28 Underrun shall be limited as a last resort in an effort to reduce stress on the pavement and aircraft.

5.2 Forward Area Refueling Point (FARP) and Hot Refueling (HR)

5.2.1 FARP operations involve transferring fuel from a tanker aircraft into a receiver aircraft, with engines running on either the tanker and/or receiver aircraft. Hot refueling is the transfer of fuel from a non-aircraft source (e.g. R-11 or approved fuel support equipment) into an aircraft having one or more engines running.

5.2.1.1 Hardstand 65 is the primary FARP area. Alternate is Southeast Hammerhead.

5.2.1.2 The primary location for HR operations is Taxiway Delta North. Hardstand 65 is the alternate location when Taxiway Delta North is unavailable. HR requests will be coordinated no later than the Friday prior to the week of planned operations via current approved OSS eSSS process. Requesting agency will notify Tower at least 30 minutes prior to commencing HR operations.

5.2.1.2.1 Runway operations will be suspended when utilizing the Southeast Hammerhead for FARP/HR operations. However, FARP/HR on HS65 does NOT require suspending runway ops.

5.2.1.2.2 100 ARW KC-135 HR operations: authorized on specific Hardstands with restrictions outlined in current 100 ARW Hot Refuel Site Certification and Airfield Operations Hot Refuel Planning Airfield Map. The hot refueling areas are the “Bravo” sides of aprons 14, 15, 16, 17, 18, 21 and 26, and the "Alpha" sides of spots 18 & 21. There are no violations of the required distance criteria as outlined in TO 00-25-172, Ground Servicing of Aircraft and Static Grounding/Bonding or AFMAN 91-201, Explosive Safety Standards.

5.2.1.2.3 Tower shall ensure that all other aircraft and non-participating vehicles under their control remain out of the FARP/HR areas, and advise AMOPS when the operations begin and terminate.

5.2.1.2.4 In the event of an emergency, aircrew shall broadcast "TAXI, TAXI, TAXI" over Tower UHF frequency and aircraft shall taxi out of the area. If aircrews must egress they shall broadcast, “EGRESS, EGRESS, EGRESS”. Tower shall implement GE procedures.

5.2.2 In the event of a fuel spill, depending on its classification, FARP/HR operations shall be terminated. Tower shall activate the Primary Crash Alert System (PCAS) and initiate GE procedures.

5.3 Aircraft Engine Runs

5.3.1 All aircraft must contact Tower on the Ground Control Frequency or Ground Net prior to starting engines.

5.3.2 All maintenance engine run requests must be coordinated through MOC and then approved by AMOPS. AMOPS will notify Tower of approved engine runs.

5.3.2.1 For engine runs, 100 MOF/MOC will provide AMOPS with aircraft tail number, location, number of engines, power settings and duration. AMOPS is the approving authority.

5.3.2.2 Requesting unit or units must obtain a quiet hour waiver prior to coordinating any maintenance engine runs that will occur or extend into published quiet hours. 100 MOF/MOC or CP will notify AMOPS of all approved quiet hour waivers. NOTE: The 100 ARW/CC has delegated approval of quiet hour waivers for maintenance engine runs to 100 MXG/CC/CD/CCC. The 352 SOW/CC has delegated approval of quiet hour waivers for maintenance engine runs to 352 SOMXG/CC/CD/CCC. The 100 MOF/MOC must report any approved engine run waivers to CP.

5.3.2.3 Continuous two-way radio contact with Tower is required for safety advisories, aircraft proximity warnings and additional instructions. Tower shall notify the applicable MOC of lost communications with aircraft.

5.3.2.4 In the event Tower is closed, the applicable MOC is the approving authority for maintenance engine runs. Maintenance run crews must maintain direct radio contact with

the approving MOC. Should an emergency arise, MOC will contact the FD and CP to initiate emergency response.

5.3.3 Idle runs may be conducted on any hardstand with the following exceptions:

5.3.3.1 Hardstands 5B, 12 (facing west), 34, 35, 37: No engine operations due to close proximity to buildings, perimeter road and ILS antennas.

5.3.3.2 Hardstands 27 and 32 are authorized for engine start and immediate taxi only. Maintenance idle runs or trouble shooting are not authorized due to fume problems in buildings behind hardstand.

5.3.4 Above-Idle Engine Runs.

5.3.4.1 Exhaust blast of jet engines can be hazardous to equipment and particularly hazardous to personnel. Maintenance personnel and aircrews performing above idle engine runs must ensure personnel, vehicles, and aircraft do not pass through hazardous jet blast areas as defined by applicable aircraft TO. A ground or flight crew member will be stationed to the side of the engine being operated to warn personnel and traffic to remain clear for a minimum distance of 200' or depending on the type of aircraft involved, the distance in which jet blast dissipates to less than 35 MPH and not endanger personnel.

5.3.4.2 Above-idle engine runs may be conducted on:

5.3.4.2.1 Hardstands 18, 20, 22, 24, 58-62, and 65. When the acceptable level of explosives in the MSA are exceeded, a NOTAM will be published prohibiting the use of Hardstand 65. HS 65 can still be used for aircraft carrying hazardous cargo. NOTE: When conducting engine runs on Hardstand 65, aircraft must remain on the nose wheel marking to avoid asphalt shoulder damage. C-5, C-32 and KC-10 type aircraft are prohibited from conducting above-idle engine runs on HS 65.

5.3.4.2.2 Hardstands 43-45 may be used for above-idle runs if Hardstand 65 is not available. Use is dependent on where the aircraft is parked, what direction the aircraft is facing, proximity of other aircraft and what power settings are required. The Engine Run Team Supervisor must prior coordinate all above-idle runs with AMOPS and must ensure jet blast safety requirements are complied with.

5.3.4.2.3 Taxiway Delta South is a tactical transport taxi-track and is restricted to AFSOC C-130 operations only.

5.3.4.3 Rotary wing/tilt-rotor aircraft are authorized engine runs above idle on Taxiway Delta North. NOTE: CV-22 idle runs are approved on any spot on the CV-22 ramp with exception of spots 70, 71, 72, 73, 74 where only horizontal engine runs are authorized.

5.3.4.4 Other areas of the airfield may be used for engine runs to meet special mission needs. All requests to use an area other than those published in this instruction require prior coordination and approval by AMOPS. Any area used must meet standoff

requirements listed in AFCESA Engineering Technical Letter 07-4, *Jet Engine Thrust Standoff Requirements for Airfield Asphalt Edge Pavements.*

5.3.4.5 Rotary Wing/Tilt-rotor Hover Checks. Hover checks for maintenance may be conducted at Alpha Pad below 250' AGL. All Hover Checks require coordination with and approval from Tower. Aircraft conducting hover checks on Alpha Pad will be ready to cease checks and land at Tower's discretion because of landing traffic on final for Runway 10. Tower will advise when inbound traffic is on a 3 mile final. *PHRASEOLOGY – "(ACID), GO FLAT PITCH, (TYPE AC) 3 MILE FINAL RUNWAY 10."*

5.4 Protection of Precision Approach Critical Areas

5.4.1 Tower will protect ILS critical areas depicted in Attachment 4. Although the ILS critical areas are not considered part of the CMA, vehicles shall not loiter in these areas unless performing mission essential activities. If personnel must perform prolonged duties within the critical area, they must follow CMA access procedures.

5.4.2 ILS critical areas are identified by instrument hold lines (as depicted on the Airfield Diagram). When instructed by Tower to hold short of an instrument critical area, aircraft will not taxi and vehicles will not drive past instrument hold lines to preclude interference with ILS transmitters.

5.4.3.1 Localizer Critical Areas:

5.4.3.1.1 When the reported ceiling is less than 800 feet and/or the visibility is less than 2 miles (3,219 meters), restrict all aircraft and vehicle operations in the localizer critical area. Do not permit vehicles or aircraft to transit the localizer critical area when an aircraft on the ILS approach is inside the Final Approach Fix (FAF). Exception: A preceding aircraft, approaching the same runway or another runway, may pass through the area while landing, departing, or exiting the runway; do not allow aircraft to stop within the critical area.

5.4.3.1.2 When the reported ceiling is less than 200' or visibility is less than ½ mile (805 meters) (RVR 2640'), do not authorize vehicle or aircraft operations in or over the area when an arriving aircraft is inside 1 NM final approach.

5.4.3.2 Glideslope Critical Areas:

5.4.3.2.1 When the reported ceiling is less than 800 feet and/or visibility less than 2 miles (3,219 meters), restrict all aircraft and vehicles. Do not permit aircraft or vehicles to taxi/proceed beyond the instrument hold line when an aircraft executing an ILS approach is inside the FAF.

5.4.3.3 Although not inside of the critical area, Hardstand 35 is located past the instrument hold line on Taxiway Bravo. Aircraft parked on Hardstand 35 will be restricted from taxiing to Runway 10 until they are ready for departure when the ILS critical area is protected.

5.5 Arm/De-Arm Procedures

5.5.1 Normal operation of fighter type aircraft with any type of forward firing munitions is prohibited at RAFM; therefore, arm/de-arm activities will only be in support of in-flight emergencies or diverts.

5.5.2 Taxiway Bravo Hammerhead (southeast end) is the only arm/de-arm spot on the airfield. Aircraft must point in a direction of 287 degrees (parallel to the runway).

5.5.2.1 For Runway 10 arrivals, aircraft will exit the runway at the Southeast Hammerhead.

5.5.2.2 For Runway 28 arrivals, aircraft will complete a 180 degree turn on the concrete portion of the runway and back taxi to the Southeast Hammerhead.

5.6 Transient Alert Services

5.6.1 TA services are available 24 hours a day, 7 days a week. Available services can be found in the *Europe, North Africa, and Middle East (ENAME) Enroute Supplement*.

5.7 Aircraft Towing

5.7.1 All tow requests must be first coordinated through applicable MOC and approved by Tower prior to any operation. MOC shall notify Tower of requested tows with aircraft tail number, location and destination. The tow team supervisor will establish and maintain two-way communications with the Tower on either the Ground Control frequency or the Ground Net at all times. Prior to any aircraft movement, the tow team supervisor must request/obtain tow approval from Tower via Ground Net.

5.7.2 Any tow operation across the runway must follow CMA procedures. The crossing is considered complete when the entire aircraft in tow and any accompanying vehicles are past the hold line.

5.7.3 When the Tower is closed:

5.7.3.1 CMA procedures do not apply, however, a general radio broadcast should be made to announce intensions. Refer to Chapter 2.8.3.2 of this instruction and MILDI 13-213 for additional guidance. Prior to opening for operations, AMOPS will verify the CMA is sterilized. NOTE: Tower closure is not to be confused with suspension of runway operations and closures should be verified with AMOPS or CP.

5.7.3.2 The applicable MOC is the approving authority for aircraft tows. Personnel conducting tows will be in direct contact with appropriate MOC on applicable radio frequency at all times. Should an emergency arise, MOC will contact FD and CP.

5.7.4 White lines are painted on all hammerheads, hardstands, access roads to taxiways and the runway at a point on the surface that will, when adhered to, ensure aircraft wing-tip clearance. No equipment or parked aircraft shall be positioned past the white lines (toward

the movement area, taxiway or runway) in order to protect the path of taxiing or towed aircraft.

5.8 Airfield Inspections and Checks

5.8.1 AMOPS shall perform all airfield inspections and checks IAW AFMAN 13-204v2. Wide body and heavy aircraft do not require additional airfield checks at RAF Mildenhall.

5.9 Airfield Sweeper Operations

5.9.1 CES will ensure an airfield sweeper is scheduled to support wing flying activities. Airfield Sweeper will check in/out with AMOPS during regular duty days prior to entering or leaving the airfield. Outside of duty hours, a stand-by sweeper must be available for mission essential operations. When Stand-by sweeper is required AM will attempt to contact them via Ground Net. If no answer via radio, AM will attempt to contact the stand-by cell phone. As a last resort AM will contact FD who will have a recall roster with sweeper stand-by personnel listed.

5.9.1.1 During standby periods (nights and weekends), maximum response time by a sweeper is 1 hour. Emergency requests by an outside agency should include rank, name, unit, phone number, and area to sweep. If a request requires sweeping around aircraft or equipment, the applicable owning unit must ensure a spotter is available.

5.9.2 All airfield sweeping requests will be called into AMOPS. Requests for a sweeper should be limited to items/areas too large to be readily picked-up by hand. AMOPS will prioritize multiple requests based on aircraft operations and relay to the sweeper. Sweeper will advise AMOPS when a request is complete.

5.9.3 The goal of the sweeper schedule is to break the airfield down into daily increments to ensure the entire airfield is maintained (checked and swept as required) each work week. If, for example, Monday is a holiday, the Monday areas will be completed on Tuesday along with those daily areas. Sweeper will notify AMOPS when daily requirements are complete.

5.9.3.1 Daily. To the max extent possible, sweep runway and overruns prior to 0900L. Sweeper must contact AMOPS to notify when on airfield and to receive daily flying schedule.

5.9.3.2 Monday. Taxiway Alpha, open hardstands and airfield access points.

5.9.3.3 Tuesday. Taxiway Bravo, open hardstands and airfield access points.

5.9.3.4 Wednesday. Taxiway Charlie North and South, open hardstands and airfield access points.

5.9.3.5 Thursday. Taxiway Delta North and South, open hardstands and airfield access points.

5.9.3.6 Friday. As air traffic permits, Runway and both Overruns.

5.10 Airfield Mowing Operations

5.10.1 Airfield mowing will be accomplished IAW the contracted statement of work. Mowers must advise AMOPS of daily areas intended to be mowed and when operations for the day are complete. Mowers must comply with CMA procedures per this instruction and MILDI 13-213.

5.10.2 Airfield grass management will comply with 100 ARW PLAN 91-212, *Bird/Wildlife Hazard Reduction Plan*.

5.10.3 While the long grass program is the goal, attention will be paid to ensure grass height does not obstruct view of any airfield lighting or signs. To facilitate this, areas directly around the lights and signs (i.e., 10 foot circle) will be maintained at a height of 4-6 inches IAW the Landscape Management Contract.

5.11 Airfield Snow Removal Operations

5.11.1 Operations will be IAW 100 ARW PLAN 32-96, *Snow and Ice Control Plan.* All requests for snow removal on the airfield will be passed to AMOPS for prioritization based on flying activities. Care must be used for snow removal operations in the vicinity of NAVAIDs and the aircraft arresting systems to ensure proper system operability.

5.12 Engines Running Crew Change (ERCC)

5.12.1 351 ARS, 752 SOG and 95 RS aircraft may conduct ERCCs with Tower approval. Aircrew should expect to utilize Taxiway Bravo at Taxiway Charlie South intersection to conduct ERCCs. Tower may direct alternate locations if required.

5.12.2 Aircraft intending to ERCC must advise Tower prior to landing.

5.13 Engine Running On/Off-Loads (EROs)

5.13.1 352 SOW aircraft may perform engine running on/off-loads only in designated areas. All operations must be prior coordinated and approved by AMOPS and Tower based on current traffic. Requesting agency will coordinate with an approved modified list of all airfield users via current OSS approved eSSS process. Once approved, AMOPS will issue applicable NOTAMs.

5.13.2 Engine Running On/Off-Loads may be conducted on any available hammerhead, Taxiway B, Taxiway C South and Taxiway D South. Northern taxiways will only be utilized by CV-22 aircraft or when traffic permits with AMOPS and Tower approval.

5.14 Combat off-loads

5.14.1 352 SOW aircraft may perform combat off-loads only in designated areas. All operations must be prior coordinated and approved by AMOPS and Tower based on current traffic. Requesting agency will coordinate via current OSS approved eSSS process. Once approved, AMOPS will issue applicable NOTAMs.

5.14.2 Combat off-loads shall be conducted on Taxiway Charlie South to the max extent possible. The 352 SOW shall provide a ground crew with fork-lift to immediately retrieve and remove of the pallet to minimize airfield and taxiway restrictions.

5.14.3 If for any reason Taxiway Charlie is unavailable then the alternate combat off-load site shall be Taxiway Charlie North in a northern direction.

5.14.4 All combat off loads will be considered training missions and subject to rescheduling due to higher priority missions.

5.15 Radiation Hazards

5.15.1 MC-130J aircraft have no known radiation hazards.

5.15.2 Aircraft radar test and adjustments may be performed in the primary location at Hardstand 64 (positioned with a 110 degree heading) or the secondary location in the Runway 10 Southside Hammerhead (positioned with a 300 degree heading). A clear zone of 100' for personnel and 300' for fuel operations apply.

5.15.3 CV-22 radar tests require a 50' clear zone 60 degrees off the nose of the aircraft.

5.16 Mattress Landing Operations.

5.16.1 Mattress Landing Operations involve actual or simulated response to CV-22 emergency landings in which the aircraft will land on secured equipment designed to absorb the energy of the landing aircraft.

5.16.2 Taxiway Delta North is the primary location for training/exercise operations. The alternate location for training or exercise operations is Alpha West Hammerhead. Due to its location within the runway lateral clearance zone (Ref: USAFI 32-1007) runway operations will be suspended for the duration of the exercise if conducted on Alpha West Hammerhead. The primary location for real-world emergency landings is Alpha West Hammerhead.

5.16.3 Requesting agencies must follow appropriate coordination procedures via current OSS approved e-SSS process for training/exercise operations.

Chapter 6
DEPARTURE PROCEDURES

6.1. Standard Climb Out Procedures

6.1.1. Unless otherwise coordinated, issue: "*DEPART MILDENHALL VIA RADAR VECTORS. ON DEPARTURE, FLY RUNWAY HEADING. CLIMB TO FL100. EXPECT FURTHER CLEARANCE ONCE AIRBORNE. DEPARTURE FREQUENCY 264.575/136.5 ADVISE FIVE MINUTES PRIOR TO TAXI FOR COORDINATION OF SQUAWK." Locally assigned aircraft PHRASEOLOGY - "EXECUTE STANDARD CLIMB-OUT."* NOTE: RAFM departures enter Class G (uncontrolled) airspace. IFR clearances are not issued for the portion of flight into uncontrolled airspace. Aircraft will be instructed by Tower to maintain at or below 1,300' MSL until departure end when Tower patterns are open to protect the overhead when in use.

6.2. NUGTU Departure Procedure

6.2.1. Aircraft departing RAFM are not given a complete IFR clearance. Instead, use the following format*: "DEPART MILDENHALL VIA THE NUGTU TWO DEPARTURE AS PUBLISHED, (any altitude restriction), EXPECT FURTHER CLEARANCE ONCE AIRBORNE, ADVISE FIVE MINUTES PRIOR TO TAXI FOR COORDINATION FOR SQUAWK."* Aircraft will be instructed by Tower to maintain at or below 1,300' MSL until departure end when Tower patterns are open to protect the overhead when in use.

6.2.1.1. See currents FLIPS for current NUGTU profiles.

6.3. VFR Departure Procedures

6.3.1. All aircraft departing RAFM ATZ shall fly runway heading unless otherwise approved/coordinated with Tower.

6.4. Intersection Departures

6.4.1. Intersection departures are authorized with Tower approval.

6.4.1.1. Taxiway Charlie:

6.4.1.1.1. Runway 28: 4,100' remaining.

6.4.1.1.2 Runway 10: 4,813' remaining.

6.4.1.2. Taxiway Delta:

6.4.1.2.1. Runway 28: 1,365' remaining. Not authorized for fixed-wing departures.

6.4.1.2.2. Runway 10: 7,708' remaining.

6.4.2. Due to lack of suitable landmarks when utilizing the underrun of Runway 10 and 28 for departure, the tower cannot determine the distance between the point of departure roll and the intersection of Taxiways Alpha and Bravo. For this reason, when aircraft utilize the underrun for departure and a subsequent aircraft will be departing from the same runway at Taxiway Alpha or Bravo, the tower will apply intersection departure wake turbulence separation minima IAW FAAO 7110.65 paragraph 3.9.7.

6.5 Local Climb Out Procedures

6.5.1. Issue: *"FLY RUNWAY HEADING, CLIMB AND MAINTAIN 3,000"* as standard local climb- out instructions for all aircraft departing RAFM requesting radar vectors/climb-out to the radar pattern. Locally assigned aircraft will be issued: *"EXECUTE LOCAL CLIMB-OUT."* Aircraft will be instructed by Tower to maintain at or below 1,300' MSL until departure end when Tower patterns are open to protect the overhead when in use.

6.6. Formation Departures

6.6.1. Formation departures are authorized in visual meteorological conditions (VMC) and instrument meteorological conditions (IMC) utilizing the following procedures. NOTE: MARSA departures are not allowed at RAFM. The UK has MARSA but due to the drastic differences in services provided from USAF MARSA, the term is not used.

6.6.2. Aircraft departing RAFM separately and joining up under RAFL RAPCON control cannot be issued the same squawk by Swanwick Mil. In this case, the lead aircraft will depart on a Swanwick Mil assigned code and hold within 30 miles of RAFL below FL 190 or as directed by RAFL RAPCON. The second aircraft in the element will be assigned a local squawk code until flight join-up. Once join-up occurs, the second element will squawk standby, and the flight can then continue with the Swanwick Mil assigned squawk.

6.6.3. All aircraft in the formation cell will file a separate flight plan. Formation departures should request a single squawk from Tower if they will be remaining as a flight.

6.6.4. Aircraft will squawk as assigned by RAFL RAPCON.

6.6.5. Planned formation spacing will be no more than 30 seconds. If separation between aircraft exceeds 30 seconds, the lead aircraft will notify Tower and coordinate for separate departures.

6.6.6. The lead aircraft will confirm all formation aircraft are on RAFL RAPCON departure frequency prior to commencing takeoff roll.

6.6.7. The formation lead will communicate service request with RAFL RAPCON based on weather and/or operational requests.

6.6.8. The lead aircraft will notify RAFL RAPCON on departure frequency when commencing takeoff roll. All aircraft will notify RAFL RAPCON once airborne. RAFL RAPCON is not required to acknowledge trailing aircraft airborne radio calls.

6.7. Silent Launch Procedures

6.7.1. Silent Launch Procedures must be coordinated with the Airfield Operations Flight NLT 72 hours prior to the operation for outside agency coordination. Silent Launch will be in accordance with Silent Launch MOA.

6.8. Tactical departures

6.8.1 Reference the LOA Between the 100TH OG & 48TH OG, 100 OG KC-135 are approved Low Transition (Runway 10), Low Transition (Runway 28), Spiral Climb (Runway 10), and Spiral Climb (Runway 28). These operations are covered in depth in the LOA.

Chapter 7
ARRIVAL PROCEDURES

7.1. VFR Traffic Patterns

7.1.1. Local VFR traffic patterns and altitudes are depicted in Attachment 5. Left-hand traffic will be standard for Runway 28. Right-hand traffic will be standard for Runway 10. ATC may direct other traffic patterns as necessary due to traffic or airspace restrictions. Pattern altitudes are:

7.1.1.1. Radar traffic pattern – 3,000' MSL.

7.1.1.2. Overhead pattern – 1,800' MSL (RAFL RAPCON provides vectors to initial upon pilot request). In order to protect the 360 overhead pattern, Tower shall direct departing aircraft to cross departure end of runway at or below 1,300' MSL.

7.1.1.2.1 Approach end of the runway (first 3000') is the standard overhead pattern break point.

7.1.1.2.2. The overhead pattern will be flown at 1,800' MSL until turning base. Aircraft wishing to descend below 1,800' MSL following the break turn must request and receive approval from Tower.

7.1.1.3. Conventional rectangular pattern: 1,200' MSL.

7.1.1.4. Light aircraft/helicopter traffic pattern: 700' MSL.

7.1.1.5. Low closed pattern: 600' MSL.

7.1.1.5.1. Low closed pattern will only be used by RAFM assigned aircraft to satisfy training requirements.

7.2. VFR Weather Minima

7.2.1. Weather minimums for VFR practice approaches are:

7.2.2. Ceiling of 500' or more above the pattern altitude to be flown and 5,000 meter visibility.

7.2.3. Special VFR operations are not authorized at RAFM.

7.3. VFR Pattern Restrictions (See Attachment 5)

7.3.1. Traffic permitting, Tower may approve closed traffic patterns. In the VFR traffic pattern, on Runway 10, make crosswind turn at 1.8 DME to avoid the town of Mildenhall.

7.3.2. On Runway 28, if aircraft performance permits, make crosswind turn when clear of the field boundary to be inside the town of Isleham. If aircraft performance does not permit the above, do not turn crosswind until 3.0 DME and fly to the outside of Isleham. Other restrictions are:

7.3.2.1. The 3 DME restriction on Runway 28 is not applicable to helicopters/tilt-rotors.

7.3.2.2. The VFR traffic pattern may be restricted when RAFL is operating on Runway 06.

7.3.2.3. Helicopters/tilt-rotors may fly a shortened VFR traffic pattern within one mile of the runway.

7.3.3. When Honington is active, operations will be conducted in accordance with the Standard Operating Procedures between Lakenheath and 2 Flying Training School. Aircraft in the Mildenhall traffic pattern will be restricted to remain within 5 DME of Mildenhall and will remain in the traffic pattern unless RAFM Tower approves deviations.

7.4. IFR Traffic Patterns

7.4.1. Radar traffic pattern is 3,000' MSL. See Attachment 6

7.5. Reduced Same Runway Separation (RSRS)

7.5.1. Reduced runway separation for United States Air Forces Europe (USAFE) fighter type aircraft and C-130 aircraft shall be conducted only IAW applicable USAFE Supplement. Aircrew or air traffic controllers may refuse RSRS when safety of flight may be jeopardized. In these cases, the appropriate separation standards published in FAA JO 7110.65 are applied.

7.5.2 RSRS is not authorized when:

7.5.2.1. Either aircraft is an emergency.

7.5.2.2. Either aircraft is a heavy.

7.5.2.3. Either the succeeding or preceding aircraft is cleared for the option or a stop-and-go. EXCEPTION: RSRS is authorized when the succeeding aircraft is cleared for an option or stop-and-go behind a low approach.

7.5.2.4. The RCR is less than 12 or breaking action reports of less than MEDIUM are reported.

7.5.3. RSRS may be applied to the following:

7.5.3.1. Full stop behind a full stop, low approach, or touch-and-go.

7.5.3.2. Low approach behind a low approach. Touch-and-go behind a touch-and-go or low approach.

7.5.3.3. Low approach behind a full stop, only when the aircraft involved are fighter or attack aircraft. The succeeding aircraft will offset laterally to not overfly the aircraft on the runway.

7.5.3.4. C-130's that are member of the same formation, the succeeding C-130 must maintain at least 500' lateral or vertical separation when overflying the C-130 on the runway.

7.5.4. The minimum RSRS authorized is:

7.5.4.1. 3,000’ between the same type fighter and attack aircraft, (e.g., F-16 behind F-16 during daylight hours). EXCEPTION: 6,000’ when reported breaking action is MEDIUM.

7.5.4.2. 6,000’ between:

7.5.4.2.1. Dissimilar fighter and attack aircraft (e.g., F-15 behind an F-16).

7.5.4.2.2. Same type fighter and attack aircraft during nighttime hours.

7.5.4.2.3. A landing (single aircraft or formation) behind a formation flight.

7.5.4.2.4. A formation landing behind a full stop.

7.5.4.2.5. A C-130 and another C-130 not in formation.

7.5.5. Weather must be at or above a 500’ ceiling and 2,400 meters visibility for nighttime RSRS operations. EXCEPTION: C-130 formations may perform nighttime RSRS operations using the weather minima prescribed by AFI 11-2C1-30Jv3, and AFMAN 11-202v3.

7.5.6. RSRS standards do not apply to non-USAFE aircraft.

7.6. Breakout Procedures

7.6.1. All breakout coordination is covered in the MOU BETWEEN 100 OSS/OSAT, 100 OSS/OSAA, 48 OSS/OSAR, 48 OSS/OSAT AND 48 OSS/OSAA

7.6.1.1. Runway 28, Turn left heading 180 climb and maintain 2000’.

7.6.1.2. Runway 10, Turn left heading 330 climb and maintain 2000’.

7.6.2. Aircraft that require breakout while conducting instrument approaches to runways 10/28 and are inside the Final Approach Fix will be issued breakout instructions coordinated with RAFL RAPCON depending on traffic.

7.7. Go-Around/Missed Approach Procedures

7.7.1. Procedures shall be IAW FAA JO 7110.65, FLIPs and DAFMAN 13-204v3.

7.8. Altitude Restricted Low Approaches.

7.8.1. An aircraft making an altitude restricted low approach over vehicles, taxiing aircraft, personnel or equipment on the runway (to include over-runs) shall be instructed to maintain at or above 500’ AGL (for heavy aircraft at or above 1,000’ AGL). Tower shall inform the personnel on the ground that the aircraft will be conducting restricted low approaches over them.

7.9. Random Steep Recovery

7.9.1. Aircraft will begin 360 spiral random steep no lower than 4,000' AGL and remain within 3 NM of the field. C-130 type aircraft will advise Tower of intended approach direction. Tower will advise of any other airspace restrictions. C-130 type aircraft will roll-out no closer than .25 NM from the runway of intended landing. C-135 type aircraft will roll-out no lower than 1000' for a base, downwind or short final leg and be stabilized 300' and 1 NM from the approach end of the runway.

7.10. Random Shallow Beam Procedures

7.10.1. Tower will coordinate the use of the North Pattern with RAFL RAPCON and RAFL Tower prior to approving the Random Shallow Beam procedure.

7.10.2. Unless otherwise coordinated with Tower, Random Shallow Beam approaches will normally transit from south to north of the airfield, then circle north of the field to a left base for Runway 10 or a right base for Runway 28. Prior to starting the procedure, the aircraft will:

7.10.2.1. Request Random Shallow Beam Approach to Tower by stating "REQUEST RANDOM SHALLOW BEAM APPROACH TO RUNWAY (10/28)". If approved, Tower will state "(CALLSIGN), RANDOM SHALLOW BEAM APPROVED, REPORT (LEFT/RIGHT) BASE RUNWAY (10/28)." If unable to approve due to traffic or airspace restrictions, Tower will advise "UNABLE RANDOM SHALLOW BEAM, (STATE REASONS), SAY INTENTIONS". Aircrews will not execute a Random Shallow Beam maneuver without Tower approval.

7.10.2.2. For Random Shallow Beam approaches on the west end of the airfield, the aircraft will remain west of the ATC Tower unless otherwise coordinated.

7.10.2.3. For Random Shallow Beam approaches on the east end of the airfield, the aircraft will remain east of the ATC Tower unless otherwise coordinated. NOTE: To avoid overflying the village school, aircraft should ideally cross the airfield between Hardstand 11 and Hardstand 12.

7.10.2.4. The aircraft will remain at or above 500 ft AGL until reaching base turn.

7.10.3. Conducting tactical approaches is necessary training and must be balanced with host nation restrictions. Aircrews are responsible for avoiding over flight of built-up/populated areas in Beck Row while executing these approaches at RAF Mildenhall.

7.10.4 100 OG Random Shallow Beams are covered in an LOA Between the 100TH OG & 48TH OG

7.11. Self-Contained Approaches (SCA)

7.11.1. 352 SOW aircraft conduct approaches using self-contained, onboard navigation systems. This approach can be flown to a normal airfield marking/lighting runway, an overt or blacked-out runway, or landing zone procedures, normally to a Time of Arrival +/- 30 seconds.

7.11.2. Typically, the aircraft will maneuver to a 10 mile final and, between 1-3 NMs to touchdown, will begin a descent to land. This maneuver can also be initiated from the downwind leg (known as a turning SCA), where the aircraft will roll-out on short final at approximately 1/2 mile to touchdown.

7.12. Landing Zone Procedures

7.12.1. Typical profile is for the aircraft to initially fly a straight-in approach. Somewhere between 4 miles and 1 mile from touchdown, at an altitude between 500' and 1,000' AGL, the aircraft will normally start a descent to the landing zone and attempt to land the aircraft within the landing zone.

7.12.2. Approved personnel may set up airfield marking pattern lighting on the runway during scheduled training IAW DAFMAN 13-217 but must remove the lighting for any other aircraft arrival or departure.

7.13. Surveillance (ASR) and Precision Approach Radar (PAR)

7.13.1. ASR/PAR approaches are not available at RAFM.

7.14. Tactical Arrivals

7.14.1 Reference the LOA Between the 100TH OG & 48TH OG, 100 OG KC-135 are approved Low Transition (Runway 10), Low Transition (Runway 28), Spiral Climb (Runway 10), and Spiral Climb (Runway 28). These operations are covered in depth in the LOA.

Chapter 8
EMERGENCY PROCEDURES

8.1. Primary Crash Alarm System (PCAS)

8.1.1. The purpose of the PCAS is rapid dissemination of emergency information that affects the airfield or aircraft operations to emergency response agencies. The PCAS equipment utilizes the Single Button Crash Alert (SBCA) system.

8.1.2. Tower activates the PCAS. Agencies on the PCAS with two-way capability are Tower, AMOPS, RAFL Emergency Room, Fire Department, and Alt Fire Department.

8.1.3. The PCAS will not be modified without prior coordination with 100 OSS/OSA and approval from 100 OSS/CC.

8.1.4. RAFM Flight Surgeon office is normally available during regular duty hours, Monday through Friday. After 1600 Monday through Friday and on non-duty days, the Ambulance operates and responds out of RAF Lakenheath Emergency Room.

8.1.5. Tower shall activate the base PCAS under the following conditions:

8.1.5.1. Observing or being notified of a military or civilian aircraft crash on or off base.

8.1.5.2. When notified of a civil or military IFE landing at RAFM.

8.1.5.3. When observed or notified of a GE by a pilot, crew member or ground support personnel.

8.1.5.4. When an aircraft unintentionally departs the runway or taxiway surface during take-off, landing or taxi operations.

8.1.5.5. When an aircraft hijacking/unauthorized movement is suspected or has occurred.

8.1.5.6. When an unidentified or unauthorized aircraft lands.

8.1.5.7. When aircraft has a suspected or actual bomb on board.

8.1.5.8. Class 3 fuels spills.

8.1.5.9. When aircraft has suspected or known hot brakes.

8.1.5.10. When an aircraft is contaminated with CBRNE.

8.1.5.11. When a known or suspected bailout occurs.

8.1.5.12. When aircraft have hung ordnance, to include hot guns and hung flares.

8.1.5.13. When airborne aircraft has known or suspected radio failure.

8.1.5.14. When an aircraft indicates emergency power unit (EPU) activation or possible hydrazine leak exists.

8.1.5.15. When evacuating the Tower.

8.1.5.16. Anytime an aircraft engages an aircraft arresting system, other than for certification engagements.

8.1.5.17. When directed by CP or FD or at the discretion of the Tower.

8.1.5.18. Normally, between 0745L and 0815L for a daily line check or immediately upon opening following an airfield closure.

8.1.6. Upon activation of the PCAS, all responding crash and rescue vehicles shall not enter any portion of the CMA without contacting Tower and receiving permission to enter.

8.1.7. If AMOPS is advised of an emergency on the airfield and the PCAS has not been activated, AMOPS will activate the SCN and then call the Tower to brief them of the situation. Since all agencies on the PCAS are also on the SCN (less Tower), Tower will not activate the PCAS if the SCN has already been activated.

8.1.8. Cancellation of emergencies shall rest with the Incident Commander (IC), normally the Senior Fire Officer.

8.2. Secondary Crash Net (SCN)

8.2.1. The SCN will be activated when the PCAS is activated by Tower, when required for weather watches or warnings, when requested by Fire Department, Command Post or at the discretion of AMOPS.

8.2.2. The purpose of the SCN is rapid dissemination of emergency information that affects the airfield or aircraft operations to emergency response and support agencies.

8.2.3. AMOPS activates the SCN. Agencies on the SCN are 100 ARW/CP, 100 SFS/BDOC, 100 CES/FD, 100 OSS/WX, 100 ARW/SE, 727/ATOC, 48 FW/ER, 100 MOF/MOC, 100 ARW/Emergency Management, 100 LRS/POL and 352 SOW/MOC.

8.2.4. All stations (agencies) on the SCN must use a noise reduction feature, such as push-to-talk handsets, that filters out background noise. Each individual agency is responsible for obtaining/maintaining the noise reduction feature.

8.2.5. The SCN will not be modified without prior coordination with 100 OSS/OSA and approval from 100 OSS/CC.

8.2.6. AMOPS will test the SCN each morning NLT 0930L. Any station failing to respond will receive a phone call to determine if a problem exists. If there is a problem with the station, the agency with the problem will immediately contact 100 CS and open a work request for repair.

8.2.7. AMOPS will relay information received from Tower or another agency verbatim. Individuals answering the SCN will remain silent until poled for questions. If there are questions, the agency will identify themselves and ask their question.

8.2.8. When the SCN is out of service, AMOPS will activate a conference call with all agencies on the SCN. The backup system will be tested at least once a month.

8.3. On/Off-Base Crash Notification Procedures

8.3.1. The PCAS and SCN will be activated for all on-base crashes. Mishap response will be IAW 100 ARW PLAN 91-204, *Mishap Response Plan*, and DAFMAN 13-204v3.

8.3.2. When an off-base crash is reported to any base agency, they should immediately notify AMOPS. AMOPS will obtain details and the name and phone number of the person making the report prior to activating the SCN.

8.3.3. The IC is normally the Senior Fire Officer until termination of the Emergency Response phase. The IC exercises complete control at the scene of all mishaps on base and will work with off base officials through the unified command concept as much as possible, recognizing local jurisdiction primacy status.

8.4. In-Flight Emergency (IFE) Coordination

8.4.1. The PCAS and SCN will be activated for all IFEs.

8.4.2. Tower will notify the IC on the Crash/Fire Net when the emergency aircraft is the next aircraft to land.

8.4.3. If the Senior Fire Officer deems runway access is necessary after the aircraft lands, responding vehicles shall utilize the Crash Net to request runway entry through Ground Control. To the maximum extent possible Ground will grant approval based on the current traffic situation. The Senior Fire Officer will be responsible for all FD vehicles operating on the runway. All FD vehicles entering the runway shall monitor the Crash LMR net and be prepared to exit the runway immediately if directed to do so by the Senior Fire Officer or Ground Control.

8.5. Ground Emergency (GE) Coordination

8.5.1. The PCAS and SCN will be activated for all GEs.

8.5.2. The Senior Fire Officer, or designated representative, is in charge of ground response to GEs until the emergency is terminated. If the Senior Fire Officer deems runway access, or crossing, is necessary, responding vehicles shall utilize the Crash Net to request runway entry through Ground Control.

8.6. RAFM Emergency Frequency (UHF 307.250)

8.6.1. RAFM Emergency Frequency (UHF 307.250) is utilized for uninterrupted communication between Tower and emergency aircraft, and for communication between the FD and emergency aircraft (with Tower approval). The FD callsign for radio communications during emergency response shall be CHIEF (number), unless otherwise coordinated.

Although use of this frequency is not mandatory in all IFE situations, when it is used, the following procedures are mandatory for ATC and FD personnel:

8.6.1.1. RAFM Tower shall:

8.6.1.1.1. Monitor UHF 307.250 upon being advised of an IFE/GE.

8.6.1.1.2. Approve FD use of UHF 307.250 when the frequency is no longer needed to perform ATC functions.

8.6.1.1.3. Interrupt or terminate FD use of UHF 307.250 to continue ATC services and/or issue instructions as required. **NOTE:** Emergency aircraft have priority over other traffic conditions.

8.6.1.2. FD shall:

8.6.1.2.1. Monitor UHF 307.250 upon activation of the PCAS.

8.6.1.2.2. Not use UHF 307.250 until Tower has approved FD use.

8.6.1.2.3. Coordinate with Tower to return UHF 307.250 upon emergency termination, when no longer needed or at the request of Tower.

8.7. Autorotation Procedures

8.7.1. Auto-rotations are normally flown to the runway between 500' and 1,000' AGL unless otherwise coordinated with Tower. As such, they will be worked into the normal VFR pattern and do not require termination upon arrival of additional aircraft.

8.7.2. When a more favorable wind direction is deemed necessary, auto rotations may be flown to Taxiway Charlie South, with coordination and approval from Tower. Simultaneous runway and Charlie operations are not authorized so termination may be required if other aircraft are using the runway in use.

8.8. Hot Brakes Procedures

8.8.1. When an aircraft suspects hot brakes, the aircraft will proceed directly to the nearest hot brake area located at the Runway 28 Alpha (northeast) and Bravo (southeast) Hammerheads and Runway 10 Bravo (southwest) Hammerhead, visible in Attachment 2. If the aircraft commander intends to shut down in place and egress, they will immediately notify the Tower.

8.9. Hot Gun Procedures

8.9.1. Hot Gun refers to aircraft with a gun that is both loaded and ready to fire from the cockpit/applicable crew position.

8.9.2. Alpha Pad is the primary hot gun spot for assigned aircraft on the airfield with small-arms ammunition. Aircraft with directional weapons (helicopters/tilt-rotor) shall position the aircraft so the weapons are directed to 290 degrees. Hardstand 65 is the alternate hot gun spot for aircraft with small- arms ammunition. Aircraft with directional weapons (helicopters/tilt-rotor) shall position the aircraft so the weapons are directed to 293 degrees.

8.10. Hung Flares/Ordnance Procedures

8.10.1. Hung Flare/Hung Ordnance/Hung Gun refers to flares, ordnance or guns that have malfunctioned or misfired and cannot be confirmed secure or safe.

8.10.2. Hardstand 65 is the only fixed wing hung flare/ordnance spot on the airfield.

8.10.3. Upon arrival, aircraft will taxi the most direct means possible, at the direction of Ground Control, to Hardstand 65.

8.10.4. If Hardstand 65 is not available, the Senior Fire Officer will coordinate with the Weapons Safety Office to determine suitable parking location and then advise the Tower.

8.10.5. Tilt rotor aircraft may use Delta North or Hardstand 65 as their hung flare spot on the airfield.

8.11. Live Ordnance Jettison Procedures

8.11.1. Live ordnance jettison may be accomplished inside a UK range with permission of the range control officer. If this is not an option, jettison should be in deep water, clear of ships and oil rigs.

8.12. Airborne Fuel Dumping Procedures

8.12.1. When feasible, coordinate an area and altitude with the controlling radar facility. For 100 ARW aircraft, the current fuel dumping location is between the MLD 056/55 and the MLD 056/75 at FL 200. For 352 SOW aircraft, the current fuel dumping location is between the MLD 056/055 and the MLD 056/75 at FL100.

8.13. Aircraft Arresting System (AAS) Procedures

8.13.1. Activating the BAK-12 systems can take between 25 minutes (one cable) and 45 minutes (both cables).

8.13.2. Barrier Maintenance is responsible for activating/deactivating the cable Monday, Wednesday and Friday from 0900L to 1630L, Tuesday and Thursday from 0730L to 1630L. FD will respond to AAS activation/de-activation at all other times.

8.13.3. Tower will:

8.13.3.1. Contact Barrier Maintenance directly to connect or disconnect the cable. Notify Fire Department after normal duty hours, on weekends and holidays to connect or

disconnect the cable. Advise Barrier Maintenance/FD what AAS are needed (i.e., east or west end cables).

8.13.3.2. Notify AMOPS of cable activation/de-activation. AMOPS will respond to the airfield to conduct a runway/FOD check after the cable is activated/de-activated.

8.13.3.3. Approve Barrier Maintenance/FD access to the runway to activate or de-activate cable. Once crews take the runway to activate/de-activate the cable, runway operations will be suspended until crews have departed the runway and AMOPS has completed a runway/FOD check and resumes operations.

8.13.4. Barrier Maintenance will:

8.13.4.1. Respond immediately to activate/de-activate required cable during responsible hours. Standby personnel will respond immediately to certify the AAS as operational when notified by the FD.

8.13.4.2. Contact Tower for access to the CMA. Notify Tower when cable has been activated/de-activated and when all personnel and equipment are off the runway.

8.13.4.3. Advise Tower when AAS is operational and certified.

8.13.4.4. In case of in-flight emergencies that require cable activation, Barrier Maintenance will activate the cable and standby at the applicable BAK-12 to certify the cable if it is engaged.

8.13.4.5. Barrier Maintenance crews may enter and work in the barrier shacks during scheduled flying, other than normal inspection times, after notifying the Tower.

8.13.4.6. Report cable malfunctions/deficiencies to AMOPS and Tower.

8.13.4.7. Perform all daily inspections. Provide AMOPS a monthly schedule of all recurring maintenance so applicable NOTAMs may be published. Any maintenance where Barrier Maintenance personnel will be unable to vacate the runway within 10 minutes or less requires coordination with all required agencies via eSSS. Notify AOF/CC and coordinate annual certification engagement requirement at least 60 days prior to due date.

8.13.5. FD will:

8.13.5.1. Activate/de-activate cable outside of normal Barrier Maintenance hours, weekends, US and UK holidays or as requested in advance by Barrier Maintenance. When called to activate the cable, immediately notify the on-call Barrier Maintenance standby person to respond and certify the cable as operational. **NOTE:** The cable is not usable until it is certified by Barrier Maintenance. Outside normal duty hours, it may take up to 45 minutes for the standby person to arrive and certify the system. However, FD should be capable of activating the cables IAW the timeline prescribed in paragraph 5.16.1 of this instruction. Landing prior to certification by Barrier Maintenance will be at the pilot's own risk.

8.13.5.2. Contact Tower for access to cable and notify Tower when cable has been activated/de-activated.

8.13.5.3. Move the de-activated cable to the edge of the paved surface on the runway.

8.13.6. Emergency cable Procedures:

8.13.6.1. For emergency fighter arrivals, Tower will coordinate the AAS configuration with RAF Lakenheath SOF. For all other aircraft requiring AAS activation Tower will determine which cable will be activated or at pilot's request.

8.13.6.2. Tower will sequence traffic for successive AAS engagements with a minimum separation interval of 20 minutes.

8.13.6.3. TA personnel may provide recovery/removal of aircraft from the runway.

8.14. Jettison of External Stores

8.14.1. The jettisoning of external stores will depend upon the aircraft's location and the criticality of the emergency.

8.14.1.1. Generally, for inert ordnance, it is best to jettison external stores, if able, on EGD 207 Holbeach (MLD R-347/33 to MLD R-030/66). If unable to reach Holbeach, utilize any UK range.

8.14.1.2. Radio contact should be established with the range control agency. If radio contact cannot be established, stores may be jettisoned over water, visually clear of shipping and oil rigs. If IMC, jettison of external stores at least 3 NM out to sea under the control of a radar control agency.

8.15. Predetermined Bailout Procedures

8.15.1. Due to the characteristics of wing assigned aircraft, there is no pre-determined bailout location.

8.16. Refueling Hose Jettison Procedures

8.16.1. In the event a hose must be jettisoned on the airfield, the grass area south of the runway between Taxiway Charlie and Taxiway Delta is designated as the refueling hose jettison area.

8.17. Hydrazine Procedures

8.17.1. In the event an aircraft activates its EPU, there is a potential for a hydrazine leak. Hydrazine is a caustic substance that has the potential to cause harm if fumes are inhaled.

8.17.2. Tower will activate the PCAS, and have the pilot hold the aircraft on Taxiway Alpha hammerhead of Runway 28 or the Taxiway Bravo hammerhead of Runway 10 and face the aircraft into the wind. FD will establish a 500' cordon around the aircraft. AMOPS will conduct FOD check after incident has been declared safe by IC.

8.18. Simulated Flameout Procedures

8.18.1. Simulated flameout patterns are not authorized due to airspace restrictions and the complexity caused by adjacent airports. Note: There is SFO/PFO airspace at RAFL.

8.19. Unlawful Seizure of Aircraft/Hijack Procedures

8.19.1. In the event of a suspected or confirmed hijack, Tower will immediately activate the PCAS. Ground should first attempt to contact the pilot on ground and emergency frequencies for aircraft not authorized taxi. Airfield management will activate the SCN relaying the current position and other pertinent information. Tower will assist the IC by forwarding updated information and relaying any orders or instructions IAW *FAA JO 7610.4*.

8.20. Lost Communication Procedures

8.20.1. Ground Traffic.

8.20.1.1. Vehicles experiencing lost communication while within the CMA will immediately exit the movement area and face vehicle towards the Tower and flash headlights. The vehicle will then wait for light gun instructions from the Tower. Tower may also flash runway lights to signal vehicle to immediately exit the CMA. Vehicle operators will proceed to nearest phone and notify Tower when clear of runway or CMA.

8.20.1.2. Aircraft experiencing lost communications while on the ground will hold position, flash landing lights towards the Tower and wait for light gun instruction from the Tower.

8.20.1.2.1. If the aircraft position prohibits Tower's observation of the landing lights, the aircraft should hold position and deplane an aircrew member to establish contact with the Tower; for example, stop a passing vehicle with a radio.

8.20.1.2.2. Fighter aircraft may reposition within the hammerhead to face the aircraft towards the Tower.

8.20.2. In-flight Traffic.

8.20.2.1. Aircraft experiencing lost communication while in the Tower pattern will rock wings (daytime) or flash landing lights (nighttime) while on downwind or final and proceed to a full stop landing on last assigned runway, exit the runway expeditiously and continue to follow light gun signals.

8.20.2.2. If radio failure occurs or is suspected, squawk 7600 on the transponder and proceed via expected arrival routes. When given a flashing green light gun signal, go to the appropriate runway. Rock the aircraft's wings on receipt and watch Tower for light gun signals on final approach. A steady green light indicates clearance to land. If a steady green light gun signal is not received on final, go around and repeat the procedure.

8.20.2.3. Exit the runway after landing, turn towards the Tower and wait for an appropriate light gun signal before taxiing. Do not cross the runway during taxi unless Tower has provided the appropriate light gun signal for runway access.

8.20.3. Helicopter/ Tilt-Rotor VFR.

8.20.3.1. Helicopter/ Tilt-rotor experiencing a loss of communications while on a VFR flight plan should continue to maintain VMC. Proceed VFR to RAFM, squawk 7600, enter downwind 1 mile south of the field at 700' MSL and flash landing lights in the Tower's direction.

8.20.3.2. Follow the instructions from the Tower given by light gun signals. Upon receipt of steady green light, proceed direct to Pad Delta for full stop landing. Taxi to park after receiving the appropriate light gun signal.

8.21. Emergency Locator Transmitter (ELT) Procedures

8.21.1. When Tower receives ELT signals, they will confirm receipt with RAFL RAPCON and Distress and Diversion (D&D).

8.21.2. Tower shall advise AMOPS when an ELT is received and when the signal ceases, is located, or when additional information becomes available.

8.21.2.1. AMOPS will contact CP, TA and the MOCs for the 100 ARW, 352 SOW and 95 RS to assist with the search on RAFM.

8.21.2.2. AMOPS will notify the agencies above upon termination.

8.21.3. Tower will coordinate with UK D&D for approval when aircraft/maintenance personnel request to conduct an ELT test.

8.22. Reduced Fire Fighting Capabilities

8.22.1. FD will notify AMOPS, Tower and CP of any status change. The CP will provide all pertinent information to the 100 OG/CC who directs changes to flying operations at RAFM. AMOPS will publish appropriate NOTAMs as required.

8.23. Evacuation of Tower/Airfield Management Operations (AMOPS) Facilities

8.23.1. Tower evacuation procedures:

8.23.1.1. The 100 OG/CC has determined that there is no requirement for an alternate Tower facility.

8.23.1.2. Tower will advise RAFL TWR, RAFM AMOPS and RAFL RAPCON of Tower's evacuation and request RAFL RAPCON monitor UHF 370.250 to advise other aircraft of Tower evacuation.

8.23.1.3. Time permitting, Tower will activate the PCAS and transmit on all assigned frequencies, to include UHF 243.0 and VHF 121.5, the Tower is being evacuated and

airfield operations are suspended. Tower will advise all airborne aircraft in the pattern to contact approach control/arrival for further instructions.

8.23.1.4. All aircraft taxiing out for departure will pull into the approach-end hammer-head and monitor Tower frequency, UHF 370.250, for further instructions.

8.23.1.5. All aircraft taxiing back to parking after landing will use caution and continue to their assigned parking location (base assigned) or follow TA (Transient Alert).

8.23.1.6. Base Civil Engineer advises the maximum wind velocity for Tower is 85 knots. When winds are observed reaching 60 knots, or are forecasted within the next hour to reach 60 knots (sustained or gusts), Tower personnel will evacuate to AMOPS and the airfield will be closed.

8.23.2. AMOPS evacuation procedures:

8.23.2.1. When AMOPS evacuates, they will activate the SCN and advise that AMOPS is relocating to building 809. Until reaching the alternate location, they can be reached on the Ground Net.

8.23.2.2. Upon relocation to building 809, AMOPS will activate the alternate SCN via conference call and will advise that they can be reached at DSN 238-5764/7578. AMOPS will also notify all base and tenant flying units of their relocation and process for flight planning at the alternate location.

8.23.3. Reactivation/Opening Procedures:

8.23.3.1. Resume operations of the Tower/AMOPS at the direction of 100 ARW/CC, 100 OG/CC, 100 OSS/CC and/or AOF/CC (or designated representatives).

8.23.3.2. Request CES inspect the Tower and AMOPS for any structural damage as required.

8.23.3.3. Complete applicable facility checklists.

Chapter 9
MISCELLANEOUS PROCEDURES

9.1 Airfield Operations Board (AOB) Miscellaneous

9.1.1 The following is IAW with AFMAN 13-204v1 and is to identify and resolve problems and recommend improvements to the airfield environment, ATC services and airspace procedures. The AOB meets quarterly.

9.1.2 100 OSS/OSA prepares the AOB agenda, handles scheduling and records minutes. The agenda is distributed to board members prior to the scheduled meeting, so attendees have time to prepare for their particular discussion items. Each agenda item for discussion has a base level OPR listed.

9.1.3 Membership. The 100 ARW/CD designates the OG/CC as the chair for the AOB.

9.1.3.1 **Figure 1. AOB required attendees**

100 OG/CC	352 SOW/CC	100 MSG/CC
100 OSS/CC	7 SOS/CC	95 RS/CC
752 SOG/CC	351 ARS/CC	100 ARW/RAF
100 AMXS/CC	100 ARW/SE	48 OSS/OSA
100 OSS/OSA	USAFE/UK	100 OSS/OSW
AMC representative	100 OG/OGV	

NOTE: CCs may delegate to CVs in the event that they are unable to attend.

9.1.4 In addition to the quarterly items listed in AFMAN 13-204v1, the following annual review items will be accomplished in the quarters as indicated below.

9.1.4.1 January – March

9.1.4.1.1 Letters of Procedure

9.1.4.1.2 Special Interest Items

9.1.4.2 April – June

9.1.4.2.1 Aircraft Parking Plan

9.1.4.2.2 Air Force Inspection System Self Inspection Results

9.1.4.3 July – September

9.1.4.3.1 TERPS

9.1.4.3.2 Airfield Waiver Package

9.1.4.4 October – December

9.1.4.4.1 AICUZ (Optional item)

9.1.4.4.2 Airfield Certification and Safety Inspection Results

9.2 Notice to Air Missions (NOTAM)

9.2.1 AMOPS is the NOTAM issuing agency and the Tower is the NOTAM monitoring facility.

9.2.2 AMOPS issues NOTAMS via the Host Nation Military-Extended Aeronautical Message System (Mil-EAMS) or approved back-up systems. NOTAMs are available via the World Wide Web at https://www.daip.jcs.mil/daip/mobile/index (primary) or https://www.notams.faa.gov/dinsQueryWeb/ (alternate). A dedicated computer with access to this site as well as other DoD and Departmental Publishing Electronic Products is available in the flight planning room at AMOPS.

9.3 Flight Information Publications (FLIPs)

9.3.1 Flight Information Publications will be managed in accordance with each individual unit's Department of Defense Activity Address Code (DoDAAC) granted authority.

9.3.2 Airfield Management's Flight Information Publication manager is responsible for FLIP reviews and change requests in accordance with AFMAN 13-204v2.

9.4 Waivers to Airfield/Airspace Criteria

9.4.1 All airfield waivers, including construction waivers, shall be coordinated with the AFM IAW UFC 3-260-01 and USAFEI 32-1007.

9.4.2 Airspace waivers shall be coordinated through 100 OSS/OSA.

9.5 Prior Permission Required (PPR)

9.5.1 All transient aircraft operations require prior permission. PPRs are issued no earlier than 7 days and no later than 24 hours prior to aircraft estimated arrival. The AFM may approve PPRs outside these windows to support contingencies or long range planning of exercises. IAW AFI 10-1801, *Foreign Governmental Aircraft Landings at United States Air Force Installations*, and HAF/A3O-AYO memorandum, dated 25 Jan 2010, the AFM is the designated PPR and approval authority to allow NATO aircraft or government from any NATO country to conduct operations into/out of RAFM. All foreign flight arrivals, to include NATO flights, must be coordinated with 100 ARW/XP to ensure compliance with UK immigration requirements.

9.5.2 AMOPS issues PPR numbers for all transient aircraft.

9.5.3 NATO aircraft may conduct practice approaches or touch-and-go's without a PPR, traffic permitting. The 100 OG/CC may rescind this policy at any time based on the current FPCON.

9.5.4 All 55th Wing (55 WG) aircraft operating into or out of RAFM do not need to coordinate for a PPR to include BUSY RELAYS (down range jet swap outs) provided they accomplish the following:

9.5.4.1 Ensure coordination with the 95 RS has been accomplished through 55 OSS/ROC.

9.5.4.2 Utilize one of the following call signs: SNOOP, COBRA, OLIVE, HAWG, HOOVR, WARHK, or WNDSR. NOTE: This call sign list is not all inclusive and the use of non-standard call signs will be addressed on a case-by-case basis.

9.5.4.3 If a PPR is requested aircraft will be handled and parked at transient alerts discretion.

9.6 Bird Aircraft Strike Hazard (BASH) Program. BASH operations will be IAW 100 ARW PLAN 91-212.

9.6.1 Only the Tower or AMOPS personnel can raise the Bird Watch Condition (BWC). Contract Bird Control will make recommendations to raise or lower the BWC. Only AMOPS can lower the BWC.

9.6.2 Tower will advise AMOPS of any increase or decrease in wildlife activity. AMOPS or Tower will coordinate with Bird Control to respond and disperse the wildlife from the airfield and assist in dispersing as required. AMOPS will notify CP anytime the BWC changes.

9.6.3 Tower will relay changes to the BWC to RAFL RAPCON and include on the ATIS. RAFL RAPCON will relay the current BWC to all inbound aircraft.

9.6.4 Bird Watch Conditions:

9.6.4.1 SEVERE: Bird activity on or immediately above the active runway or other specific location representing high potential for strikes. Supervisors and aircrews must thoroughly evaluate mission need before conducting operations in areas under condition SEVERE. There will be no takeoffs, landings or approaches during BWC SEVERE unless specifically approved by the aircraft owning commander: 100 OG/CC for 100 ARW and 95 RS aircraft, 24 ERS and AMC aircraft, 752 SOG/CC for 352 SOW aircraft, and 401 AEG aircraft.

9.6.4.2 MODERATE: Bird activity near the active runway or other specific location representing increased potential for strikes. For all crews, initial takeoff and final landing are allowed only when departure and arrival routes will avoid bird activity. Multiple IFR/VFR traffic patterns are prohibited. BWC MODERATE requires increased vigilance by all. Airborne fixed-wing crews will be cautioned by tower upon issuance of clearance. If multiple landings are required, the aircraft commander will use an alternate airfield or wait for BWC LOW, unless specifically approved by the aircraft owning commander: 100 OG/CC for 100 ARW and 95 RS aircraft, 24 ERS and AMC aircraft, 752 SOG/CC for 352 SOW aircraft, and 401 AEG aircraft.

9.6.4.2.1 As an exception, IAW 352 SOW OI 11-201, 352 SOW owned/gained aircraft ALREADY AIRBORNE will evaluate mission requirements utilizing established Risk Management (RM) procedures and will advise tower of their intentions. Mission

continuation is permissible, but multiple approaches are not authorized. 352 SOW owned/gained crews AWAITING TAKEOFF mission continuation is permissible.

9.6.4.3 LOW: Bird activity on and around the airfield representing low potential for strikes.

9.7 Aircraft Priorities

9.7.1 In addition to the ATC priorities established in FAA JO 7110.65, the following local priorities will be used as a guideline for arrivals and departures at RAFM:

9.7.1.1 Emergencies.

9.7.1.2 Emergency War Order.

9.7.1.3 Any medivac aircraft when responding/transporting patients.

9.7.1.4 Alert aircraft "when requested".

9.7.1.5 Flight Inspection Aircraft.

9.7.1.6 Special Assignment Airlift Missions.

9.7.1.7 CTOT, HHQ directed missions, Priority 1 missions, etc.

NOTE: An aircraft with an issued CTOT must takeoff within a slot window of 5 minutes prior to 10 minutes after the CTOT.

9.7.1.8 Full stops.

9.7.1.9 Departures.

9.7.1.10 Practice Approaches.

9.7.1.11 ATC will afford DVs priority when practical.

9.8 Air Evacuation (AIREVAC) Notification Procedures

9.8.1 AMOPS will advise FD, Tower and RAFL RAPCON of all inbound AIREVAC aircraft.

9.8.1.1 AMOPS will request a 40 mile out call from RAFL RAPCON.

9.8.1.2 Tower will provide a 15 mile out call to AMOPS.

9.8.2 CP will coordinate any required medical support.

9.8.3 CP will notify AMOPS and FD of all outbound AIREVAC aircraft.

9.8.4 AMOPS will inform Tower when the flight plan information is passed.

9.9 Distinguished Visitors (DV)

9.9.1 100th ARW Protocol and AMOPS will maintain Bldg 669 DV lounge IAW MOU

9.9.2 100th ARW Protocol, in coordination with AMOPS and TA, determines parking locations for DV aircraft using the following guidelines:

9.9.2.1 Wide body aircraft normally park on Hardstands 43, 44, 45 facing Building 550 or facing Building 669, depending on the aircraft requirements. Facing east on Hardstand 43 is prohibited when aircraft are or will be parked on Hardstands 73 and 74. When the AMC terminal jet way is used, capable aircraft will face Building 598.

9.9.2.2 Medium size or smaller normally park on Hardstands 5. If Hardstand 5 is not available, the following Hardstands can be used with coordination with AMOPS, the allocated user and 100 ARW Protocol: 3 and 43.

9.9.3 For scheduled DV visits, 100th ARW Protocol will coordinate the parking location and aircraft servicing requirements 48 hours prior to the scheduled arrival.

9.9.4 AMOPS will advise Tower, CP, Protocol (during duty hours), BDOC, TA and RAFL RAPCON of all DV inbound/outbound flights.

9.9.4.1 AMOPS will request a 40 mile call out from RAFL RAPCON.

9.9.4.2 Tower will advise AMOPS when aircraft is 15 miles out.

9.9.4.3 CP will contact Protocol after duty hours.

9.10 Weather Dissemination and Coordination

9.10.1 RAFM weather dissemination and coordination is accomplished IAW the Letter of Agreement between 100 OSS Weather Flight (100 OSS/OSW) and 100 OSS/OSA and all applicable ATC and weather regulations.

9.10.2 Tower and 100 OSS/OSW will update their visibility charts when new reference points are erected and determined by weather to be a suitable reference marker.

9.10.3 The Airfield Automation System is the primary display for all weather information.

9.10.3.1 100 OSA/OSW will provide weather reports to Tower in case of AFAS failure.

9.10.4 When lightning is reported to be within 5 NM, or a weather watch/warning for lightning is received the Control Tower will issue the following blanket broadcast on all applicable frequencies/Nets: PHRASEOLOGY - *"ATTENTION ALL (AIRCRAFT OR VEHICLES), LIGHTNING OBSERVED/WATCH/WARNING WITHIN FIVE MILES OF RAF MILDENHALL (UNTIL TIME IF KNOWN, OR UFN)."*

9.10.4.1 When lightning is reported within 5NM no movement on the airfield is authorized until the warning has been rescinded by 100 OSW.

9.10.5 AMOPS personnel are responsible for disseminating hazardous/severe weather and lightning information via the secondary crash net, IAW AFMAN 13-204v2.

9.11 Hazardous Cargo/Explosive Laden Aircraft

9.11.1 Explosive operations will be conducted IAW DESR6055.09_AFMAN91-201, *Explosive Safety Standards*. Aircraft parking will comply with current RAF Mildenhall Tab "D-8" Map, *Explosive Data Map*.

9.11.2 Normal operation of aircraft fitted with fixed directional weapons systems with munitions that fire forward, rear, vertically, upwards (excluding chaff and flare) are prohibited at RAFM. EXCEPTION: Fighter aircraft with fixed forward-facing cannon may land at RAFM provided that no munitions are in the firing position/breech. Additionally, fighter aircraft with captive training missiles are authorized to land at RAFM.

9.11.3 Aircraft fitted with movable weapons systems; for example, helicopter guns, are to ensure there are no munitions in the firing position/breech on approach to or until clear of RAFM airspace.

9.11.4 For all fighter operations, AMOPS will verify with the crew there are no forward firing munitions and determine if they have chaff, flare or any other kind of munitions on board. If an emergency aircraft arrives with forward firing munitions, the aircraft must park on Southeast Hammerhead facing 287 degrees until the aircraft is de-armed.

9.11.5 AMOPS will advise Tower, CP, SE/SEF/SEW, SFS and FD of any aircraft movement involving explosives. Notice will include Hazardous Class/Division (HCD) and Net Explosive Weight.

9.12 Unmanned Aerial System (UAS)/drone/laser procedures

9.12.1 No UAS operations are authorized within 5KM of RAFM without prior coordination.

9.12.2 Any aircraft that observes lasing activity must report it to the Tower as soon as possible to allow Tower to run their unauthorized lasing procedures.

9.12.3 Any aircraft that observes a drone in the vicinity of RAFM must report the siting to the Tower as soon as possible to allow Tower to run their unauthorized drone procedures.

9.13 Opposite Direction Operations (ODO)

9.13.1 RAFL RAPCON is the approving authority for all opposite direction departures. NOTE: ODO are covered in MOU BETWEEN 100 OSS/OSAT, 100 OSS/OSAA, 48 OSS/OSAR, 48 OSS/OSAT AND 48 OSS/OSAA

9.13.2 RAFM Tower is the approving authority for opposite direction arrivals.

9.13.3. Aircraft conducting a circling approach will circle to the south of the runway for a left base runway 28/right base runway 10, unless otherwise coordinated with Tower. Pilots will report when commencing circle to tower. Upon commencing circle, the aircraft will be treated as an inbound to the runway it is circling to.

9.14 Airfield Blackout/Night Vision Device (NVD) Operations

9.14.1 NVD procedures are outlined in this document; however, due to the nature and inherent risk of these operations, all NVD operations will be conducted at aircrews "own risk."

9.14.2 The following areas are authorized for blackout operations: Taxiway D, Taxiway A, Taxiway C, HS 65 and the four hammerheads. NVD takeoffs/landings shall be flown only to Runway 10/28 or approved helicopter/tilt-rotor operating location as found in this instruction. *NOTE:* IAW AFMAN 13-204v2, prior to the start of NVD operations, AMOPS will conduct an airfield check of the designated runway, taxi routes, and IR lighting configurations (if applicable). At a minimum, notify the ATC Tower, 100 ARW/CP, 100 SFS/BDOC, AFM and AOF/CC will be notified if NVD operations must be suspended due to unsafe or hazardous condition.

9.14.3 Scheduling procedures. All 352 SOW night missions are considered scheduled for NVD operations. Other flying organizations should schedule operations NLT 1 week prior to the event, if possible.

9.14.4 Notification/coordination requirements. NVD operations are authorized for 352 SOW operations, but all quiet hour policies IAW USAFEI 11-201 will be followed. If 352 SOW aircraft anticipate NVD operations, either add remarks in their flight plan or via Special Operations Center (SOC) notifying AMOPS before departure. This will initiate a NVD sweep by AMOPS and Tower notification.

9.14.5 Weather requirements/Lunar illumination requirements. NOTE: Weather minimums for helicopters/tilt-rotor below are from the JSP 550 and UK Mil AIP.

9.14.5.1 Ceiling: 500' above traffic pattern altitude for fixed wing aircraft or 500' for helicopters/tilt-rotor.

9.14.5.2 Visibility: 5,000 meters for fixed wing aircraft or 3,200 meters for helicopters/tilt-rotor.

9.14.5.3 Mission planners will determine the optimum lunar conditions for NVD operations.

9.14.6 NVD aircraft will follow normal taxi routes during NVD operations.

9.14.7 Traffic patterns:

9.14.7.1 Traffic patterns will remain standard IAW paragraphs 7.1 and 7.3 of this instruction.

9.14.7.2 Additionally landing zone procedures and SCA approaches as spelled out in paragraphs 7.11 and 7.12 of this instruction can be utilized during blackout operations.

9.14.7.3 Entry/re-entry into the traffic pattern will be at those points normally utilized by non- NVD aircraft or as coordinated with Tower via RAFL RAPCON.

9.14.7.4 In the interest of aerodrome safety, NVD operations will not exceed 6 participating aircraft/helicopters/tilt-rotor in the pattern. Non-participating aircraft requesting lights "on" have priority over NVD/blackout operations.

9.14.7.5 Non-participating aircraft will not mix with participating NVD aircraft in any traffic pattern or on any CMA.

9.14.8 Vehicle operations should be kept to an absolute minimum during blackout/NVD operations.

9.14.8.1 Participating NVD vehicles are restricted to Taxiway D, Taxiway A, Taxiway C, HS 65 and the four hammerheads. Vehicles operating lights-out during periods of reduced airfield lighting must use hazard warning flashers so the Tower/aircrew can see the vehicle on the airfield prior to NVD operations. Flashers may be turned off once NVD operations begin. An additional IR strobe can be used on vehicles to assist aircrews using NVDs with identifying traffic on the airdrome.

9.14.8.2 Vehicles participating in blackout operations must remain vigilant at all times and will be restricted to 10 MPH while driving on the airfield.

9.14.8.3 Non-participating vehicles will not mix with participating NVD vehicles on any CMA. NOTE: Vehicles must maintain two-way radio communications with the Control Tower while operating within the CMA.

9.14.9 Limitations on ATC separation. Under non-standard light settings, Tower personnel may not be able to visually scan the runway environment. Additionally, controllers are unable to visually ensure participating aircraft's landing gear is down and will be unable to ensure visual separation between participating aircraft. Aircraft conducting NVD operations will land/depart at their "own risk".

9.14.10 When possible transitions in/out of blackout operations or Infrared (IR) lighting operations will take place when participating aircraft are on the ground. If this is not possible the transition point will be other than a critical phase of flight. Coordination with Tower and participating aircraft will take place prior to any lights being turned off/on.

9.14.11 Emergency "Knock it off"/Termination Procedures:

9.14.11.1 Suspend NVD operations if an airborne NVD aircraft declares an emergency. Tower will coordinate with the aircraft to determine whether to turn on or leave lights off. This would be an aircraft commander's call.

9.14.11.2 Suspend airborne NVD operations prior to a non-participating VFR aircraft entering/transitioning the Mildenhall MATZ or IFR arriving aircraft reaching 15 mile final.

9.14.11.3 Suspend NVD operations prior to a non-participating aircraft beginning taxi operations for departure.

9.14.11.4 Suspend NVD operations any time deemed necessary for safety.

9.14.11.4.1 Example for suspending NVD operations: *"ATTENTION ALL AIRCRAFT, NIGHT VISION DEVICE OPERATIONS ARE SUSPENDED/TERMINATED DUE TO (REASON)."*

9.14.12 Airfield Lighting configurations.

9.14.12.1 Tower will turn off runway, approach and PAPI lights when requested by the aircraft commander.

9.14.12.2 NVD operations will be suspended prior to turning on taxiway lights to allow non-participating aircraft to begin taxi operations.

9.14.12.3 IR Assault Landing Zone (ALZ) Lighting. When Runway 28 is in use, 352 SOW aircraft may request "assault landing zone lighting only" where all lights with the exception of the IR ALZs are turned off. The resulting lighting configuration will allow landings to a zone approximating a 3,000' runway.

9.14.12.4 Runway, approach, PAPIs and taxiway lights will be operated for non-NVD operations IAW the following:

9.14.12.4.1 IFR Arrivals: Airfield lighting will be turned on prior to aircraft reaching 15 mile final.

9.14.12.4.2 VFR Arrivals: Prior to aircraft reaching approximately 5 miles (normally base turn) from airfield.

9.14.12.4.3 For all arrivals, lights will remain on until aircraft has taxied off the landing surface and taxied to parking.

9.14.12.4.4 As soon as possible after receipt of an inbound on non-NVD aircraft from RAFL RAPCON, Tower will advise NVD aircraft the lights are required to be turned on.

9.14.12.4.5 IFR/VFR Departures: Before an aircraft begins taxi operations and until it is 5 miles from airfield.

9.14.13 Tower will state *"LIGHTS OUT"* to all arriving NVD aircraft. This will serve as a reminder to aircrews and controllers of the blackout operations.

9.14.14 Aircraft participating in NVD/blackout operations will have position/strobe lights on at all times IAW AFMAN 11-202v3 and MDS-specific regulations and T.O.s.

9.14.15 Time permitting, the following ATIS advisory will be broadcast until blackout/NVD operations are terminated: *"BLACKOUT/NVD OPERATIONS IN EFFECT."*

9.15 Paradrop/Parachute Drop Zone (DZ) Procedures

9.15.1 Parachute Drop Zone (DZ) Procedures

9.15.1.1 Reluctant DZ is depicted in Attachment 2. Reluctant DZ is located on the airfield encompassing the center of the runway and extending east to the western edge of HS 9 /10 and just west of Taxiway Delta. The dimensions are 4,860 feet long by 1,800 feet wide.

9.15.1.2 Airdrop Descriptions.

9.15.1.2.1 Standard Air Drop Training Bundle (Sand Bags). Flown between 130 to 250 knots and between 150'to 3,000' AGL, depending on type of drop simulated.

9.15.1.2.2 High Altitude Low Opening (HALO) (Personnel). Flown at 130 knots, between 3,033' MSL (3000' AGL) and FL 190 MSL.

9.15.1.2.3 Static Line Personnel. Flown at 130 knots, between 833' MSL (800' AGL) and 3,033' MSL (3000' AGL).

9.15.1.4 Weather Minima for all paradrop operations.

9.15.1.4.1 Visibility 800 meters.

9.15.1.4.2 Ceiling 300' AGL.

9.15.1.5 Coordination Requirements.

9.15.1.5.1 100 OG/CC is the final approval authority for all airfield restrictions associated with DZ operations. Once authorized, all DZ operations/activations will be complete and clear of the airfield by the restriction expiration time.

9.15.1.5.2 The squadron scheduling offices will forward all 352 RAFM DZ requests to Airfield management for coordination. Information on event will be forwarded to Airfield Management's email (100oss.osaa@us.af.mil) and ATC (100oss.osat@us.af.mil). All requests for DZ ops must be coordinated via current OSS approved eSSS process and completed NLT 4 days prior to scheduled activity.

9.15.1.5.3 For operations above 3,000' AGL (i.e., HALO), squadron scheduling offices will coordinate with Swanwick Airspace Utilization Section for activation of an Airspace Coordination Notice (ACN) no later than 3 days prior to execution, although 7 days prior is desired. Squadron scheduling office will forward a copy of the ACN to the Airfield Management and ATC organizational inbox and attach an approved ACN to their eSSS request.

9.15.1.5.4 352 SOW aircrews will contact RAFL RAPCON at 226-3bas760/2930 one hour prior to takeoff to confirm sortie details and ATC procedures.

9.15.1.6 Airfield Restrictions.

9.15.1.6.1 AMOPS will issue a NOTAM restricting the airfield to participating aircraft only. No arrivals or departures, engine start or engine runs permitted. All others can expect delays. AMOPS will make necessary notifications to outside agencies.

9.15.1.6.2 For personnel airdrops, aircraft will not have engines running or rotors turning during the restriction window. Tower will disapprove all requests for engine start beginning when the drop platform departs until the DZCO advises all jumpers are on the ground and accounted for. Aircraft with engines running must depart reserved airspace within 10 minutes following departure of the drop platform, or as soon as practicable as deemed necessary by Tower.

9.15.1.6.3 Runway operations shall be suspended after any airdrop activates until AMOPS accomplishes a FOD check and declares runway operations resumed.

9.15.1.7 Procedures/Responsibilities.

9.15.1.7.1 Airdrop aircraft shall contact RAFL RAPCON for approval to fly in for the drop as coordinated in pre-coordination forums or as in the ACN. To the maximum extent possible, ATC should allow airdrop aircraft to use its own navigation to the airdrop to allow for time-on-target training.

9.15.1.7.2 DZ run-ins begin approximately 10 miles from the field.

9.15.1.7.3 If airdrop aircraft is conducting multiple airdrops, aircraft will racetrack for the next run-in to the south of the airfield only, following published noise abatement procedures listed in this instruction.

9.15.1.7.4 Tower will observe and monitor airdrop operations and interrupt/cancel airdrop operations if it appears safety may be compromised. Aircraft shall remain under the control of Tower for separation purposes while maintaining radio contact with the DZCO until drop is complete. Aircraft will acknowledge and comply with Tower transmissions and instructions if airdrop is cancelled for safety considerations.

9.15.1.7.5 Airdrop aircraft shall contact DZCO and Tower 2-5 minutes out from the drop. DZCO will approve or disapprove the drop clearance.

9.15.1.7.6 HALO drops will comply with the ACN. IAW the ACN, the CMATZ shall be sterilized 10 minutes prior to any jump activity and until all jumpers are on the ground and accounted for.

9.15.1.8 DZCO Responsibilities.

9.15.1.8.1 The DZCO will contact Tower 5 minutes prior to operations taking place on the primary or alternate established DZ frequency (307.25/122.55). The DZCO will request access to the DZ and CMA and provide the number of vehicles used by the DZ party. The DZCO will let Tower know how many vehicles will be operating in the CMA at all times. Once approved by Tower, the DZ will be activated and all previously coordinated DZ vehicles will have unrestricted access to the DZ/CMA until operations are complete and the DZCO reports all vehicles have exited the DZ/CMA. DZCO will monitor the frequency during the entire operation. All parties retain the ability to call a 'knock-it-off.'

9.15.1.8.2 The DZCO will mark the DZ IAW DAFMAN13-217.

9.15.1.8.3 DZCO will accomplish a check of the DZ, to include the runway and applicable taxiways, to ensure the DZ is clear of non-participating personnel/vehicles. DZCO will advise Tower when the check is complete and the DZ is safe.

9.15.1.8.4 Tower will notify the DZCO if they observe non-participating personnel/vehicles enter the DZ. In this case, the DZCO is responsible for suspension or continuation of the airdrop. The DZCO will inform Tower of his decision to suspend or continue the airdrop.

9.15.1.8.5 The DZCO will control no more than one operation at a time. An operation can be a formation or multiple aircraft performing the same function (all participating event aircraft). The DZCO will only control participating aircraft. If other aircraft must enter the pattern to land or takeoff, the DZCO will relinquish control of all aircraft to Tower.

9.15.1.8.6 Upon completion of the drops, the DZCO will perform a parachute count and remove all equipment from the entire airfield. If a chute or bundle cannot be located/accounted for, the DZCO will immediately notify Tower.

9.15.1.8.7 When ground conditions are wet, the DZCO will recover all airdrop related equipment with all-terrain vehicles and trailers versus using vehicles that can rut the grass portions of the airfield.

9.15.1.8.8 In the event of an emergency during the airfield closure for the airdrop activities, the DZCO will immediately terminate activities and depart the drop zone if directed by Tower.

9.16 Unusual Maneuvers/Functional Check Flights (FCF)

9.16.1 Unusual maneuvers are maneuvers not essential to the performance of flight or which violate Federal Aviation Regulations. Unusual maneuvers include, but are not limited to, high speed passes, practice airfield attacks, and aerial demonstrations. All unusual maneuvers shall be coordinated via current OSS approved eSSS process and approved by 100 OG/CC prior to the event to ensure no United Kingdom (UK) restrictions apply. NOTE*:* 352 SOW fixed wing assets must first coordinate through the 752 SOG/CC/CD, 352 SOW/JAOC and 352 SOW/CC prior to coordination with 100 OSS/OSA.

9.16.2 Tilt-rotor Functional Check Flights will be submitted along with the daily flying schedule. Tilt-rotor FCFs will either occur in the local pattern or in a block of airspace coordinated with RAPCON, typically the following area (from surface to FL080). For a visual depiction, see Attachment 7.

9.16.3 **Figure 9.1. 352 SOW FCF Coordinates**

Northwest	N 52° 23.4’ E 000° 49.6’
North	N 52° 26.4’ E 001° 10.3’

Northeast	N 52° 26.7’ E 001° 43.9’
Southwest	N 52° 18.0’ E 000° 50.33’
South	N 52° 16.0’ E 001° 06.8’
Southeast	N 52° 16.0’ E 001° 38.4’

9.17 Drag Chutes

9.17.1 Due to the small number of drag chute-carrying aircraft transiting RAFM, no drag chute areas are designated.

9.17.2 If aircraft is unable to carry their deployed drag chute to parking, Tower will coordinate with aircrew to determine the best location to jettison the chute. Tower will prior coordinate with TA, who will standby for aircraft arrival and retrieve the chute. Tower will coordinate with AMOPS if TA is unavailable. Runway ops will be suspended for AMOPS to conduct a runway FOD check after jettison of drag chute.

9.18 Rapids Training (RT)

9.18.1 Rapids Training requests must be coordinated via current OSS approved eSSS process at least 24 hours in advance to ensure de-confliction of any other operations. Once approved, AMOPS will issue the appropriate NOTAM to restrict/alert non-participating aircraft/personnel.

9.18.2 Rapid on/off-load or "infil/exfil" training may be accomplished in conjunction with NVD training. RT entails stopping the aircraft on the runway for approximately 2 minutes for on or off loading.

9.18.3 Normally, STS members wearing NVDs, radios and other equipment will off-load several small motorized vehicles onto the paved taxiways or ramps and remain outside of the CMA.

9.18.4 From these positions, STS will set up ATC (simulated) for follow-on traffic. The STS, with the permission from Tower, may control participating aircraft on the STS frequency during subsequent landings. STS personnel will provide the STS frequency to the Tower for monitoring. STS may not control any aircraft when Tower is providing service to other air traffic.

9.18.5 AMOPS will perform a FOD check on all applicable areas when complete, before allowing other non-352 SOW aircraft to land/depart or taxi into any area where Rapids training occurred.

9.18.6 Tower Responsibilities:

9.18.6.1 Act as a safety observer while the STS personnel are controlling operations.

9.18.6.2 Tower will release a frequency to STS personnel and monitor the frequency during all operations.

9.18.7 If at any time, Tower deems it necessary to take control due to traffic, emergencies, safety, etc., Tower controller shall broadcast simultaneously on STS and Tower frequencies *"(aircraft call sign), STOP ALL OPERATIONS DUE TO (Reason)."* Tower shall take control of the aircraft until the situation has been resolved.

9.19 Unscheduled Aircraft Arrivals

9.19.1 When Tower receives notification of an inbound aircraft not previously coordinated, Tower will notify AMOPS, CP and AOF/CC.

9.19.2 If the aircraft is authorized to land, AMOPS will coordinate the arrival and then process an airfield restrictions violation for failure to obtain a PPR.

9.19.3 All DOD/GOV aircraft are authorized to utilize military installations per AFI 10-1001. If a DOD/GOV aircraft lands at RAFM without acquiring a PPR it will be processed as an airfield restriction violation (Not an Unauthorized Landing).

9.19.4 If the aircraft is not authorized to land and the aircraft continues inbound, the Tower will active the PCAS and announce the unauthorized landing. 100 ARW organizations will then comply with procedures stipulated in the 100 ARW Integrated Defense Antiterrorism Plan (IDATP)

9.20 Generator Procedures for Building 669

9.20.1 The generator for Bldg 669 (Tower/AMOPS/FD) will normally be run or tested on the 2nd Tuesday of each month at 0945L for one hour.

9.20.1.1 CES Power Production will advise Bldg 669 occupants at least 10 minutes prior to the power switch over and again prior to returning to commercial power once test is complete.

9.20.2 Should commercial power fail, and the generator not auto-start, FD will start the generator.

9.21 Airfield Exercise Participation/Coordination

9.21.1 All exercises that involve ATC or any portion of the airfield require coordination with 100 OSS/OSA no later than 48 hours prior to the exercise. Exercises requiring restrictions to any portion of the airfield must be coordinated via current OSS approved eSSS process and approved by the 100 ARW/CC or designated representative. Tower and AMOPS have the authority to determine the extent of participation once an exercise begins.

9.21.2 All exercise transmissions/messages shall be preceded by the words; *"EXERCISE, EXERCISE, EXERCISE."*

9.21.3 Runway operations during exercises.

9.21.3.1 All aircraft are considered exercise-exempt unless an exercise evaluator or aircraft commander notifies the Control Tower otherwise. Exercise-exempt aircraft will

not be delayed for exercise purposes due to real-world commitments and the need to keep traffic flowing smoothly. Any attacking aircraft will be delayed or canceled to allow exercise-exempt aircraft to depart on time, unless the pilot concurs with the delay. Simulated airfield attacks using fictitious aircraft will be delayed or cancelled to allow exercise-exempt aircraft to depart on time, unless the pilot concurs with the delay. Simulated airfield attacks using fictitious aircraft may occur within the coordinated attack window but the exercise-exempt aircraft will continue normal operations.

9.21.3.2 100th ARW/IGI will brief 100 OSS/OSA and 100 OSS/OSAA at least 48 hours in advance of exercises that involve any ATC facility or affect the airfield. 100 ARW/IGI will ensure a Tower- qualified Wing Inspection Team (WIT) member is present whenever actual aircraft are scheduled to conduct an airfield attack. The Tower WIT member will coordinate all attack details with the Tower WS.

9.21.3.2.1 Coordination of earliest/latest times that aircraft may attack.

9.21.3.2.2 Takeoff clearances will be cancelled before attacking aircraft receive permission to fly closer than 15 miles straight-in.

9.21.3.2.3 Arriving aircraft on final approach must land or depart the area before attacking aircraft receive permission to fly closer than 15 miles straight-in.

9.21.3.2.4 Jointly determine whether the attacking aircraft will remain on RAFL frequency or be on RAFM Control Tower's frequency.

9.21.3.2.5 If attacking aircraft are delayed beyond the latest window time, they will not be allowed to attack unless a new time is coordinated.

9.21.3.3 Tower will allow the Disaster Assessment Reconnaissance Team (DART) runway access as soon as possible after an attack; traffic permitting and without delaying departing aircraft unless the pilot concurs with the delay. If traffic does not allow the DART prompt access, they may drive parallel to the runway in the grass but must remain outside of the CMA at all times.

9.21.3.3.1 Unless the DART reports no damage, exercise aircraft will not normally be allowed to depart after an airfield attack until the DART can determine, plot, and pass damage information to AMOPS.

9.22 Use of RAFM by Civil Aircraft/Aero Club Operations

9.22.1 Civil aircraft operations at RAFM must comply with AFI 10-1001, *Civil Aircraft Landing Permits*, AFI 10-1002, *Agreements for Civil Aircraft Use of Air Force Airfields and AFI 10-1801, Foreign Governmental Aircraft Landings at United States Air Force Installations.*

9.22.2 AMOPS must validate civil aircraft have an approved civil aircraft landing permit and are operating per the permits purpose of use or be exempt per AFI 10-1001 prior to the

aircraft operation. The Airfield Manager is delegated the authority to endorse Civil Aircraft Landing Permits after 100 OG/CC approves the aircraft operation.

9.22.3 Any civil aircraft that declares an emergency may land at RAFM; however, if aircraft is not authorized use IAW AFI 10-1001, *Civil Aircraft Landing Permits*, the landing will be processed by AMOPS as an unauthorized landing.

9.22.4 Civil aircraft are permitted to use RAFM NAVAIDS to conduct practice approaches. Civil aircraft are restricted to low approaches unless pre-approved by AMOPS or in an emergency. The 100 OG/CC may rescind this policy at any time based on the current FPCON.

9.22.5 In order to ensure safe operations of civil aircraft and to provide safeguards to military aircraft, practice approaches are not authorized when:

9.22.5.1 The practice approach may cause the delay of mission aircraft (arrival or departure).

9.22.5.2 At any time Tower deems it necessary for flight safety.

9.22.6 RAFM does not have an aero club.

9.23 Supervisor of Flying (SOF)

9.23.1 There is a SOF position and equipment located in the Tower. It is available for use by personnel, determined by unit commander, that require close coordination between the aircraft and the Tower in order to complete a specific mission.

9.23.2 Normally, SOF personnel in the Tower will be limited to one person. During emergencies, special and unusual operations, shift changes, planned training periods, and base exercises; there may be additional personnel. In no case will the number of personnel be of such a size to interfere with ATC operations as determined by the Tower. Exceptions may be approved after coordination with the Chief Controller, AOF/CC or 100 OG/CC, as necessary.

9.23.3 FOD checks. 100 OG/CC has approved the 48 FW SOF to waive FOD checks for 48 FW aircraft ONLY. The 48 FW SOF will advise the Control Tower Watch Supervisor (WS) when they waive a FOD check for their aircraft. Tower will advise AMOPS when the SOF waives a FOD sweep for 48 FW aircraft.

9.23.4 SOF Callsigns:

9.23.4.1 Romeo: Operations supervisor for the 95 RS.

9.23.4.2 Foxtrot: 351 ARS flying information duty officer.

9.23.4.3 Red Baron: Standby instructor pilot.

9.23.4.4 Tango: Coronet launch supervisor.

9.23.5 SOF Responsibilities:

9.23.1.1 Coordinate all information and procedural requests with the Tower Watch Supervisor.

9.23.1.2 Prior to relaying advice and instructions to an aircraft over an ATC frequency coordinate with the Tower Watch Supervisor for approval. Transmit directly to an aircraft over the ATC frequency only when the SOF's advice is extremely technical or when the SOF feels relaying the information may cause an unacceptable delay, provided:

9.23.1.2.1 Transmission can be interrupted to continue ATC service.

9.23.1.2.2 ATC instructions or clearances are not issued.

9.23.1.2.3 The SOF identifies his/her position.

9.23.1.2.4 Transmissions are limited to information essential to preventing a mishap.

9.23.1.3 Coordinate with the Tower Watch Supervisor for approval to use ATC communications equipment if the SOF console becomes inoperative.

9.23.1.4 When in the SOF vehicle and normal communications with Tower are required, the SOF shall use the Ground net to the maximum extent possible to contact Tower.

9.23.1.5 Coordination between the SOF and adjacent ATC facilities (i.e., RAFL RAPCON) should be conducted through the Tower Watch Supervisor. This will allow proper ATC coordination and will provide better mission support.

9.23.6 Tower Responsibilities:

9.23.6.1 Preface transmissions requested by the SOF with, *"SOF ADVISES/DIRECTS..."*

9.23.6.2 Not normally answer incoming calls on the SOF telephone lines. Tower will provide a headset for the SOF to use at the console.

9.23.6.3 Not release any SOF equipment to maintenance for preventive maintenance unless they are able to provide another position to an oncoming SOF with the same equipment capability.

9.24 Movement of Aircraft

9.24.1 Tower will relay all aircraft landing and takeoff times to AMOPS. AMOPS will relay to applicable command and control agencies.

9.24.2 Tower will immediately contact AMOPS for any inbound aircraft that does not have a flight plan on file.

9.25 Human/Dignified Remains (HR) Transfer

9.25.1 Upon Notification of a Human/Dignified Remains Transport operation, AMOPS shall issue an appropriate NOTAM at the HR location. This is to ensure aircrews are aware of the transfer times for flight planning purposes and possible delays in the vicinity of the area in which the transport shall take place.

9.25.2 Tower will attempt to take the following actions to respect the transfer operations:

9.25.2.1 Make appropriate notifications via LMRs, frequencies, and landlines for start/finish of operation.

9.25.2.2 Practice approaches will not be authorized during transfer operations.

9.25.2.3 Deny engine starts/runs and taxiing of aircraft in the immediate vicinity of the transfer operations with the exception of operations listed below.

9.25.2.4 Ground movement operations will be limited to priority movements within the vicinity of any HR operations.

9.25.3 At no time shall the missions listed below be denied arrival, engine start, or departure during the transfer of Human/Dignified Remains. The intent is to mitigate operations in the immediate vicinity to lend respect to the transfer but not impede HHQ mission requirements.

9.25.3.1 Emergencies

9.25.3.2 HHQ Missions/Priority 1 missions

9.25.3.3 DV operations

9.25.3.4 Divert Aircraft

9.25.3.5 The ATC Watch Supervisor on duty shall use their best judgement when determining operational priority and courses of action to limit delays and maximize noise abatement.

9.26 Host Nation Farming Operations

9.26.1 There are no agreements or procedures with regard to host-nation farming operations on or near RAFM.

GARLOW.RYAN.J.1128162654 Digitally signed by GARLOW.RYAN.J.1128162654 Date: 2024.11.18 13:24:38 Z

RYAN J. GARLOW, Colonel, USAF
Commander, 100th Air Refueling Wing

Attachment 1

GLOSSARY OF REFERENCES AND SUPPORTING INFORMATION

References Cited

AFI 10-1001, *Civil Aircraft Landing Permit*, 23 August 2018

AFI 10-1002, *Agreement for Civil Aircraft Use of Air Force Airfields*, 8 August 2018

AFI 10-1801, *Foreign Governmental Aircraft Landings at United States Air Force Locations*, 25 September 2018

DAFI 10-2501, *Emergency Management Program,* 16 October 2023

AFI 11-201, *Flight Information Publication,* 30 November 2018

AFMAN 11-202v3, *Flight Operations,* 10 January 2022

AFI 11-208, *Department of Defense Notice to Airmen System,* 13 February 2018

AFMAN 11-218, *Aircraft Operations and Movement on the Ground,* 5 April 2019

AFI 11-235, *Specialized Fueling Operations*, 31 May 2019

AFMAN 11-255v3, *Flight Manager Responsibilities and Procedures*, 16 November 2023

AFMAN 13-204v1, Management of *Airfield Operations*, 22 July 2020

AFMAN 13-204v2, *Airfield Management*, 22 July 2020

DAFMAN 13-204v3, *Air Traffic Control*, 22 July 2020

AFMAN 13-204v4, *Radar, Airfield and Weather Systems*, 22 July 2020

DAFI 13-213, *Airfield Driving,* 4 February 2020

DAFMAN 13-217, *Drop Zone, Landing Zone, and Helicopter Landing Zone Operations*, 22 April 2021

DAFI 91-202, *The Department of the Air Force Mishap Prevention Program,* 20 March 2020

DAFMAN 91-223, *Aviation Safety Investigations and Reports,* 20 September 2022

DESR 6055.09_DAFMAN 91-201, *Explosives Safety Standards,* 28 May 2020

Tab D-8 Map, *Explosive Data Map*, 3 February 2020

USAFEI 32-1007, *Airfield and Heliport Planning and Design,* 6 October 2021

UFC 3-260-01, *Airfield and Heliport Planning and Design*, 4 February 2019

UFC 3-260-04, *Airfield and Heliport Marking*, 16 May 2018

UFC 3-535-01, Visual Air Navigation Facilities, 11 April 2017, Change 4, 25 April 2023

Prescribed Forms

None

Adopted Forms

AF IMT 457, *USAF Hazard Report*

AF IMT 483, *Certificate of Competency*

AF IMT 651, *Hazardous Air Traffic Report (HATR)*

DAF Form 3616, *Daily Record of Facility Operation*

AF IMT 3622 (PA), *Air Traffic Control/Weather Certification and Rating Record (LRA)*

DD Form 175 (PA), *Military Flight Plan*

DD Form 1801, *DoD International Flight Plan*

Abbreviations and Acronyms

100 ARW/CC—100th Air Refueling Wing Commander

100 OSS/OSA—Airfield Operations Flight

752 SOG—352 Special Operations Group

AAS—Aircraft Arresting Systems

ACN—Airspace Coordination Notice

AFM—The Airfield Manager

AGL—Above Ground Level

AIREVAC—Air evacuation

AM—Airfield Management

AMC—Air Mobility Command

AMOPS—Airfield Management Operations

AOB—Airfield Operations Board

ARW—Air Refueling Wing

ASR—Surveillance

ATC—Air Traffic Control

ATCALS—Air Traffic Control and Landing Systems

ATIS—Automatic Terminal Information System

ATZ—Aerodrome Traffic Zone

BASH—Bird Aircraft Strike Hazard

BDOC—Base Defense Operations Center

BWC—Bird Watch Condition

CE—Civil Engineer

CES—Civil Engineering Squadron

CMA—Controlled Movement Area

CP—Command Post

CTOT—Calculated Take-off Time

CWR—Clean water rinse

DART—Disaster Assessment Reconnaissance Team

DV—Distinguished Visitor

DZ—Parachute Drop Zone

DZCO—Drop Zone Control Officer

EBOT—Estimated Block Out Time

ELT—Emergency Locator Transmitter

ERCC—Engines Running Crew Changes

FAA—Federal Aviation Administration

FAF—Final Approach Fix

FARP—Forward Area Refueling Point

FCF—Functional Check Flight

FD—Fire Department

FLIP—Flight Information Publication

FOD—Foreign Object Damage

FPCON—Force Protection Condition

GAT—General Air Traffic

GE—Ground Emergency

HALO—High Altitude Low Opening

HIRL—High Intensity Runway Lights

HLZ—Helicopter Landing Zone

HR—Hot Refueling

IAW—In accordance with

IC—Incident Commander

IFE—In Flight Emergency

IFR—Instrument Flight Rules

ILS—Instrument Landing System

JO—Joint Order

IMC—Instrument Meteorological Conditions

LMR—Land Mobile Radio

MATZ—Mildenhall's Military ATZ

MOC—Maintenance Operations Center

MOD—Ministry of Defense

MXG—Maintenance Group

NATO—North Atlantic Treaty Organization

NEW—Net Explosive Weight

NM—Nautical Mile

NOTAM—Notice to Airmen

NVD—Night Vision Device

OAT—Operational Air Traffic

OG—Operations Group

OPR—Office of Primary Responsibility

OSS—Operations Support Squadron

PAPI—Precision Approach Path Indicators

PAR—Precision Approach Radar

PCAS—Primary Crash Alarm System

PMI—Preventative Maintenance Inspection

POV—Privately Owned Vehicle

PPR—Prior Permission Required

RAF—Royal Air Force

RAFL—RAF Lakenheath

RAFM—RAF Mildenhall

RAPCON—Radar Approach Control

RAWS— Radar, Airfield, Weather Systems

RCR—Runway Condition Reading

RS—Reconnaissance Squadron

RSRS—Reduced Same Runway Separation

RT—Rapids Training

RVR—Runway Visual Range

SCA—Self-Contained Approaches

SCN—Secondary Crash Net

SFL—Sequenced Flashing Lights

SFS—Security Forces Squadron

SOG—Special Operations Group

SOF—Supervisor of Flying

STS—Special Tactics Squadron

TA—Transient Alert

TACAN—Tactical Air Navigation

TDZL—Touchdown Zone Lighting

TERPs—Terminal Instrument Procedures

T.O.—Technical Order

UHF—Ultra High Frequency

UK—United Kingdom

US—United States

USAFE—United States Air Forces Europe

VFR—Visual Flight Rules

VHF—Very High Frequency

VMC—Visual Meteorological Conditions

WS—Watch Supervisor

Terms:

Air Traffic Control (ATC)—Mildenhall ATC to include, Control Tower Watch Supervisor (WS), Controller, Local Control (LC), Ground Control (GC), Flight Data, 100th Operations Support Squadron/Airfield Operations Flight (100 OSS/OSA), and AOF/CC. ATC shall be inclusive of all ATC facilities and functions at RAF Mildenhall.

Airfield Management (AM)—RAF Mildenhall, Airfield Manager (AFM), or a designated representative from AM, 100 OSS/OSAA, Assistant Airfield Manager (AAFM), and 100 OSS/OSAA.

Airfield Operations Flight Chief (AOF/CC)—Airfield Operations Flight Commander, 100 OSS/OSA, responsible for RAF Mildenhall Air Traffic Control (ATC), Airfield Management (AM) and RAWS. The AOF is responsible for administration and enforcement of the provisions in this instruction.

Authorized Vehicle—An approved government, civilian or commercial contractor‘s vehicle, authorized to operate on the airfield by AM.

Ground Emergency (GE)—An incident occurring on the aerodrome, which presents a clear and present danger to an aircrew, aircraft, ground maintenance personnel, or any other aircraft support equipment or facility.


In—Flight Emergency (IFE)–An in-flight malfunction or problem which makes safe continuation of the flight uncertain or which presents a clear and present danger to the aircrew or aircraft.

Physiological Incident—A physiological condition of the aircrew or passengers, which requires termination of the flight and requires the assistance of medical personnel.

Unauthorized Aircraft Movement—Aircraft movement without valid operational clearance, or notice/approval of operation for maintenance and specific approval from an authorized ATC agency for any movement.

Wing—100th Flying Wing, including all Wing assigned aircraft and personnel.

Attachment 2
AIRFIELD DIAGRAM

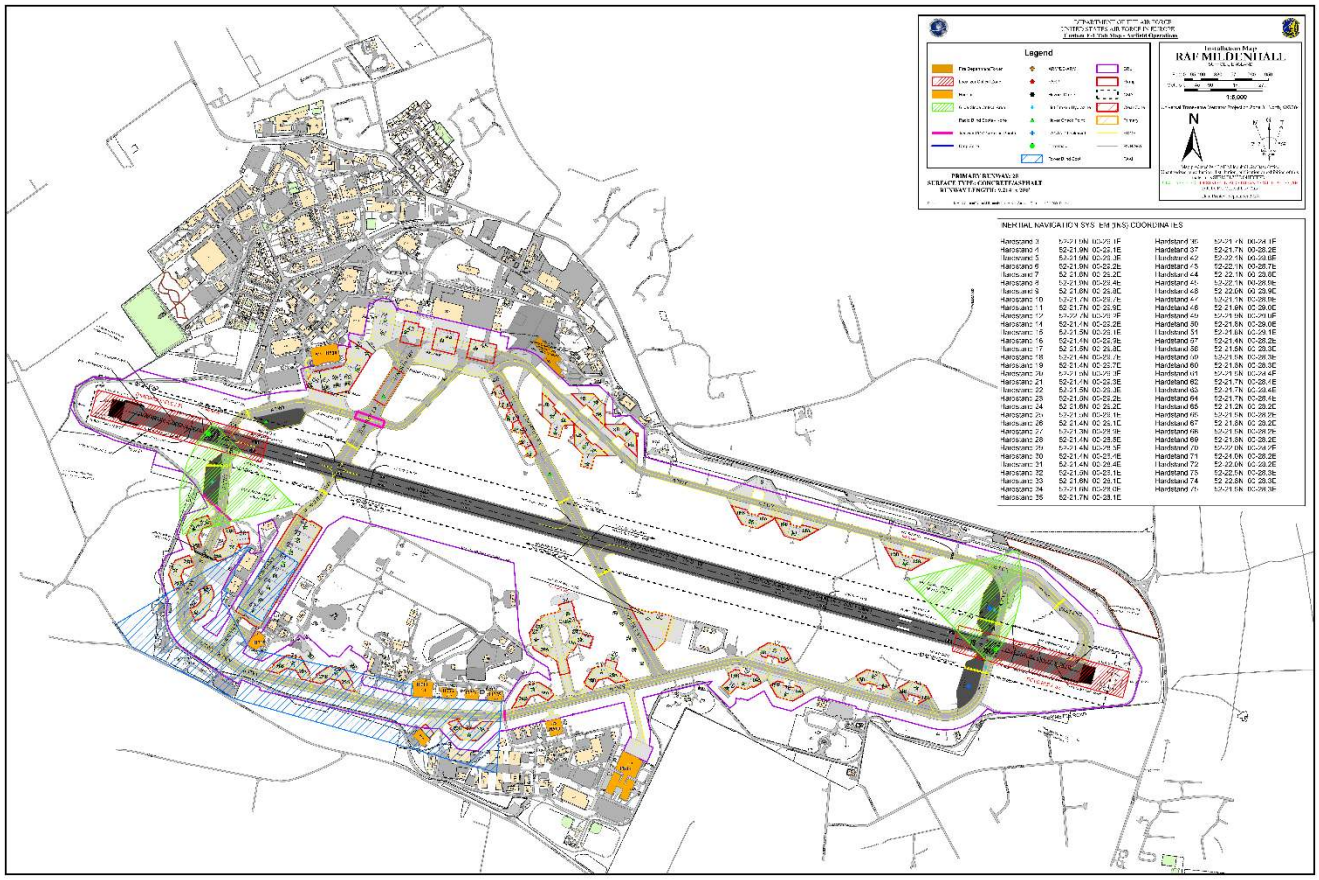

NOTE: For a high-definition picture please copy the following link into an approved web browser:


E-1_Airfield_Operations_1_5000_D 3 Sep 24.pdf

Attachment 3


RADIO FREQUENCIES

AGENCY	UHF	VHF
Local Control	370.250	122.550
Ground Control	337.975	121.800
ATIS	282.025	N/A
RAFM Emergency	307.250	N/A
RAFL Departure	264.575	N/A
RAFL Approach	275.825	136.500
RAFL Arrival	369.800	136.500
RAFL Tower	373.775	137.100
Pilot to Dispatch	308.850	131.975
Pilot to Metro	284.425	N/A
Command Post	300.800	N/A
MATZ	234.675	128.900

Attachment 4
PRECISION APPROACH CRITICAL AREAS

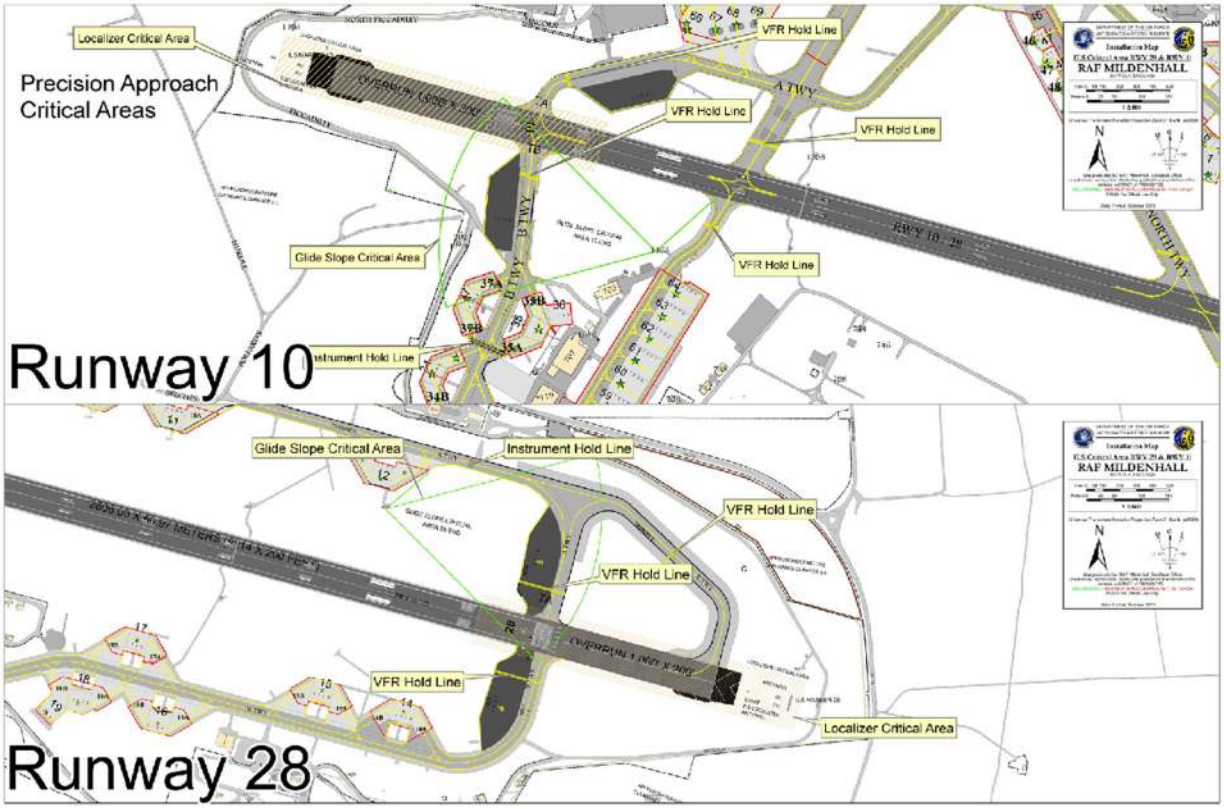


Attachment 5
VFR TRAFFIC PATTERNS/CV-22 TRAFFIC PATTERNS

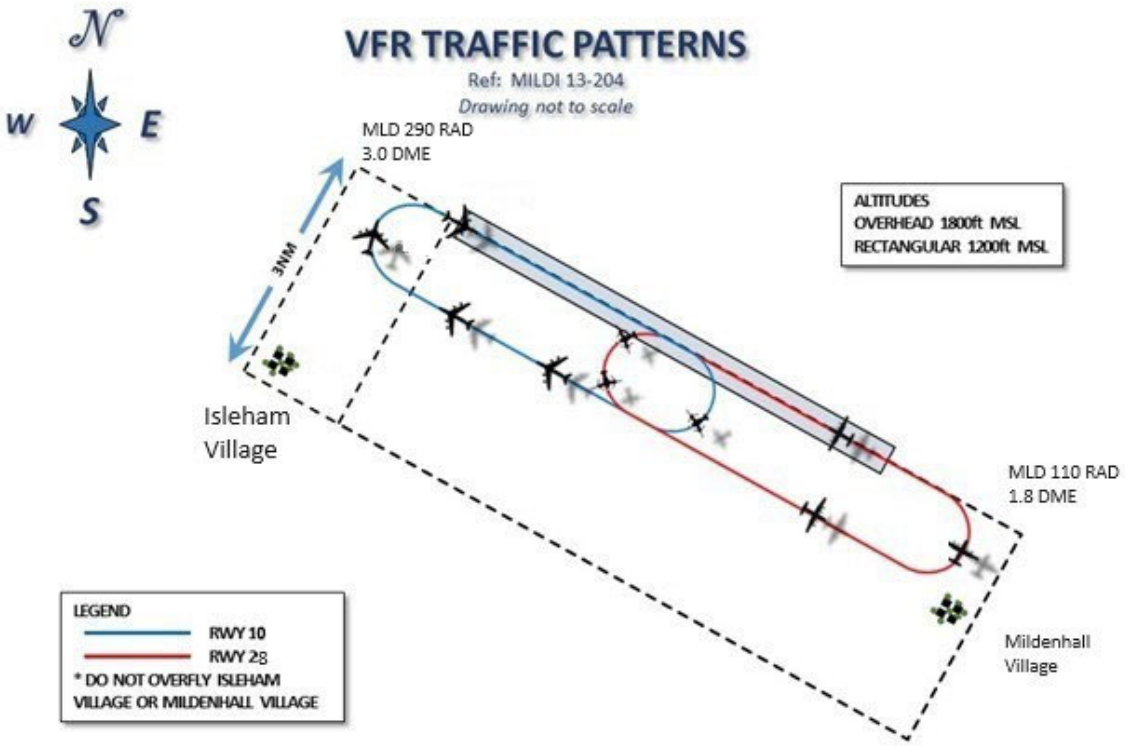

BLUE: CV-22 VTOL Pattern **Red: CV-22 APLN Pattern**

Attachment 6


RAF MILDENHALL/RAF LAKENHEATH RADAR TRAFFIC PATTERNS

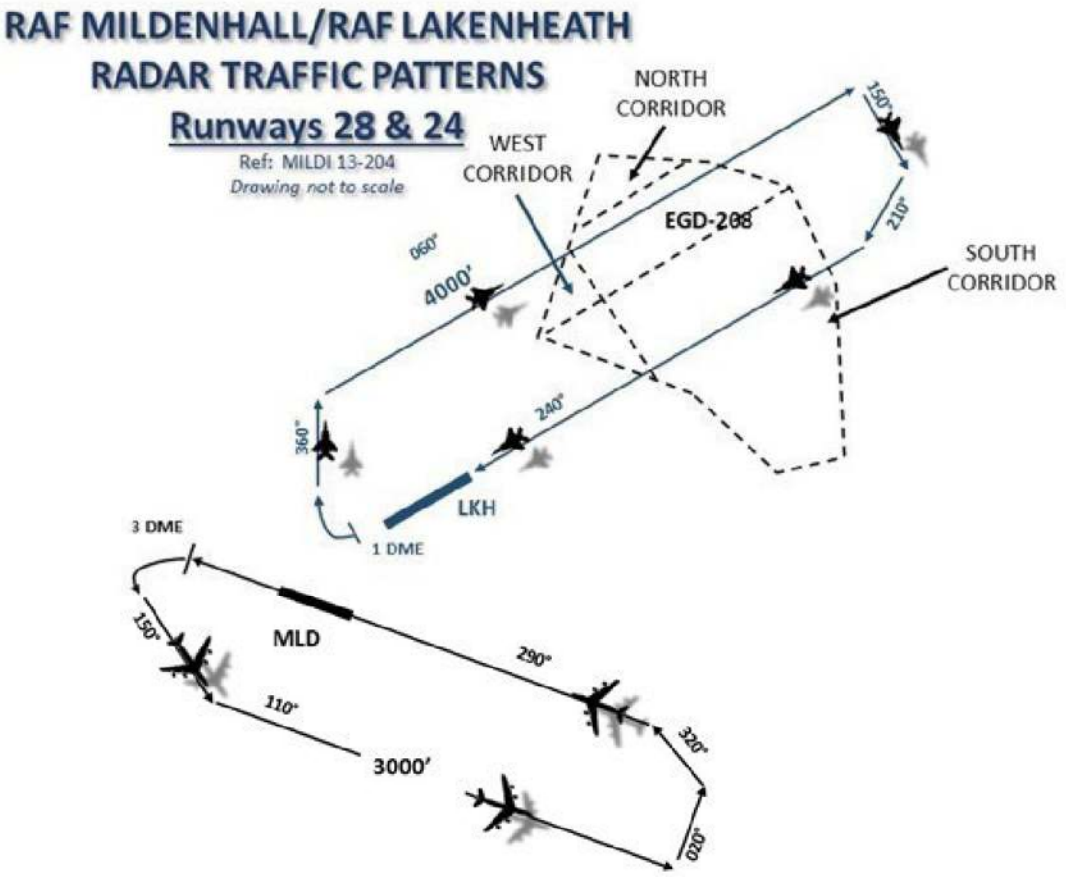


RAF MILDENHALL/RAF LAKENHEATH
RADAR TRAFFIC PATTERNS
Runways 10 & 06

Ref: MILDI 13-204

Drawing not to scale

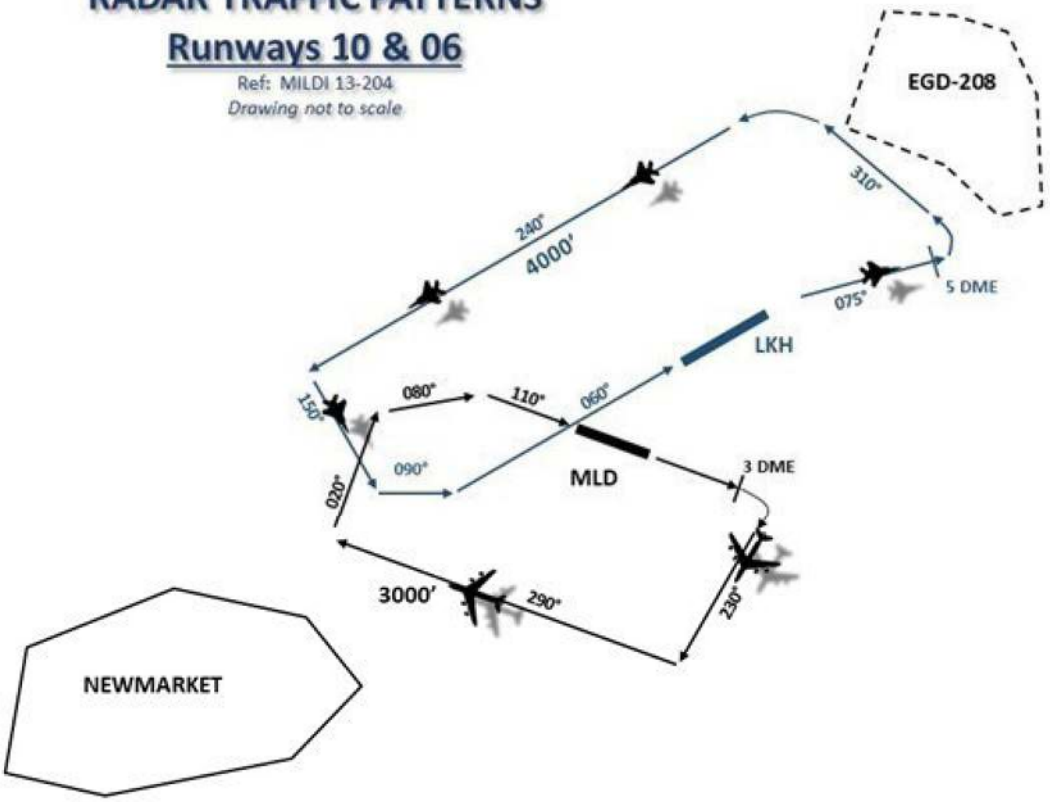

Attachment 7
TILTROTOR FCF AREA

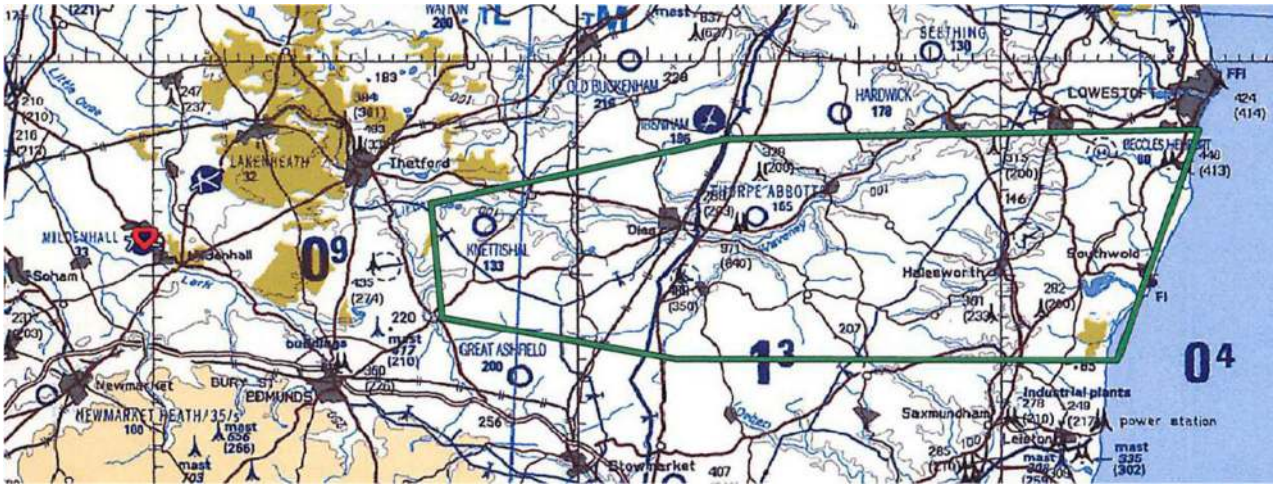

Green box: FCF area