

Corevanta User Manual

Version 1.0
04/2026

Index

Administrative

Importing Control System Databases

Honeywell TDC Control System Files

Allen Bradley PLC-5 Import

Allen Bradley Logix Import

Modicon PLC Import

Experion Connection Import


OPC Integrator Import

HMIWeb Graphics Import

PI Import

Export Point Details

Administrative



New starts a new, blank project. A save option is offered if any recent work has not been saved.

Password allows for password protecting sensitive or proprietary control system information.

Undo Import undoes the last import.

Importing Control System Databases

Honeywell TDC Control System Files

- 1) Import EB Files for Honeywell TDC Control Systems
 - a) Corevanta includes a solution that can generate the necessary EB files for Honeywell TPS imports from a checkpoint. The application is called LCN to EB. Browse to the location of a .LCN checkpoint backup file and select Run Import

LCN to EB

LCN Backup File

Export Folder

☒ Overwrite output if it exists ☐ Include all entity types (less filtered)

Import Log

Ready.

- b) After LCN to EB finishes generating the EB Files, Corevanta can import the TDC database by selecting Import EB Files and navigating to the export folder chosen in 1a. Select all EB Files that were generated.
- 2) The LCN to EB application cannot convert CL files from checkpoints. In order to import AMCL and PMCL files from the TDC database, the .CL files will have to be manually copied from Honeywell File Transfer to the computer with Corevanta installed. The files can then be imported by selecting Import CL Files and selecting all relevant CL files.

Allen Bradley PLC-5 Import

AB PLC5 Import Files

PLC Name

Connection Type: EPLCG + HPM

HWYNUM

HWY Box Number

Node Address

PLC5 File Address

Serial Interface

HPM Number

HPM Module

DEVADDR

Hardware File

Browse...


Ladder XPS Files

Add Files... Clear

Import Cancel


1. Hardware File Import:

- Open the respective PLC-5 program in RSLOGIX 5, select File>Report Options
- For the Hardware File import, select the I/O Configuration item in the below screenshot
- Select Print
- Select Microsoft Office XPS Document Writer for printer
- Save as Hardware.XPS
- Select Browse beside Hardware File, navigate to, and select the saved Hardware.XPS file

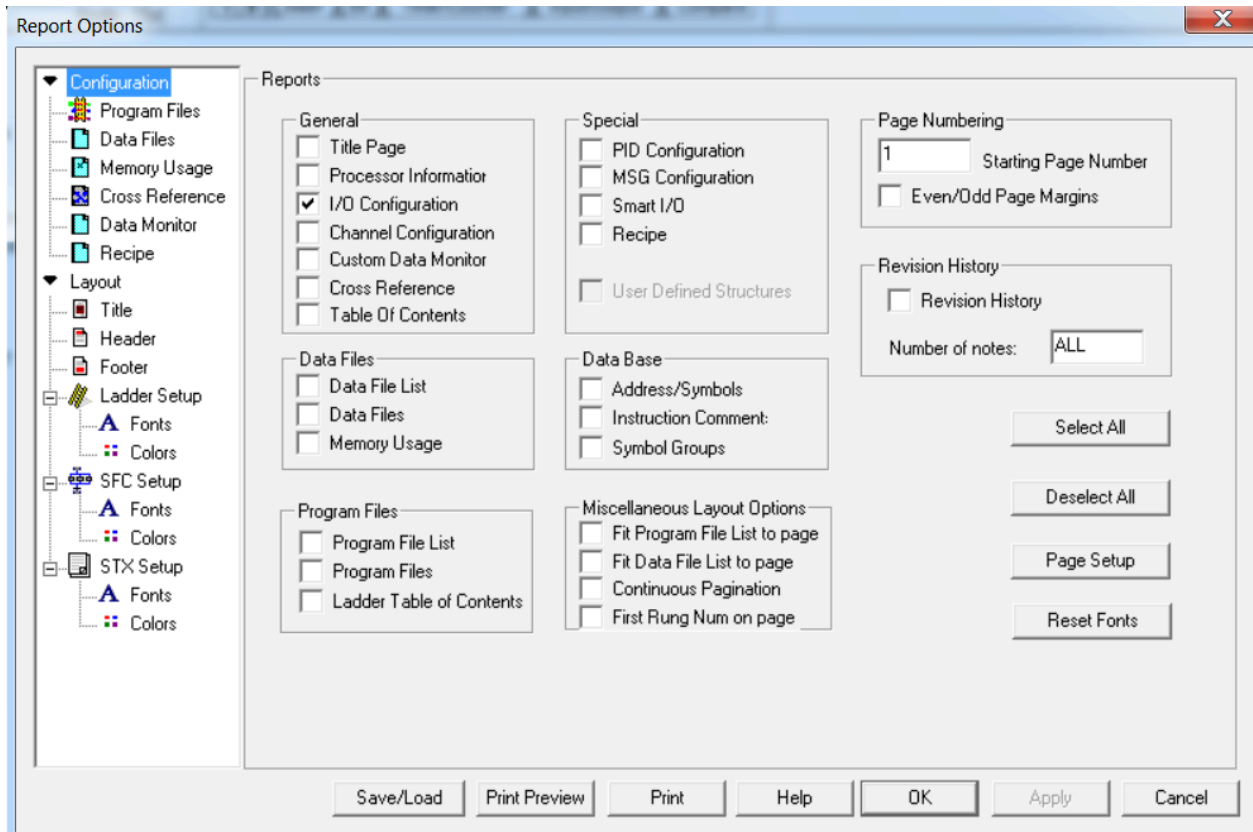

2. Ladder XPS Files:

- a. Open the respective PLC-5 program in RSLOGIX 5, select File>Report Options
- b. For the Ladder XPS Files import, select Program Files, Program File List, Ladder Table of Contents, and Cross Reference.
- c. Select Print
- d. Select Microsoft Office XPS Document Writer for printer
- e. Save as Program.XPS
- f. Select Browse beside Ladder XPS Files, navigate to, and select the saved Program.XPS file

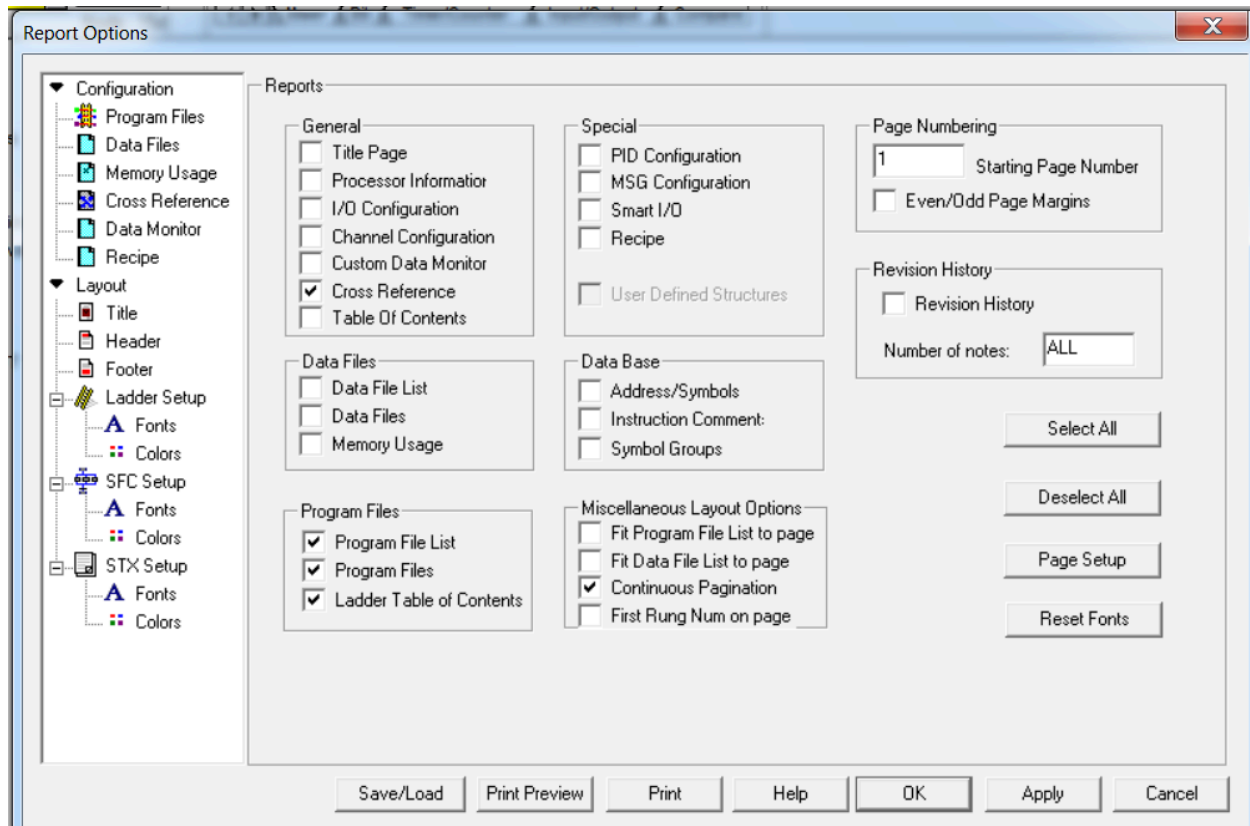

3. The PLC-5 Import allows for the selection of EPLCG, Serial Interface, or both (EPLCG and HPM). Select the appropriate option for your DCS.
4. If your PLC 5 communicates with multiple HWY Box numbers, separate the numbers with a comma.
5. Fill in the rest of the fields in the AB PLC5 Import Fields dialog to match your DCS/PLC-5 Configuration and select Import.

Allen Bradley Logix Import

AB Logix Import Files

PLC Name

Connection Type

EPLCG + HPM

HWYNUM

HWY Box Number(s)

Node Address

PLC File Address

Serial Interface

HPM Number

HPM Module

DEVADDR

Hardware XPS

Browse...

Program XPS

Browse...

Tags XPS

Browse...


Expected files: Hardware.xps, Program.xps, Tags.xps

Import

Cancel


1. Hardware XPS:

- Open the respective Logix family PLC program In RSLogix 5000 or Studio 5000 Logix Designer, select File>Generate Report
- For the Hardware XPS Import, on the left tree, deselect everything except the I/O configuration items
- Select Print
- Select Microsoft Office XPS Document Writer for printer
- Save as Hardware.XPS
- Select Browse beside Hardware XPS, navigate to, and select the saved Hardware.XPS file

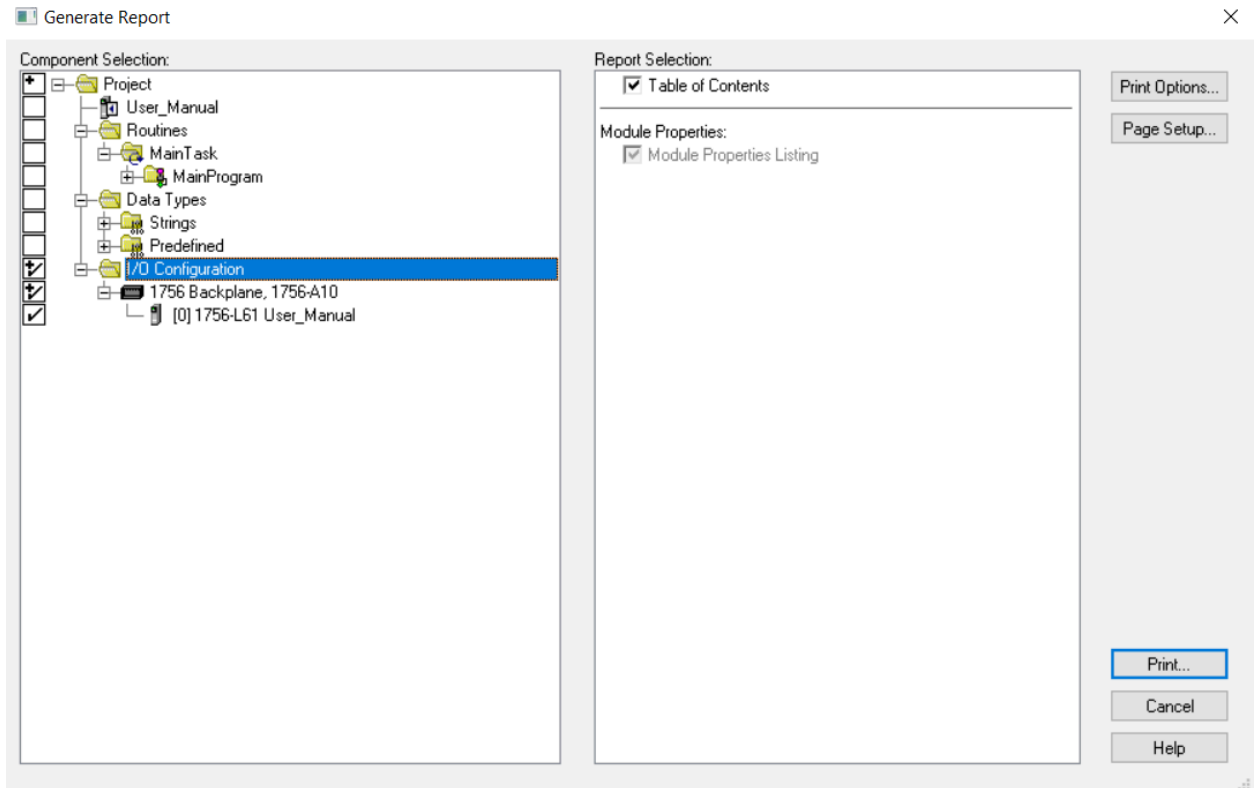


2. Program XPS:

- a. Open the respective Logix family PLC program in RSLogix 5000 or Studio 5000 Logix Designer, select File>Generate Report
- b. For the Program XPS Import, on the left tree, select routines. On the right tree, select Controller Organizer Listing, Routine Listing, and Tag Listing for Routine
- c. Select Print
- d. Select Microsoft Office XPS Document Writer for printer
- e. Save as Program.XPS
- f. Select Browse beside Program XPS, navigate to, and select the saved Program.XPS file

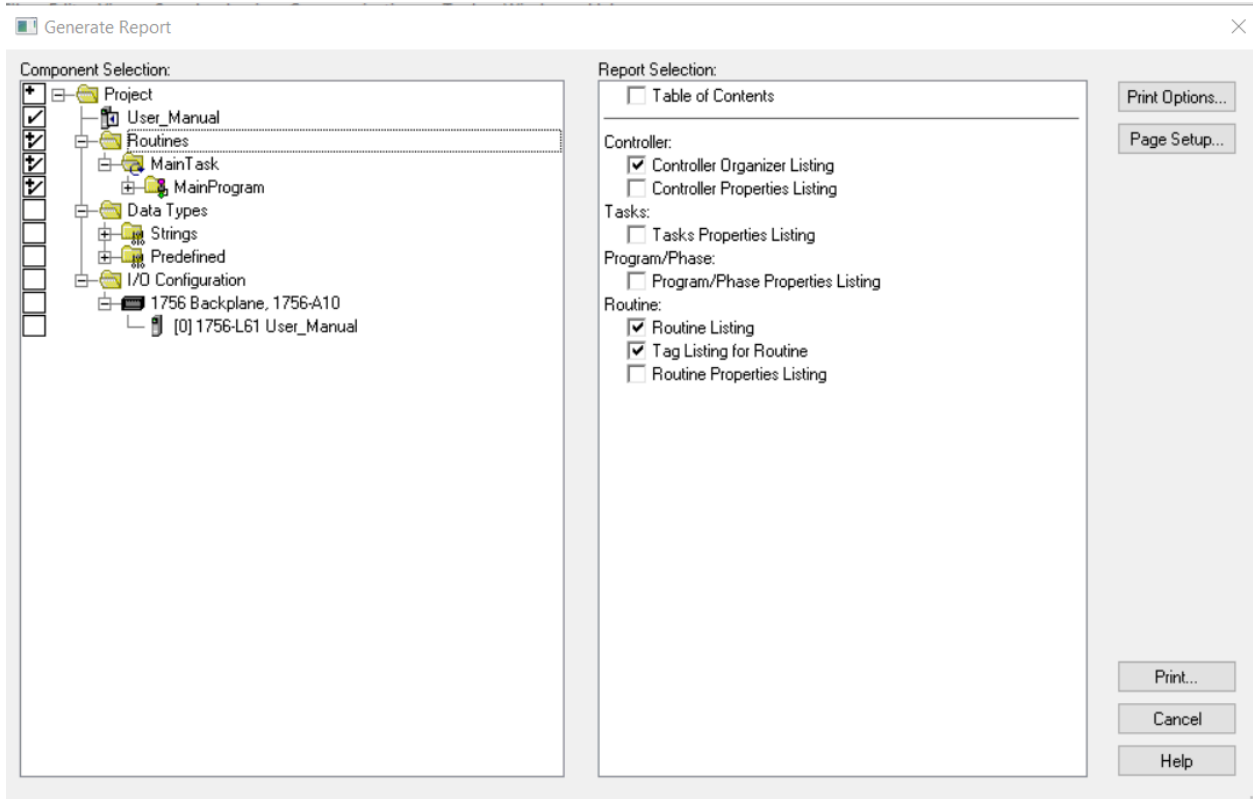

3. Tags XPS:

- a. Open the respective Logix family PLC program In RSLogix 5000 or Studio 5000 Logix Designer, select File>Generate Report
- b. For the Tags XPS Import, on the left tree, select Tags. On the right tree, select Tag Listing
- c. Select Print
- d. Select Microsoft Office XPS Document Writer for printer
- e. Save as Tags.XPS
- f. Select Browse beside Tags XPS, navigate to, and select the saved Tags.XPS file

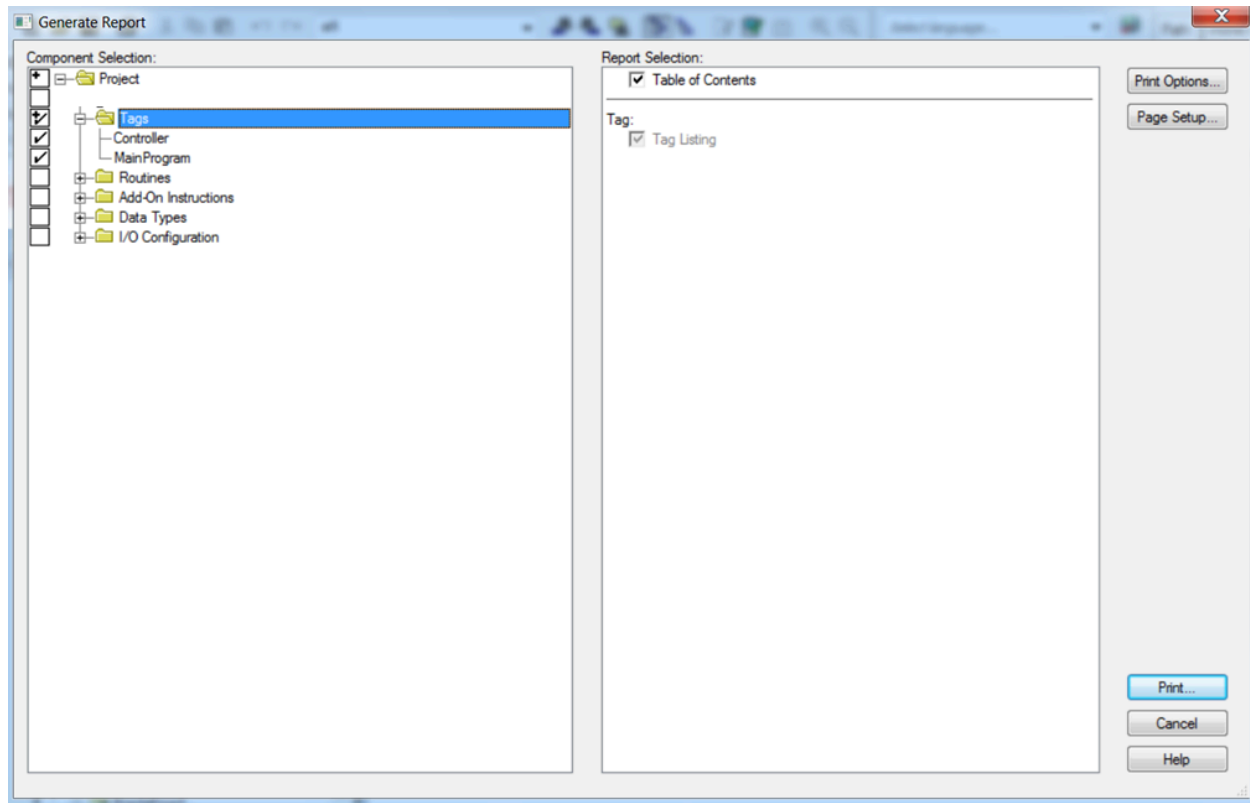

4. The Logix Import allows for the selection of EPLCG, Serial Interface, or both (EPLCG and HPM). Select the appropriate option for your DCS.
5. If your Logix processor communicates with multiple HWY Box numbers, separate the numbers with a comma.
6. Fill in the rest of the fields in the AB Logix Import Files dialog to match your DCS/Logix Configuration and select Import.

Modicon PLC Import

Import Modicon PLC Files

PLC Name

Connection Type

EPLCG + HPM

HWYNUM

HWY Box Number

Serial Interface

HPM Number

HPM Module

Registers File

Browse...

Traffic Cop File

Browse...

Program XPS Files

Add Files...


Clear

Import

Cancel


1. Program XPS Files:

- Open the respective Modicon PLC program in PLC Workshop.
- Select File>Print Setup
- Select Microsoft XPS Document Writer for the Printer and then OK
- Select File>Print
- For the Program XPS Files import, select Logic.
- Select OK
- Save as Program.XPS
- Select Add Files below Program XPS Files, navigate to, and select the saved Program.XPS file

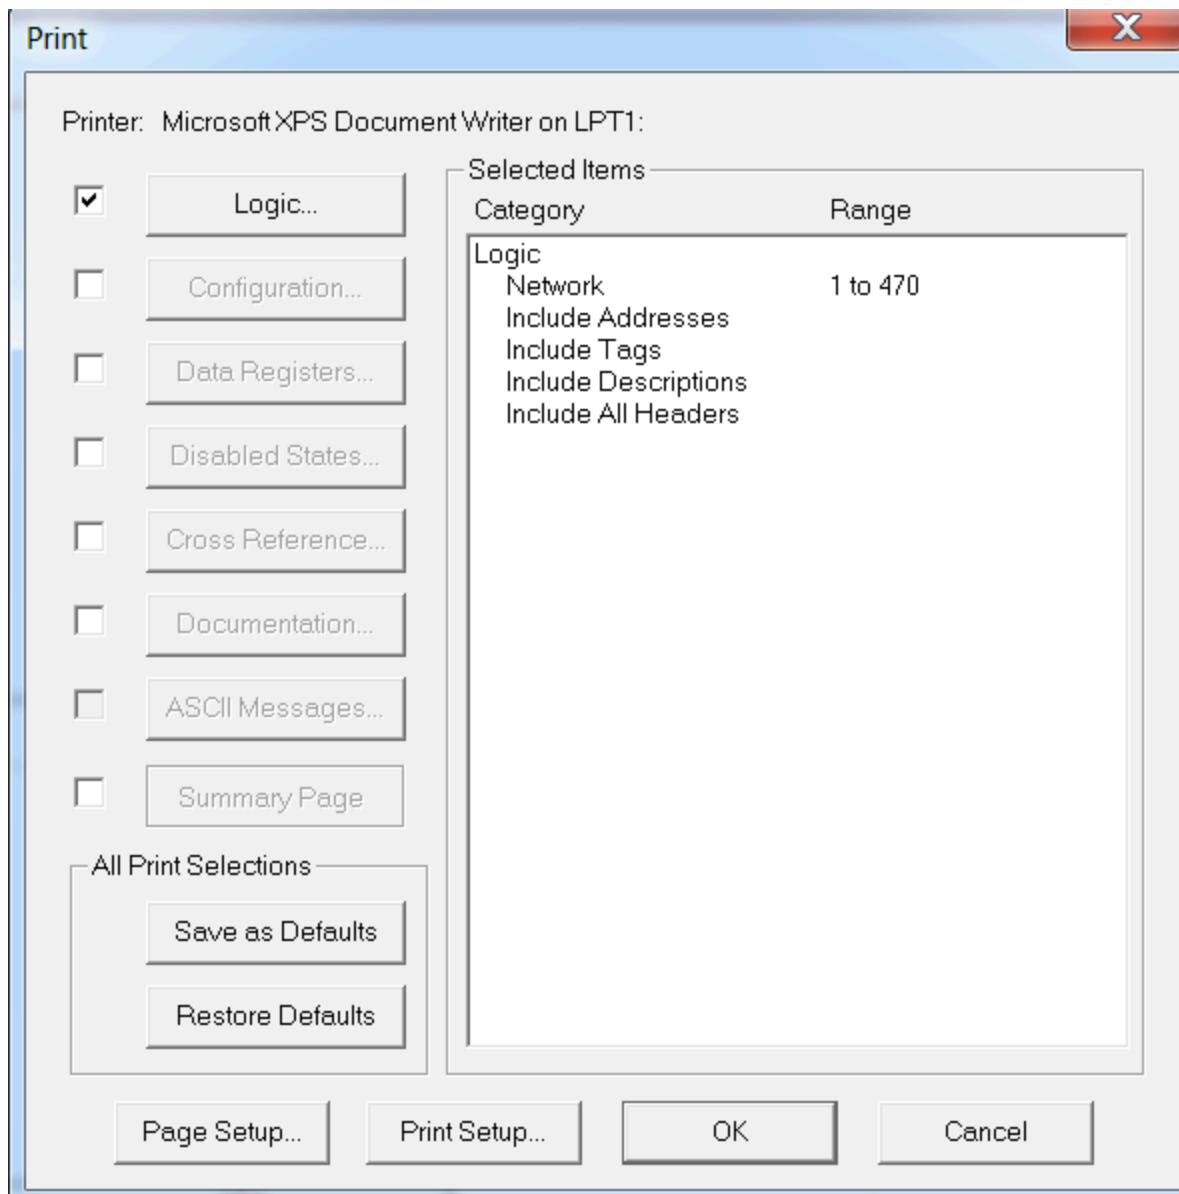


2. Traffic Cop File:

- Open the respective Modicon PLC program in FasTrak PLC WorkShop.
- Select File>Output to Text File
- Select Configuration and highlight Traffic Cop and Modbus Ports
- Select OK
- Save as trafficcop.PRT
- Select Browse beside Traffic Cop File, navigate to, and select the saved trafficcop.prt file

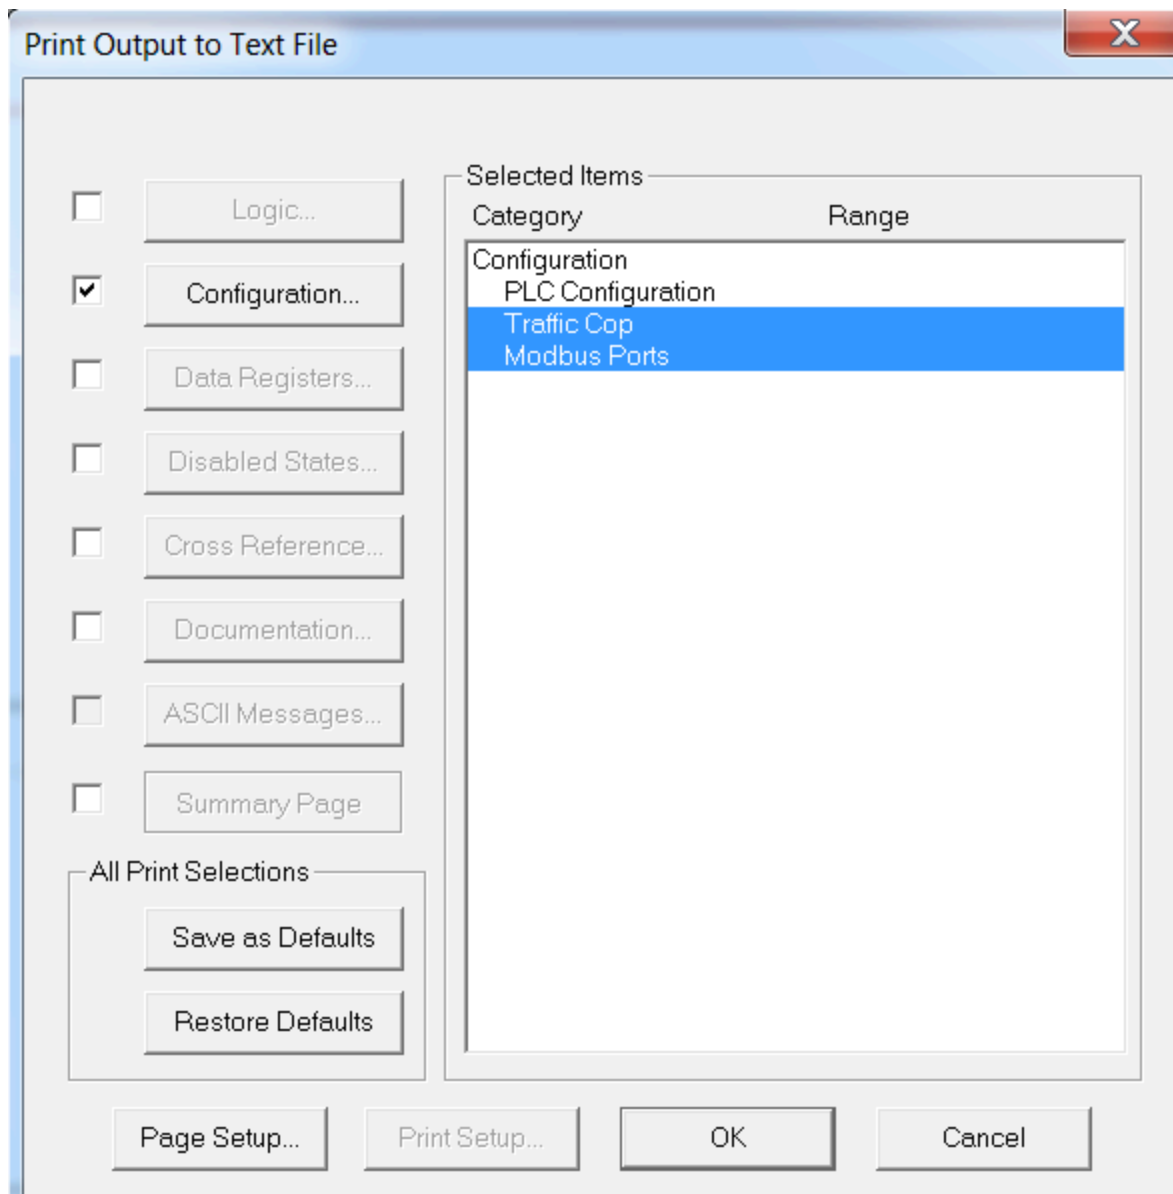

3. Registers File:

- Open the respective Modicon PLC program in FasTrak PLC WorkShop.
- Select File>Output to Text File
- Select Data Registers, Disabled States, and Cross Reference (0x/1x/3x/4x ranges as applicable).
- Select OK
- Save as registers.PRT
- Select Browse beside Registers File, navigate to, and select the saved registers.prt file

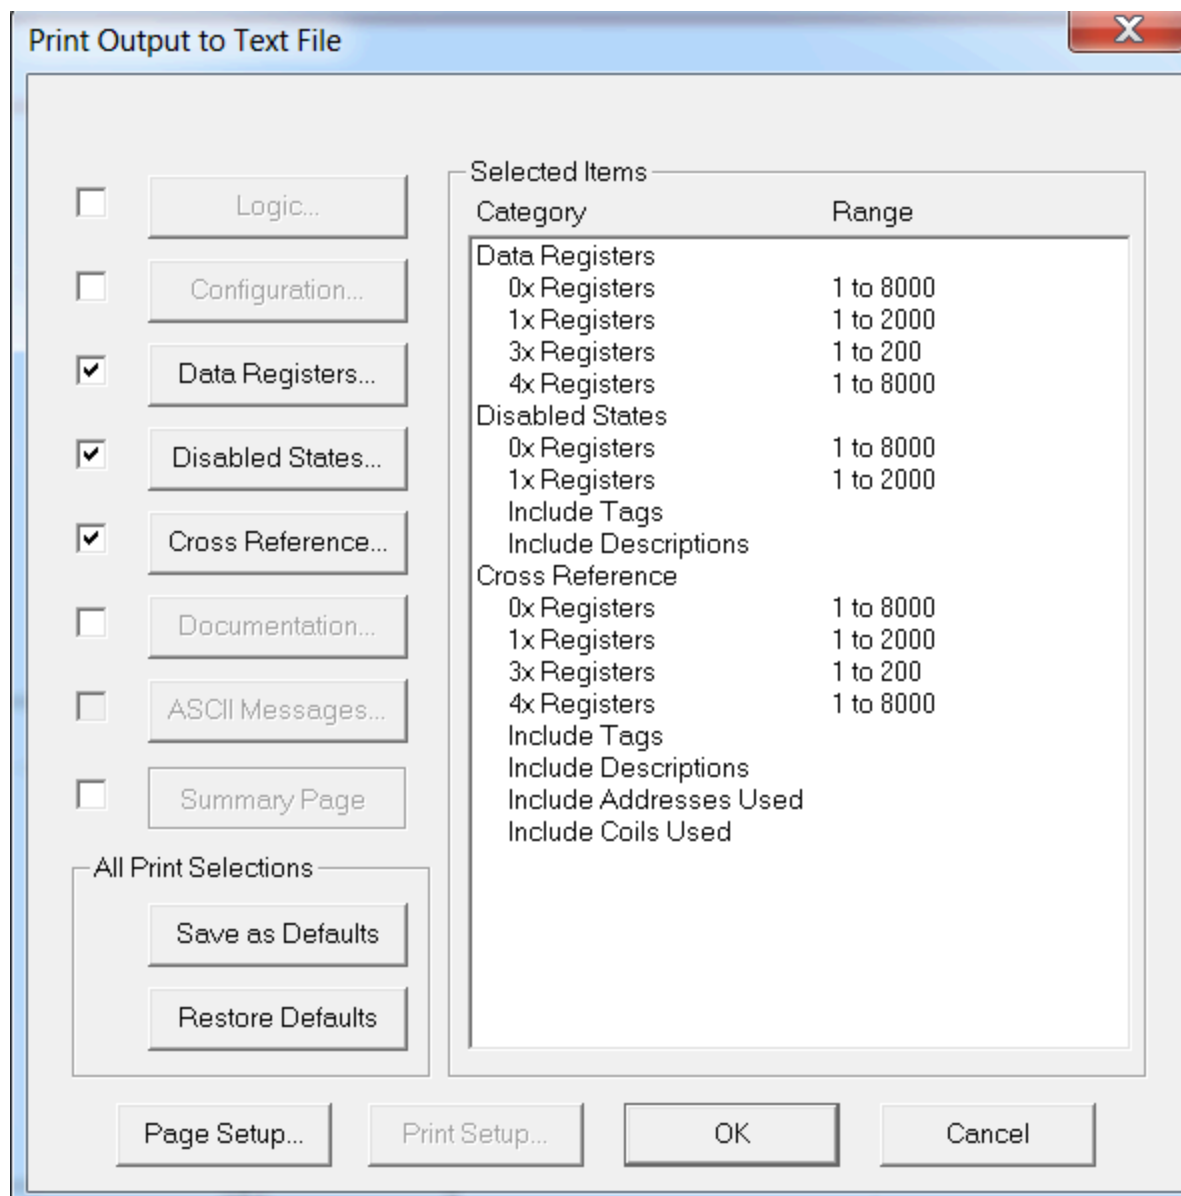

4. The Modicon Import allows for the selection of EPLCG, Serial Interface, or both (EPLCG and HPM). Select the appropriate option for your DCS.
5. If your Modicon processor communicates with multiple HWY Box numbers, separate the numbers with a comma.
6. Fill in the rest of the fields in the Import Modicon PLC Files dialog to match your DCS/Modicon configuration and select Import.

Experion Connection Import

1. If your TDC system has references to/from an Experion Distributed Control System through a TPN interface (not OPC Integrator), you can import those connections to be picked up by Corevanta in the Chart view.
2. In Experion Control Builder, select File>Print>Reports
3. Select Parameters and Connections from the drop down
4. Select all CMs/SCMs in the list
5. Click Export, save as Connections.xlsx
6. Click Import Experion Connections and select the connections.xlsx file

OPC Integrator Import

1. If your TDC system has references to/from an Experion Distributed Control System through an OPC Integrator Interface, you can import those connections to be picked up by Corevanta in the Chart view.
2. Collect the OPCI_Online_Items.tsv files from the Experion system. They typically reside in C:\ProgramData\Honeywell\Experion PKS\Server\data\OPCIntegrator or C:\ProgramData\Honeywell\Experion PKS\Client\data\OPCIntegrator
3. Select OPC Integrator Import and select the saved OPCI_Online_Items.tsv file(s).

HMIWeb Graphics Import

1. Corevanta can reference Experion HMIWeb Graphics for each TDC point in the Detail tab
2. To create a points list for the graphics, In HMIWeb Builder select Tools>Display Builder Assistant > Generate Alarm Groups
3. For Display Folder field, Browse to the respective abstract folder for your system's HMIWebGraphics
4. Select location to save the alarm group file(s) to.
5. Click Run
6. Drag and drop the saved alarm group file into Excel, then save the workbook.
7. Select HMIWeb Graphics Import and select the Alarm Group Excel file

PI Import

1. Corevanta can show references to PI tags in the Chart view.
2. To import PI tags, you will need the PI Builder extension for Excel.

3. A full listing of the relevant DCS PI tags in Excel is required, with at minimum Name and InstrumentTag fields.
4. Corevanta currently does not filter out scan off or shutdown PI tags. Delete those rows of PI tags from the excel list if desired.
5. Save the excel file
6. Select PI Import and select the saved PI list.

Export Point Details

1. Export point details creates an excel file with detail point information for the imported TDC system.
2. Each point type is broken up into a new tab in the excel file.