


Endcap/Boundary Cell

These cells are straight forward to make. Below are some guided pictures to help you create one the Left side Endcap.

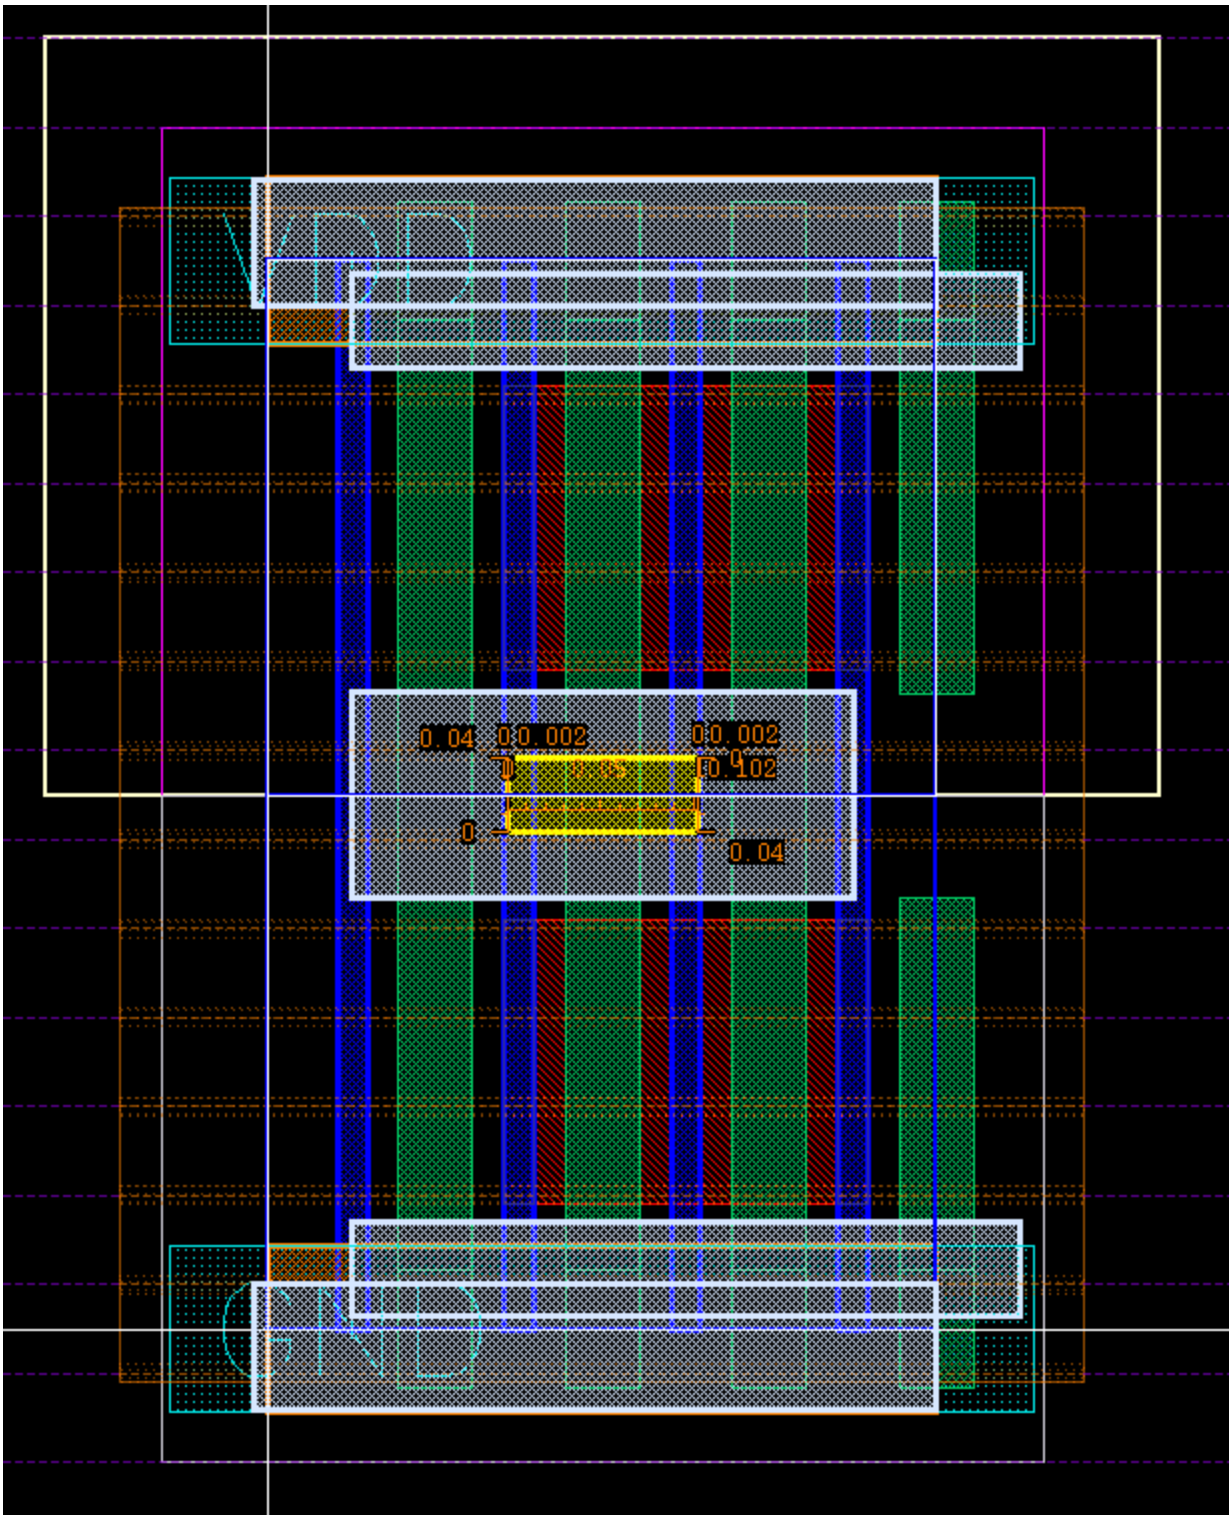


The CM0OD is from center poly to center poly. The CCP layer is from PR Boundary edge to PR Boundary Edge. M1 is larger than the CCP.

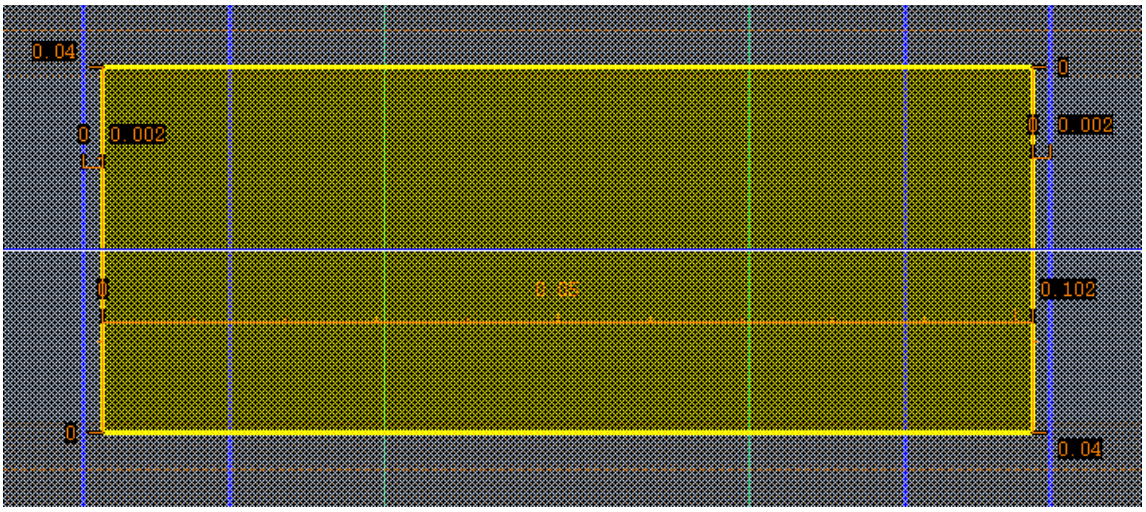

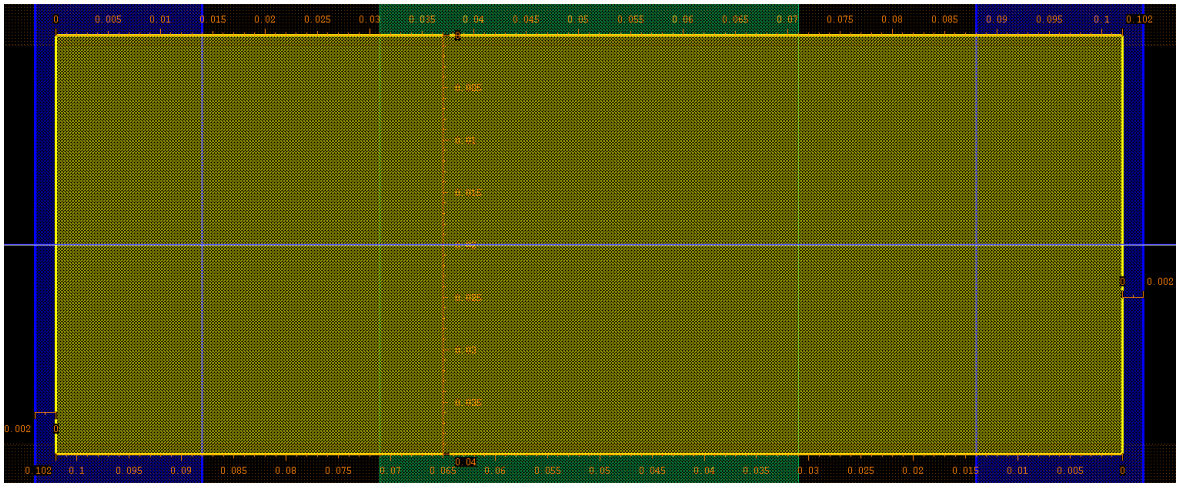

Above two pictures only concern the dimensions of the M0PO layer.

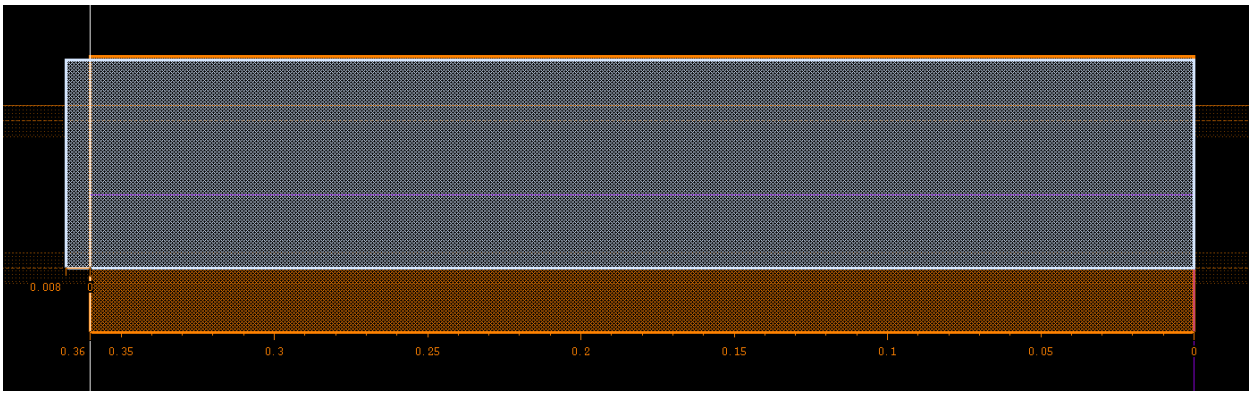

The above picture only concerns the CCP and CPO layer.
To create the Right side boundary copy and paste to the new cell and flip horizontally.

To test if you made the cell right when you lay your cells side by side it should remove all but the LUP errors. You may also have to change the sizes of your PP and NP layers per cell to accommodate for the tap cell.