Concurrent processes and real-time scheduling


55:036

Embedded Systems and System Software

Concurrency in Embedded Systems

- Often, an embedded system must carry out more than one task simultaneously
 - monitoring multiple sensors
 - controlling multiple devices
 - etc.
- A single embedded processor may be responsible for multiple tasks
- An embedded system may utilize multiple embedded processors

Example of Concurrency in Embedded Systems

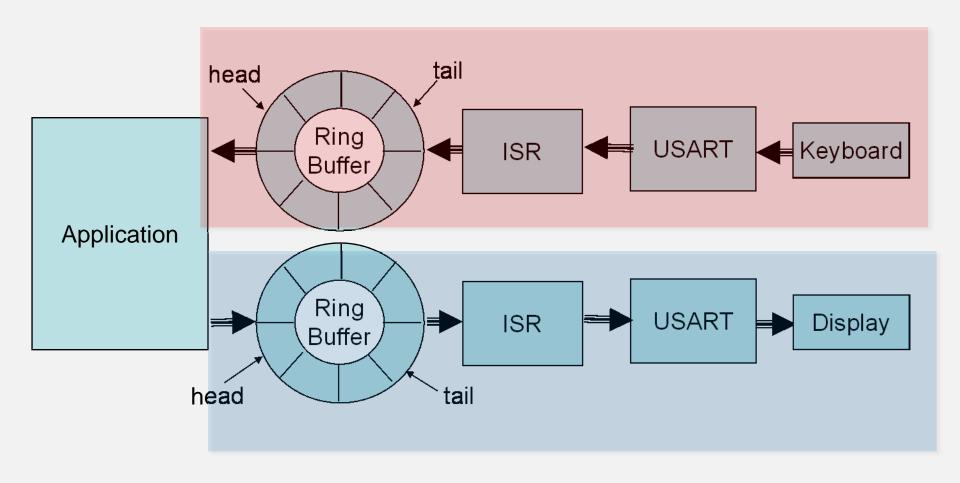

int transAmt1, N; int transAmt1, N; int transAmt1, N; if or (i=0; i<N; i++) { deposit (transAmt1); withdraw(transAmt1); }</pre>

Bank Account

int balance = 0;

```
void deposit(int amount) {
  balance = balance + amount;
}

void withdraw(int amount) {
  balance = balance - amount;
}
```

```
int transAmt2, N;
...
for (i=0; i<N; i++) {
  deposit (transAmt2);
  withdraw(transAmt2);
}</pre>
```

- 1. read (old) balance
- 2. add amount to balance
- 3. write updated balance

Customer1

```
int transAmt1, N;
...
for (i=0; i<N; i++) {
  deposit (transAmt1);
  withdraw(transAmt1);
}</pre>
```

Bank Account

int palance = 0;

```
void deposit(int amount) {
  balance = balance + amount;
}
```

```
void withdraw(int amount) {
  balance = balance - amount;
}
```

```
int transAmt2, N;
...
for (i=0; i<N; i++) {
  deposit (transAmt2);
  withdraw(transAmt2);
}</pre>
```

- 1. read (old) balance
- 2. add amount to old balance
- 3. write updated balance

int transAmt1, N; ... for (i=0; i<N; i++) { deposit (transAmt1); withdraw(transAmt1); }</pre>

Customer1

```
Bank Account
```

```
int palance = 0;
```

void deposit(int amount) {
 balance = balance + amount;

void withdraw(int amount) {
 balance = balance - amount;

```
int transAmt2, N;
...
for (i=0; i<N; i++) {
  deposit (transAmt2);
  withdraw(transAmt2);
}</pre>
```

- 1. read (old) balance
- 2. subtract amount from old balance
- 3. write updated balance

- 1. read (old) balance
- 2. add amount to old balance
- 3. write updated balance

```
customer1

int transAmt1, N;
...
for (i=0; i<N; i++) {
   deposit (20);
   withdraw(20);
}</pre>
```

Bank Account

```
int palance = 0:
```

```
void deposit(int amount) {
  balance = balance + amount;
```

void withdraw(int amount) {
 balance = balance = amount;

```
Customer2
```

```
int transAmt2, N;
...
for (i=0; i<N; i++) {
  deposit (50);
  withdraw(50);
```

Consider these two operations being performed concurrently. Net result: Balance should be reduced by \$30

- 1. read (old) balance
- 2. subtract amount from old balance
- 3. write updated balance

- $(\mathbf{1})$
- e.g. old balance = \$100

- 1. read (old) balance
- 2. add amount to old balance
- 3. write updated balance

```
int transAmt1, N;
...
for (i=0; i<N; i++) {
    deposit (20);
    withdraw(20);
}</pre>
```

```
Bank Account
```

```
int balance = 0:
```

```
void deposit(int amount) {
  balance = balance + amount;
```

```
void withdraw(int amount) {
  balance = balance - amount;
```

```
int transAmt2, N;
...
for (i=0; i<N; i++) {
  deposit (50);
  withdraw(50);
}</pre>
```

- 1. read (old) balance
- 2. subtract amount from old balance
- 3. write updated balance

- 1
- e.g. old balance = \$100

- 1. read (old) balance
- 2. add amount to old balance
- 3. write updated balance

```
int transAmt1, N;
...
for (i=0; i<N; i++) {
    deposit (20);
    withdraw(20);
}
```

```
Bank Account
```

```
int palance = 0:
```

```
void deposit(int amount) {
  balance = balance + amount;
```

void withdraw(int amount) {
 balance = balance - amount;

Customer2

```
int transAmt2, N;
...
for (i=0; i<N; i++) {
  deposit (50);
  withdraw(50);
}</pre>
```

\$100 (2

- 1. read (old) balance
- 2. subtract amount from balance
 - write updated balance

- e.g. old balance = \$100

- read (old) balance
- add amount to old balance
- 3. write updated balance

```
Customer1
int transAmt1, N;
for (i=0; i<N; i++) {
 deposit (20);
 withdraw(20);
```

```
Bank Account
```

```
int balance = 0;
```

```
void deposit(int amount) {
 balance = balance + amount;
```

void withdraw(int amount) { balance = balance - amount:

Customer2

```
int transAmt2, N;
for (i=0; i<N; i++) {
 deposit (50);
 withdraw(50);
```

- \$100 1. read (old) balance 100 - 50
 - subtract amount from balance

write updated balance

e.g. old balance = \$100 1. read (old) balance 4 100 +20 2. add amount to old balance

int balance = 0;

3. write updated balance

```
int transAmt1, N;
...
for (i=0; i<N; i++) {
    deposit (20);
    withdraw(20);
}</pre>
```

```
Bank Account
```

```
void deposit(int amount) {
   balance = balance + amount;
```

void withdraw(int amount) {
 balance = balance - amount;

Customer2

```
int transAmt2, N;
...
for (i=0; i<N; i++) {
  deposit (50);
  withdraw(50);
}</pre>
```

- \$100 (2) 1. read (old) balance
 - 2. subtract amount from balance
 - . write updated balance

100 - 50

e.g. old balance = \$100

100 +20

- 1. read (old) balance
- 2. add amount to old balance
- 3. write updated balance

5 Updated Balance = \$120

```
customer1

int transAmt1, N;
...
for (i=0; i<N; i++) {
   deposit (20);
   withdraw(20);
}</pre>
```

```
int balance = 0;
```

```
void deposit(int amount) {
  balance = balance + amount;
```

Bank Account

void withdraw(int amount) {
 balance = balance - amount;

Customer2

```
int transAmt2, N;
...
for (i=0; i<N; i++) {
  deposit (50);
  withdraw(50);
}</pre>
```

- \$100 (2) 1. read (old) balance
 - 2. subtract amount from balance
 - write updated balance

100 - 50

e.g. old balance = \$100 read (old) balance 100 +20 add amount to old balance Updated Balance = \$120 3. write updated balance Bank Account Customer2 Customer1 int balance = 0; void deposit(int amount) { int transAmt2, N; int transAmt1, N; balance = balance + amount: for (i=0; i<N; i++) { for (i=0; i<N; i++) { deposit (50); deposit (20); withdraw(50); withdraw(20); void withdraw(int amount) { balance = balance - amount: \$100 read (old) balance

Updated Balance = \$50

vstems and So

100 - 50

55:036 The University of Iowa, 2009

subtract amount from balance

write updated balance

Lecture 12-13

e.g. old balance = \$100

Bank Account

- 1. read (old) balance
- 2. add amount to old balance
- 3. write updated balance

```
5 Updated Balance = $120
```

100 + 20

```
customer1

int transAmt1, N;
...
for (i=0; i<N; i++) {
   deposit (20);
   withdraw(20);
}</pre>
```

```
int balance = 0:
```

```
void deposit(int amount) {
  balance = balance + amount;
```

void withdraw(int amount) {
 balance = balance - amount;

Customer2

```
int transAmt2, N;
...
for (i=0; i<N; i++) {
  deposit (50);
  withdraw(50);
}</pre>
```

RESULT IS WRONG!!!
SHOULD BE \$70

\$100 (2)

100 - 50 (3


- 1. read (old) balance
- 2. subtract amount from balance
- B. write updated balance


Updated Balance = \$50

ystems and So 55:036 The University of Iowa, 2009

Concurrent Processes

- Consider two examples having separate tasks running independently but sharing data
- Difficult to write system using sequential program model
- Concurrent process model easier
 - Separate sequential programs (processes) for each task
 - Programs communicate with each other

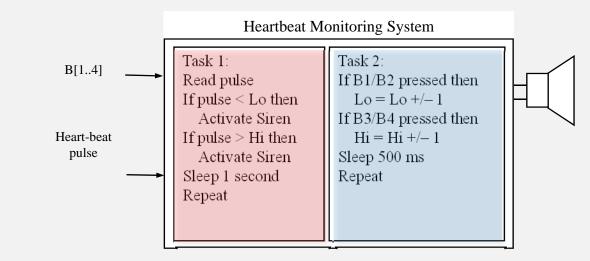

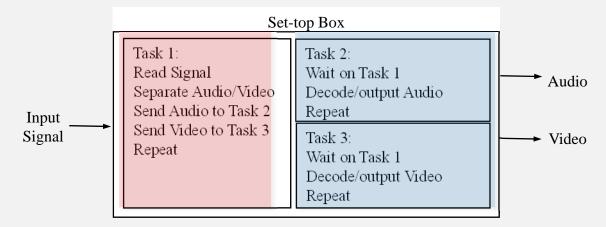

Simple Concurrent Process Example

```
ConcurrentProcessExample() {
                                                                    PrintHelloWorld
  x = ReadX()
                                            ReadX - ReadY
  y = ReadY()
  Call concurrently:
                                                                    PrintHowAreYou |
    PrintHelloWorld(x) and
    PrintHowAreYou(y)
                                                                           time
PrintHelloWorld(x)
                                                             (b)
  while(1) {
                                      Enter X: 1
    print "Hello world."
                                      Enter Y: 2
    delay(x);
                                      Hello world.
                                                       (Time = 1 s)
                                     Hello world.
                                                       (Time = 2 s)
                                     How are you?
                                                       (Time = 2 s)
PrintHowAreYou(x) {
                                     Hello world.
                                                       (Time = 3 s)
  while(1) {
                                     How are you?
                                                       (Time = 4 s)
    print "How are you?"
                                     Hello world.
                                                       (Time = 4 s)
    delay(y);
              (a)
                                                             (c)
```

Process, Task, Thread

- A sequential program, typically an infinite loop
 - Executes concurrently with other processes
- Basic operations on processes
 - Create and terminate
 - Create is like a procedure call but caller doesn't wait
 - Terminate kills a process, destroying all data
 - In HelloWord/HowAreYou example, we only created processes
 - Suspend and resume
 - Suspend puts a process on hold, saving state for later execution
 - Resume starts the process again where it left off
 - Join
 - A process suspends until a particular child process finishes execution

Communication Among Processes

 Processes need to communicate data and signals to solve their computation problem

Processes that don't communicate are just independent programs solving separate problems

- Basic example: producer/consumer
 - Process A produces data items,
 Process B consumes them
 - E.g., A decodes video packets, B display decoded packets on a screen
- How do we achieve this communication?
 - Two basic methods
 - Shared memory
 - Message passing

```
Encoded video
                   packets
processA()
 // Decode packet
    Communicate packet to B
                Decoded video
                   packets
       processB()
    // Get packet from A
    // Display packet
                 To display
```

Shared Memory

- Processes read and write shared variables
- No time overhead, easy to implement
- But, hard to use mistakes are common

```
01: data type buffer[N];
02: int count = 0;
03: void processA() {
      int tail;
04:
     while( 1 ) {
05:
06:
        produce(&data);
07:
       while( count==N );/*loop*/
       buffer[tail] = data;
08:
09:
       tail = (tail + 1) % N;
10:
        count = count + 1;
11:
12: }
13: void processB() {
      int head;
14:
     while( 1 ) {
15:
16:
       while( count==0 );/*loop*/
     data = buffer[head];
17:
18:
       head = (head + 1) % N;
      count = count - 1;
19:
        consume(&data);
20:
21:
22: }
23: void main() {
24:
      create_process(processA);
      create_process(processB);
25:
26: }
```

Shared Memory

- Processes read and write shared variables
 - No time overhead, easy to implement
 - But, hard to use mistakes are common
- Example: Producer/consumer with a mistake
 - Share buffer[N], count
 - count = # of valid data items in buffer
 - processA produces data items and stores in buffer
 - If buffer is full, must wait
 - processB consumes data items from buffer
 - If buffer is empty, must wait
 - Error when both processes try to update *count* concurrently (lines 10 and 19) and the following execution sequence occurs. Say "count" is 3.
 - A loads count (count = 3) from memory into register R1 (R1 = 3)
 - *A* increments R1 (R1 = 4)
 - B loads count (count = 3) from memory into register R2 (R2 = 3)
 - B decrements R2 (R2 = 2)
 - A stores R1 back to count in memory (count = 4)
 - B stores R2 back to count in memory (count = 2)
 - count now has incorrect value of 2

```
01: data_type buffer[N];
02: int count = 0;
03: void processA() {
      int tail;
04:
05:
      while( 1 ) {
        produce(&data);
06:
07:
        while( count==N );/*loop*/
08:
        buffer[tail] = data;
09:
        tail = (tail + 1) % N;
10:
        count = count + 1;
11:
12: }
13: void processB() {
      int head;
14:
15:
      while( 1 ) {
        while( count==0 );/*loop*/
16:
17:
        data = buffer[head];
18:
        head = (head + 1) % N;
        count = count - 1;
19:
20:
        consume(&data);
21:
22: }
23: void main() {
24:
      create_process(processA);
25:
      create_process(processB);
26: }
```

Shared Memory Mutual Exclusion

- Certain sections of code should not be performed concurrently
- Critical section: possibly noncontiguous section of code where simultaneous updates, by multiple processes to a shared memory location, can occur
- When a process enters the critical section, all other processes must be locked out until it leaves the critical section
- Mutex (from Mutual Exclusion)
 - A shared object used for locking and unlocking segment of shared data
 - Disallows read/write access to memory it guards
 - Multiple processes can perform lock operation simultaneously, but only one process will acquire lock
 - All other processes trying to obtain lock will be put in blocked state until unlock operation performed by acquiring process when it exits critical section
 - These processes will then be placed in runnable state and will compete for lock again

Correct Shared Memory Solution to the Consumer-Producer Problem

- The primitive mutex is used to ensure critical sections are executed in mutual exclusion of each other
- Following the same execution sequence as before:
 - A/B execute lock operation on count_mutex
 - Either A or B will acquire lock
 - Say B acquires it
 - A will be put in blocked state
 - B loads count (count = 3) from memory into register R2 (R2 = 3)
 - B decrements R2 (R2 = 2)
 - B stores R2 back to count in memory (count = 2)
 - B executes unlock operation
 - A is placed in runnable state again
 - A loads count (count = 2) from memory into register R1 (R1 = 2)
 - A increments R1 (R1 = 3)
 - A stores R1 back to count in memory (count = 3)
- Count now has correct value of 3

```
01: data_type buffer[N];
02: int count = 0;
03: mutex count mutex;
04: void processA() {
05:
      int tail;
06:
      while( 1 ) {
07:
        produce(&data);
08:
        while( count==N );/*loop*/
09:
        buffer[tail] = data;
        tail = (tail + 1) % N;
10:
11:
        count mutex.lock();
12:
        count = count + 1;
13:
        count mutex.unlock();
14.
15:
16: void processB() {
17:
      int head;
18:
      while(1) {
19:
        while( count==0 );/*loop*/
20:
        data = buffer[head];
21:
        head = (head + 1) % N;
22:
        count mutex.lock();
23:
        count = count - 1;
24:
        count mutex.unlock();
25.
        consume (&data);
26:
27:
28: void main() {
29:
      create_process(processA);
30:
      create_process(processB);
31: }
```

Implementing Mutex-Locks

- Implementation of robust mutex locks is not a simple matter
- Often, hardware support is needed—more about this later
- Real-time operating systems typically provide locking, synchronization, and communication primitives—more about this later also.

 Note that a simple shared lock bit (or byte) doesn't work:

```
e.g:
int mutex_lock;

while (mutex_lock) { /*wait*/}
mutex_lock = 1;
//CRITICAL SECTION
mutex_lock = 0;
//CR
```

```
while (mutex_lock) { /*wait*/}
mutex_lock = 1;
//CRITICAL SECTION
mutex_lock = 0;
```

int mutex lock;

 Note that a simple shared lock bit (or byte) doesn't work: WHY NOT???
 e.g:

```
P1 sees mutex_lock ==0

while (mutex_lock) { /*wait*/}
```

```
while (mutex_lock) { /*wait*/
mutex_lock ≡ 1;
//CRITICAL SECTION
mutex_lock = 0;
```

```
while (mutex_lock) { /*wait*/}
mutex_lock = 1;
//CRITICAL SECTION
mutex_lock = 0;
```

int mutex lock;

 Note that a simple shared lock bit (or byte) doesn't work: WHY NOT???
 e.g:

```
the sees mutex_lock ==0

while (mutex_lock) { /*wait*/}

mutex_lock ≡ 1;

//CRITICAL SECTION

mutex_lock = 0;
```

```
while (mutex_lock) { /*wait*/}
mutex_lock = 1;
//CRITICAL SECTION
mutex_lock = 0;
```

 Note that a simple shared lock bit (or byte) doesn't work: WHY NOT???
 e.g:

```
int mutex_lock;
```

- p1 sees mutex_lock ==0

 while (mutex_lock) { /*wait*/}
 mutex_lock = 1;
 //CRITICAL SECTION
 mutex_lock = 0,

 p1 sets mutex_lock = 1
- 2 P2 sees mutex_lock ==0

```
while (mutex_lock) { /*wait*/}
mutex_lock = 1;
//CRITICAL SECTION
mutex_lock = 0;
```

4 P2 sets mutex_lock = 1

Note that a simple shared lock bit (or byte) doesn't work: WHY NOT???
 e.g:

int mutex_lock;

- 1 P1 sees mutex_lock ==0
- while (mutex_lock) { /*wait*/}
 mutex_lock = 1;
 //CRITICAL SECTION
 mutex_lock = 0,

P1 sets mutex_lock = 1

2 P2 sees mutex_lock ==0

```
while (mutex_lock) { /*wait*/}
mutex_lock ≡ 1;
//CRITICAL SECTION
mutex_lock = 0;
```

(4) P2 sets mutex_lock = 1

BOTH P1 AND P2 ENTER THE CRITICAL SECTION

Requirements for a "correct" Mutex-lock

Mutual exclusion

 Guarantees only on process at a time in the Critical Section

Deadlock-free

Deadlock is a state where processes are permanently blocked

Fairness (bounded waiting)

 When multiple processes are "competing for" the critical section, they take turns fairly

Progress

 If critical section is not locked a requested process can gain access without waiting

```
f0 := false;
f1 := false;
turn = 0; // or 1
p0: f0 = true;
                               p1: f1 = true;
    while(f1)
                                    while (f0)
        if (turn != 0) {
                                      if (turn != 1) {
          f0 = false;
                                          f1 = false;
          while (turn != 0) { }
                                          while (turn != 1) { }
          f0 = true;
                                         f1 = true;
      // critical section
                                       // critical section
    turn = 1;
                                 turn = 0;
                                  f1 = false;
    f0 = false;
```

```
f0 := false;
                         Mutual exclusion is insured: each process sets its
f1 := false;
                         flag BEFORE checking the other flag
turn = 0; // or 1
p0: f0 = true;
                               p1: f1 = true;
    while(f1)
                                    while (f0)
        if (turn != 0) {
                                       if (turn != 1) {
           f0 = false;
                                          f1 = false;
          while (turn != 0) { }
                                          while (turn != 1) { }
          f0 = true;
                                         f1 = true;
      // critical section
                                        // critical section
    turn = 1;
                                  turn = 0;
    f0 = false;
                                  f1 = false;
```

```
f0 := false;
                           Mutual exclusion is insured: each process sets its
f1 := false;
                           flag BEFORE checking the other flag
turn = 0; // or 1
                                                          If both flags are
                                                          set, turn
                                                          determines which
p0: f0 = true;
                                            true;
                                                          one gets to proceed
                                      while (f0)
    while(f1)
         if (turn \stackrel{\cdot}{=} 0) {
                                          if (turn != 1) {
           f0 = false;
                                            f1 = false;
           while (turn != 0) { }
                                            while (turn != 1) { }
           f0 = true;
                                            f1 = true;
      // critical section
                                          // critical section
    turn = 1;
                                   turn = 0;
    f0 = false;
                                    f1 = false;
```

```
f0 := false;
                           Mutual exclusion is insured: each process sets its
f1 := false;
                           flag BEFORE checking the other flag
turn = 0; // or 1
                                                          If both flags are
                                                          set, turn
                                                          determines which
p0: f0 = true;
                                            true;
                                                          one gets to proceed
                                      while (f0)
    while(f1)
         if (turn \stackrel{\cdot}{=} 0) {
                                          if (turn != 1) {
           f0 = false;
                                            f1 = false;
           while (turn != 0) { }
                                            while (turn != 1) { }
           f0 = true;
                                            f1 = true;
                                                              turn also insures
                                                              fairness
                                          // critical section
      // critical section
                                   turn = 0;
    turn = 1
    f0 = false;
                                    f1 = false;
```

- Algorithm also satisfies deadlock freedom & progress properties
- Dekker's algorithm can be easily extended to more than two processes-"Peterson's algorithm"
- In a single processor application, temporarily disabling interrupts is generally an effective way of implementing mutual exclusion

A Common Problem in Concurrent Programming: Deadlock

- Deadlock: A condition where 2 or more processes are blocked waiting for the other to unlock critical sections of code
 - Both processes are then in blocked state
 - Cannot execute unlock operation so will wait forever
- Example code has 2 different critical sections of code that can be accessed simultaneously
 - 2 locks needed (mutex1, mutex2)
 - Following execution sequence produces deadlock
 - A executes lock operation on *mutex1* (and acquires it)
 - B executes lock operation on mutex2(and acquires it)
 - A/B both execute in critical sections 1 and 2, respectively
 - A executes lock operation on mutex2
 - A blocked until B unlocks mutex2
 - B executes lock operation on mutex1
 - B blocked until A unlocks mutex1
 - DEADLOCK!
- One deadlock elimination protocol requires locking of numbered mutexes in increasing order and two-phase locking (2PL)
 - Acquire locks in 1st phase only, release locks in 2nd phase

```
01: mutex mutex1, mutex2;
02: void processA() {
03:
      while( 1 ) {
04:
05:
        mutex1.lock();
06:
        /* critical section 1 */
07:
        mutex2.lock();
08:
        /* critical section 2 */
09:
        mutex2.unlock();
10:
        /* critical section 1 */
        mutex1.unlock();
11:
12:
13: }
14: void processB() {
      while( 1 ) {
15:
16:
17:
        mutex2.lock();
        /* critical section 2 */
18:
19:
        mutex1.lock();
        /* critical section 1 */
20:
21:
        mutex1.unlock();
        /* critical section 2 */
22:
23:
        mutex2.unlock();
24:
25: }
```

Synchronization Among Processes

- Sometimes concurrently running processes must synchronize their execution
 - When a process must wait for:
 - another process to compute some value
 - reach a known point in their execution
 - signal some condition
- Recall producer-consumer problem
 - processA must wait if buffer is full
 - processB must wait if buffer is empty
 - This is called busy-waiting
 - Process executing loops instead of being blocked
 - CPU time wasted
- More efficient methods
 - Join operation, and blocking send and receive discussed earlier
 - Both block the process so it doesn't waste CPU time
 - Condition variables and monitors

Condition Variables

- Condition variable is an object that has 2 operations, signal and wait
- When process performs a wait on a condition variable, the process is blocked until another process performs a signal on the same condition variable
- How is this done?
 - Process A acquires lock on a mutex
 - Process A performs wait, passing this mutex
 - Causes mutex to be unlocked
 - Process B can now acquire lock on same mutex
 - Process B enters critical section
 - Computes some value and/or make condition true
 - Process B performs signal when condition true
 - Causes process A to implicitly reacquire mutex lock
 - Process A becomes runnable

Condition variable example: consumerproducer using condition variables

- 2 condition variables
 - buffer_empty
 - Signals at least 1 free location available in *buffer*
 - buffer_full
 - Signals at least 1 valid data item in buffer
- processA:
 - produces data item
 - acquires lock (cs_mutex) for critical section
 - checks value of count
 - if count = N, buffer is full
 - performs wait operation on buffer_empty
 - this releases the lock on cs_mutex allowing processB to enter critical section, consume data item and free location in buffer
 - processB then performs signal
 - if count < N, buffer is not full
 - processA inserts data into buffer
 - increments count
 - signals processB making it runnable if it has performed a wait operation on buffer full

```
01: data_type buffer[N];
02: int count = 0;
03: mutex cs_mutex;
04: condition buffer_empty, buffer_full;
06: void processA()
07:
      int head;
108:
      while( 1 ) {
09:
        produce(&data);
10:
        cs mutex.lock();
11:
        if( count == N ) buffer_empty.wait(cs_mutex);
13:
        buffer[head] = data;
14:
        head = (head + 1) % N;
15:
        count = count + 1;
16:
        cs mutex.unlock();
17:
        buffer full.signal();
18:
19: }
20: void processB() {
121:
      int tail;
22:
      while( 1 ) {
23:
        cs_mutex.lock();
24:
        if( count == 0 ) buffer_full.wait(cs_mutex);
26:
        data = buffer[tail];
27:
        tail = (tail + 1) % N;
28:
        count = count - 1;
29:
        cs mutex.unlock();
30:
        buffer empty.signal();
31:
        consume(&data);
32:
33: }
34: void main() {
35:
      create_process(processA);
36.
      create_process(processB);
37: }
```

Implementation: Multiple processes

 Manually rewrite processes as a single sequential program. Practical only for very simple examples. E.g., simple Hello World concurrent program from before would look like:

```
I = 1; T = 0;
while (1) {
Delay(I); T = T + 1;
if X modulo T is 0 then call PrintHelloWorld
if Y modulo T is 0 then call PrintHowAreYou
}
```

- Use multitasking operating system (common) and OS schedules processes, allocates storage, and interfaces to peripherals, etc.
 - Real-time operating system (RTOS) can guarantee execution rate constraints are met
- Convert processes to sequential program with process scheduling right in code
 - Less overhead (no operating system)
 - More complex/harder to maintain

Implementation: Process Scheduling

- Must meet timing requirements when multiple concurrent processes implemented on single general-purpose processor
- Scheduler- special process that decides when and for how long each process is executed
- Preemptive Scheduler determines how long a process executes before preempting to allow another process to execute, and determines next process to run
 - Time quantum: predetermined amount of execution time preemptive scheduler allows each process (may be 10 to 100s of milliseconds long)
- Nonpreemptive (cooperative): only determines which process is next after current process finishes execution—i.e., voluntarily relinquishes the processor

Scheduling: Priority

- Process with highest priority always selected first by scheduler
 - Typically determined statically during creation and dynamically during execution

FIFO

- Runnable processes added to end of FIFO as created or become runnable
- Front process removed from FIFO when time quantum of current process is up or process is blocked

Priority Queue

- Runnable processes again added as created or become runnable
- Process with highest priority chosen when new process needed
- If multiple processes with same highest priority value then selects from them using first-come first-served
- Called priority scheduling when nonpreemptive
- Called round-robin when preemptive

Terminology

Period of process

- Repeating time interval the process must complete one execution within
 - E.g., period = 100 ms (*T*)
 - Process must execute once every 100 ms

Processing Time

How much time the task takes to complete (C)

Execution deadline

- Amount of time process must be completed by after it has started
 - E.g., execution time = 5 ms, deadline = 20 ms, period = 100 ms
 - Process must complete execution within 20 ms after it has begun regardless of its period
 - Process begins at start of period, runs for 4 ms then is preempted
 - Process suspended for 14 ms, then runs for the remaining 1 ms
 - Completed within 4 + 14 + 1 = 19 ms which meets deadline of 20 ms
 - Without deadline process could be suspended for much longer


Terminology

Period – how often to run task (T)

Deadline – latest acceptable time to finish after task is started

Processing time – much time it takes to perform task (C)

Processor Utilization
$$U = C_1/T_1 + C_2/T_2 + ... + C_n/T_n$$

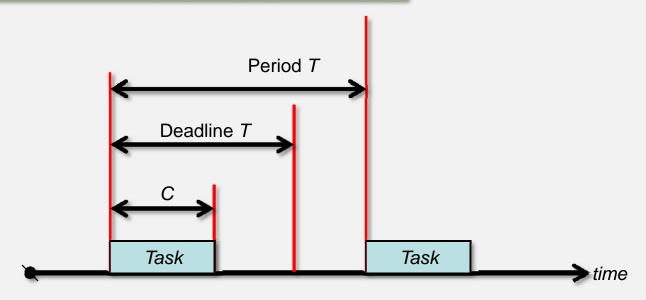

Priority Assignment

Rate Monotonic Algorithm Scheduling (RMA)

- Processes with shorter periods have higher priority
- Typically used when execution deadline = period
- RMA is the optimal static-priority algorithm.
 If a task set cannot be scheduled using the RMA algorithm, it cannot be scheduled using any static-priority algorithm.

Deadline Monotonic Scheduling

- Processes with shorter deadlines have higher priority
- Typically used when execution deadline < period

Note: larger numbers → high priority → run before smaller numbers

Rate monotonic

Process	Period	Priority
A B C D	25 ms 50 ms 12 ms	5 3 6
E F	100 ms 40 ms 75 ms	1 4 2

Deadline motonic

Process	Deadline	Priority		
G	17 m	5		
Н	50 n s	2		
I	32 ns	3		
J	10 n s	6		
K	14 0 ms	1		
L	32 ms	4		


Rate Monotonic Scheduling Example

Period Worst-case ex. time


Fixed-priority scheduling with two tasks, $T_1=50$, $C_1=25$, $T_2=100$, $C_2=40$

Processor Utilization = $U = C_1/T_1 + C_2/T_2 = .5 + .4 = .9$

Case: task t₁, then task t₂

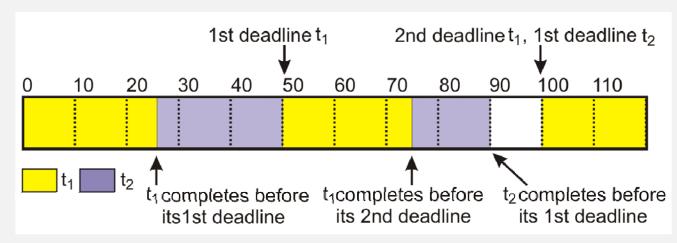


Case: task t_2 , then task t_1

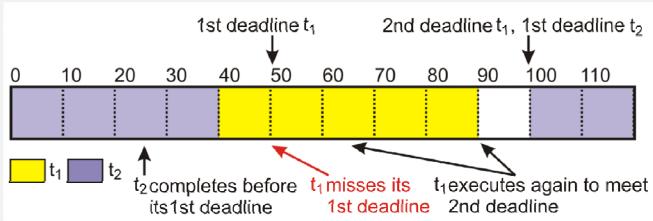

Not All Tasks Are Schedulable

Some task sets are not RMA schedulable ($T_1 = 50 C_1 = 25$, $T_2 = 75$, $C_2 = 30$) These tasks are not RMA schedulable even though U < 1:

$$U = 0.5 + 0.43 = 0.93$$

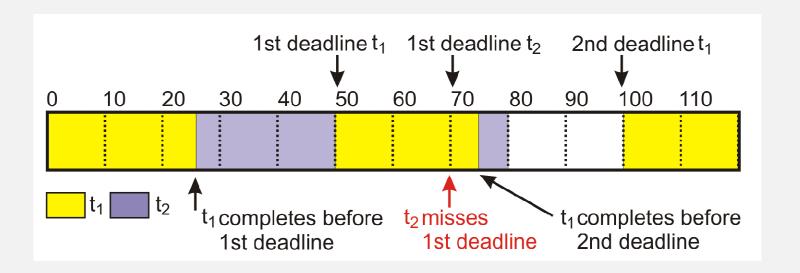

Source: http://www.embedded.com/story/OEG20020221S0089

Real-time systems

- Systems composed of 2 or more cooperating, concurrent processes with stringent execution time constraints
 - E.g., set-top boxes have separate processes that read or decode video and/or sound concurrently and must decode 20 frames/sec for output to appear continuous
 - Other examples with stringent time constraints are:
 - digital cell phones
 - navigation and process control systems
 - assembly line monitoring systems
 - multimedia and networking systems
 - etc.—i.e. most complex embedded systems
 - Communication and synchronization between processes for these systems is critical
 - Therefore, concurrent process model best suited for describing these systems

Real-time operating systems (RTOS)

- Provide mechanisms, primitives, and guidelines for building real-time embedded systems
- Windows CE
 - Built specifically for embedded systems and appliance market
 - Scalable real-time 32-bit platform
 - Supports Windows API
 - Perfect for systems designed to interface with Internet
 - Preemptive priority scheduling with 256 priority levels per process
 - Kernel is 400 Kbytes

QNX

- Real-time microkernel surrounded by optional processes (resource managers) that provide POSIX and UNIX compatibility
 - Microkernels typically support only the most basic services
 - Optional resource managers allow scalability from small ROM-based systems to huge multiprocessor systems connected by various networking and communication technologies
- Preemptive process scheduling using FIFO, round-robin, adaptive, or prioritydriven scheduling
- 32 priority levels per process
- Microkernel < 10 Kbytes and complies with POSIX real-time standard

RTOS —Continued

- Symbian OS
 - Developed by a consortium of Mobile Phone manufacturers
 - Intended for "smart-phone" applications
 - Widely supported by development tools and environments
 - Java
 - Borland C++
 - etc
 - Platforms: x86, ARM, MIPS, Hitachi SuperH
- There are a number of very low-overhead RTOS's suitable for use in small embedded applications
 - PICC RTOS
 - FreeRTOS

PICC RTOS

- Supported by PICC PWH Complier
- Cooperative (non-preemptive) multitasking
- inter-task message passing

PICC RTOS Constructs

#USE RTOS

The CCS Real Time Operating System (RTOS) allows a PIC micro controller to run regularly scheduled tasks without the need for interrupts. This is accomplished by a function (RTOS_RUN()) that acts as a dispatcher. When a task is scheduled to run, the dispatch function gives control of the processor to that task. When the task is done executing or does not need the processor anymore, control of the processor is returned to the dispatch function which then will give control of the processor to the next task that is scheduled to execute at the appropriate time. This process is called cooperative multi-tasking.

Example: #use rtos(timer=0, minor_cycle=20ms)

PICC RTOS—Continued

#TASK

Each RTOS task is specified as a function that has no parameters and no return. The #task directive is needed just before each RTOS task to enable the compiler to tell which functions are RTOS tasks. An RTOS task cannot be called directly like a regular function can.

```
#task(rate=1000ms,max=100ms)
// can be called
void The_first_rtos_task ( )
{
  printf("1\n\r");
}
```

PICC RTOS—Continued

- RTOS Functions:
 - RTOS_RUN()
 - RTOS_WAIT(sem)
 - RTOS_SIGNAL(sem)
 - RTOS_MESSAGE_SEND(task, byte)
 - RTOS_MSG_READ()
 - etc.
- See PICC Compiler Reference Manual for details

FreeRTOS

- Open source RTOS for embedded processors and microcontrollers
- Fully preemptive scheduler
- Support for message queues, semaphores, etc.
- Low overhead
 - Kernel requires 4-5 KB of Program Memory
 - 100-200 bytes of Data Memory
- Ports available for most microcontrollers and embedded processors
- www.freertos.org