
Note: All removed copper needs to be 1.5 mm wide or wider.

In addition the bodge wire must remain a minimum of 1.5mm away from all other copper and components.

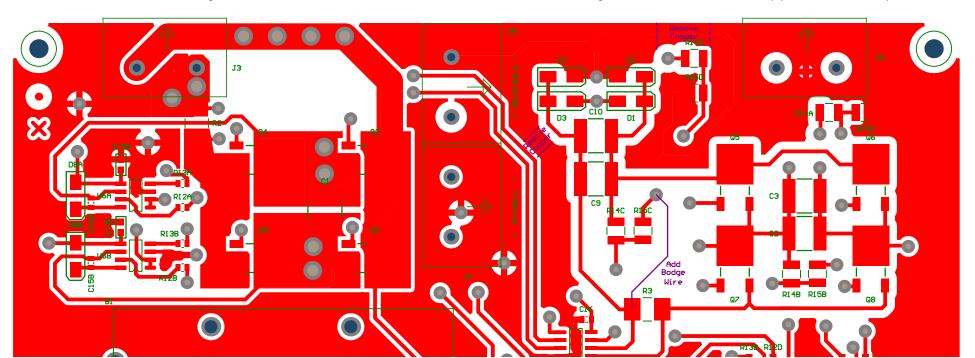

Note: All removed copper needs to be 1.5 mm wide or wider.

