

- Press the **F8** key or click **Show Attributes and Methods** on the **Home** ribbon tab of the *Frame* into which you inserted an instance to show the *methods*, *read-only attributes*, and *attributes* of the selected [Instance \[general description\]](#).

To query the value of a *read-only attribute*, you might, for example, type:

```
print MyCheckbox.UUID
```


Attributes of the Checkbox

_Attributes of the Checkbox

The *Checkbox* provides:

- The *attributes* listed in the table of contents to the left.
- The [Attributes of All Objects](#).

To view all of the *methods*, *read-only attributes*, and *attributes* of the object, open the window [Show Attributes and Methods](#). The figure below illustrates the information using the example of the object *Station*.

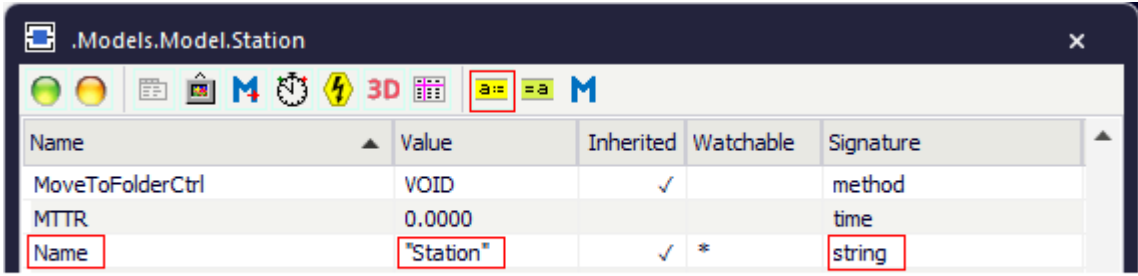

Name	Value	Inherited	Watchable	Signature
MoveToFolderCtrl	VOID	✓		method
MTTR	0.0000			time
Name	"Station"	✓	*	string

Name of the attribute Current value of the attribute Data type of the assignment value

- Select **Show Attributes and Methods** on the context menu of the **Class Library** to show the *methods*, *read-only attributes*, and *attributes* of the selected [Class \[general description\]](#).
- Press the **F8** key or click **Show Attributes and Methods** on the **Home** ribbon tab of the *Frame* into which you inserted an instance to show the *methods*, *read-only attributes*, and *attributes* of the selected [Instance \[general description\]](#).

You can set the value of an attribute and you can get its value, either with the check boxes, the text boxes and drop-down lists in the dialog windows or by assigning values to the respective attributes.

- To **set the value** of an attribute, you might, for example, type:

```
MyCheckbox.Value := false
```

- To **get the value** of an attribute, you might, for example, type:

```
print MyCheckbox.Value  
posit := Station.Cont.XPos
```

Control [SimTalk] - Checkbox

Sets the control which the *Checkbox* designated by <Path> executes.

Remarks

Plant Simulation calls the **Control** when the value changes when you click the object.

Plant Simulation only calls the **Control** of the object itself, not of instances of the object.

Type

Attribute

Syntax

```
<Path>.Control:method
```

Assignment Value

You can assign a value of data type *method*.

Example

```
MyCheckbox.Control := "myControl"
```

See also

[Control \[Checkbox\]](#)

Value [SimTalk] - Checkbox

Activates (*true*) or deactivates (*false*) the *Checkbox* designated by <Path>. The *Checkbox* executes a **Control** when its value changes.

Syntax

```
<Path>.Value:boolean
```

Watchable

The attribute is **watchable**.

Assignment Value

You can assign a value of data type *boolean*.

Example

```
MyCheckbox.Value := false
```

See also

[Value \[drop-down list\] - Checkbox](#)

[Control \[Checkbox\]](#)

Button

Button [object]

Use the object *Button* for showing a button in the *Frame*. When you click the button, it executes the action which you programmed in a control.

Image



Description

The *Button* executes the action, which you programmed in the **Control**, when the user clicks it.

If you type in a label for the button, *Plant Simulation* shows that **label** on the button in the *Frame*.