

- Press the **F8** key or click **Show Attributes and Methods** on the **Home** ribbon tab of the *Frame* into which you inserted an instance to show the *methods*, *read-only attributes*, and *attributes* of the selected [Instance \[general description\]](#).

To query the value of a *read-only attribute*, you might, for example, type:

```
print MyDropDownList.UUID
```


Attributes of the DropDownList

_Attributes of the DropDownList

The *DropDownList* provides:

- The *attributes* listed in the table of contents to the left.
- The [Attributes of All Objects](#).

To view all of the *methods*, *read-only attributes*, and *attributes* of the object, open the window [Show Attributes and Methods](#). The figure below illustrates the information using the example of the object *Station*.

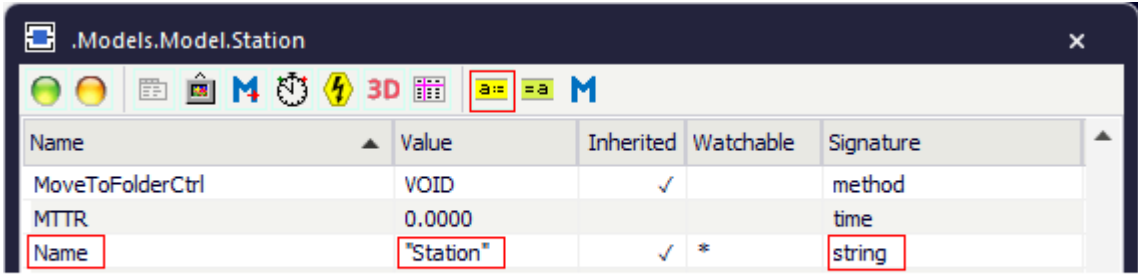

Name	Value	Inherited	Watchable	Signature
MoveToFolderCtrl	VOID	✓		method
MTTR	0.0000			time
Name	"Station"	✓	*	string

Name of the attribute Current value of the attribute Data type of the assignment value

- Select **Show Attributes and Methods** on the context menu of the **Class Library** to show the *methods*, *read-only attributes*, and *attributes* of the selected [Class \[general description\]](#).
- Press the **F8** key or click **Show Attributes and Methods** on the **Home** ribbon tab of the *Frame* into which you inserted an instance to show the *methods*, *read-only attributes*, and *attributes* of the selected [Instance \[general description\]](#).

You can set the value of an attribute and you can get its value, either with the check boxes, the text boxes and drop-down lists in the dialog windows or by assigning values to the respective attributes.

- To **set the value** of an attribute, you might, for example, type:

```
MyDropDownList.UseIcon := false
```

- To **get the value** of an attribute, you might, for example, type:

```
print MyDropDownList.UseIcon  
posit := Station.Cont.XPos
```

Control [SimTalk] - DropDownList

Sets the **Control** which the *DropDownList* designated by <Path> executes when you select an item in the *DropDownList* in the *Frame*.

Remarks

The anonymous identifiers **?** and **@** are set to the *DropDownList* when the method is called.

Type

Attribute

Syntax

```
<Path>.Control:string
```

Assignment Value

You can assign a value of data type *string*.

Examples

```
MyDropDownList.Control := "myControl"
```

```
switch ?.Value  
case 1  
  print "Item 1 selected"  
case 2  
  print "Item 2 selected"  
end
```

See also

[Control \[DropDownList\]](#)

Item [SimTalk] - DropDownList

Sets which **Item** in the *DropDownList* designated by <Path> will be selected using its name.

Remarks

If you localize the items, you will usually use the attribute *Value* instead of the attribute *Item*. The value is a number which is language-independent, while the *Item* is a string which differs from language to language.

Type

Attribute

Syntax

```
<Path>.Item:string
```

Assignment Value

You can assign a value of data type *string*.

Example

```
MyDropDownList.Item := "My item text 1"
```

SimTalk

[Items \[SimTalk\] - DropDownList](#)

[Value \[SimTalk\] - DropDownList](#)

See also

[Items \[button\] - DropDownList](#)

Items [SimTalk] - DropDownList

Sets or gets the **Items** which the *DropDownList* designated by <Path> shows.

Remarks

If you want to use the **index number** to access an item in the list, use the attribute *Value*.

If you want to use the **name** to access an item in the list, use the attribute *Item*.

Type

Attribute

Syntax

```
<Path>.Items:array
```

Assignment Value

You can assign a value of data type *array*.

Example

```
var a : string[] := ["Item 1", "Item 2", "Item 1"]  
MyDropDownList.Items := a
```

SimTalk

[Value \[SimTalk\] - DropDownList](#)

[Item \[SimTalk\] - DropDownList](#)

See also

[Items \[button\] - DropDownList](#)

[Configure the Feeder Line with Sensor and Sensor Control](#)

ObjectHeight [SimTalk] - DropDownList

Sets the **Height** of the *Drop-Down List* designated by <Path> with which it is shown in the *Frame*.

Type

Attribute

Syntax

```
<Path>.ObjectHeight:integer
```

Assignment Value

You can assign a value of data type *integer*.

Example

```
MyDropDownList.ObjectHeight := 1 // meter
```

See also

[Height \[text box\] - DropDownList](#)

ObjectWidth [SimTalk] - DropDownList

Sets the **Width** of the *DropDownList* designated by <Path> with which it is shown in the *Frame*.

Remarks

If you enter long identifiers for the **Items**, you have to adjust the width so that the label fits on the *DropDownList* without the text being cut off.

Type

Attribute

Syntax

```
<Path>.ObjectWidth:integer
```

Assignment Value

You can assign a value of data type *integer*.

Example

```
MyDropDownList.ObjectWidth := 4 // meters
```

See also

[Width \[text box\] - Button](#)

[Items \[button\] - DropDownList](#)

Value [SimTalk] - DropDownList

Sets which item in the *DropDownList* designated by <Path> will be selected. *Plant Simulation* uses the index number of the item to do so.

Remarks

If you localize the items to other languages, you will usually use the attribute *Value* instead of the attribute *Item*. The value is a number which is language-independent, while the *Item* is a string which differs from language to language.

Type

Attribute

Syntax

```
<Path>.Value:integer
```

Assignment Value

You can assign a value of data type *integer*.

Example

```
MyDropDownList.Value := 3
```

SimTalk

Item [SimTalk] - DropDownList

See also

Value [text box] - DropDownList

Mobile Objects

Mobile Units [MUs]

Plant Simulation provides the **mobile units** to model the materials that flow through a simulation model while being processed and transported by the material flow objects.