

MH MK2 SETUP GUIDE WITH KEYSPAN FOR MAC OS X



IMPORTANT: In order to use this cutter with a Mac Computer you need a USB to Serial adapter; we recommend the KeySpan adapter made by TrippLite.

This device is available on our website. Click here for more information.

PARTS REQUIRED FOR THE CONNECTION:

- Power Cable (included with cutter)
- USB Cable (Included with cutter)
- Null Modem Serial Cable (included with cutter)
- KeySpan Adapter (sold separately)



KEYSPAN ADAPTER DRIVER INSTALLATION

STEP 1: You can install the KeySpan Adapter driver using the CD included, but we highly recommend downloading the most recent driver linked below.

IMPORTANT: Make sure the KeySpan serial adapter is NOT plugged into your Mac, download the driver and select the version of OS X accordingly.

* * * * DOWNLOAD REQUIRED USB DRIVER * * * *




STEP 2: Locate the KEYSPAN_OS_X.dmg file just downloaded and double click to open.




STEP 3: You will see three files, select based on your OS X version.




STEP 4: Once the file runs the Setup Assistant will display, select **Continue**.

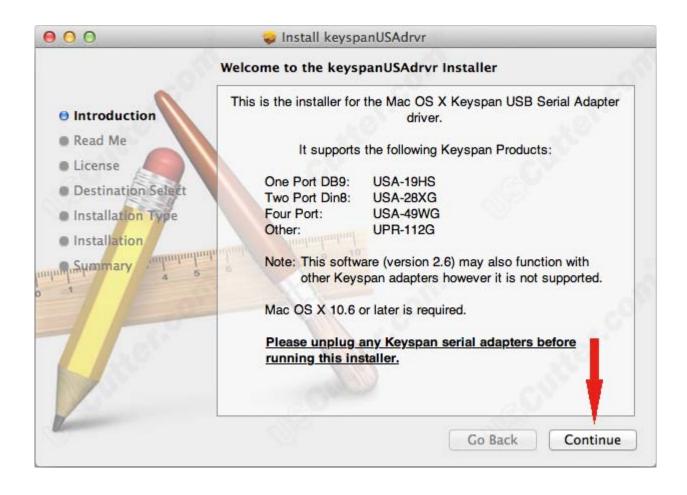

STEP 5: The Software Information "Read Me" will display, select **Continue**.

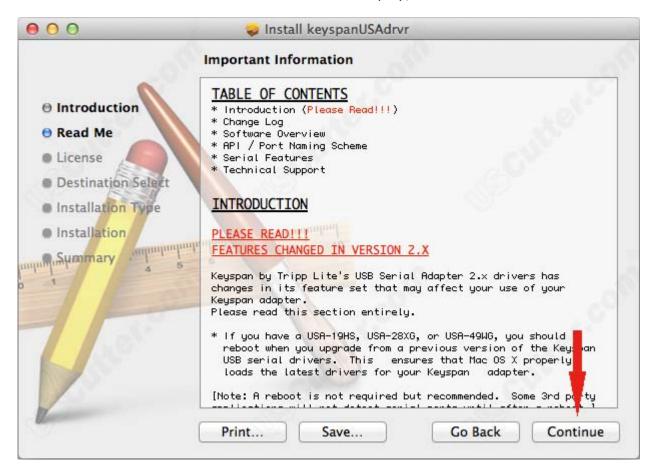


STEP 6: The Software License Agreement will display, select **Continue**.

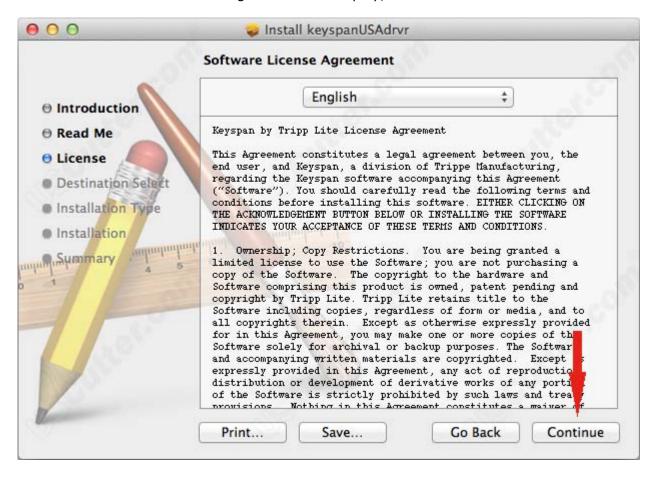

STEP 7: Click Agree.

of the software license agre	oftware you must agree tement.	to the term
Click Agree to continue or clic and quit the Installer.	ck Disagree to cancel the i	nstallation
	Revenue of the accommon	

STEP 8: Select Install.

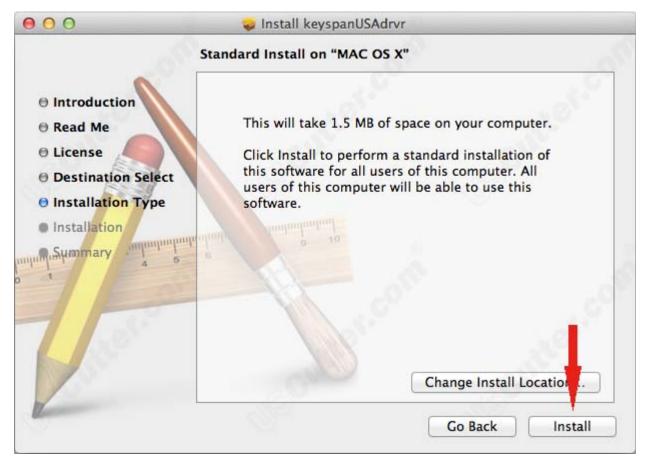

STEP 9: Enter your user information to allow the installation and press **OK**.




STEP 10: Installing the KeySpan driver...





NOTE: The following message will display notifying the driver was successfully installed. Press **Close**.

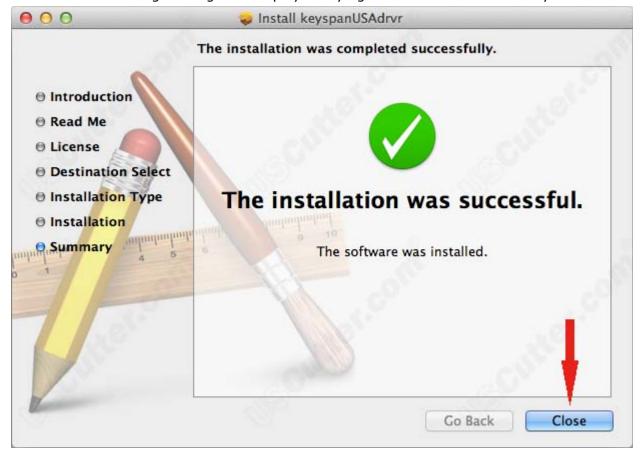

NOTE: To finish the installation is recommended to **Restart your Mac**.

KEYSPAN ADAPTER CONNECTION SETUP

IMPORTANT: The Baud Rate in the cutter settings needs to be changed from 9600 to 4800. Turn on your cutter and follow the steps below.

- 1. Press the **Setup button** once or twice and look for **Baud Rate**
- 2. Press the **left** or **right** keys and change to **4800**
- 3. Press the **Reset button**

STEP 11: Connect the Null Modem Serial Cable to the Serial Port of the cutter.






STEP 12: Connect the Null Modem Serial and USB Cable to the KeySpan Adapter as shown below.



STEP 13: Connect the **USB cable** to your Mac.

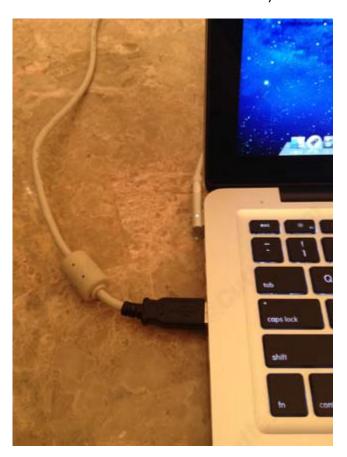

Enjoy your new vinyl cutter! Thank you for choosing USCutter