
QUECTEL EC25 KERNEL FLASHING PROCEDURE

Step 1: Copy Paste the "QFlash_V5.2_EN" folder in your PC.


Step 2: Goto QFlash_V5.2_EN->Release

Step 3: Run "QFlash_V5.2.exe"

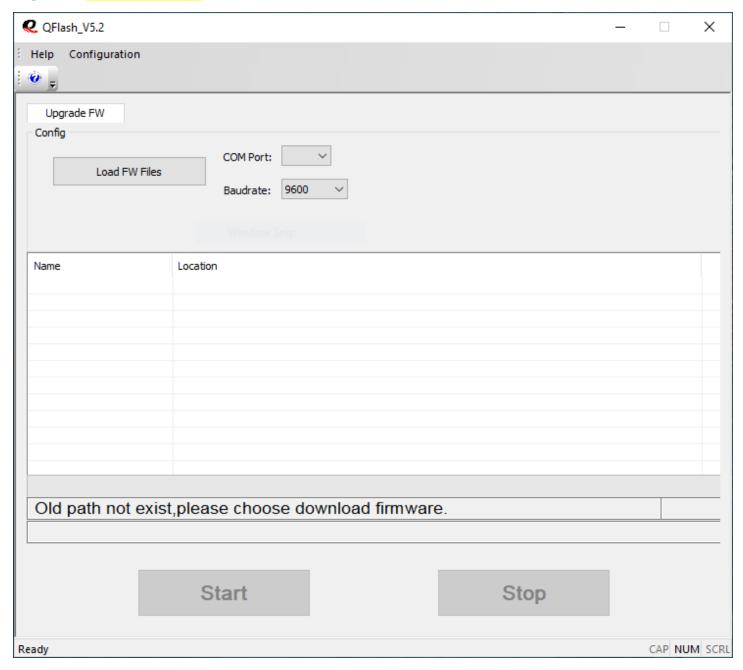


QFlash_V5.2.exe


Step 4 : In "QFlash_V5.2.exe" click "Load FW Files" Button

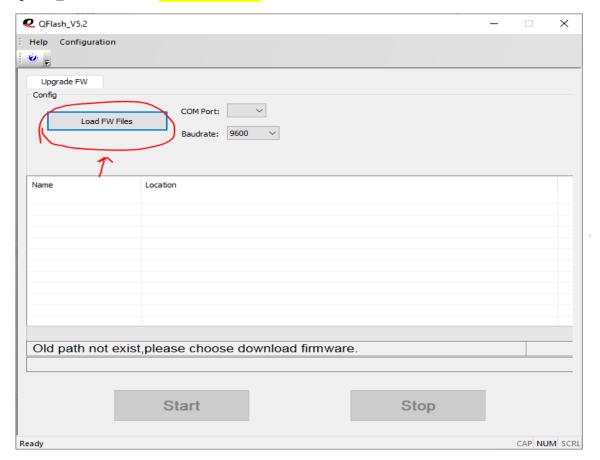


Step 5: After clicking "Load FW Files" Button. Goto the Kernel files folder in your PC.

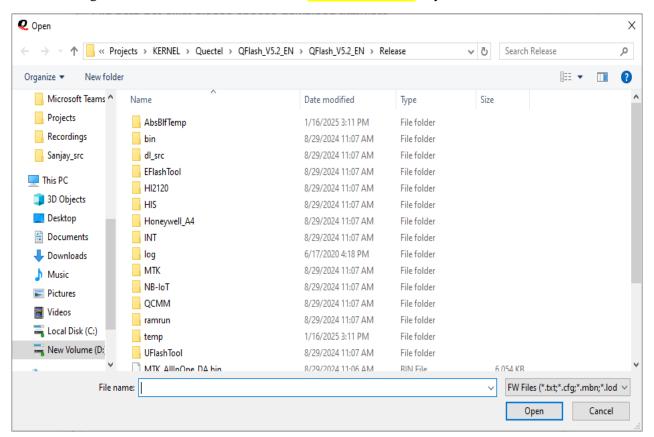


Step 6 : Click "appsboot.mbn"

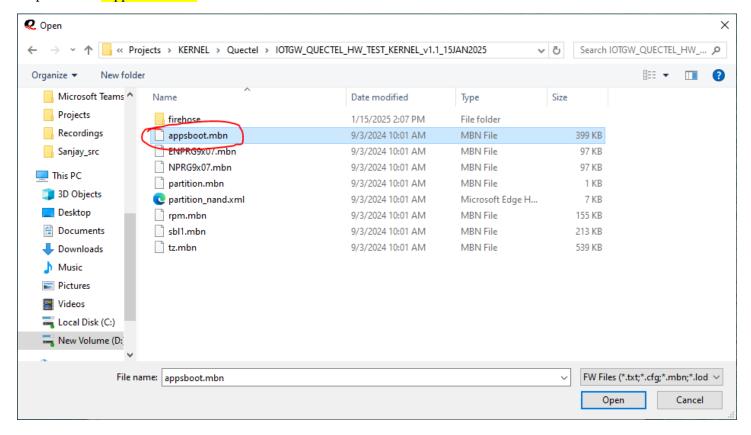


Step 7 : Click "Open"

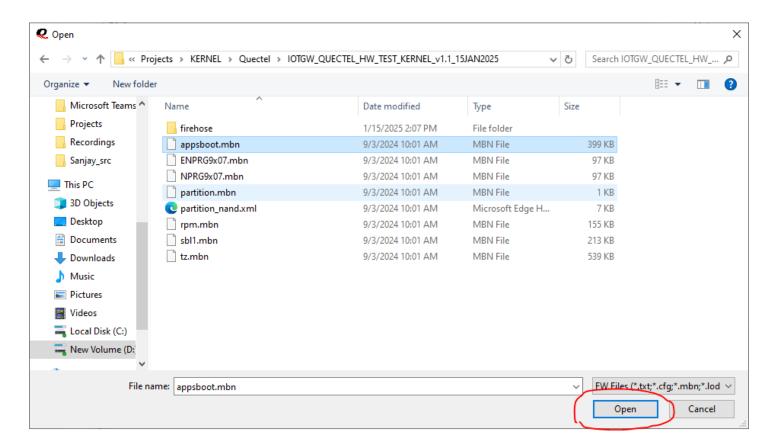


Step 8 : Click "Configuration" and select "Sahara only"

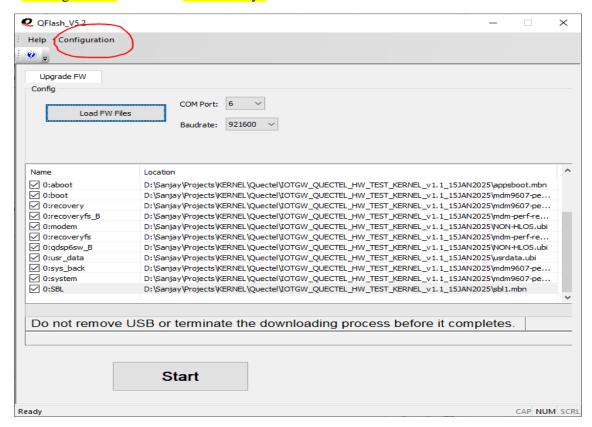


Step 9: Set your COM Port number and Baudrate

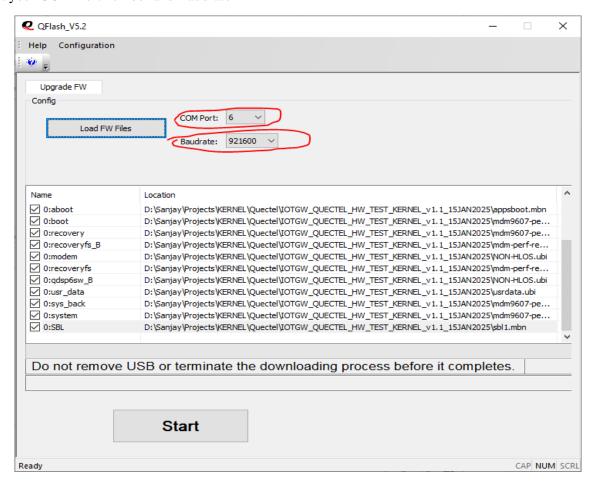


Step 10: Click "Start"

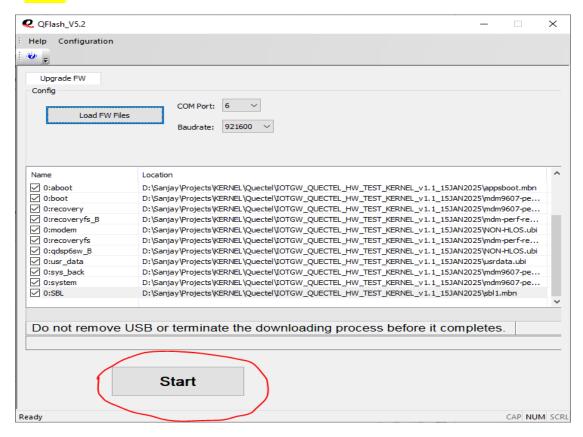

Step 11: Kernel Uploading will start

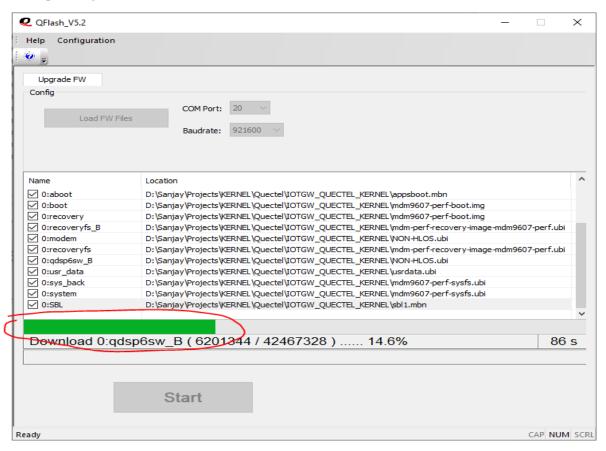

Step 12: After successful upload remove the boot jumper and power OFF and Power ON the device

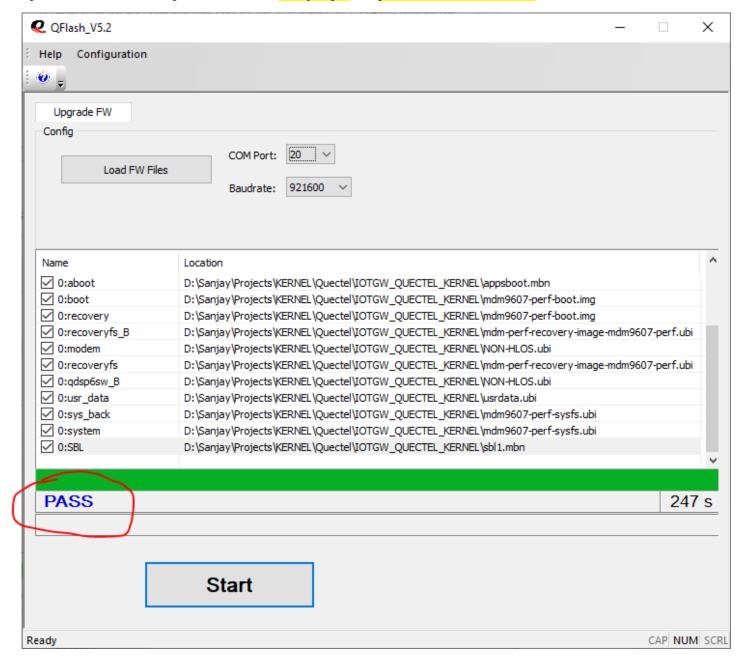

SUCCESSFULL KERNEL UPLOAD