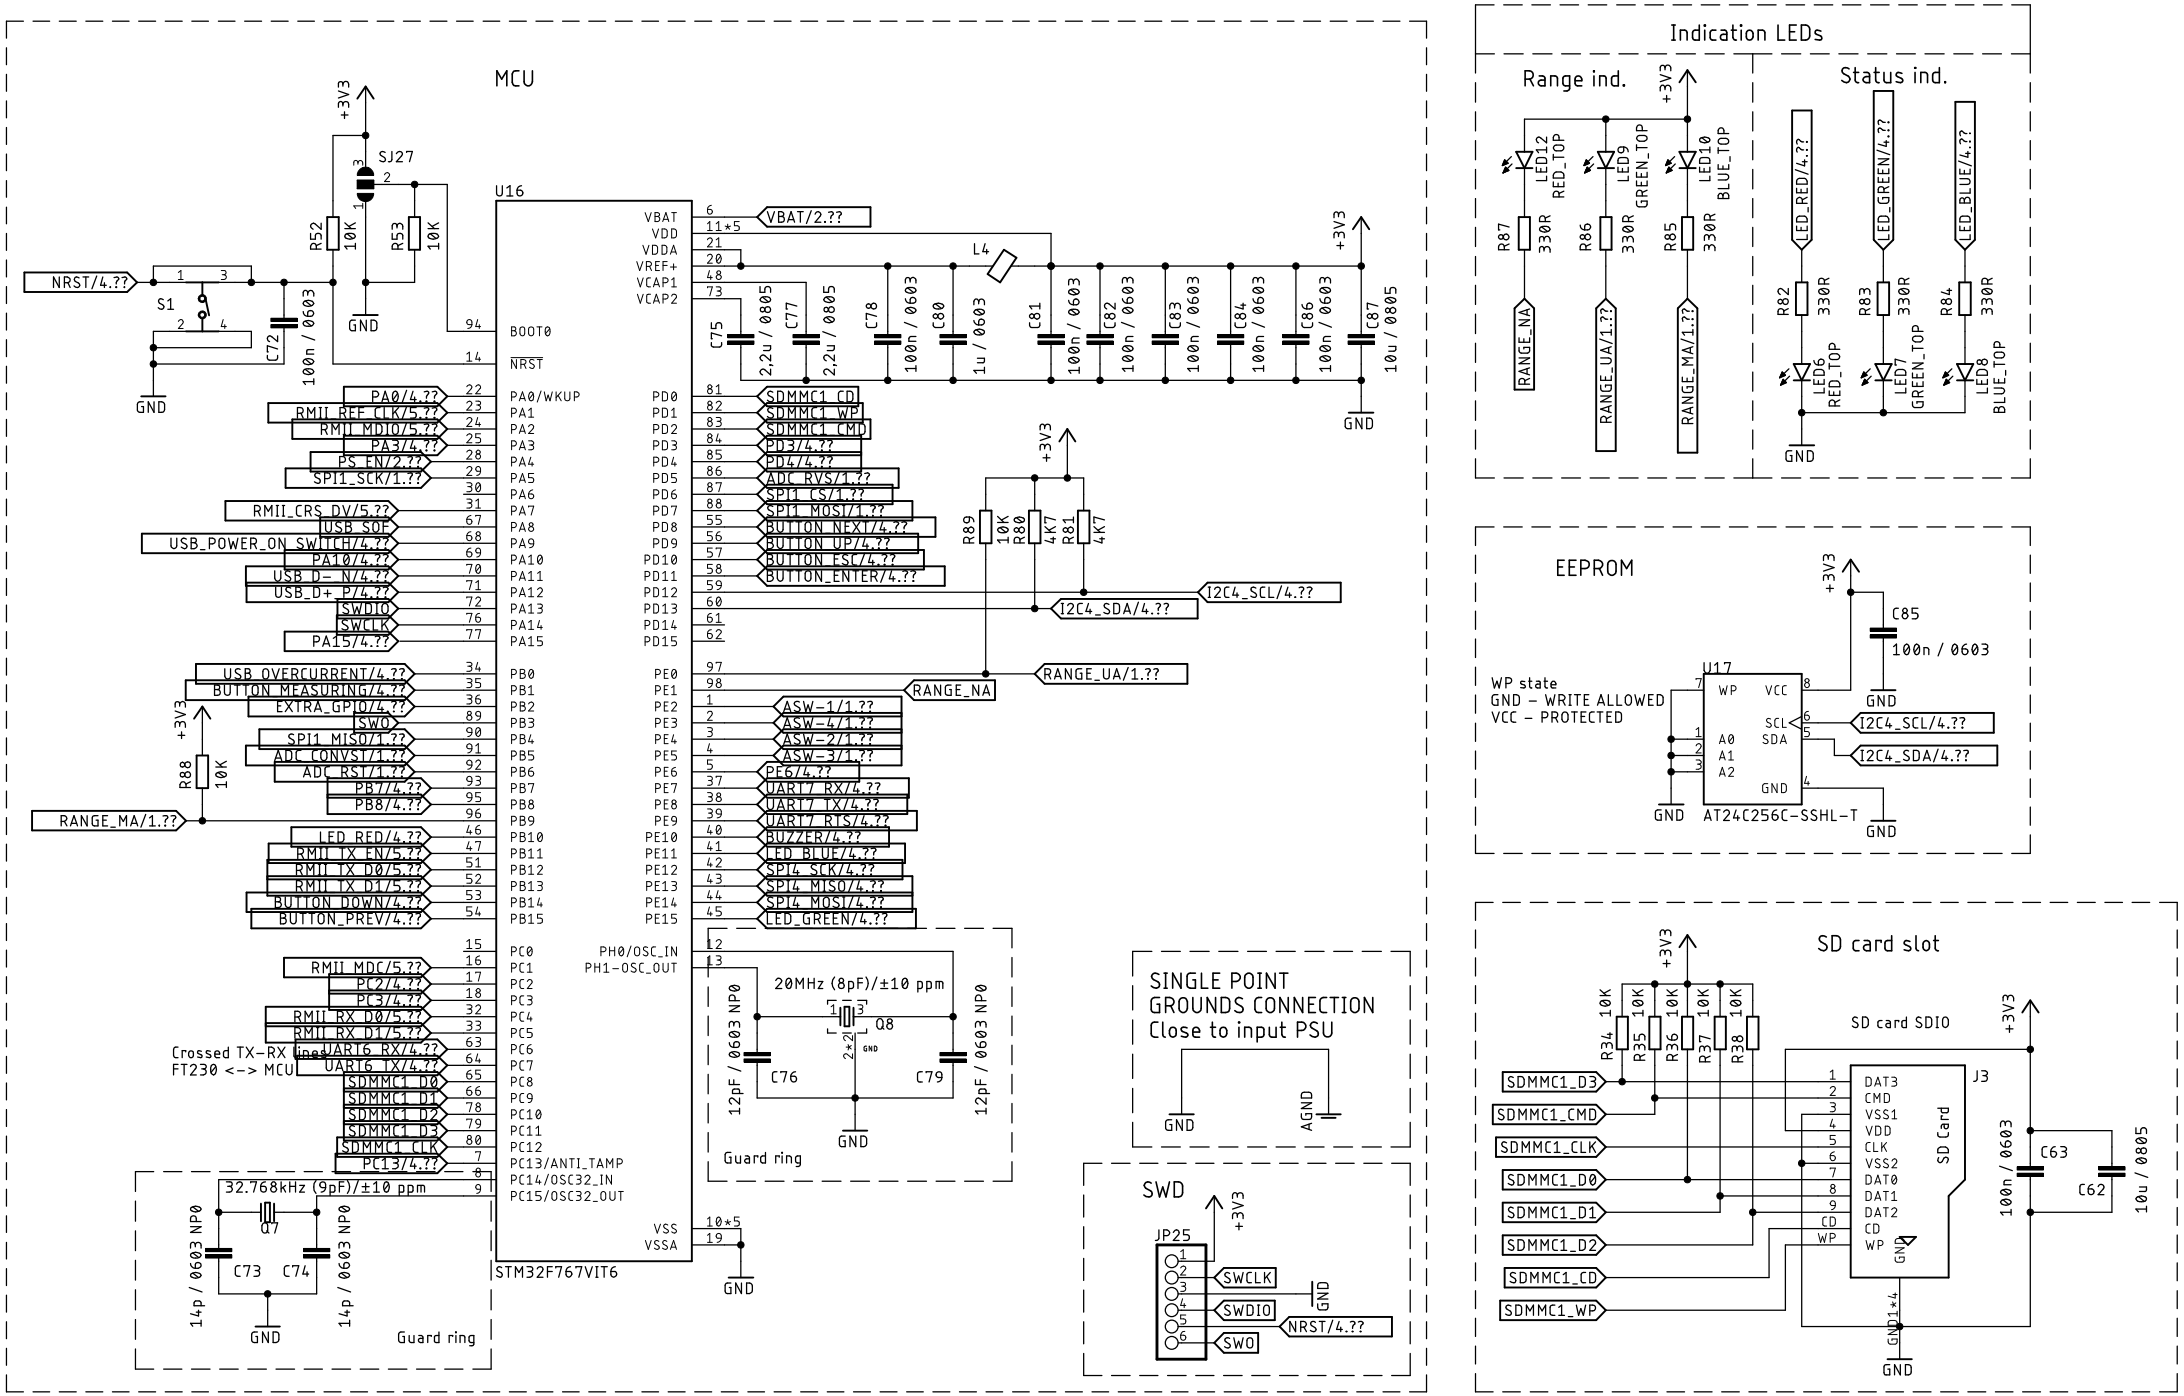

MCU
U16
STM32F767VIT6
+3V3
GND
SJ27
R52 10K
R53 10K
S1
NRST/4.??
C72 100n / 0603
BOOT0
NRST
VBAT
VDD
VDDA
VREF+
VCAP1
VCAP2
VSS
VSSA
L4
C75 2.2u / 0805
C77 2.2u / 0805
C78 100n / 0603
C80 1u / 0603
C81 100n / 0603
C82 100n / 0603
C83 100n / 0603
C84 100n / 0603
C86 100n / 0603
C87 10u / 0805
VBAT/2.??
PA0/4.??
RMII_REF_CLK/5.??
RMII_MDIO/5.??
PA3/4.??
PS_EN/2.??
SPI1_SCK/1.??
RMII_CRS_DV/5.??
USB_SOF
USB_POWER_ON_SWITCH/4.??
PA10/4.??
USB_D-_N/4.??
USB_D+_P/4.??
SWDIO
SWCLK
PA15/4.??
USB_OVERCURRENT/4.??
BUTTON_MEASURING/4.??
EXTRA_GPIO/4.??
SWO
SPI1_MISO/1.??
ADC_CONVST/1.??
ADC_RST/1.??
PB7/4.??
PB8/4.??
RANGE_MA/1.??
R88 10K
LED_RED/4.??
RMII_TX_EN/5.??
RMII_TX_D0/5.??
RMII_TX_D1/5.??
BUTTON_DOWN/4.??
BUTTON_PREV/4.??
RMII_MDC/5.??
PC2/4.??
PC3/4.??
RMII_RX_D0/5.??
RMII_RX_D1/5.??
Crossed TX-RX lines
FT230 <-> MCU
UART6_RX/4.??
UART6_TX/4.??
SDMMC1_D0
SDMMC1_D1
SDMMC1_D2
SDMMC1_D3
SDMMC1_CLK
PC13/4.??
32.768kHz (9pF)/±10 ppm
Q7
C73 14p / 0603 NP0
C74 14p / 0603 NP0
Guard ring
PH0/OSC_IN
PH1-OSC_OUT
20MHz (8pF)/±10 ppm
Q8
C76 12pF / 0603 NP0
C79 12pF / 0603 NP0
Guard ring
PD0 SDMMC1_CD
PD1 SDMMC1_WP
PD2 SDMMC1_CMD
PD3/4.??
PD4/4.??
ADC_RVS/1.??
SPI1_CS/1.??
SPI1_MOSI/1.??
BUTTON_NEXT/4.??
BUTTON_UP/4.??
BUTTON_ESC/4.??
BUTTON_ENTER/4.??
R89 10K
R80 4K7
R81 4K7
I2C4_SCL/4.??
I2C4_SDA/4.??
RANGE_UA/1.??
RANGE_NA
PE1 RANGE_NA
PE2 ASW-1/1.??
PE3 ASW-4/1.??
PE4 ASW-2/1.??
PE5 ASW-3/1.??
PE6/4.??
UART7_RX/4.??
UART7_TX/4.??
UART7_RTS/4.??
BUZZER/4.??
LED_BLUE/4.??
SPI4_SCK/4.??
SPI4_MISO/4.??
SPI4_MOSI/4.??
LED_GREEN/4.??
SINGLE POINT
GROUNDS CONNECTION
Close to input PSU
GND
AGND
SWD
JP25
SWCLK
SWDIO
NRST/4.??
SWO
Indication LEDs
Range ind.
Status ind.
R87 330R
R86 330R
R85 330R
LED12 RED_TOP
LED9 GREEN_TOP
LED10 BLUE_TOP
RANGE_NA
RANGE_UA/1.??
RANGE_MA/1.??
LED_RED/4.??
LED_GREEN/4.??
LED_BLUE/4.??
R82 330R
R83 330R
R84 330R
LED6 RED_TOP
LED7 GREEN_TOP
LED8 BLUE_TOP
EEPROM
C85 100n / 0603
WP state
GND – WRITE ALLOWED
VCC – PROTECTED
U17
WP
VCC
SCL
SDA
A0
A1
A2
GND
AT24C256C-SSHL-T
I2C4_SCL/4.??
I2C4_SDA/4.??
SD card slot
SD card SDIO
R34 10K
R35 10K
R36 10K
R37 10K
R38 10K
SDMMC1_D3
SDMMC1_CMD
SDMMC1_CLK
SDMMC1_D0
SDMMC1_D1
SDMMC1_D2
SDMMC1_CD
SDMMC1_WP
J3
SD Card
DAT3
CMD
VSS1
VDD
CLK
VSS2
DAT0
DAT1
DAT2
CD
WP
C63 100n / 0603
C62 10u / 0805