

BELIMO

Energy Valve Data File Download

(Network_Data_Download.xlsm)

USER MANUAL

Release 2.20

Prepared for Belimo internal staff – not for distribution.
Belimo U.S., Inc. | 33 Turner Road, Danbury, CT 06810
Questions? Use the contact on the tool's About screen.

Contents

1. Introduction	4
1.1 What the tool does, in one paragraph	4
1.2 What's in this manual	4
1.3 What you need	4
2. Getting Started	6
2.1 Opening the file	6
2.2 What happens each time it opens	6
2.3 The About screen	6
2.4 How updates work	7
3. The Network Data File Download Sheet	8
3.1 Choosing what to download	9
3.2 Entering your valves	9
3.3 The Status, Port, Version and Firmware columns	9
3.4 My Computer IP Address	10
3.5 Check Connections	10
3.6 Download Data Files	10
3.7 Import IP Address's and Export IP Address's	11
3.8 Button reference	11
4. The Valve Explorer Sheet	12
4.1 Choosing a valve	12
4.2 Setup Information	12
4.3 Diagnostics	13
4.4 Download Diagnostics	13
4.5 Live Data	13
5. Create Download Script	15
5.1 What it produces	15
5.2 Setting it up (one time)	15
5.3 Running it	15

5.4 Scheduling it	15
6. Messages and Troubleshooting	17
6.1 Download and connection messages	17
6.2 Import, Export and script messages	18
6.3 Valve Explorer messages	18
6.4 General problems	19
7. Network and Security Notes	20
Appendix A. Condition Names in the Diagnostics Report	21
Appendix B. Release History	22

1. Introduction

The Energy Valve Data File Download tool (the “tool”, file name Network_Data_Download.xlsm) is an Excel workbook that collects data from Belimo Energy Valves over your local network. You list the valves by IP address and give each a short name; the tool then downloads each valve’s CSV datalog files – the daily or monthly records the valve keeps on its own – into one folder per valve. A second sheet, **Valve Explorer**, lets you look inside a single valve: its identity and settings, its fault history and current status, and live readings.

Who this manual covers

Belimo sales, application and service staff who need to pull datalogs or check the configuration of Energy Valves on a customer site or lab network. You do not need to know how the valve’s web interface works – the tool works out how to talk to each valve for you.

1.1 What the tool does, in one paragraph

You type in each valve’s IP address and Unit ID, choose whether you want daily or monthly files and how many, and click **Download Data Files**. The tool finds the right network port for each valve (they differ between firmware generations), signs in the way that valve expects, and saves one CSV file per day or month. Because it checks what comes back before saving it, you never end up with a “CSV” file that is really a login page. For hands-off collection – for example every night from a server – **Create Download Script** turns the same list into a stand-alone downloader you can schedule.

1.2 What’s in this manual

- Section 2 – Getting started: opening the file, what happens on open, the About screen and updates.
- Section 3 – The Network Data File Download sheet: entering valves, checking connections and downloading files.
- Section 4 – The Valve Explorer sheet: setup information, diagnostics, support file and live data.
- Section 5 – Create Download Script: scheduled, unattended collection.
- Section 6 – Messages and troubleshooting.
- Section 7 – Network and security notes.
- Appendix A – The condition names the diagnostics report can show. Appendix B – Release history.

1.3 What you need

- Microsoft Excel for Windows with macros enabled.
- A PC on the same network as the valves (or connected to it by VPN). The tool talks to the valves directly; it does not use the internet.

- The valves' IP addresses. The tool tries the ports a valve might use (8080, 443, 8443 and 80), so you do not need to know which one a given valve uses.
- Only for Create Download Script: Python 3.8 or newer on the PC that will run the script (Section 5).

2. Getting Started

2.1 Opening the file

Open Network_Data_Download.xlsm in Excel. The tool is built with macros, so if Excel shows a yellow **Protected View** bar, click **Enable Editing**, and if it then shows a **Security Warning** bar, click **Enable Content**. (If the file came from e-mail or a download, right-click it in File Explorer, choose Properties, tick **Unblock** and click OK first – that avoids the warnings.)

The workbook has two visible sheets, chosen with the tabs along the bottom of the window: **Network Data File Download** (Section 3) and **Valve Explorer** (Section 4). Two further sheets are hidden and hold the tool's own templates and settings; there is no need to open them.

2.2 What happens each time it opens

- **Update check.** The tool quietly checks Belimo's update source for a newer release and, the first time a new one appears, offers to install it (Section 2.4).
- **Status is cleared.** The Status column is emptied so that yesterday's "Offline" can never make a valve get skipped today. The Port column is kept, because remembering the port is its whole purpose.
- **Valve Explorer is cleared.** The selected valve, IP, port, any report and every Live Data value are blanked, so nothing left over from an earlier session can look current when it is not.
- **Checking connections.** Each time you switch to the Network Data File Download sheet, the tool fills in this PC's name and IP address and runs Check Connections across your valve list (you will see "Please wait. Checking Connections..."). This can take a few seconds per unreachable valve.

2.3 The About screen

Click the **About** button at the bottom of the Network Data File Download sheet. It shows the tool's name, version number, the internal-use notice, the disclaimer, and who maintains the tool.

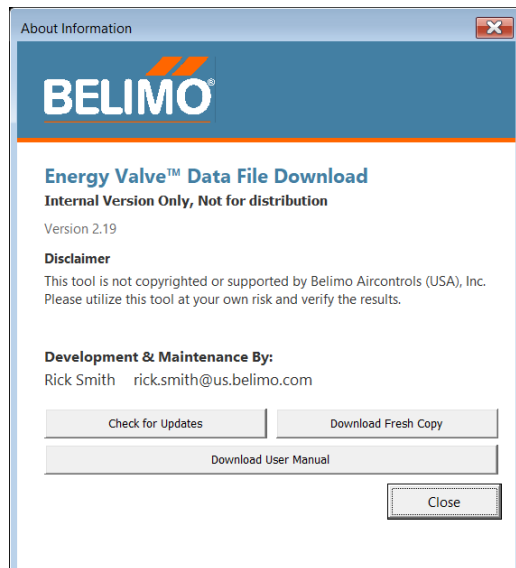


Figure 1 – The About screen.

The disclaimer reads, in short: this tool is not copyrighted or supported by Belimo Aircontrols (USA), Inc.; use it at your own risk and verify the results.

Button	What it does
Check for Updates	Asks the update source whether a newer release exists. If one does, you are told what is new and may choose to download it.
Download Fresh Copy	Downloads the current published release straight away, even if you are already up to date – useful if you think your copy is damaged.
Download User Manual	Saves the current published copy of this manual (a PDF) to a folder you choose. If none has been published yet, the tool tells you so.
Close	Closes the About screen.

2.4 How updates work

When a newer release is available you are told and offered a summary of what changed. If you choose to install it, you pick where the new copy is saved through a normal Windows **Save As** dialog, just like any other file. Your current copy is never changed or deleted. If the update source cannot be reached (for example you are on an isolated site network), the check silently does nothing and the tool works as normal.

3. The Network Data File Download Sheet

Everything for collecting datalog files happens on this one sheet. Figure 2 shows it with three sample valves entered.

Retrieve Day or Month Files D/M:

D

i

Number of Days or Months to retrieve:

7

i

Number of Valves to retrieve data from:

3

i

	Energy Valve IP Address					Unit ID:	Status	Port	Version	Firmware	
1	192	.	168	.	4	143	AHU-1	Online	8443	EV4.2.2	2.2.9
2	192	.	168	.	4	144	AHU-2	Online	8443	EV4.2.2	2.2.9
3	192	.	168	.	4	150	CHW-PUMP-3	Offline			
4											
5											
6											
7											
8											
9											
10											
11											
12											
13											
14											
15											
16											
17											
18											
19											
20											

My Computer IP Address

Unit ID:

Check Connections

SALES-LAPTOP

Download Data Files

Import IP Address's

Export IP Address's

About

Create Download Script

Figure 2 – The Network Data File Download sheet, with three sample valves entered.

The small round blue (i) icons open a short help message about the field or button beside them. There are seven, covering the three settings at the top, the IP address and Unit ID columns, Check Connections and Download Data Files. Click any of them at any time.

3.1 Choosing what to download

Setting	What it means
Retrieve Day or Month Files D/M	Type D for daily files or M for monthly files.
Number of Days or Months to retrieve	How far back to go, from 1 to 31, counted back from yesterday (daily) or last month (monthly). For example D with 7 downloads the last 7 days; M with 3 downloads the last 3 months.
Number of Valves to retrieve data from	Fills in by itself from the Unit IDs you enter – there is nothing to type. Only rows that have a Unit ID are downloaded.

Today's file is never downloaded

Today's daily file and the current month's monthly file are always left out, because the valve is still writing to them. Each daily file takes a few seconds per valve, so a large request takes a while – 31 days from 20 valves is roughly an hour. You can stop at any time (Section 3.6).

3.2 Entering your valves

Up to **20 valves** can be listed, one per row (rows 1 to 20 on the sheet).

- **Energy Valve IP Address** – type the address across the four boxes, one number per box, for example 192 . 168 . 4 . 143. This PC must be on the same network as the valve.
- **Unit ID** – a short name for the valve, such as AHU-1 or CHW-PUMP-3. It becomes the folder name and the start of every file name for that valve. No spaces are allowed (the sheet refuses them), every valve needs a different name (two valves with the same name would overwrite each other's files), and a row with no Unit ID is not downloaded. Characters Windows does not allow in file names (\ / : * ? " < > |) are replaced with an underscore and the download summary tells you so.

3.3 The Status, Port, Version and Firmware columns

These four columns are filled in by the tool, not by you.

Column	What it shows
Status	Online or Offline , from Check Connections. Empty until a check has run, and cleared each time the workbook opens.
Port	The network port the valve answered on (8080, 443, 8443 or 80). The tool works it out on the first check or download and remembers it so later runs go straight there. If a valve is moved to a different port, the tool notices and updates it.
Version	The valve's Energy Valve generation, for example EV4.2.2 . Shows "(no response)" if the valve answered a ping but its web service did not answer.
Firmware	The valve's application firmware version, for example 2.2.9.

Save the workbook after a check or download to keep the Port column, so the next run skips the port search.

3.4 My Computer IP Address

Below the list, the sheet shows this PC's IP address and computer name. They are for reference – for example to confirm you are on the same subnet as the valves – and are refreshed each time you switch to the sheet.

3.5 Check Connections

Click **Check Connections** to test every valve in the list. For each one the tool pings the address, shows **Online** or **Offline** in the Status column, and, if it is online, contacts the valve's web service to read its port, version and firmware. A ping alone would not prove the valve's data service is running, which is why the tool goes on to ask the valve itself.

- Valves marked **Offline** are skipped when you download, so a run is not held up waiting for valves that are switched off.
- Some networks block ping even when the valve is reachable. If a valve shows Offline but you know it is up, **clear its Status cell and download anyway** – the download does not rely on ping.

3.6 Download Data Files

1. Set Day/Month and the number to retrieve, and check the valve list.
2. Click **Download Data Files** and choose a folder. The tool makes a sub-folder for each valve, named after its Unit ID.
3. Watch the progress line at the top of the sheet: it shows the valve, the file number, how many files are done and how many have failed. To stop, press **Esc** – files already downloaded are kept.
4. When it finishes, read the summary box (below).

Files are named after the valve and the date: AHU-1\AHU-1-2026-09-09.csv for a daily file, AHU-1\AHU-1-2026-08.csv for a monthly one. A day or month for which the valve has no data is saved as an empty file and is not treated as an error.

The summary box lists **Downloaded**, **Failed** and **Skipped (offline)** counts and where the files were saved. It also tells you if the Port column was updated (save the workbook), how many rows had an address but no Unit ID and were skipped, and any Unit IDs that had to be adjusted to make legal folder names. If you pressed Esc it begins "Cancelled – partial results kept."

If a valve fails

The most common causes are a wrong IP address, a valve that is powered off or on another network, or a valve whose login has been changed from the factory default. Section 6 lists each message and its fix.

3.7 Import IP Address's and Export IP Address's

To carry a valve list to another PC instead of retyping it:

- **Export IP Address's** asks you to confirm, then saves the IP addresses and Unit IDs to a small Excel file (the suggested name is IPAddress.xlsx) through a Save As dialog.
- **Import IP Address's** reads such a file back in. It warns that it will **delete all current IP addresses** and asks you to confirm, lets you pick the file, fills in the list, marks each valve's Status "Unknown" and runs Check Connections.

Import reads the first sheet of the file you choose – a file created by Export, or a .csv or .xlsx laid out the same way, with the valves listed from row 2. It reads up to 20 valves. The Port, Version and Firmware columns are not part of the file; they are filled in again by Check Connections.

3.8 Button reference

Button	What it does
Check Connections	Pings every valve and fills in Status, Port, Version and Firmware (Section 3.5).
Download Data Files	Downloads the datalog files from every online valve to a folder you pick (Section 3.6).
Import IP Address's	Replaces the list with one saved earlier (Section 3.7).
Export IP Address's	Saves the current list to a file (Section 3.7).
About	Version, disclaimer, contact, updates and this manual (Section 2.3).
Create Download Script	Builds a stand-alone collector from the list for scheduled use (Section 5).

4. The Valve Explorer Sheet

Where the first sheet collects files from many valves, **Valve Explorer** looks inside *one* valve at a time. It reads the valve's own data and shows it in plain language, without you having to open the valve's web interface. It only **reads** – nothing on the valve is ever changed.

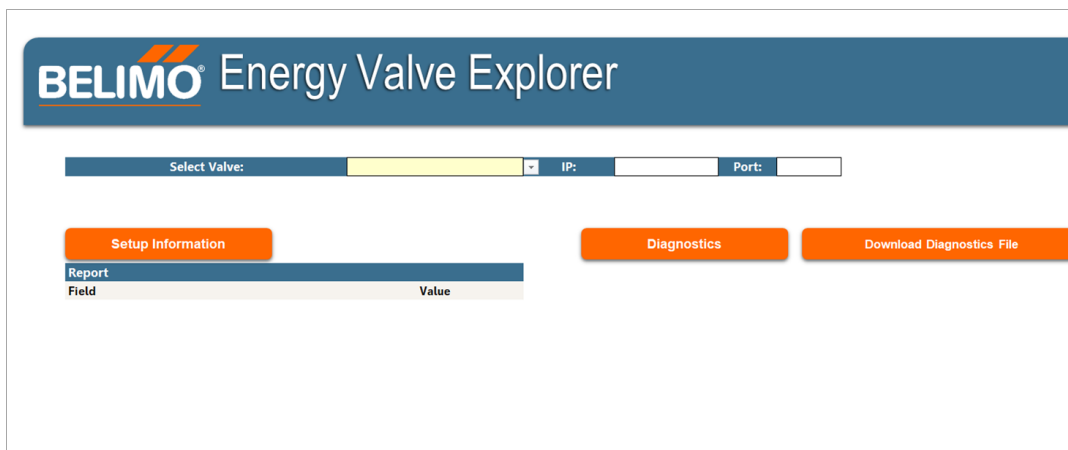


Figure 3 – The top of the Valve Explorer sheet, before a valve is chosen.

4.1 Choosing a valve

Click the yellow **Select Valve** box and pick a valve from the drop-down. The list is the Unit IDs from the Network Data File Download sheet, so enter and (ideally) check your valves there first. The valve's **IP** and **Port** appear beside the box when you click one of the report buttons.

When you click a button the tool first confirms the valve answers on its remembered port, trying the others if not, and shows “Checking connection...” in the status line. Only when the valve is confirmed does it read anything, so a wrong port is caught in a few seconds rather than after a long wait.

4.2 Setup Information

Click **Setup Information** to fill the report table with the valve's identity and configuration. It reads about 40 items, so it takes a little while. The report is grouped into sections:

Section	What it shows
Identity	Description, install location, firmware (application) and firmware version.
Metering (MID)	Accuracy class, meter type and EC certification number.
Control settings	Control mode (Position, Flow or Power Control), setpoint source (Bus or Analog), flow characteristic (Linear or Equal Percentage), control signal range for the DDC input (0–10 V, 0.5–10 V, 2–10 V), whether the signal is inverted, and the measured glycol concentration.
Application	Medium and installation position (Supply or Return).
Analog feedback (U5)	Feedback signal code, its voltage range, and the maximum power the feedback signal represents (Btu/h).

Section	What it shows
Maximum and limitation	Vmax and Vmin in GPM.
Delta T Manager	The dT limiting function (Off, dT-Manager ...), dT Vmin and the dT flow saturation value in GPM.
BACnet	Whether BACnet is enabled, device instance, object name, model name, vendor and vendor ID, UDP port, protocol revision, location string and system status (0 = Operational).
Modbus	Whether Modbus is enabled, TCP port, unit ID and parallel connections, RTU bus address, watchdog timeout and whether the TCP/RTU watchdogs have triggered.

Flows are shown in GPM, power in Btu/h and temperatures in °F; the valve itself stores metric values and the tool converts them. Settings that the valve stores as a code are shown by name where the meaning is certain. Where the tool does not know a code's meaning it shows the raw number rather than guess (for example the Feedback signal). A value the valve did not return is shown as a dash.

4.3 Diagnostics

Click **Diagnostics** to replace the report with the valve's fault history and current status:

- **Fault occurrence counters** – how many times the valve has recorded communication-to-sensor errors, actuator cannot-move events, freeze warnings, power setpoint not reached, flow actual exceeding nominal, and differential pressure setpoint not reached.
- **Live master-device status** – an **Overall status** of OK, Warning or Not OK, and the **Active condition(s)** right now, listed by name (for example "Flow With Closed Valve, Freeze Warning"), or "(none)". Appendix A lists every condition name.

The error status is a set of on/off flags, not a severity level – several conditions can be active at once. If you have only the raw number, the Message Decipher Tool decodes it the same way.

4.4 Download Diagnostics

Click **Download Diagnostics** to save the valve's own **support-data bundle** – the same file the valve's web page produces for a support request. It contains the device information, a full dump of the valve's data points and its watchdog, event and system logs, packed as a `.tar.gz` archive. Choose where to save it in the Save As dialog; the suggested name comes from the valve (or, failing that, `DebugData_<UnitID>_<date>.tar.gz`). When it finishes you are shown the file size and location. Attach this file when you raise a support request for that valve. The file can grow with the valve's log history, so it is allowed up to a minute to download.

4.5 Live Data

The lower part of the sheet reads current values from the valve. Tick the boxes beside the points you want and click **Get Selected Live Data**; only the ticked points are read, so you can pick a few and click again to refresh just those.

Live Data - pick points, then click Get Selected Live Data

Data Point	Unit	Value
☐ Absolute water flow	GPM	
☐ Relative water flow	%	
☐ Absolute power	Btu/h	
☐ Relative power	%	
☐ Supply temperature (T1)	°F	
☐ Return temperature (T2)	°F	
☐ Delta-T	°F	
☐ Heating energy (BTU reg.)	J	
☐ Cooling energy (BTU reg.)	J	
☐ Accumulated volume	m3	
☐ Valve position (relative)	%	
☐ Differential water pressure	Pa	

Get Selected Live Data

Select All

Clear All

Figure 4 – The Live Data table: tick points, then click Get Selected Live Data.

Data point	Unit shown
Absolute water flow	GPM
Relative water flow	%
Absolute power	Btu/h
Relative power	%
Supply temperature (T1)	°F
Return temperature (T2)	°F
Delta-T	°F
Heating energy (BTU reg.)	J
Cooling energy (BTU reg.)	J
Accumulated volume	m3
Valve position (relative)	%
Differential water pressure	Pa

Select All ticks all twelve boxes; **Clear All** unticks them and blanks the values. If you click Get Selected Live Data with nothing ticked, the tool reminds you to tick the points you want.

Good to know

Explorer readings are a snapshot at the moment you click; click again to refresh.

Because each valve generation has its own way of signing in, the tool decides how to sign in from what the valve does. You never enter a password on this sheet.

5. Create Download Script

The buttons in Section 3 download on demand, while the workbook is open. For unattended collection – for example every night on a server – **Create Download Script** turns the valve list and settings on the sheet into a small, self-contained downloader that runs on a schedule, even after the workbook is closed and even on a different machine.

5.1 What it produces

Click **Create Download Script** and choose a folder. If no valve has both an address and a Unit ID, the tool asks you to enter at least one first. Otherwise two files are written to the folder:

File	What it is
ev_datalog_download.py	The collector, with your valves, the daily/monthly setting and the count already filled in.
README_EV_Download.txt	Step-by-step install, run and scheduling notes written for this set of valves.

A confirmation box lists the folder, how many valves and files the script will fetch, and reminds you to follow the README. To change which valves, how many files, or daily versus monthly, update the sheet and click Create Download Script again.

5.2 Setting it up (one time)

1. Install **Python 3.8 or newer** from python.org on the PC that will run the script, ticking “Add python.exe to PATH”.
2. Open Command Prompt and install the one dependency: `pip install requests`
3. Tell the collector the valve login by storing it for your Windows user, as the README shows: `setx EV_USER <user name>` and `setx EV_PASSWORD <password>`. A read-only account is enough. Reopen Command Prompt afterwards.

5.3 Running it

From Command Prompt, in the script’s folder, run `python ev_datalog_download.py`. Files land under an `ev_datalogs` folder, one sub-folder per valve. If you would rather double-click, run `python ev_datalog_download.py --makebat` once: it writes `run_ev_download.bat` next to the script, with the login inside it and a timestamped log in a `logs` folder. (The workbook cannot write the .bat itself because company security settings stop Office programs from creating .bat files, so the collector writes it.)

5.4 Scheduling it

Use Windows Task Scheduler on a PC or server that is on at the scheduled time:

Setting	Value
General	“Run whether user is logged on or not”, as the same Windows user you ran setx as (so it inherits the login).
Trigger	Daily, at a quiet time such as 2:00 AM.
Action	Start a program – Program: python; Arguments: ev_datalog_download.py; Start in: the script’s folder.
If you made the .bat	Point the Action at run_ev_download.bat instead; its login travels with it, so no setx is needed.

Two cautions

Too many wrong-password attempts lock a valve’s account for about three minutes. Store the correct login before scheduling, and do not keep retrying a rejected one.

The login in a .bat file is stored in plain text. Keep that file on a PC you control and do not e-mail or share it.

6. Messages and Troubleshooting

6.1 Download and connection messages

You see...	What it means and what to do
"No folder selected."	You closed the folder chooser. Click Download Data Files again and pick a folder.
A valve is counted under "Skipped (offline)"	Its Status is Offline. Run Check Connections, or clear its Status cell to force a download attempt.
"No reachable port on <i>UnitID (address) ...</i> " (progress line)	The valve did not answer on any port. Check the IP address, that the valve is powered and on the network, and that this PC can reach that subnet.
"Skipping <i>UnitID</i> – ..."	The folder for that valve could not be created (for example the drive is full or read-only). Choose a different folder.
"Failed <i>UnitID date</i> – HTTP 401 (auth denied)" (or 403)	The valve rejected the login. It has been changed from the factory default; ask the site for the correct account.
"HTTP 404 (no datalog for that date, or the config was renamed)"	The valve has no file for that day or month, or its datalog configuration was renamed. (A day the valve simply recorded nothing for downloads as an empty file, which is normal.)
"HTTP 0 (timeout/connection)"	The valve stopped answering. Check the network and try again; a slow network or busy valve can need more than one attempt.
"200 but the body is a web page, not CSV – session login required" (or "... login page, not CSV")	The valve answered with its web login page instead of data, so nothing was saved (the tool never writes a login page into a .csv). Run Check Connections to refresh the port, then try again; if it persists, report it.
Two valves' files overwrote each other	They share a Unit ID. Give every valve a different name.
"Cancelled – partial results kept."	You pressed Esc. Files downloaded before that are in the folder.
"Stopped by an unexpected error ..."	Note the number and text in the message and report it with the Feedback button/contact on the About screen.

6.2 Import, Export and script messages

You see...	What it means and what to do
"You are about to open a new IP file, and it will delete all current IP addresses."	Import replaces your list. Click Yes to continue or No to keep the current list.
Nothing happens after choosing a file to import	The file is not laid out like the file Export creates (valves listed from row 2 of the first sheet). Use Export IP Address's to create a valid template.
"Save operation was canceled. No file was created."	You cancelled the Save As dialog during Export.
"The workbook has been created and data has been copied."	Export succeeded.
"No valves found. Enter at least one IP address and Unit ID on the sheet first."	Create Download Script needs at least one valve with an address and a Unit ID.

6.3 Valve Explorer messages

You see...	What it means and what to do
"Choose a valve first."	Pick a valve in the Select Valve box before clicking a report button.
"'ID' was not found in the valve list on the Network Data File Download sheet."	The Unit ID you picked was deleted or renamed. Pick again.
"Could not reach 'ID' (address) on any of the ports tried ..."	Check that the valve is powered on and reachable, then try again.
"Login was refused (HTTP 401/403) getting the diagnostics file"	The valve rejected the tool's login for the diagnostics file. Its accounts have been changed.
"The valve returned HTTP ... for the diagnostics file."	The valve's firmware does not provide the support file, or it is busy. Try again; if it persists, use the valve's web page.
"No data points are checked ..."	Tick at least one Live Data box first.
Dashes in the report	The valve did not return that item – usually because that firmware generation does not have it.

6.4 General problems

Symptom	Likely cause and fix
Buttons do nothing.	Macros are disabled. Click Enable Editing / Enable Content (Section 2.1).
Excel looks frozen or the sheet is white while checking.	Check Connections and the report buttons take a few seconds per valve, and longer for unreachable ones. Wait for the status line to clear.
A valve shows Offline but is reachable.	Ping is blocked on that network. Clear the Status cell and download anyway (Section 3.5).
A valve shows Online but Version says “(no response)”.	The valve answers ping but its web service does not answer. Wait for it to finish starting, or check its network settings.
Port column keeps searching every run.	Save the workbook after a download so the Port column is kept.
Check for Updates reports a problem.	The update source could not be reached. The tool keeps working; try again later.

7. Network and Security Notes

- The tool communicates only with the valves' IP addresses that you list, over your local network. Data files are saved only to the folder you choose.
- Newer valve firmware uses a self-signed security certificate. The tool and the generated script accept it so that downloads work without a browser. To harden an automated setup, export each valve's certificate and pin it (the generated script has a comment showing where).
- The valves' logins are not shown anywhere in the tool. Do not write them into shared documents or e-mails.
- Datalogs can contain site operating information. Treat downloaded files as you would any customer data.
- Per the disclaimer on the About screen, the tool is provided for internal use without Belimo support; verify important results against the valve itself.

Appendix A. Condition Names in the Diagnostics Report

The **Active condition(s)** line of the Diagnostics report names each error flag that is on. The flags are bits of the valve's master-device error status; the bit number and value are given here for reference.

Bit	Value	Condition
0	1	No Communication
1	2	Gear Disengaged
2	4	Actuator Cannot Move
3	8	Reverse Flow
4	16	Flow Setpoint Not Reached
5	32	Flow With Closed Valve
6	64	Flow Actual Exceeds Flow Nominal
7	128	Flow Measurement Error
8	256	Remote Temperature Error
9	512	Flowbody Temperature Error
10	1024	Communication To Sensor Interrupted
11	2048	Freeze Warning
12	4096	Glycol Detected
13	8192	Power Setpoint Not Reached
14	16384	Device End Of Life Reached
15	32768	Bus Watchdog Active
16	65536	No dP Detected
17	131072	dP Setpoint Not Reached
18	262144	Minimum-Position Applied

Appendix B. Release History

Release	Date	Changes
2.20	2026-09-24	Added the standard admin keys used in every Belimo tool: F12 asks for the admin password and then shows and unprotects every sheet; F11 puts every sheet back exactly as it was. One password now protects every sheet in every tool. These keys are for maintainers and do not change how you use the tool. Import IP Address's now reads the first sheet of the chosen file, so a .csv imports as well as an Export file. Corrected a spelling mistake on the main sheet. When a newer release is published, the tool now tells you when you open it, once for each new version (Yes installs it, No carries on). Check for Updates on the About screen is always available.
2.19	2026-09-22	Added automatic update checking through Belimo's update source. Added Check for Updates and Download Fresh Copy buttons to the About screen. Updates save through a normal Windows Save As dialog and never touch your current copy. The About screen also has a Download User Manual button, which fetches this manual.
2.8 – 2.18	–	Features added after V2.7 that were not individually logged: the Valve Explorer sheet (setup information, diagnostics, support file and live data), the Port, Version and Firmware columns, and improved support for both valve firmware generations (older and newer sign-in methods).
2.7	2026-09	Create Download Script button; About box; help messages on all seven help icons; Port column; newer-firmware support (HTTPS on port 8443, no browser login); Esc to stop a long download; fixed the Export button previously running the Import routine.