
SA1BE-01

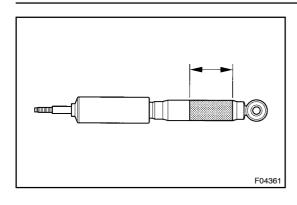

DISPOSAL

DISCARD SHOCK ABSORBER

Before discarding the shock absorber, drill a hole of $2-3\,\mathrm{mm}$ (0.079 – 0.118 in.) in diameter at the location shown in the illustration to discharge the gas inside.

CAUTION:

- When drilling, chips may fly out, work carefully.
- The gas is colorless, odorless and non-poisonous.