PO1TV 01


DISASSEMBLY

1. REMOVE ASSIST GRIP

(a) Using a screwdriver, remove the 2 assist grip plugs. HINT:

Tape the screwdriver tip before use.


- (b) Remove the corews and assist grip.
- 2. REMOVE INSIDE HANDLE BEZEL

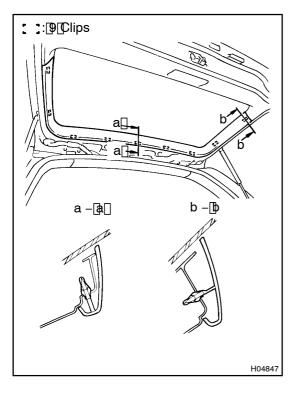

3. REMOVE CENTER BACK DOOR GARNISH

 $\label{thm:condition} Using \cite{Condition} where \cite{Condition$


Tape[the[screwdriver[tip[before]]use.

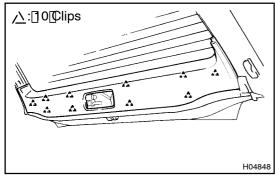

4. REMOVE BACK DOOR GARNISH

Using@screwdriver,@emove@he@back@door@arnish.
HINT:

Tape the screwdriver tip before use.

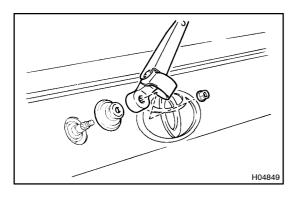


5. REMOVE REAR WIPER ARM

(See page BO-56)

- (a) Open the cover.
- (b) Remove the nut and rear wiper arm.

Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)

(c) Remove the grommet.

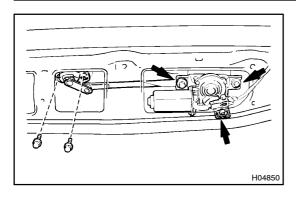


6. REMOVE REAR WIPER MOTOR AND LINK AS-SEMBLY

- (a) Disconnect the connector.
- (b) Remove the 2 bolts.
- (c) Unfasten the 3 bolts and remove the rear wiper motor and link assembly.

Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)

7. REMOVE REAR WIPER RELAY

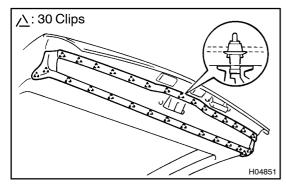


8. REMOVE LIFTGATE WEATHERSTRIP

Remove the liftgate weatherstrip.


NOTICE:

Do not pull strongly on the weatherstrip as it may tear.

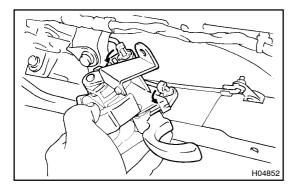

9. REMOVE BACK DOOR INSIDE HANDLE

- (a) Remove the 2 bolts.
- (b) Disconnect the back door lock locking rod and back door lock inside opening link, then remove the back door inside handle.

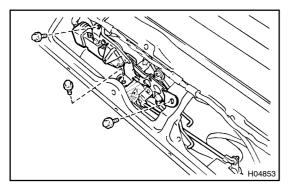


10. REMOVE BACK DOOR CONTROL

- (a) Disconnect the links.
- (b) Remove the 3 bolts.


Torque: 7.4 N·m (75 kgf·cm, 65 in.·lbf)

(c) Disconnect the connector, then remove the back door control.

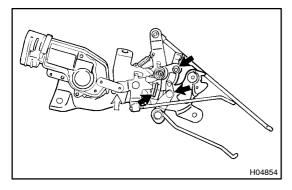

HINT:

At the time of assembly, please refer to the following item. Apply MP grease to the sliding surface of the back door control.

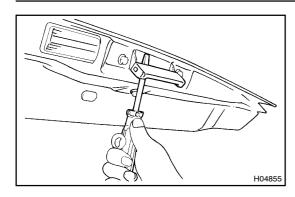


11. REMOVE BACK DOOR OUTSIDE HANDLE AS-SEMBLY

(a) Using a screwdriver, remove the back door outside handle.

HINT:

Tape the screwdriver tip before use.

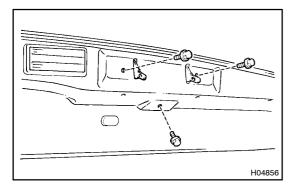

(b) Remove the 3 bolts and back door outside handle assembly.

12. REMOVE THESE PARTS:

- (a) License plate light
- (b) Back door lock

Torque: 7.4 N·m (75 kgf·cm, 65 in.·lbf)

(c) Back door lock protector