DIASE-02


DTC	C1541 / 41	Vehicle Skid Control System Malfunction
-----	------------	---


CIRCUIT DESCRIPTION

The VGRS system will illuminate the warning light and this DTC will be recorded when some ABS/VSC system DTCs are set.

DTC No.	DTC Detecting Condition	Trouble Area
C1541/41	The system receives the information about a malfunction in the steering sensor signal or in the vehicle speed signal	VSC system VGRS ECU
01341/41	from ABS/VSC.	• Skid control ECU

WIRING DIAGRAM

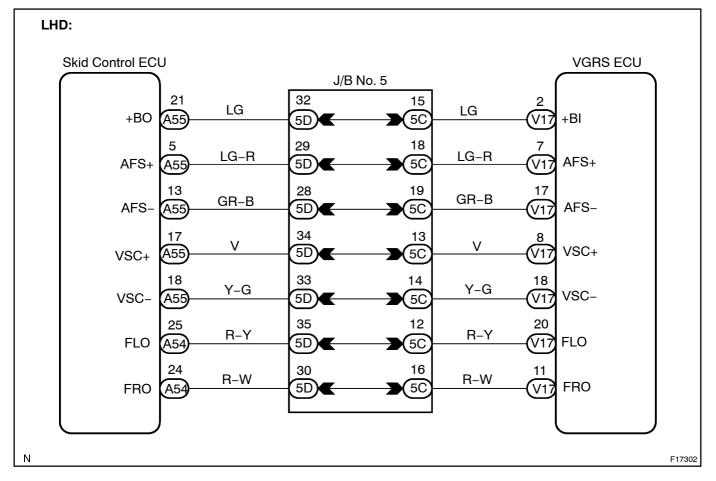

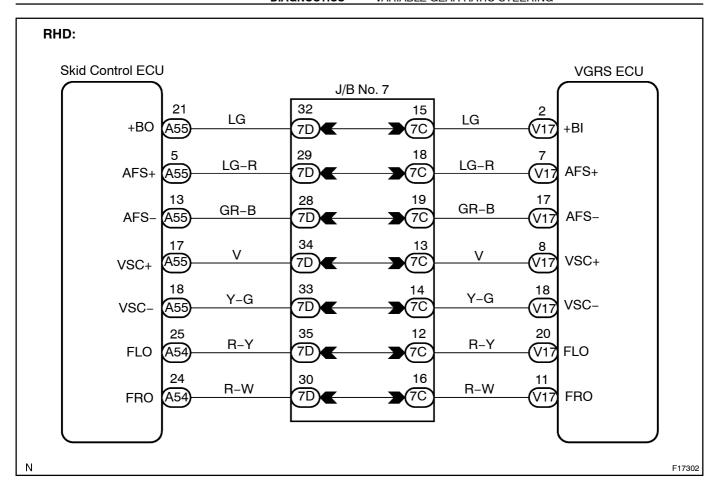

INSPECTION PROCEDURE

1 Check the ABS/VSC for DTCs (See Pub. No. RM970E, page DI-185).

Are any ABS/VSC DTCs present?



Repair the ABS/VSC system according to the DTC output.

NO

Replace VGRS ECU.