
DI3ML-02

TERMINALS OF ECU

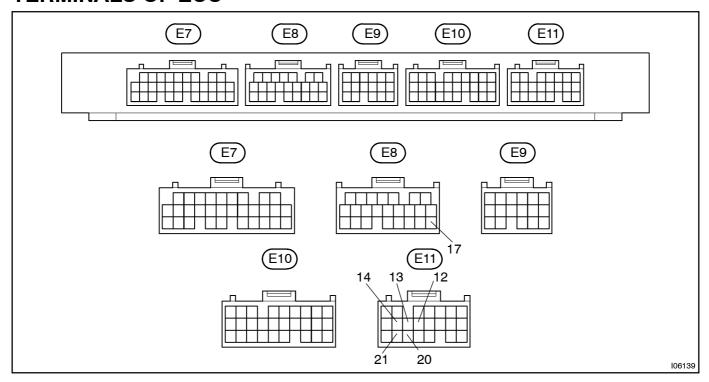

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
IMLD – E1 (E11 – 21 ↔ E8 – 17)	G-R ↔ BR	Ignition Switch ON	10 – 14
TXCT – E1 (E11 – 14 ↔ E8 – 17)	R–Y ↔ BR	Ignition Switch ON	10 – 14
CODE - E1 (E11 - 12 ↔ E8 - 17)	L-B ↔ BR	Ignition Switch ON	10 – 14
RXCK - E1 (E11 - 13 ↔ E8 - 17)	V-G ↔ BR	Ignition Switch ON	10 – 14
KSW - E1 (E11 - 20 ↔ E8 - 17)	R-B ↔ BR	Ignition Switch ON	10 – 14