
SR0PO-01

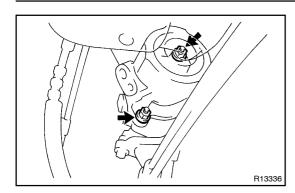


## INSTALLATION

## 1. INSTALL [PS[VANE [PUMP [ASSEMBLY]

- (a) CoatanewD-ringwithpowersteeringfluidandinstallit tothewanepumpassembly.
- (b) Torque the 2 thuts.

Torque: 36 N·m 370 kgf·cm, 27 ft·lbf)

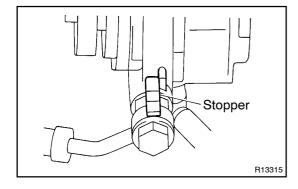

## 2. CONNECT PRESSURE FEED TUBE

 $Install \verb|| hew \verb|| gaskets \verb|| bn \verb|| each \verb|| side \verb|| bf \verb|| the \verb|| tube \verb|| and \verb|| forque \verb|| the union \verb||| bolt.$ 

Torque: \$6[N·m[575[kgf·cm, 42[ft·lbf)]

### HINT:

Make[sure[that[the[stopper[of[the[tube]touches[the[PS[vane pump[body[as]shown[in[the]llustration,[then[torque[the[union bolt.]]]]]

# 3. CONNECT[RETURN[HOSE]

Install the clip.

- 4. Independent Front Suspension: INSTALL NO.1 AND NO.2 ENGINE UNDER COVERS
- (a) Install the No.1 under cover with the 6 bolts.
- (b) Install the No.2 under cover with the 8 bolts.
- 5. BLEED POWER STEERING SYSTEM (See page \$R-4)