
CDODII 01

INSTALLATION

1. INSTALL PS VANE PUMP ASSEMBLY

Torque[the[3[bolts.

Torque: 17[N·m[[175[kgf·cm, 13[ft·lbf]

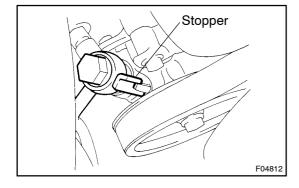

2. INSTALL PRESSURE FEED TUBE

 $Install \verb|| hew \verb|| gaskets \verb|| bn \verb|| each \verb|| side \verb|| of \verb|| the \verb|| tube \verb|| and \verb|| for que \verb|| the union \verb||| bolt.$

Torque: \$6[N·m[(575[kgf·cm, 42[ft·lbf)

HINT:


Make[sure[]that[]the[]stopper[]of[]the[]tube[]touches[]the[]PS[]vane pump[]body[]as[]shown[]he[]tlustration,[]then[]orque[]the[]bolt.

3. CONNECT[RETURN]HOSE

Install[thectip.

4. CONNECT 2 VACUUM HOSES

Install the 2 clips.

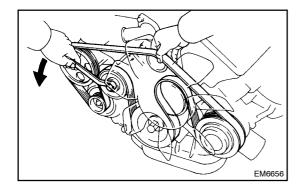

5. INSTALL DRIVE BELT

Loosen the drive belt tension by turning the drive belt tensioner counterclockwise, and install the belt.

- 6. INSTALL AIR CLEANER ASSEMBLY WITH AIR CLEANER HOSE
- (a) ☐ Tighten The The Tholts.
- (b) ☐ Tighten ☐ the Clamp.
- (c) ☐ Connect the those.
- (d) Connect the MAF meter connector.
- 7. INSTALL NO.2 ENGINE UNDER COVER Tighten the 8 bolts.
- **8. INSTALL NO.1 ENGINE UNDER COVER** Tighten the 6 bolts.
- 9. BLEED POWER STEERING SYSTEM (See page \$R-4)