

WI00Y-01

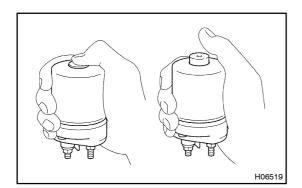


INSPECTION

INSPECT MAGNET SWITCH NO.2

(a) Push in the plunger and release it. Check that it returns quickly to its original position.

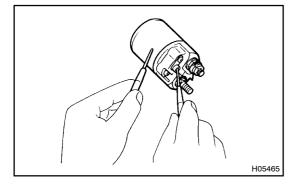

(b) Using an ohmmeter, check for continuity between the base lead wire terminal and magnet switch body.If there is no continuity, replace the magnet switch.

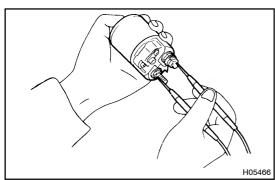

(c) Using an ohmmeter, check for no continuity between the magnet switch terminal and motor lead wire terminal with plunger released.