
BOSVU 01

INSTALLATION

- 1. INSTALL REINFORCEMENT
- 2. INSTALL NO. 1 BRACE
- 3. INSTALL FLOOR BRACE
- 4. INSTALL GLOVE COMPARTMENT DOOR DAMPER
- 5. INSTALL NO. 4 HEATER TO REGISTER DUCT
- 6. INSTALL NO. 3 HEATER TO REGISTER DUCT
- 7. INSTALL ECU

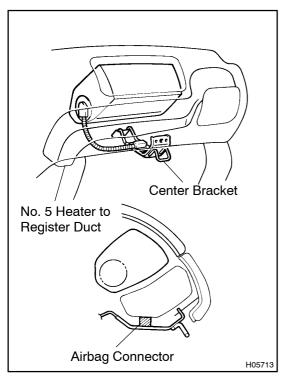

8. INSTALL INSTRUMENT PANEL


HINT:

- Install the airbag connector between the No. 5 heater to register duct and center bracket temporarily, then install the instrument panel.
- Remove the airbag connector before installing the lower No. 2 panel.
- (a) Install the 6 bolts, 2 nuts and instrument panel, then connect the connectors.
- (b) Install the 2 bolts to the front passenger airbag assembly.

 Torque: 20 N·m (204 kgf·cm, 15 ft·lbf)
- (c) Connect the junction connectors.

HINT:

The connectors can be connected by tightening the bolts.

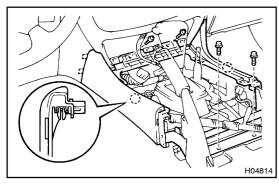


9. Except bench seat:

INSTALL FRONT CONSOLE BOX

Install the front console box with the 2 bolts and 2 screws.


10. Bench seat:

INSTALL TRANSFER LEVER HOLE COVER

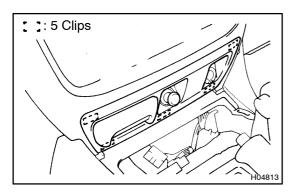


11. INSTALL CENTER LOWER CLUSTER FINISH PANEL

Connect the connector, then install the center lower cluster finish panel.

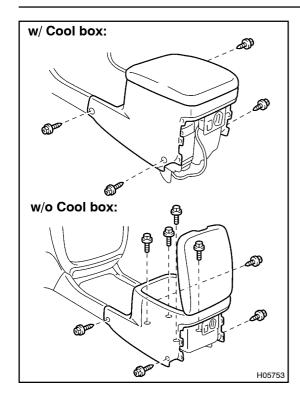


12. Except bench seat: INSTALL REAR CONSOLE BOX

- (a) w/ Cool box:Install the rear console box with the 4 screws.
- (b) w/o Cool box:
 Install the rear console box with the 4 bolts and 4 screws.

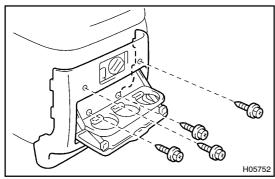

13. Except bench seat: INSTALL CONSOLE REAR END PANEL

Install the console rear end panel with the 4 screws.

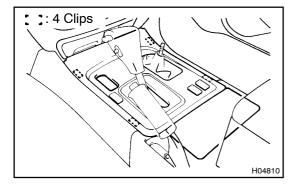

14. Except bench seat: INSTALL REAR CONSOLE PANEL


Install the rear console panel, then install the transfer shift lever knob.

- 15. INSTALL RADIO ASSEMBLY
- 16. INSTALL CENTER CLUSTER


Connect the connectors, then install the center cluster.

17. INSTALL LOWER NO. 2 PANEL

Install the lower No. 2 panel with the 3 screws.

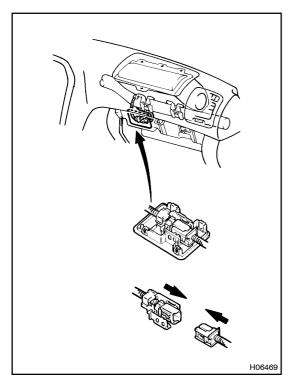


- 18. CONNECT AIRBAG CONNECTOR (See Pub. No. RM616E on page RS-35)
- 19. INSTALL GLOVE COMPARTMENT DOOR
- (a) Connect the glove compartment door damper clip, then install the glove compartment door.
- (b) Install the 2 screws.

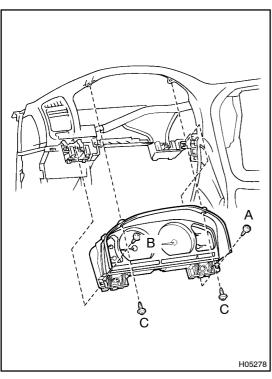

20. INSTALL COMBINATION METER

- (a) Check that the set-in connectors are connected in the installation holes on the instrument panel securely.
- (b) Place the combination meter on the instrument panel.
- (c) Install the combination meter by tightening the screws, "A", "B" and "C" in the order.

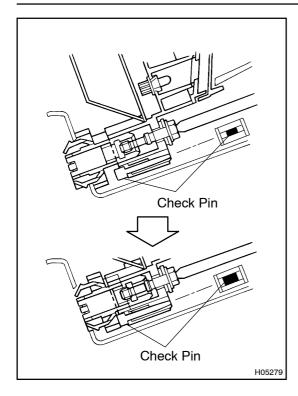

(d) Tighten the connection bolts.


HINT:

- When connection completes, the bolts turns vainly, causing turning noise.
- Check this noise and that the connection check pins protrude from the lower side of the connection bolts.

NOTICE:


Follow the procedures in order of (c) and (d). Otherwise, set-in connectors on the wire harness side and connectors on the meter side might not be connected properly.

21. INSTALL STEERING COLUMN (See Pub. No. RM616E on page SR-24 or SR-37)

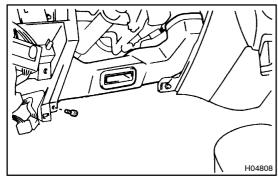

22. INSTALL NO. 2 HEATER TO REGISTER DUCT


Install the No. 2 heater to register duct with the screw.

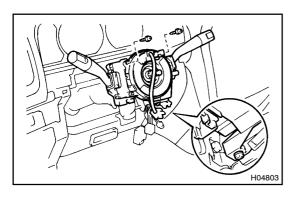

23. INSTALL COMBINATION SWITCH

- (a) Install the combination switch with the 3 screws.
- (b) Install the clamp, then connect the connectors.
- 24. INSTALL COLUMN COVERS

Install the column covers with the 3 screws.

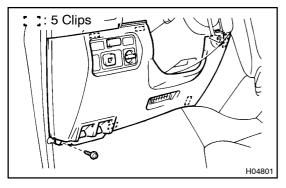


25. INSTALL LOWER NO. 1 PANEL

Connect the connector, then install the lower No. 1 panel with the screw.


26. INSTALL HOOD LOCK AND FUEL LID CONTROL CABLE LEVER

- (a) Install the fuel lid control cable lever with the 2 screws.
- (b) Install the hood lock control cable with the 2 screws.

LAND CRUISER (W/G) SUP (RM793E)

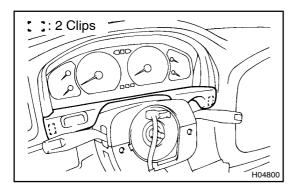

- 27. INSTALL CLUSTER FINISH PANEL
- 28. INSTALL STEERING WHEEL (See Pub. No. RM616E on page SR-24 or SR-37)

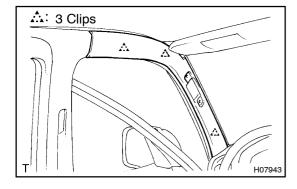

29. INSTALL FRONT PILLAR GARNISH

- (a) Install the front pillar garnish.
- (b) Employ the same manner described above to the other side.
- (c) Driver's side:
 Install the assist grip with the 2 screws, then install the 2 assist grip plugs.
- (d) Passenger's side:Install the 2 assist grips with the 4 screws, then install the 4 assist grip plugs.
- 30. INSTALL FRONT DOOR OPENING TRIMS
- 31. INSTALL COWL SIDE TRIMS
- 32. INSTALL FRONT DOOR SCUFF PLATES