# BRAKE FLUID (w/ ABS) BLEEDING

BR0UQ-01

## HINT:

- If any work is done on the brake system or if air in the brake lines is suspected, bleed the air from the system.
- When bleeding, keep the amount of the fluid within the line of reservoir between Min. and Max.

#### NOTICE:

- Do not let brake fluid remain on painted surfaces.
   Wash it off immediately.
- With the reservoir cap removed, when depressing the brake pedal, the fluid will spray.
- 1. FILL RESERVOIR WITH BRAKE FLUID
  Fluid: SAE J1703 or FMVSS NO.116 DOT3
- 2. IN CASE OF USING HAND-HELD TESTER: BLEED HYDRAULIC BRAKE BOOSTER

#### HINT:

If the hydraulic brake booster has been disassembled, disconnect the brake line from the hydraulic brake booster or if the reservoir becomes empty, bleed the hydraulic brake booster.

(a) Turn the ignition switch OFF, depress the brake pedal more than 40 times.

## HINT:

When a pressure in power supply system is released, reaction force becomes light and stroke becomes longer.

(b) Turn the ignition switch ON, check that the pump stops after approx. 30 to 40 seconds.


#### NOTICE:

# When the pump does not stop, repeat step (a) and (b) again.

- (c) With the ignition switch remained ON, depress the brake pedal more than 20 times.
- (d) Observe the procedure in step 4. and bleed the right and left front brake caliper.
- (e) Holding the brake pedal depressed, bleed the right and left rear brake caliper.

## HINT:

It is not necessary to depress the pedal continuously, as brake fluid flows out by first depressing.

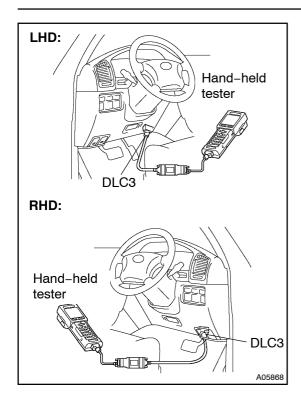

- (f) Connect hand-held tester.
  - (1) Turn the ignition switch OFF, connect the hand-held tester to DLC3.
  - (2) Turn the ignition switch ON, and select "AIR BLEEDING" on the hand-held tester.

## HINT:


Please refer to the hand-held tester operator's manual for further details.

- (g) Bleed right front brake line.
  - (1) Select "FR LINE" on the hand-held tester.
  - (2) With "FR LINE" turned ON with the hand-held tester, depress the brake pedal and hold it to bleed the right front brake caliper.
  - (3) Repeat step (2) until there are no more air bubbles in the fluid.
- (h) Bleed left front brake line.
  - (1) Select "FL LINE" on the hand-held tester.
  - (2) With "FL LINE" turned ON with the hand-held tester, depress the brake pedal and hold it to bleed the left front brake caliper.
  - (3) Repeat step (2) until there are no more air bubbles in the fluid.
- (i) Disconnect the hand-held tester from DLC3.
- (j) Clear[he[DTC[See[page[DI-312)]]
- 3. IN CASE OF USING ABS ACTUATOR CHECKER (SST):

## **BLEED HYDRAULIC BRAKE BOOSTER**

## HINT:

If the hydraulic brake booster has been disassembled, disconnect the brake line from the hydraulic brake booster or if the reservoir becomes empty, bleed the hydraulic brake booster.

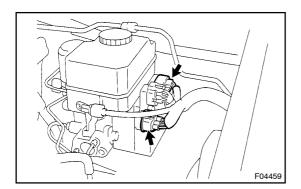

(a) Disconnect the 2 connectors from the hydraulic brake booster.


(b) Connect the actuator checker (SST) to the hydraulic brake booster side wire harness via the sub-wire harness (SST), as shown in the chart below.

SST 09990-00150, 09990-00480

## HINT:

Connect the connector with the label of "AIR BLEED" attached to the connector of actuator checker.

(c) Connect the red cable of the checker to the battery positive (+) terminal and the black cable to the negative (-) terminal.

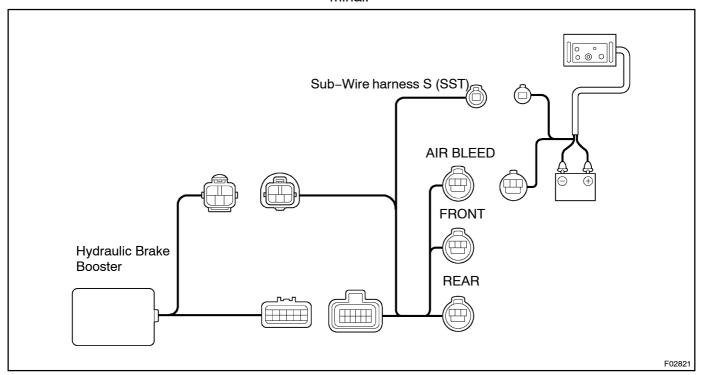

(d) Turn the ignition switch OFF, depress the brake pedal more than 40 times.

# HINT:

When a pressure in power supply system is released, reaction force becomes light and stroke becomes longer.

(e) Turn the ignition switch ON, check that the pump stops after approx. 30 to 40 seconds.


# **NOTICE:**

# When the pump does not stop, repeat step (d) and (e) again.

- (f) With the ignition switch remained ON, depress the brake pedal more than 20 times.
- (g) Observe the procedure in step 4. and bleed the right and left front wheel caliper.
- (h) Holding the brake pedal depressed, bleed the right and left rear wheel caliper.

## HINT:

It is not necessary to depress the pedal continuously, as brake fluid flows out by first depressing.

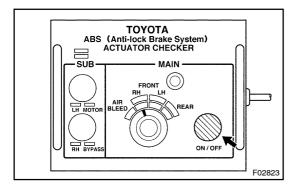


- (i) ☐ Bleed right front brake ine.
  - (1) Turn the selector witch of the actuator checker to the FRONT RH" position.
  - (2) Push and hold n MAIN push switch, depress the brake pedal and hold to bleed the light front brake caliper.

# **NOTICE:**

Domotikeepithe MAIN switch pushed in for more than 10 seconds. When operating it continuously, set the interval of more than 20 seconds.

(3) Repeat[step[[2]]until[]here[are[]ho[]more[air[]bubbles in[]her[]luid.

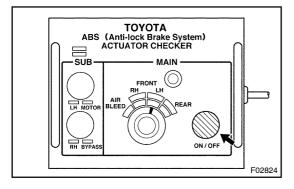


- (j) ☐ Bleed ☐eft ☐front [brake [line.
  - (1) Turn[he[selector[switch[]]] Turn[he[selector[switch[]]]] the [FRONT[]]. H"[position.
  - (2) Pushandholdinthe MAIN push switch, depress the brake pedal and hold it obleed the eft front brake caliper.

### NOTICE:

Domot keep the MAIN switch pushed in for more than 10 seconds. When operating it continuously, set the interval of more than 20 seconds.

- (3) Repeat[step[2]] until[there] are tho thore air bubbles in the fluid.
- (k) Disconnect[theactuatorare] Disconnect[theact
  - SST 09990-00150, 09990-00480
- (I) Connect the 2 connectors to the hydraulic brake booster.
- (m) Clear the DTC See page DI-312)

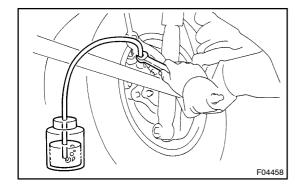

# 4. BLEED BRAKE LINE

- (a) Connect the vinyl tube to the brake caliper.
- (b) Depress the brake pedal several times, then loosen the bleeder plug with the pedal held down.
- (c) At the point when fluid stops coming out, tighten the bleeder plug, then release the brake pedal.
- (d) Repeat (b) and (c) until all the air in the fluid has been bled out.

(e) Repeat the above procedure to bleed the brake line for each wheel.

Torque: (bleeder plug)
11 N⋅m (110 kgf⋅cm, 8 ft⋅lbf)

- 5. CHECK FLUID LEVEL IN RESERVOIR
- (a) With the ignition switch OFF, depress the brake pedal more than 40 times.

# HINT:

When a pressure in power supply system is released, reaction force becomes light and stroke becomes longer.

(b) Remove the reservoir cap. Add brake fluid up to the "MAX" line.

Fluid: SAE J1703 or FMVSS NO.116 DOT3