
BR0W6-0

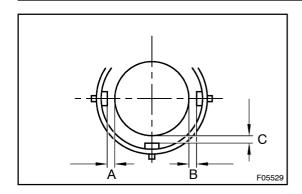

REASSEMBLY

Reassembly []s[]n[]the[]reverse[]order[]of[]disassembly[](See page[]BR-83).

INSTALL ACCUMULATOR BRACKET

When installing the accumulator bracket, adjust to secure the clearance shown in the illustration on the left.

Standard clearance:

A + B: 4.1 mm (0.161 in.) or less C: 0.3 - 3.8 mm (0.012 - 0.150 in.)

HINT:

Secure more than 0.3 mm (0.012 in.) clearance for A and B each.