## LMI Methods in Optimal and Robust Control

Matthew M. Peet Arizona State University

Lecture 07: LMIs for the  $H_2$  and  $H_\infty$  Norms of Systems and Transfer Functions

- We now begin to cover subjects not covered in 506. This rather long section of the course covers lectures 7-11. Lecture 10 is the culmination and describes the  $H_{\infty}$ -optimal output feedback problem. Lecture 11 is brief and extends this to the  $H_2$ -optimal output feedback problem.
- This lecture covers the mathematical machinery which will then be used in Lectures 8-11.
- The essence of the lecture is to take what you learned about transfer functions and block diagrams as an undergrad and make them mathematically rigorous.

## Signal Spaces

Normed Spaces and  $\mathcal{L}_p$  norms

### Definition 1.

A **Norm** on a vector space, V, is a function  $\|\cdot\|: V \to \mathbb{R}^+$  such that

- 1. ||x|| = 0 if and only if x = 0
- 2.  $\|\alpha x\| = |\alpha| \|x\|$  for all  $x \in V$  and  $\alpha \in \mathbb{R}$
- 3.  $||u+v|| \le ||u|| + ||v||$  for all  $u, v \in V$  (Pythagorean Inequality)

### Definition 2.

A vector space with an associated norm is called a Normed Space.

On infinite sequences  $q: \mathbb{N} \to \mathbb{R}$ 

- $||g||_{\ell_1} = \sum_{i=1}^{\infty} |g_i|$
- $||g||_{\ell_2} = \sqrt{\sum_{i=1}^{\infty} g_i^2}$
- $||g||_{\ell_p} = \sqrt[p]{\sum_{i=1}^{\infty} g_i^p}$
- $||g||_{\ell_{\infty}} = \max_{i=1,\dots,\infty} |g_i|$

On functions  $f:[0,\infty)\to\mathbb{R}$ 

- $||f||_{L_1} = \int_0^\infty |f(s)| ds$
- $||f||_{L_2} = \sqrt{\int_0^\infty f(s)^2 ds}$
- $\bullet \|f\|_{L_p} = \sqrt[p]{\int_0^\infty f(s)^p ds}$
- $||f||_{L_{\infty}} = \sup_{s \in [0,\infty)} |f(s)|$

Signal Spaces

Formed spaces and  $f_s$  somes  $Definition \ 1.$ A Norm on a vector space,  $V_s$  is a function  $\|\cdot\|: V \to \mathbb{R}^n$  such that  $1. \|x\| = 0 \text{ if and only } \text{if } x = 0 \text{ } x =$ 

#### Definition 2.

Signal Spaces

- On infinite sequences  $g : \mathbb{N} \to \mathbb{R}$  On functions  $f : [0, \infty) \to \mathbb{R}$ •  $\|g\|_{\ell_1} = \sum_{i=1}^{\infty} |g_i|$ •  $\|g\|_{\ell_2} = \sqrt{\sum_{i=1}^{\infty} g_i^2}$ •  $\|f\|_{L_2} = \sqrt{\int_0^{\infty} f(x)^2 dx}$ •  $\|f\|_{L_2} = \sqrt{\int_0^{\infty} f(x)^2 dx}$
- $\|g\|_{L_2} = \sqrt{\sum_{i=1}^{n} g_i^i}$ •  $\|g\|_{L_2} = \sqrt{\sum_{i=1}^{n} g_i^i}$ •  $\|g\|_{L_2} = \max_{i=1,...,\infty} |g_i|$ •  $\|f\|_{L_2} = \sqrt[n]{\int_0^{\infty} f(s)^n ds}$ •  $\|f\|_{L_2} = \sup_{s \in [0,\infty)} |f(s)|$
- In this lecture, we define new spaces of signals and new spaces of systems.
- As an aid, think of signals as a generalization of vectors and systems as a generalization of matrices.
- Think of the Laplace transform as a Unitary coordinate transformation.

There is a distinction between system behaviour and system representation.

 State space A, B, C, D or the transfer function is a representation of a system. These formats uses matrices or complex-valued functions (a signal) to parameterize the representation. However, the system is NOT a set of matrices, nor a transfer function. The system is a set of behaviours. When we talk about system norms, we talk about properties of these behaviours and not properties of A, B, C, D or the transfer function. Yet, when we do optimal control, we must be able to use the representation to infer properties of the system behaviour.  $H_{\infty}$  and  $H_2$ , thus are both signal norms and measure the size of the transfer function in a certain sense. However, they are not obviously system norms. The only norm we have for systems is the induced norm, for which systems form an algebra. It is necessary for systems to form an algebra, otherwise the standard use of block-diagram algebra is invalid. It turns out the  $H_{\infty}$  norm is equal to the induced norm of the system. Thus if all systems have finite  $H_{\infty}$  norm, block diagram algebra is valid. However, finite  $H_2$ norm does not necessarily imply finite  $H_{\infty}$  norm. Thus, if we want to interconnect subsystems, we must add finite  $H_{\infty}$  norm as a constraint on each connected component. For optimal  $H_2$  control, we must always add a finite  $H_{\infty}$  norm constraint to the problem. This is true for both LQR and Kalman filtering/LQG problems.

## Signal Spaces - Inner Products

 $L_2$  is a Hilbert space

Only  $L_2$  has an **Inner Product**,  $\langle \cdot, \cdot \rangle$ . Like the dot product, an Inner product defines a measure of angle.

$$\langle x, y \rangle = ||x|| ||y|| \cos \theta$$

So x and y are  $\bot$  if  $\langle x, y \rangle = 0$ 

### Theorem 3 (Cauchy Schwartz).

If  $||x||^2 = \langle x, x \rangle$ , then

$$|\langle x, y \rangle| \le ||x|| ||y||$$

Likewise  $||x+y||^2 = ||x||^2 + ||y||^2$  iff  $\langle x,y \rangle = 0$  (Pythagorean Theorem).


#### Definition 4.

 $L_2[0,\infty)$  is the Hilbert space of functions  $f:\mathbb{R}^+ \to \mathbb{R}^n$  with inner product

$$\langle u,y \rangle_{L_2} = \frac{1}{2\pi} \int_0^\infty u(t)^T y(t) dt, \qquad \|u\|_{L_2}^2 = \langle u,u \rangle_{L_2} = \int_0^\infty \|u(t)\|^2 dt$$

Lecture 07

Signal Spaces - Inner Products

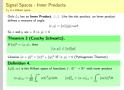

• Don't confuse the Cauchy-Schwartz inequality  $\langle x,y\rangle \leq \|x\|\|y\|$  defined on inner product spaces (e.g. signals) with the submultiplicative inequality  $\|AB\| \leq \|A\|\|B\|$  defined for algebras (e.g. Matrices and Systems).

## Operator Theory: Linear Operators

A Banach Space is a normed space which is complete (Any  $L_p$  or  $\ell_p$  space) A Hilbert Space is an inner product space which is complete (Only  $L_2$ )

## Definition 5 (The Space of Systems).

The normed space of bounded linear operators from X to Y is denoted  $\mathcal{L}(\mathbf{X},\mathbf{Y})$  with norm

$$||P||_{\mathcal{L}(X,Y)} := \sup_{\substack{x \in X \\ x \neq 0}} \frac{||Px||_Y}{||x||_X} = K$$

- Satisfies the properties of a norm
- This type of norm is called an "induced" norm
- Notation:  $\mathcal{L}(X) := \mathcal{L}(X, X)$
- If X is a Banach space, then  $\mathcal{L}(X,Y)$  is a Banach space

**Properties:** Suppose  $G_1 \in \mathcal{L}(X,Y)$  and  $G_2 \in \mathcal{L}(Y,Z)$ 

- Then  $G_2 \odot G_1 \in \mathcal{L}(X,Z)$ .
- $||G_2 \odot G_1||_{\mathcal{L}(X,Z)} \le ||G_2||_{\mathcal{L}(Y,Z)} ||G_1||_{\mathcal{L}(X,Y)}$ .
- Composition forms an *algebra*.

Operator Theory: Linear Operators

Operator Theory: Linear Operators A Banach Space is a normed space which is complete (Any L., or /, space) A Hilbert Space is an inner product space which is complete (Only L-) Definition 5 (The Space of Systems).

The normed space of bounded linear operators from Y to Y is de- $||P||_{\mathcal{L}(X,Y)} := \sup_{x \in X} \frac{||P_x||_Y}{||x||_X} = 1$ 

. Satisfies the properties of a norm

- . This type of norm is called an "induced" norm Notation: L(X) := L(X, X) If X is a Banach space, then L(X,Y) is a Banach space Properties: Suppose  $G_1 \in \mathcal{L}(X,Y)$  and  $G_2 \in \mathcal{L}(Y,Z)$
- Then  $G_2 \odot G_1 \in \mathcal{L}(X, Z)$ . IG<sub>1</sub> ⊗ Gillov n ≤ IGillov nIGillov v<sub>1</sub>. · Composition forms an algebra.
- An algebra is a Normed Vector space with a multiplication operation  $G_2 \odot G_1$  and an identity element (e.g. Matrices and Systems (Linear Operators, more generally)). The algebra depends on which norm you pick.
- Linear Operators act like matrices, except on signals (not vectors)
  - "Linear Algebra" can refer to both operators and matrices
- The induced norm changes with the norms defined on X and Y.
- Recall  $\bar{\sigma}(X) = \max_x \frac{\|Px\|_2}{\|x\|_2}$ , which is the norm induced by the Euclidean norm on vectors.
- Frobenius norm on Matrices

$$||P||_F = \sqrt{\sum_{ij} P_{ij}^2}$$

is not induced by any norm, so does not represent properties of the Matrix as an operator. However, it does allow us to define the inner product on a matrix.

## Laplace Transform

### Definition 6.

Given  $u \in L_2[0,\infty)$ , the Laplace Transform of u is  $\hat{u} = \Lambda u$ , where

$$\hat{u}(s) = (\Lambda u)(s) = \lim_{T \to \infty} \int_0^T u(t)e^{-st}dt$$

if this limit exists.

 $\Lambda$  is a bounded linear operator -  $\Lambda \in \mathcal{L}(L_2, H_2)$ .

- $\Lambda: L_2 \to H_2$ .
- The norm  $\|\Lambda\|_{\mathcal{L}(L_2,H_2)}$  is

$$\|\Lambda\| = \sup_{u \in L_2} \frac{\|\Lambda u\|_{H_2}}{\|u\|_{L_2}} = ???$$

**WAIT!** What is  $H_2$ ?

## $H_2$ - A Space of Integrable Analytic Functions

#### Definition 7.

A complex function is **analytic** if it is continuous and bounded.

A function is analytic if the Taylor series converges everywhere in the domain.

### Definition 8.

A function  $\hat{u}: \bar{\mathbb{C}}^+ \to \mathbb{C}^n$  is in  $H_2$  if

- 1.  $\hat{u}(s)$  is analytic on the Open RHP (denoted  $\mathbb{C}^+$ )
- 2. For almost every real  $\omega$ ,

$$\lim_{\sigma \to 0^+} \hat{u}(\sigma + \imath \omega) = \hat{u}(\imath \omega)$$

Which means continuous up to the imaginary axis

3.

$$\int_{-\infty}^{\infty} \sup_{\sigma > 0} \|\hat{u}(\sigma + i\omega)\|_{2}^{2} < \infty$$

Which means integrable on every vertical line.



A rational function  $\hat{u}(s)$  is analytic in the RHP if it has no poles in the RHP.

H2 - A Space of Integrable Analytic Functions

## Equivalence Between $H_2$ and $L_2$

## Theorem 9 (Maximum Modulus).

An analytic function cannot obtain its extrema in the interior of the domain.

Hence if  $\hat{u}$  satisfies 1) and 2), then

$$\int_{-\infty}^{\infty} \sup_{\sigma \geq 0} \lVert \hat{u}(\sigma + \imath \omega) \rVert_2^2 = \int_{-\infty}^{\infty} \lVert \hat{u}(\imath \omega) \rVert_2^2 d\omega$$

We equip  $H_2$  with a norm and inner product

$$\|\hat{u}\|_{H_2} = \int_{-\infty}^{\infty} \|\hat{u}(\imath\omega)\|_2^2 d\omega, \qquad \langle \hat{u}, \hat{y} \rangle_{H_2} = \frac{1}{2\pi} \int_{-\infty}^{\infty} \hat{u}(\imath\omega)^* \hat{v}(\imath\omega) d\omega$$

## Theorem 10 (Paley-Wiener).

- 1. If  $u \in L_2[0,\infty)$ , then  $\Lambda u \in H_2$ .
- 2. If  $\hat{u} \in H_2$ , then there exists a  $u \in L_2[0,\infty)$  such that  $\hat{u} = \Lambda u$  (Onto).
  - Shows that  $H_2$  is exactly the image of  $\Lambda$  on  $L_2[0,\infty)$
- Shows the map is invertible

## Paley-Wiener

#### Lemma 11.

$$\langle \Lambda u, \Lambda y \rangle_{H_2} = \langle u, y \rangle_{L_2}$$

- Thus \(\Lambda\) is unitary.
- $L_2[0,\infty)$  and  $H_2$  are isomorphic.

### Definition 12.


The inverse of the Laplace transform,  $\Lambda^{-1}: H_2 \to L_2[0,\infty)$  is

$$u(t) = (\Lambda^{-1}\hat{u})(t) = \frac{1}{2\pi} \int_{-\infty}^{\infty} e^{\sigma t} \cdot e^{\imath \omega t} \hat{u}(\sigma + \imath \omega) d\omega$$

where  $\sigma$  can be any real number.

$$\|\Lambda\| = \sup_{u \in L_2} \frac{\|\Lambda u\|_{H_2}}{\|u\|_{L_2}} = ???$$

## $H_{\infty}$ - A Space of Bounded Analytic Functions

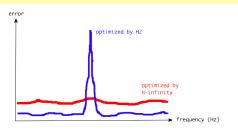



### **Definition 13.**

A function  $\hat{G}: \bar{\mathbb{C}}^+ \to \mathbb{C}^{n \times m}$  is in  $H_{\infty}$  if

- 1.  $\hat{G}(s)$  is analytic on the CRHP,  $\mathbb{C}^+$ .
- 2.  $\lim_{\sigma \to 0^+} \hat{G}(\sigma + \imath \omega) = \hat{G}(\imath \omega)$
- 3.  $\sup_{s \in \mathbb{C}^+} \bar{\sigma}(\hat{G}(s)) < \infty$
- $H_{\infty}$  is a **Banach Space** with norm

$$\|\hat{G}\|_{H_{\infty}} = \operatorname{ess} \sup_{\omega \in \mathbb{R}} \bar{\sigma}(\hat{G}(\imath \omega))$$

## $H_{\infty}$ (A Signal Space) and Multiplier Operators

Every element of  $H_{\infty}$  defines a multiplication operator.

### Definition 14.

Given  $\hat{G} \in H_{\infty}$ , define  $M_{\hat{G}} \in \mathcal{L}(H_{\infty})$  by

$$(M_{\hat{G}}\hat{u})(s) = \hat{G}(s)\hat{u}(s)$$

for  $\hat{u} \in H_2$ .

For any analytic functions,  $\hat{u}$  and  $\hat{G},$  the function

$$\hat{y}(s) = \hat{G}(s)\hat{u}(s)$$

Functions vs. Operators
•  $\hat{G}$  is a function

•  $M_{\hat{G}}$  is an operator.

is analytic.

- Thus  $M_{\hat{G}}: H_2 \rightarrow H_2$ .
- Thus  $\Lambda^{-1}M_{\hat{G}}\Lambda$  maps  $L_2[0,\infty) \to L_2[0,\infty).$

### Theorem 15.

G is a Causal, Linear, Time-Invariant Operator on  $L_2$  if and only if there exists some  $\hat{G} \in H_{\infty}$  such that  $G = \Lambda^{-1} M_{\hat{G}} \Lambda$ .

$$(\Lambda Gu)(\imath\omega) = \hat{G}(\imath\omega)\hat{u}(\imath\omega)$$

 $H_{\infty}$  is the space of **transfer functions** for linear time-invariant systems.

M. Peet Lecture 07: 10 / 27



Lecture 07

 $igspace H_{\infty}$  (A Signal Space) and Multiplier Operators

 $(AGu)(\omega) = \hat{G}(\omega)\hat{u}(\omega)$  $H_{\omega}$  is the anace of transfer functions for linear time-invariant systems.

H., (A Signal Space) and Multiplier Operators

We have said *Nothing* about the structure or parameterization of G.

- This result is NOT limited to state-space systems
- Also applies to PDEs, Delay systems, fractional systems, et c.

## $H_{\infty}$ - The space of "Transfer Functions"

From Paley-Wiener, if  $G = \Lambda^{-1} M_{\hat{G}} \Lambda$ 

#### Theorem 16.

$$\|G\|_{\mathcal{L}(L_2)} = \|M_{\hat{G}}\|_{\mathcal{L}(H_2)} = \|\hat{G}\|_{H_\infty}$$

The **Gain** of the system G can be calculated as  $\|\hat{G}\|_{H_{\infty}}$ 

- ullet This is the motivation for  $H_{\infty}$  control
- minimize  $\sup_u \frac{\|Gu\|_{L_2}}{\|u\|_{L_2}}$ .
  - minimize maximum energy of the output.

**Conclusion:**  $H_{\infty}$  provides a complete parametrization of the space of causal bounded linear time-invariant operators.

# Rational Transfer Functions $(RH_{\infty})$

The space of bounded analytic functions,  $H_{\infty}$  is infinite-dimensional.

• this makes it hard to design optimal controllers.

We usually restrict ourselves to state-space systems and state-space controllers.

### Definition 17.

The space of rational functions is defined as

$$R := \left\{ \frac{p(s)}{q(s)} \ : \ p, q \text{ are polynomials} \right\}$$

We define the following rational subspaces.

$$RH_2 = R \cap H_2$$
$$RH_{\infty} = R \cap H_{\infty}$$

Note that  $RH_2$  and  $RH_{\infty}$  are not **complete**(Banach) spaces.

Lecture 07

 $\cbase{--}$  Rational Transfer Functions  $(RH_\infty)$ 

Reational Transfer Functions ( $RH_{\infty}$ )
The space of Associated anyloid functions  $R_{\infty}$  is define determinated, who makes it has those growing outside controllers. We much yearlier controllers to delive space upones and database passes controllers  $D_{\infty}$  forms of Associated Institutes in defined as  $R_{\infty} = \left\{\frac{(ad^2+p)}{(dd^2+p)} : p \neq am priphermink \right\}$ . We define the following restorab subjects:  $RH_{0} = R \cap H_{0}$ . We define the following restorab subjects:  $RH_{0} = R \cap H_{0}$ . Note that  $RH_{0} \approx R \cap H_{0}$ .

All proper, rational transfer functions have a state-space representation.

- The implication is that the limit of a sequence of state-space systems may not be a state-space system.
- $\bullet$  For example, the sequence of rational Padé functions converges to  $e^{\tau s}.$
- The limit of a set of state-space systems here is a delayed system.

## Rational Transfer Functions $(RH_{\infty})$

 $RH_{\infty}$  is the set of proper rational functions with no poles in the closed right half-plane (CRHP).

### Definition 18.

- A rational function  $r(s) = \frac{p(s)}{q(s)}$  is **Proper** if the degree of p is less than or equal to the degree of q.
- A rational function  $r(s)=\frac{p(s)}{q(s)}$  is **Strictly Proper** if the degree of p is less than the degree of q.

### Proposition 1.

1.  $\hat{G} \in RH_{\infty}$  if and only if  $\hat{G}$  is proper with no poles on the closed right half-plane.

M. Peet Lecture 07: 13 / 27

## State-Space Systems

Define a State-Space System  $G: L_2 \rightarrow L_2$  by y = Gu if

$$\dot{x}(t) = Ax(t) + Bu(t)$$
$$y(t) = Cx(t) + Du(t).$$

### Theorem 19.

• For any stable state-space system, G, there exists some  $\hat{G} \in RH_{\infty}$  such that

$$G = \Lambda^{-1} M_{\hat{G}} \Lambda$$

• For any  $\hat{G} \in RH_{\infty}$ , the operator  $G = \Lambda^{-1}M_{\hat{G}}\Lambda$  can be represented in state-space for some A,B,C and D where A is Hurwitz.

For state-space system, (A, B, C, D),

$$\hat{G}(s) = C(sI - A)^{-1}B + D$$

State-Space is NOT Unique. For any invertible T,

- $\hat{G} = C(sI A)^{-1}B + D = CT^{-1}(sI TAT^{-1})^{-1}TB + D.$ 
  - (A, B, C, D) and  $(TAT^{-1}, TB, CT^{-1}, D)$  both represent the system G.

M. Peet Lecture 07: 14 /

## The KYP Lemma (AKA: The Bounded Real Lemma)

The most important theorem in this class.

### Lemma 20.

Suppose

$$\hat{G}(s) = \begin{bmatrix} A & B \\ \hline C & D \end{bmatrix}.$$

Then the following are equivalent.

- $\bullet \|\hat{G}\|_{H_{\infty}} \le \gamma.$
- There exists a X > 0 such that

$$\begin{bmatrix} A^TX + XA & XB \\ B^TX & -\gamma I \end{bmatrix} + \frac{1}{\gamma} \begin{bmatrix} C^T \\ D^T \end{bmatrix} \begin{bmatrix} C & D \end{bmatrix} < 0$$

Can be used to calculate the  $H_{\infty}$ -norm of a system

- Originally used to solve LMI's using graphs. (Before Computers)
- Now used directly instead of graphical methods like Bode.

The feasibility constraints are linear

• Can be combined with other methods.

### Proof.

We will only show that ii) implies i). The other direction requires the Hamiltonian, which we have not discussed.

- We will show that if y = Gu, then  $||y||_{L_2} \le \gamma ||u||_{L_2}$ .
- From the 1  $\times$  1 block of the LMI, we know that  $A^TX + XA < 0$ , which means A is Hurwitz.
- Because the inequality is strict, there exists some  $\epsilon > 0$  such that

$$\begin{split} &\begin{bmatrix} A^TX + XA & XB \\ B^TX & -(\gamma - \epsilon)I \end{bmatrix} + \frac{1}{\gamma} \begin{bmatrix} C^T \\ D^T \end{bmatrix} \begin{bmatrix} C & D \end{bmatrix} \\ &= \begin{bmatrix} A^TX + XA & XB \\ B^TX & -\gamma I \end{bmatrix} + \frac{1}{\gamma} \begin{bmatrix} C^T \\ D^T \end{bmatrix} \begin{bmatrix} C & D \end{bmatrix} + \begin{bmatrix} 0 & 0 \\ 0 & \epsilon I \end{bmatrix} < 0 \end{split}$$

• Let y = Gu. Then the state-space representation is

$$y(t) = Cx(t) + Du(t)$$
  

$$\dot{x}(t) = Ax(t) + Bu(t)$$
  

$$x(0) = 0$$

M. Peet Lecture 07: 16 /

### Proof.

• Let  $V(x) = x^T X x$ . Then the LMI implies

$$\begin{split} & \begin{bmatrix} x(t) \\ u(t) \end{bmatrix}^T \begin{bmatrix} \begin{bmatrix} A^TX + XA & XB \\ B^TX & -(\gamma - \epsilon)I \end{bmatrix} + \frac{1}{\gamma} \begin{bmatrix} C^T \\ D^T \end{bmatrix} \begin{bmatrix} C & D \end{bmatrix} \begin{bmatrix} x(t) \\ u(t) \end{bmatrix} \\ & = \begin{bmatrix} x \\ u \end{bmatrix}^T \begin{bmatrix} A^TX + XA & XB \\ B^TX & -(\gamma - \epsilon)I \end{bmatrix} \begin{bmatrix} x \\ u \end{bmatrix} + \frac{1}{\gamma} \begin{bmatrix} x \\ u \end{bmatrix}^T \begin{bmatrix} C^T \\ D^T \end{bmatrix} \begin{bmatrix} C & D \end{bmatrix} \begin{bmatrix} x \\ u \end{bmatrix} \\ & = \begin{bmatrix} x \\ u \end{bmatrix}^T \begin{bmatrix} A^TX + XA & XB \\ B^TX & -(\gamma - \epsilon)I \end{bmatrix} \begin{bmatrix} x \\ u \end{bmatrix} + \frac{1}{\gamma}y^Ty \\ & = x^T (A^TX + XA)x + x^TXBu + u^TB^TXx - (\gamma - \epsilon)u^Tu + \frac{1}{\gamma}y^Ty \\ & = (Ax + Bu)^TXx + x^TX(Ax + Bu) - (\gamma - \epsilon)u^Tu + \frac{1}{\gamma}y^Ty \\ & = \dot{x}(t)^TXx(t) + x(t)^TX\dot{x}(t) - (\gamma - \epsilon)\|u(t)\|^2 + \frac{1}{\gamma}\|y(t)\|^2 \\ & = \dot{V}(x(t)) - (\gamma - \epsilon)\|u(t)\|^2 + \frac{1}{\gamma}\|y(t)\|^2 \le 0 \end{split}$$

#### Proof.

- Now we have  $\dot{V}(x(t)) (\gamma \epsilon) ||u(t)||^2 + \frac{1}{\gamma} ||y(t)||^2 \le 0$
- Integrating in time, we get

$$\int_{0}^{T} \left( \dot{V}(x(t)) - (\gamma - \epsilon) \|u(t)\|^{2} + \frac{1}{\gamma} \|y(t)\|^{2} \right) dt$$

$$= V(x(T)) - V(x(0)) - (\gamma - \epsilon) \int_{0}^{T} \|u(t)\|^{2} dt + \frac{1}{\gamma} \int_{0}^{T} \|y(t)\|^{2} dt \le 0$$

- Because A is Hurwitz,  $\lim_{t\to\infty} x(t) = 0$ .
- Hence  $\lim_{t\to\infty} V(x(t)) = 0$ .
- Likewise, because x(0) = 0, we have V(x(0)) = 0.

Lecture 07:

### Proof.

• Since  $V(x(0)) = V(x(\infty)) = 0$ ,

$$\begin{split} &\lim_{T \to \infty} \left[ \dot{V}(x(T)) - \dot{V}(x(0)) - (\gamma - \epsilon) \int_0^T \lVert u(t) \rVert^2 dt + \frac{1}{\gamma} \int_0^T \lVert y(t) \rVert^2 dt \right] \\ &= 0 - 0 - (\gamma - \epsilon) \int_0^\infty \lVert u(t) \rVert^2 dt + \frac{1}{\gamma} \int_0^\infty \lVert y(t) \rVert^2 dt \\ &= -(\gamma - \epsilon) \lVert u \rVert_{L_2}^2 + \frac{1}{\gamma} \lVert y \rVert_{L_2}^2 \leq 0 \end{split}$$

Thus

$$||y||_{L_2}^2 \le (\gamma^2 - \epsilon \gamma) ||u||_{L_2}^2$$

• By definition, this means  $\|\hat{G}\|_{H_{\infty}}^2 = \|G\|_{\mathcal{L}(L_2)}^2 \leq (\gamma^2 - \epsilon \gamma) < \gamma^2$  or

$$\|\hat{G}\|_{H_{\infty}} < \gamma$$

## The Positive Real Lemma

A Passivity Condition

A Variation on the KYP lemma is the positive-real lemma

#### Lemma 21.

Suppose

$$\hat{G}(s) = \begin{bmatrix} A & B \\ \hline C & D \end{bmatrix}.$$

Then the following are equivalent.

- G is passive. i.e.  $(\langle u, Gu \rangle_{L_2} \geq 0)$ .
- There exists a P > 0 such that

$$\begin{bmatrix} A^T P + PA & PB - C^T \\ B^T P - C & -D^T - D \end{bmatrix} \le 0$$

M. Peet Lecture 07: 20 / 27

The Positive Real Lemma

The Positive Real Lemma Arbanic cashing and the positive real horns Lemma 21.  $G(x) = \left(\frac{1}{x^2} \frac{1}{x^2}\right)^2.$  Thus the following are expectate:  $\theta(x) = \left(\frac{1}{x^2} \frac{1}{x^2}\right)^2.$  Thus the following are expectate:  $\theta(x) = \left(\frac{1}{x^2} \frac{1}{x^2} \frac{1}{x^2}\right)$ . There exists x > 0 to such that  $\left[\frac{d^2 + x^2}{d^2 + x^2} - \frac{dx}{d^2 - x^2}\right] \le 0$ 

G is Passive (Positive Real) if

$$\hat{G}(s) + \hat{G}(s)^* > 0$$

Or, equivalently  $\angle G(s) \in [-90^{\circ}, +90^{\circ}]$ 

- Can be read off the Bode plot
- Phase lead or lag less than  $90^{\circ}$

#### Theorem 22.

Suppose  $\hat{P}(s) = C(sI - A)^{-1}B$ . Then the following are equivalent.

- 1. A is Hurwitz and  $\|\hat{P}\|_{H_2}^2 < \gamma$ .
- 2. There exists some X > 0 such that

$$\label{eq:condition} \operatorname{trace} CXC^T < \gamma$$
 
$$AX + XA^T + BB^T < 0$$

 $\sqcup_{H_2 ext{-optimal}}$  control



- The H<sub>2</sub> norm of a transfer function is conceptually identical to the Frobenius norm on a matrix.
- Minimizing the  $H_2$ -norm using full-state feedback is the LQR problem.
- However, minimizing the  $H_2$  norm reflects a view of the system based on representation and not operation. That is, the controller minimizes the size of the *representation* of the system as opposed to the *performance* of the system.
  - Like judging a book based on how many words it has.
- ullet  $H_2$ -Control will require 2 applications of the Schur Complement.
- Note that a system can have finite  $H_2$  norm and still be unstable!

### Proof.

Suppose A is Hurwitz and  $\|\hat{P}\|_{H_2} < \gamma$ . Then the Controllability Grammian is defined as

$$X_c = \int_0^\infty e^{At} B B^T e^{A^T} dt$$

Now recall the Laplace transform

$$(\Lambda e^{At})(s) = \int_0^\infty e^{At} e^{-ts} dt$$

$$= \int_0^\infty e^{-(sI-A)t} dt$$

$$= -(sI-A)^{-1} e^{-(sI-A)t} dt \Big|_{t=0}^{t=-\infty}$$

$$= (sI-A)^{-1}$$

Hence 
$$(\Lambda Ce^{At}B)(s) = C(sI - A)^{-1}B$$
.

Note the implicit assumption on stability.

Lecture 07: 22 /

### Proof.

$$\begin{split} \left(\Lambda C e^{At} B\right)(s) &= C(sI-A)^{-1} B \text{ implies} \\ \|\hat{P}\|_{H_2}^2 &= \|C(sI-A)^{-1} B\|_{H_2}^2 \\ &= \frac{1}{2\pi} \int_0^\infty \operatorname{Trace}((C(\imath \omega I - A)^{-1} B)^* (C(\imath \omega I - A)^{-1} B)) d\omega \\ &= \frac{1}{2\pi} \int_0^\infty \operatorname{Trace}((C(\imath \omega I - A)^{-1} B)(C(\imath \omega I - A)^{-1} B)^*) d\omega \\ &= \operatorname{Trace} \int_{-\infty}^\infty C e^{At} B B^T e^{A^T t} C^T dt \\ &= \operatorname{Trace} C X_c C^T \end{split}$$

Thus 
$$X_c \geq 0$$
 and  $\mathrm{Trace} C X_c C^T = \|\hat{P}\|_{H_2}^2 < \gamma$ .

Third Equality uses linearity of the trace. Fourth Equality holds by Plancherel Theorem

M. Peet Lecture 07: 23 /

#### Proof.

Likewise Trace $B^T X_o B = \|\hat{P}\|_{H_2}^2$ . To show that we can make the inequality strict X > 0, we simply let

$$X = \int_0^\infty e^{At} \left( BB^T + \epsilon I \right) e^{A^T} dt$$

for sufficiently small  $\epsilon > 0$ . Furthermore, we already know the controllability grammian  $X_c$  and thus  $X_c$  satisfies the Lyapunov inequality.

$$A^T X_{\epsilon} + X_{\epsilon} A + B B^T < 0$$

These steps can be reversed to obtain necessity.

## System Interconnections

Interconnected Systems (G,K):

$$y_1 = G(u_1 - y_2)$$
  
 $y_2 = K(u_2 - y_1)$ 

Is the interconnection stable?

• If  $u_1, u_2 \in L_2$ , are  $y_1, y_2 \in L_2$ ?


The Matrix Inversion Formula:

$$\begin{bmatrix} A_{11} & A_{12} \\ A_{21} & A_{22} \end{bmatrix}^{-1} = \begin{bmatrix} Q_1 & -A_{11}^{-1} A_{12} Q_2 \\ -A_{22}^{-1} A_{21} Q_1 & Q_2 \end{bmatrix} = \begin{bmatrix} Q_1 & -Q_1 A_{12} A_{22}^{-1} \\ -Q_2 A_{21} A_{11}^{-1} & Q_2 \end{bmatrix}$$
$$Q_1 = (A_{11} - A_{12} A_{22}^{-1} A_{21})^{-1} \qquad Q_2 = (A_{22} - A_{21} A_{11}^{-1} A_{12})^{-1}$$

$$\overline{ \begin{bmatrix} y_1 \\ y_2 \end{bmatrix} } = \begin{bmatrix} I & G \\ K & I \end{bmatrix}^{-1} \begin{bmatrix} G & 0 \\ 0 & K \end{bmatrix} \begin{bmatrix} u_1 \\ u_2 \end{bmatrix} = \begin{bmatrix} (I-GK)^{-1}G & -G(I-KG)^{-1}K \\ -K(I-GK)^{-1}G & (I-KG)^{-1}K \end{bmatrix} \begin{bmatrix} u_1 \\ u_2 \end{bmatrix}$$

M. Peet Lecture 07: 25 / 27

Lecture 07

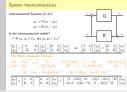

Note how we use the *algebraic nature* of systems to solve for signals.

### The Small Gain Theorem

$$\begin{bmatrix} y_1 \\ y_2 \end{bmatrix} = \begin{bmatrix} (I - GK)^{-1}G & -G(I - KG)^{-1}K \\ -K(I - GK)^{-1}G & (I - KG)^{-1}K \end{bmatrix} \begin{bmatrix} u_1 \\ u_2 \end{bmatrix} \xrightarrow{\mathbf{u}_1} \bigoplus_{\mathbf{u}_2} \bigoplus_{\mathbf{u}_3} \bigoplus_{\mathbf{u}_4} \bigoplus_{\mathbf{u}_4} \bigoplus_{\mathbf{u}_4} \bigoplus_{\mathbf{u}_4} \bigoplus_{\mathbf{u}_5} \bigoplus_{\mathbf{u}_6} \bigoplus_{\mathbf{$$

- interconnection is stable.
  - What do we mean by well-behaved?
  - $||(I GK)^{-1}|| < \infty$ ?

## Theorem 23 (Small Gain Theorem).

Suppose B is a Banach Algebra and  $Q \in B$ . If ||Q|| < 1, then  $(I - Q)^{-1}$  exists and furthermore


$$(I-Q)^{-1} = \sum_{k=0}^{\infty} Q^k$$

A generalization of the power-series expansion:

$$\sum_{k=0}^{\infty} r^k = \frac{1}{1-r} = (1-r)^{-1}$$

Lecture 07

The Small Gain Theorem

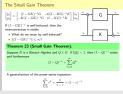


Note the norm here is the one associated to the Banach Algebra

- $\bullet$  Systems are only a Banach Algebra under the induced norm, which is equivalent to the  $H_\infty\text{-norm}$  of the transfer function.
- Induced Norms:  $\sup_{u} \frac{\|GKu\|_Y}{\|u\|_X}$
- Therefore:  $H_{\infty}$  norm
- Does the  $H_2$  norm work?????

## The Passivity Theorem

$$\begin{bmatrix} y_1 \\ y_2 \end{bmatrix} = \begin{bmatrix} (I-GK)^{-1}G & -G(I-KG)^{-1}K \\ -K(I-GK)^{-1}G & (I-KG)^{-1}K \end{bmatrix} \begin{bmatrix} u_1 \\ u_2 \end{bmatrix} \xrightarrow{\mathbf{u}_1 + \mathbf{v}_2 + \mathbf{v}_3}$$
 Recall that we say a system  $G$  is passive if  $\langle u, Gu \rangle \geq 0$ 

Equivalent to positivity.

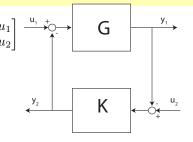

### Theorem 24 (Passivity Theorem).

If 
$$\langle u,Gu\rangle \geq 0$$
 (passive), and  $-\langle u,Ku\rangle \geq \epsilon \|u\|$  ( $-K$  strictly passive), then 
$$(I-GK)^{-1}G$$

exists and is passive.

Obvious extensions exist for the other 3 maps:

$$\begin{bmatrix} (I - GK)^{-1}G & -G(I - KG)^{-1}K \\ -K(I - GK)^{-1}G & (I - KG)^{-1}K \end{bmatrix}$$