


**(a)**  $R = 1.0 \text{ m}$ ,  $\theta_0 = 17.19^\circ$

**(b)**  $R = 0.4 \text{ m}$ ,  $\theta_0 = 42.97^\circ$


$L_X = 300 \text{ mm}$   
 $s = 300 \text{ mm}$ ,  $h = 6 \text{ mm}$  (10 layers)

$p = 15 \text{ kPa}$

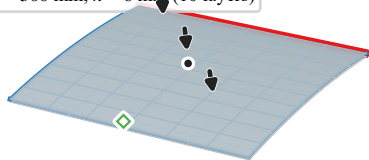

$L_X = 300 \text{ mm}$   
 $s = 300 \text{ mm}$ ,  $h = 6 \text{ mm}$  (10 layers)

$p = 15 \text{ kPa}$

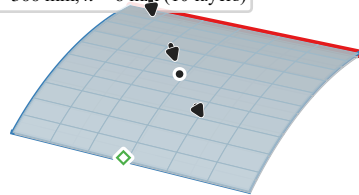

fixed:  $s = R\theta = 0$

free edge

fixed:  $s = R\theta = 0$


free edge

**(c)**  $R = 0.3 \text{ m}$ ,  $\theta_0 = 57.30^\circ$

**(d)**  $R = 0.2 \text{ m}$ ,  $\theta_0 = 85.94^\circ$


$L_X = 300 \text{ mm}$   
 $s = 300 \text{ mm}$ ,  $h = 6 \text{ mm}$  (10 layers)

$p = 15 \text{ kPa}$

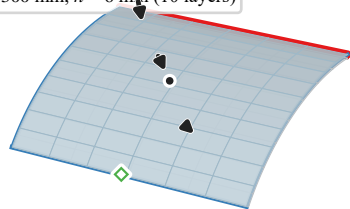

$L_X = 300 \text{ mm}$   
 $s = 300 \text{ mm}$ ,  $h = 6 \text{ mm}$  (10 layers)

$p = 15 \text{ kPa}$

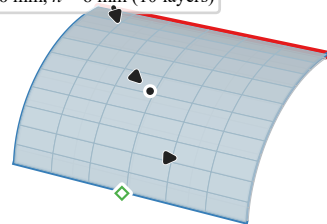

fixed:  $s = R\theta = 0$

free edge

fixed:  $s = R\theta = 0$

free edge

— fixed edge,  $s = 0$

— free edges



inward pressure, 15 kPa



geometric center probe



free-edge midpoint reference