

NP3RX

ASSEMBLY INSTRUCTION

8 [0.32]


5 [0.20"] 3 [0.12"]

10 [0.39]

Ring

Tip Sleeve

NP*RX 1/4" Professional Right-Angle Phone Plug

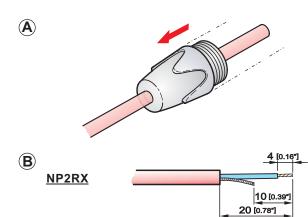


- A Slide the boot onto the cable.
- (B) Prepare cable as shown.
- © Solder the wire ends in the order Sleeve, Ring and Tip.
- D Position the chuck onto the cable and align chuck with plugfinger.

Attention:

If using a cable with O.D. > 5.50 mm [0.216"] break off marked part of the chuck.

- (E) Push the cover to the stop position on the shell.
- Finish the installation by tighten the bushing onto the connector.

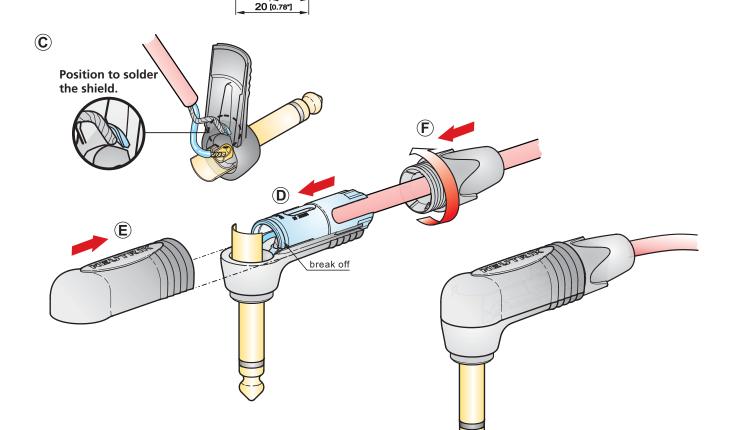

NEUTRIK AG T: +423/2372424 F: +423/232 53 93 **NEUTRIK France** T: +33 1/4131 6750 FR F: +33 1/4131 0511 NEUTRIK USA Inc. USA T: +1 704 / 972 3050 F: +1 704/438 9202 NEUTRIK Tokyo Ltd. T: +81 3/3663 4733 F: +81 3/3663 4796 T: +44 1983 / 811 441
 NEUTRIK (UK) Ltd.
 UK
 T: +44 1983/811441
 F: +44 1983/811439

 NEUTRIK Vertriebs GmbH
 DE/NL/AT/DK
 T: +49 8131/280 890
 F: +49 8131/280 830
NEUTRIK Hong Kong Ltd. NEUTRIK India Pvt. Ltd. T: +852/2687 6055 HK F: +852/2687 6052 IND T: +91/982 05 43 424 F: +91/22 26163 540

Draft. Nr.: BDA 180 | Update: 24.07.2015 | Data subject to change without prior notice. @2015 NEUTRIK* . ALL RIGHTS RESERVED. NEUTRIK* are registered trademark

