

Sonic Slings

How one sling goes together. Quantities are per sling; an order is one left and one right.

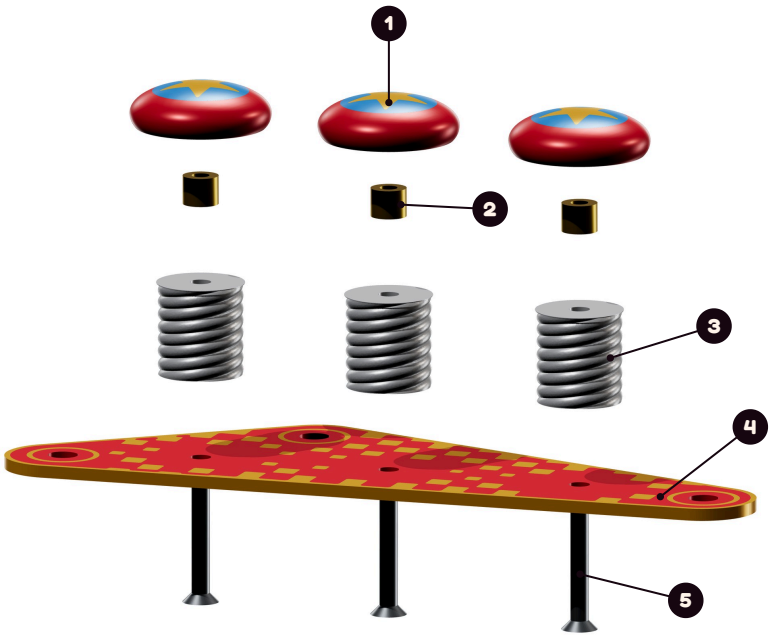

	PART	QTY	CODE
1	**Cap, dome** Red, blue and gold PLA, one piece	3	SS-CAP
2	**Threaded insert** Brass, M3, heat-set, 5.9 × 4.7 mm	3	SS-INS
3	**Spring** Silver PLA, 15.25 mm tall, 3.5 mm bore	3	SS-SPR
4	**Plate** Red and gold PLA, 2 mm, left or right hand	1	SS-PLT-L / R
5	**Screw** Steel, M3 × 20, countersunk head, 2 mm hex	3	SS-SCR

> Use M3 × 20 only. A longer screw can bottom out inside the cap and push the star face out.

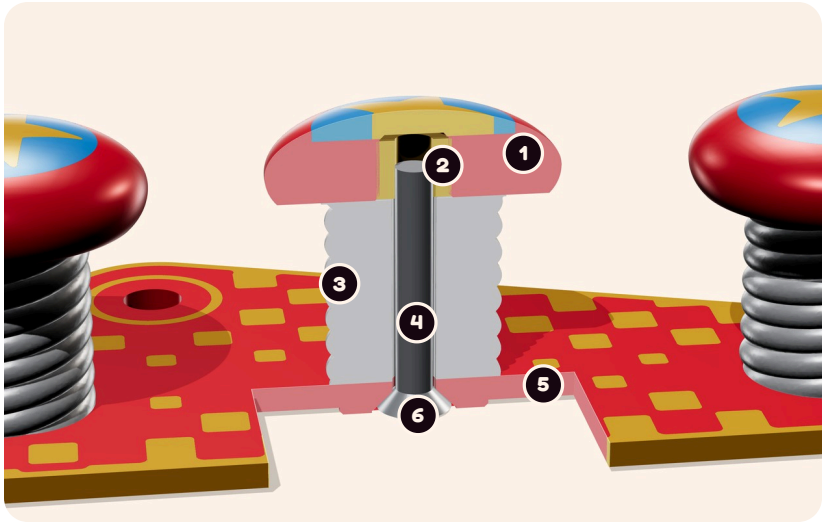

How it holds together

1. **Star cap**
   One printed piece in red, blue and gold.
2. **Brass insert**
   Melted into the cap. The screw threads into it.
3. **Spring**
   Printed. The screw runs straight through.
4. **M3 × 20 screw**
   Clamps cap, spring and plate together. No glue.
5. **Plate**
   2 mm, printed face down.
6. **Screw head**
   Sits flush under the plate.

About 2.5 mm of thread engages the insert. Snug by hand is the right torque.

Cutaway: the front half of the middle cap, spring and plate removed. The screw is shown whole.

Replace a cap or a spring

For owners. Tool: 2 mm hex key.

1. Switch the game off, remove the glass and take the sling out (three nuts).
2. Hold the cap. Undo its screw from underneath and lift the cap and spring off.
3. Stand the new spring on the plate over the hole. Set the cap on the spring.
4. Push the screw up through the plate and spring into the cap. Turn the star the way you want it, then tighten until snug.
5. Refit the sling.

Spare kits

KIT	CONTENTS
Cap kit	1 cap with insert fitted, 1 screw
Spring kit	1 spring, 1 screw
Plate	1 plate, left or right



Underside of one sling. The three screw heads sit flush in their seats; this is where the hex key goes.

Workshop: fit an insert

Soldering iron at about 200 °C. The insert is melted in, never pressed in cold.

1. Stand the insert on the hole in the cap's underside.
2. Iron tip in the insert. Let it sink under light pressure.
3. Stop when it is level with the cap's bottom face. Press the cap face down on something flat and cool for a few seconds so the insert sets square.
4. Do not dwell: the star face is 1.9 mm above the end of the hole.
5. Run a screw in by hand to prove the thread.

Workshop: assemble a sling

1. Plate face up. Spring over each of the three small holes, cap on each spring.
2. Screw up through plate and spring into each cap. Stars square to the long edge.
3. Tighten until snug. The head must finish flush or below the underside.

Checks before packing

- No cap turns or rocks by hand.
- Sling stands on a table without rocking; screw heads flush or below the underside.
- Face is clean: no gaps, no stray colour, no scratches.
- Left and right are a mirrored pair.