
How a micro conduit is branched out for a customer splice point cabinet.




"This is a splice closure where fibers are spliced together. Don't worry about that now.

Also don't worry about the black and orange fiber cables coming out of the micro conduits.


1) First a hole will be digged to reach the multi conduits running in the trench.

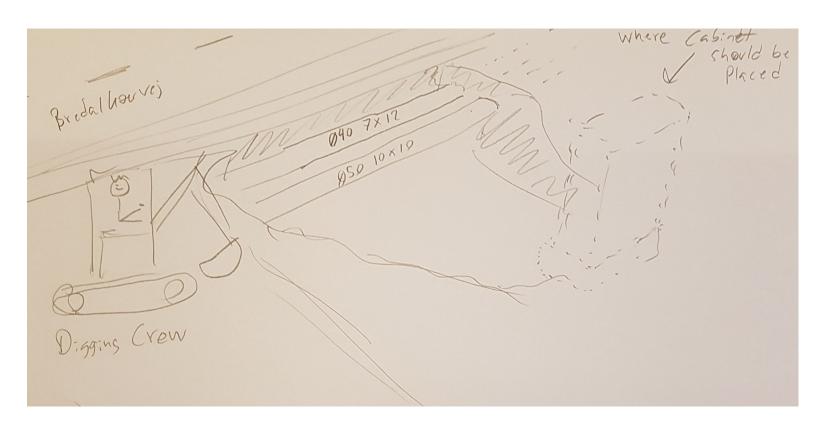

2) Then a window is cut in the outer duct of the (hopefully correct) multi duct

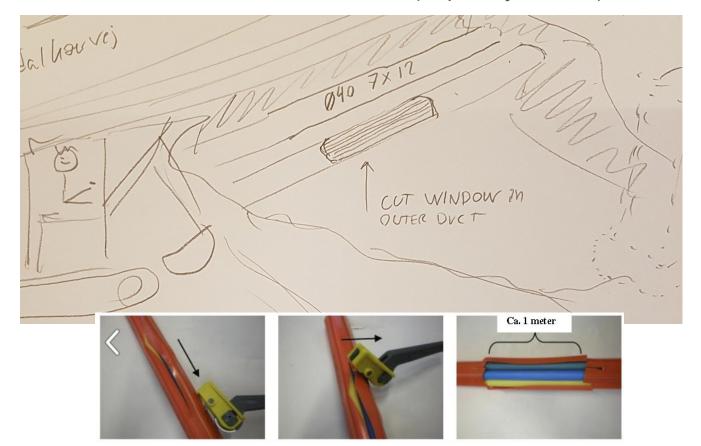

3) Then the (hopefully correct) inner duct is cut over

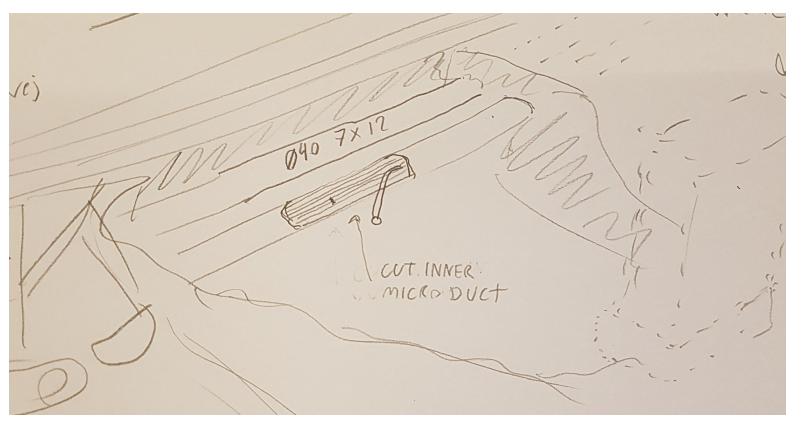

4) Then the conduit junction lower part is placed and single conduit for the cabinet is connected to the inner duct that was cut







5) Finally the conduit to the customer premisses is digged down from the cabinet

