

# UEFI & EDK II Training

**EDK II Modules: Libraries, Drivers & Applications** 

tianocore.org



## LESSON OBJECTIVE

- What is a EDK II Module
- Use EDK II libraries to write UEFI apps/drivers
- How to Define a UEFI application
- Differences between UEFI App / Drivers INF file



## EDK II MODULES OVERVIEW

What are EDK II Modules



#### MODULES

Smallest separate object compiled in EDK II

Compiles to .EFI file

Shell

UEFI/DXE Driver

PEIM

UEFI App. or

Library

DXE

PEIM

Modules: Building blocks of EDK II



#### **MODULE TYPES**

#### Most Used Module Types

PEI\_CORE " UEFI\_APPLICATION DXE

DXE\_CORE

BASE

DXE\_RUNTIME\_DRIVER

PEIM

UEFI\_DRIVER

DXE\_DRIVER

Syntax:

<ModuleTypes>

::= <ModuleType> [<Space> <ModuleType>]



#### Module Source Contents - minimum file

MODULE_TYPE	Example Source files
UEFI_APPLICATION	Foo.c, Foo.inf
UEFI_DRIVER	FooDriver.c, FooDriver.h, FooDriver.vfr,

Complexity - Greater number of source files

.INF file - One file is required per module

.EFI file - Sources compiled to a single .EFI file



# EDK II LIBRARY MODULES

.



#### Library Class

#### Syntax:

[LibraryClasses.common]
 <LibraryClassName>|<LibraryInstancePathToInf/Name.inf>

DebugLib | MdePkg/Library/BaseDebugLibNull/BaseDebugLibNull.inf

Name

Implimentation<sup>3</sup>

Consistent set of interfaces

Does not describe implementation of the interfaces



#### Constructors

# "NULL" Library Class Special Cases

**Syntax** 

NOT ". . LibNull" instance

#### **Open Source Example**

DxeCrc32GuidedSectionExtractLib ShellPkg as used with Profiles

#### **UEFI Shell example:**

```
ShellPkg/Application/Shell/Shell.inf {
    <LibraryClasses>
        NULL | ShellPkg/Library/UefiShellDriver1CommandsLib/UefiShellDriver1CommandsLib.inf
        NULL | ShellPkg/Library/UefiShellNetwork1CommandsLib/UefiShellNetwork1CommandsLib.inf
```



#### **Locating Library Classes**

#### Library based upon

- 1. Industry specs (UEFI, etc.)
  MdePkg/MdeModulePkg
- 2. Features
  NetworkPkg/SecurityPkg

Use the package help files (.CHM) to find a library or function *Example*: MdePkg.chm

Search WorkSpace (.INF) "LIBRARY\_CLASS"



#### **Library Instance Hierarchy**

### **Form**

a hierarchy similar to UEFI drivers

DebugLib

DebugLibSerialPort (Instance)

SerialPort (Class)

Link

your module to another

MdePkg (Specs)

Build error: Instance of Library class [Foo...Lib] is not found .... Consumed by module [My Module.inf]



#### **Commonly Used Base Library Classes**

**UefiDriverEntryPoint** BaseLib DebugLib **UefiBootServicesTableLib UefiLib UefiApplicationEntryPoint** DxeCoreEntryPoint DevicePathLib CpuLib VefiUsbLib PciLib PrintLib PeimEntryPoint MemoryAllocationLib **UefiScsiLib** BaseMemoryLib PeiCoreEntryPoint **UefiRuntimeLib** SmmMemLib DxeSerivesLib SynchronizationLib PciExpressLib DxePcdLib **UefiRuntimeServicesTableLib** PciSegmentLibLib PeiServicesLib PeiPcdLib DxeHobLib **UefiFileHandleLib** 




#### MdePkg Library .CHM file Location

tianocore.org UDK2018 documentation on







#### Documentation

Note: this file can also be downloaded from the UDK2018 Release Page at: https://github.com/tianocore/edk2/releases/tag/vUDK2018

This download contains all .chm and .html documents for UDK2018. Each p on the definitions (including PPIs/PROTOCOLs/GUIDs and library classes) are

associated with each package.


UDK2018 Documents (ZIP File)

Individual documentation packages

- CryptoPkg CHM | HTML
- MdeModulePkg CHM | HTML
- MdePkg w/ Libraries CHM | HTML
- MdePkg CHM | HTML
- NetworkPkg CHM | HTML
- SecurityPkg CHM | HTML
- UefiCpuPkg CHM | HTML



#### Library Navigation Demonstration

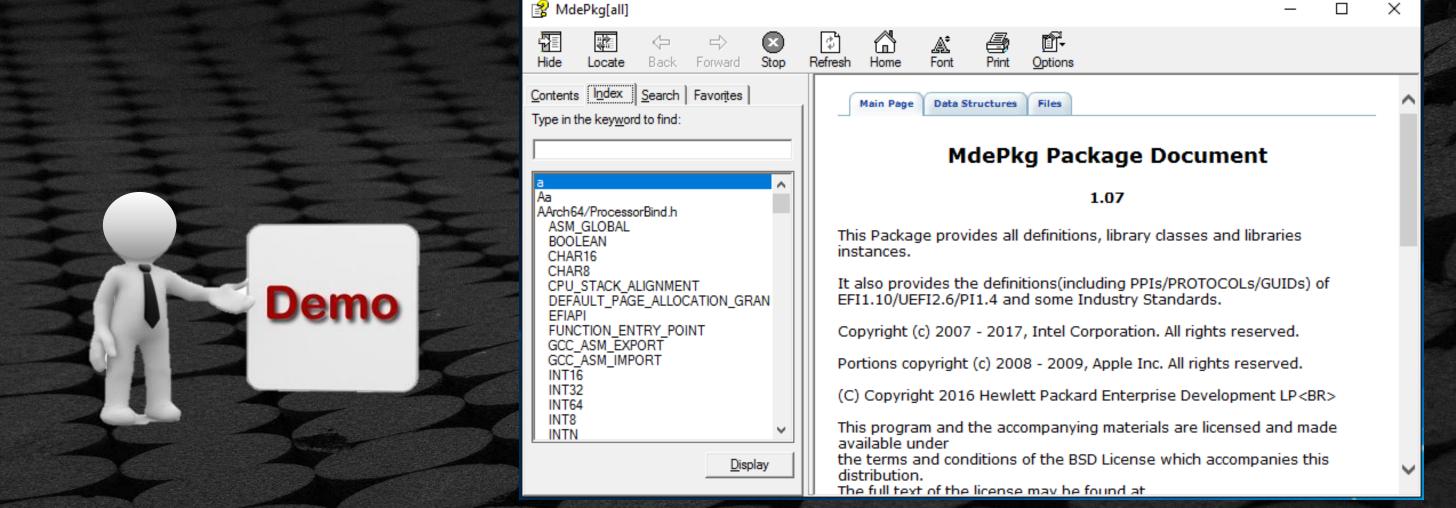


Open file: /FW/Documentation/"MdePkg Document With LibrariesMdePkg.chm"

NOTE: Install a CHM Viewer for Ubuntu

bash\$ sudo aptitude install kchmviewer



#### **Library Navigation Demonstration**

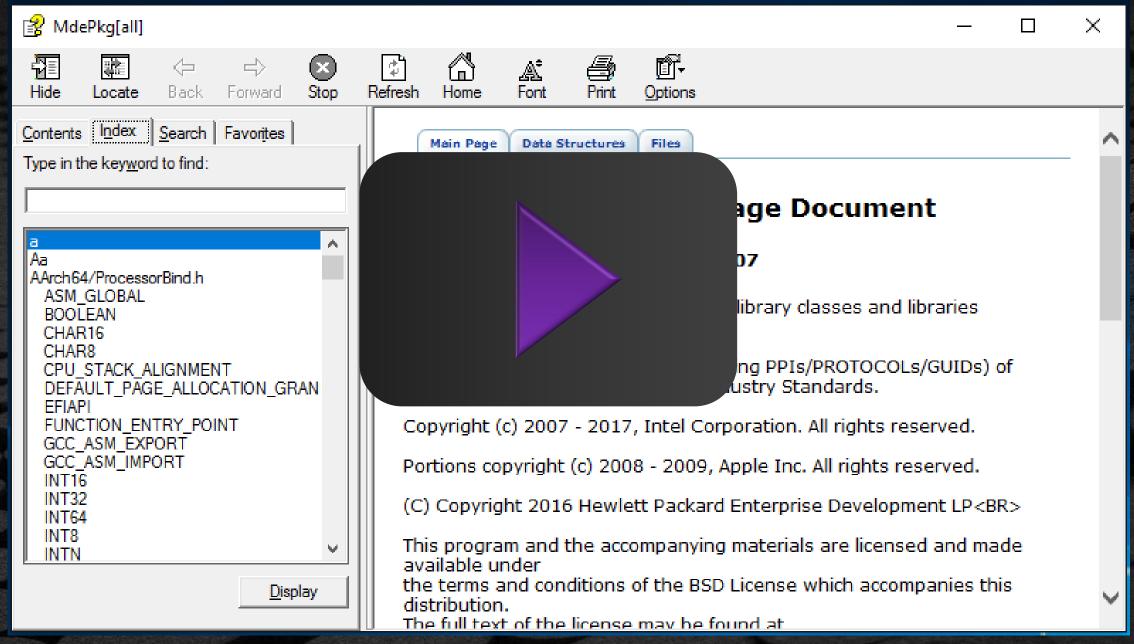

https://youtu.be/s8Zw1w1iQS4



# EDK II UEFI APPLICATION

www.tianocore.org



#### Defining a UEFI Application

#### Characteristics of a UEFI Loadable Image


- Loaded by UEFI loader, just like drivers
- Does not register protocols
- Consumes protocols
- Typically exits when completed (user driven)
- Same set of interfaces as drivers available





#### Defining a UEFI Application


#### **UEFI Loadable Image Usages**


- Platform Diagnostics
- Factory Diagnostics
- **Utilities**
- Driver Prototyping
- "Platform" Applications
- Portable Across Platforms (IA32, X64, ARM, Itanium, etc.)

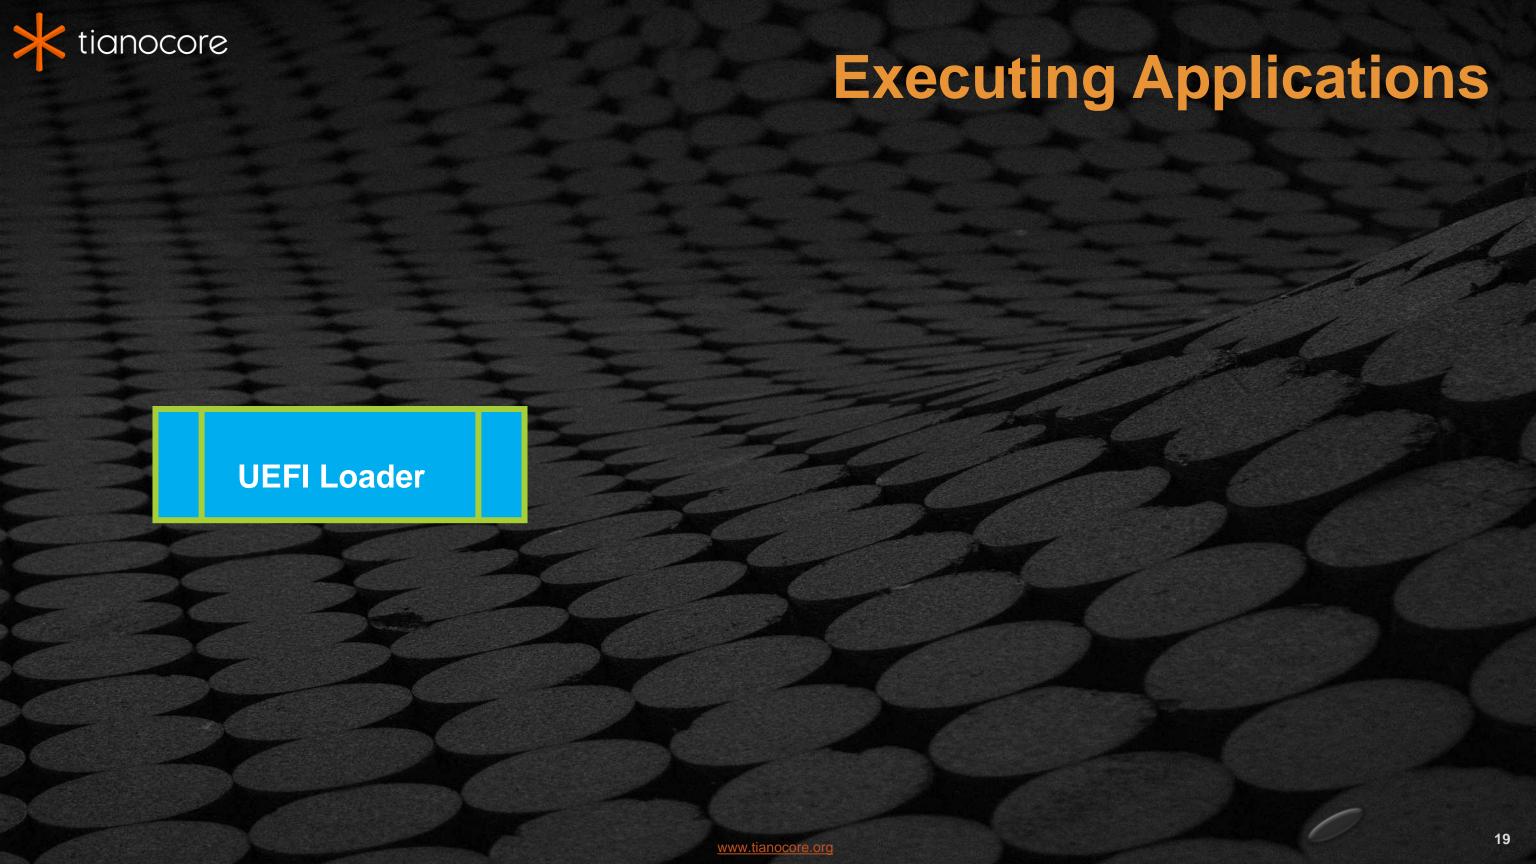


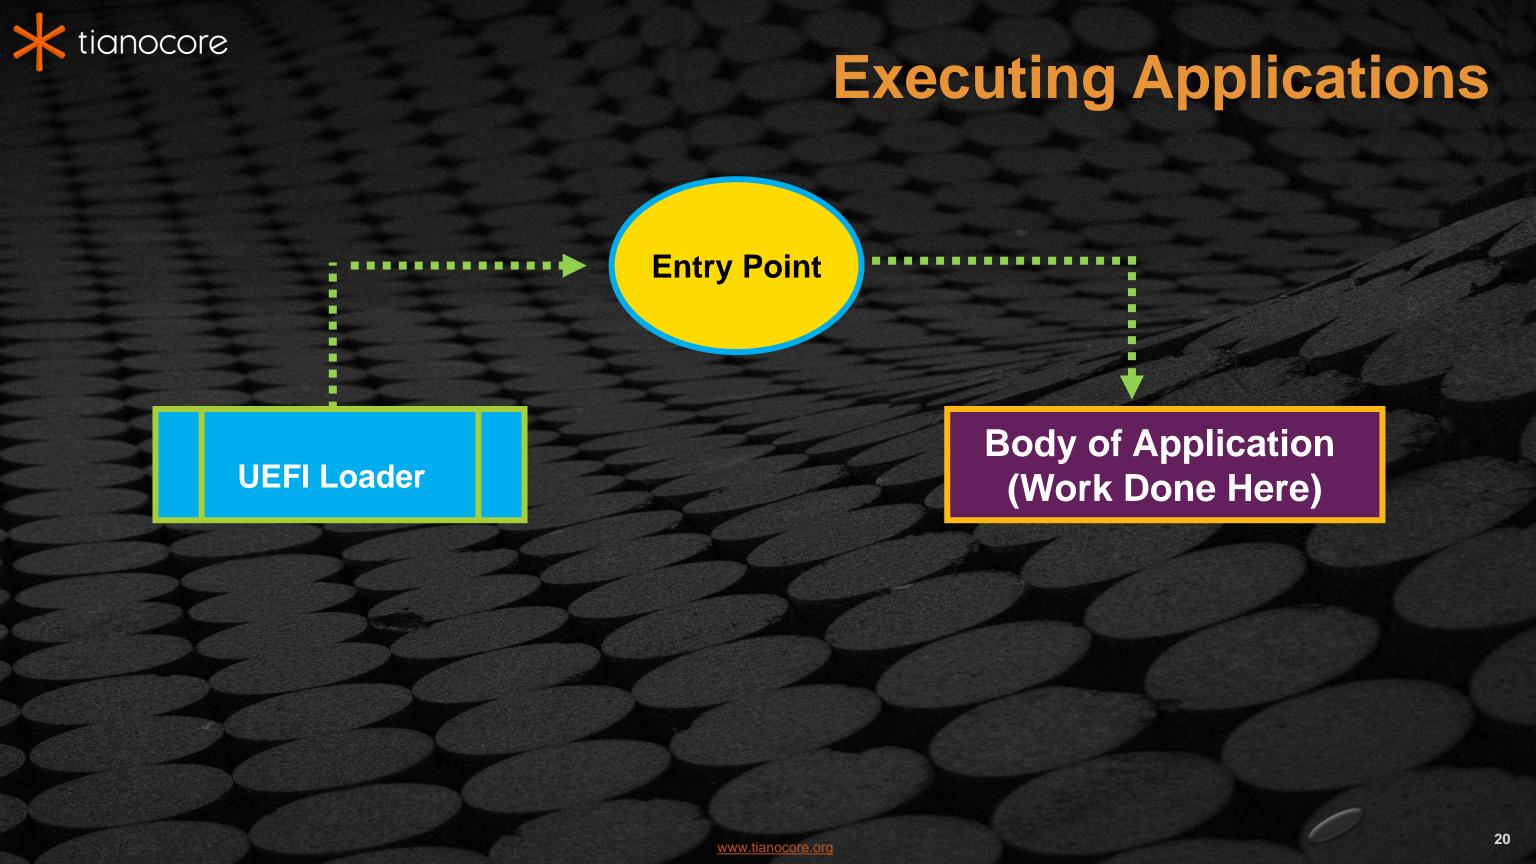


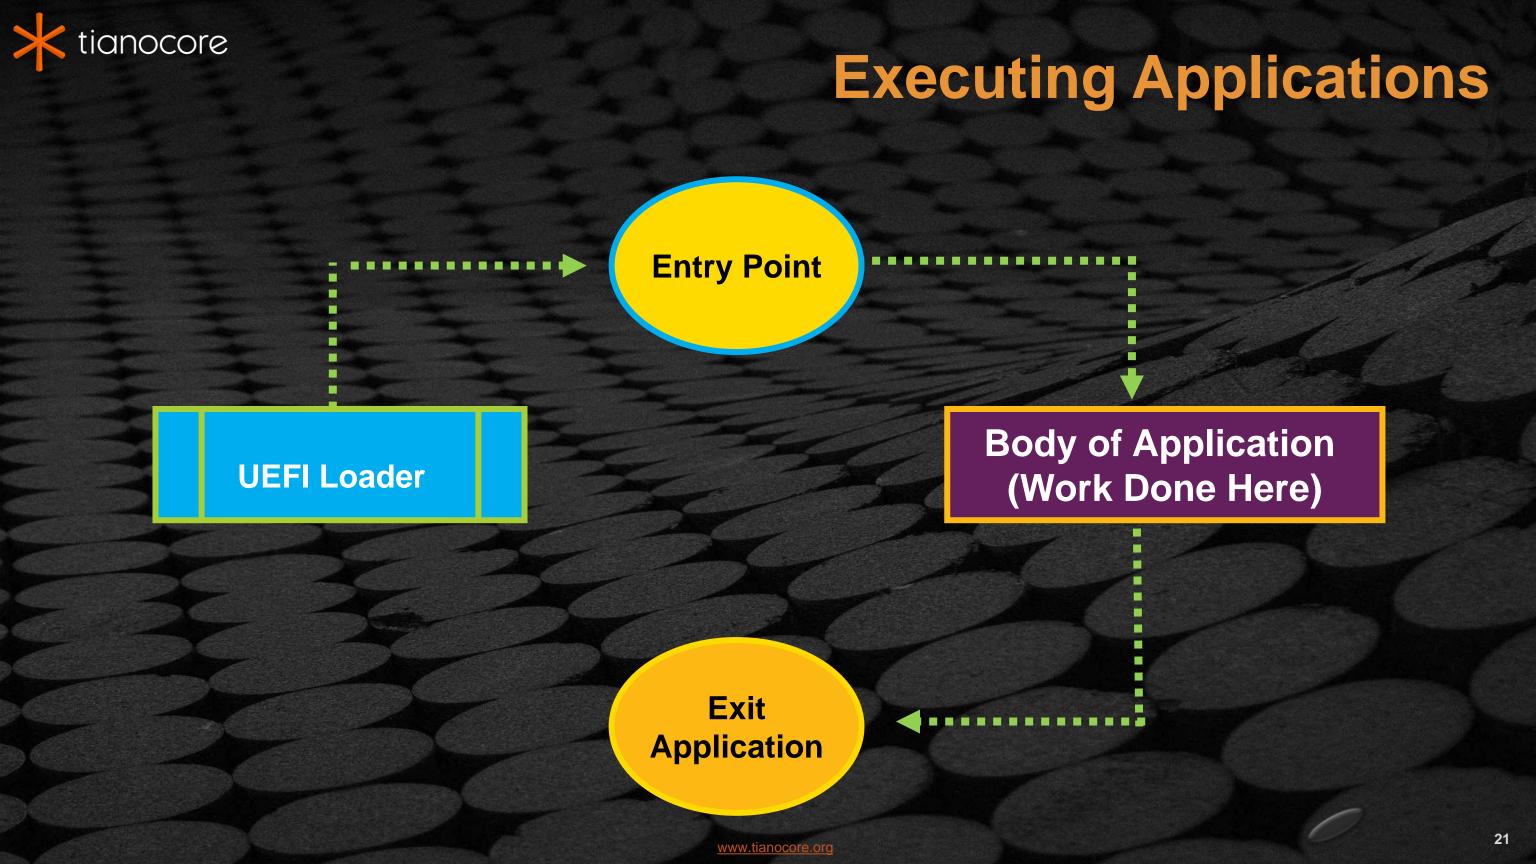


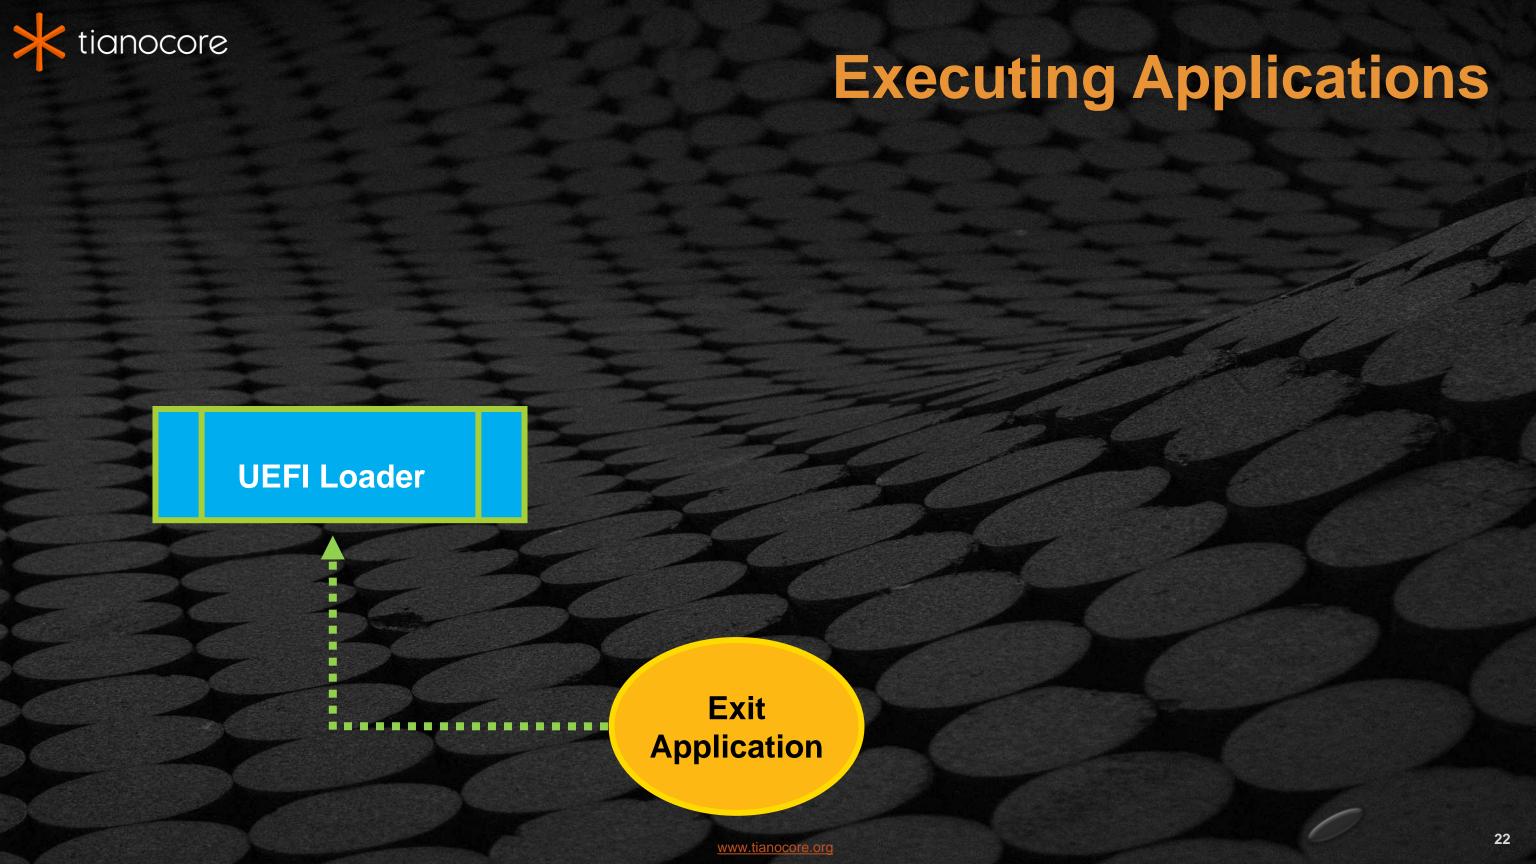


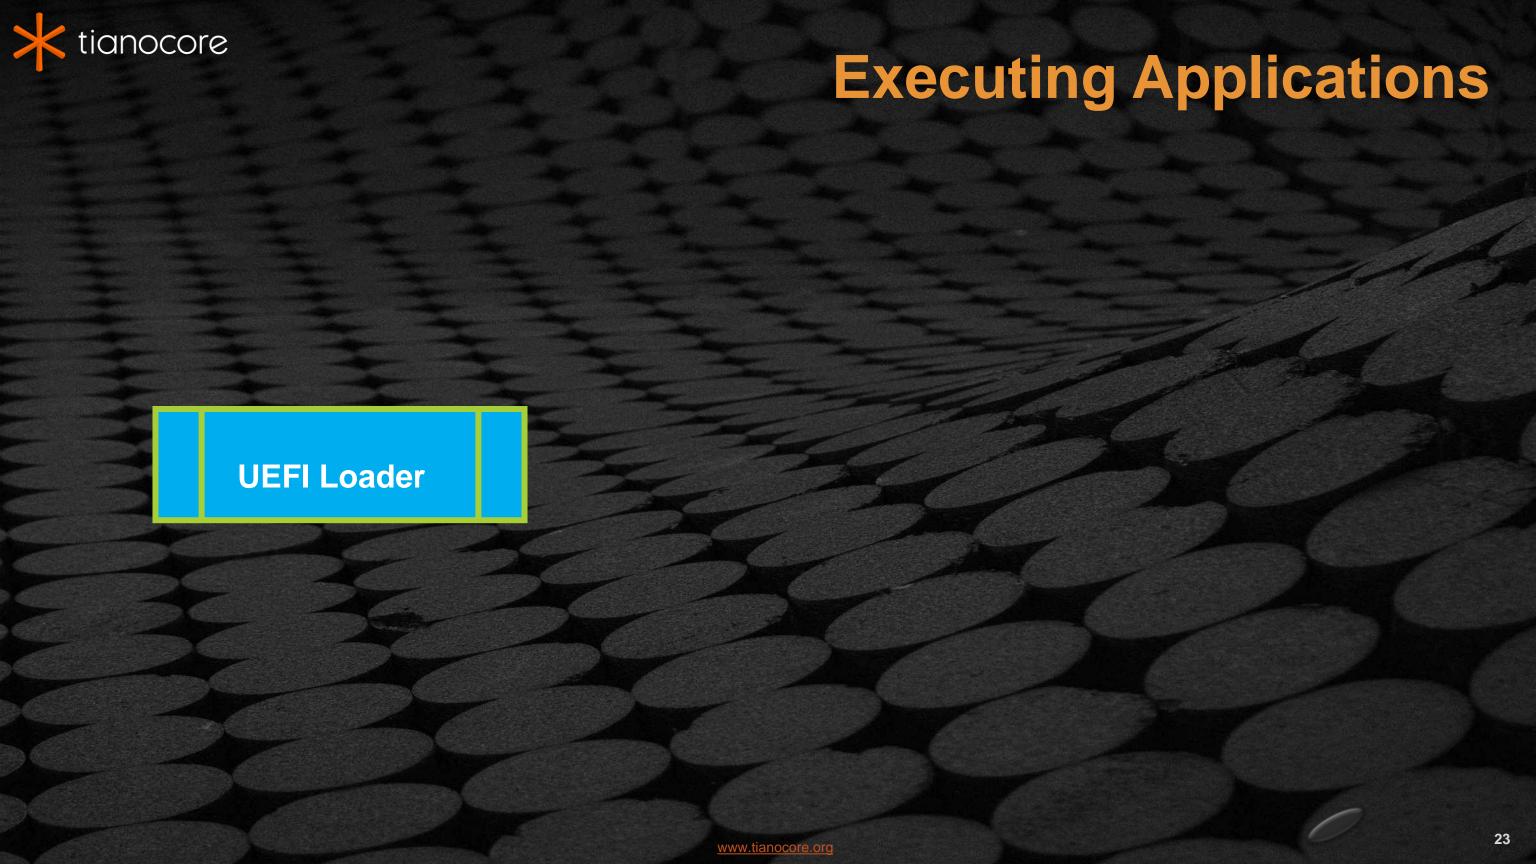


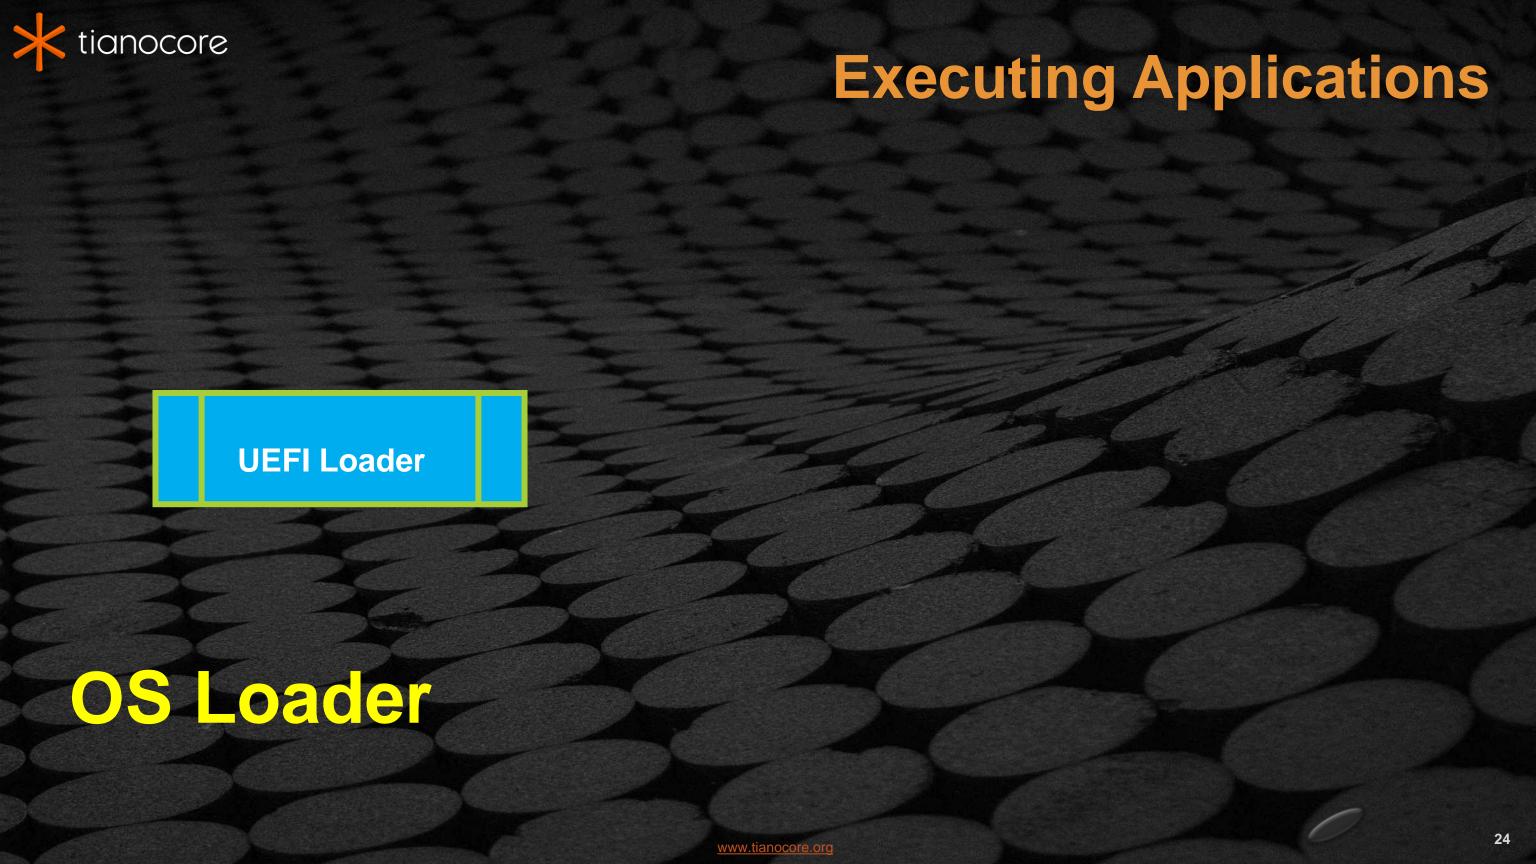


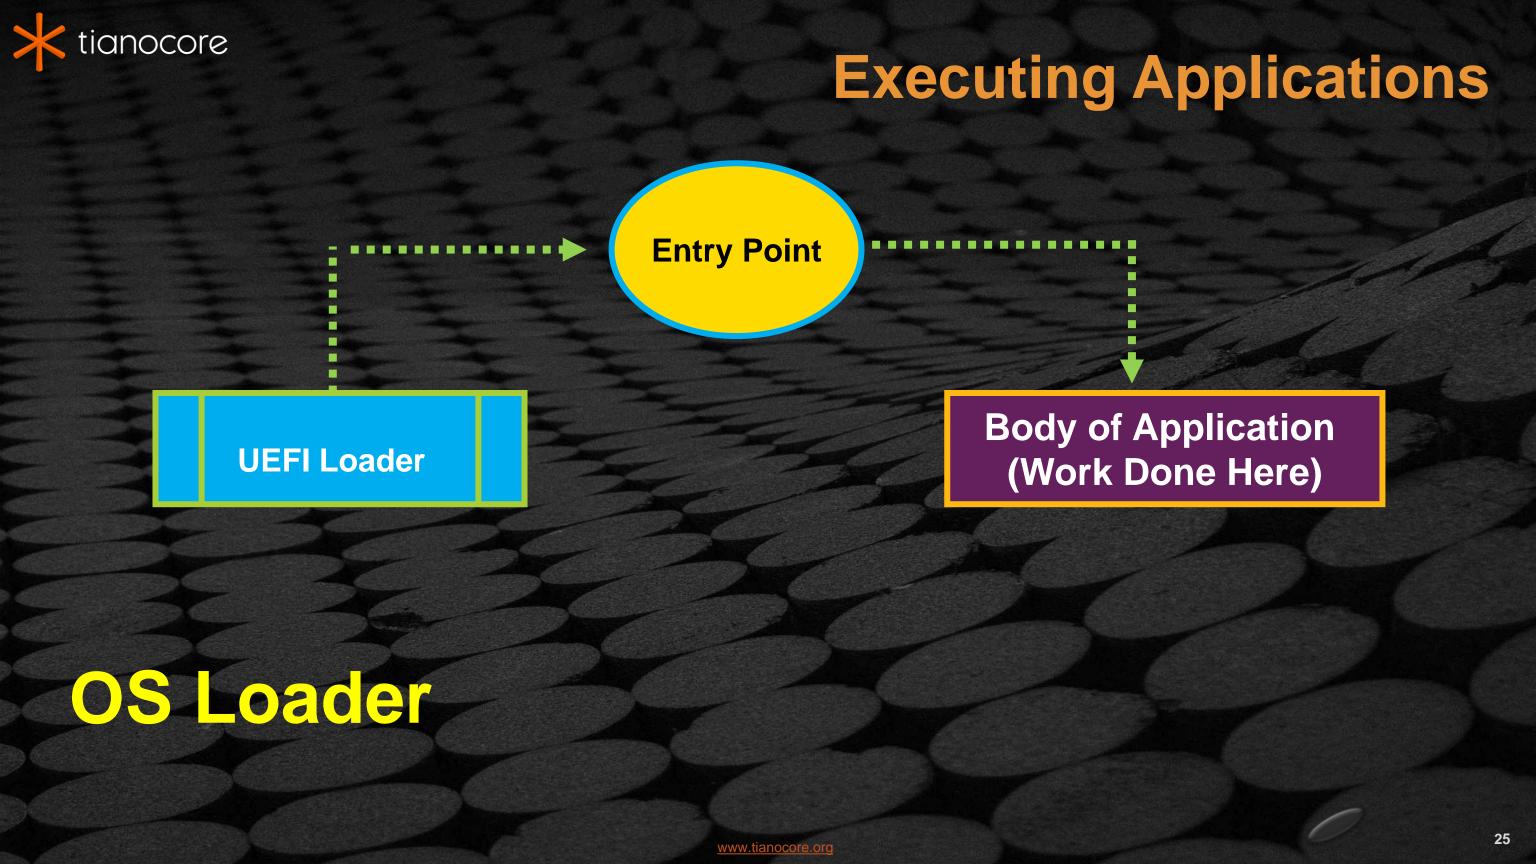

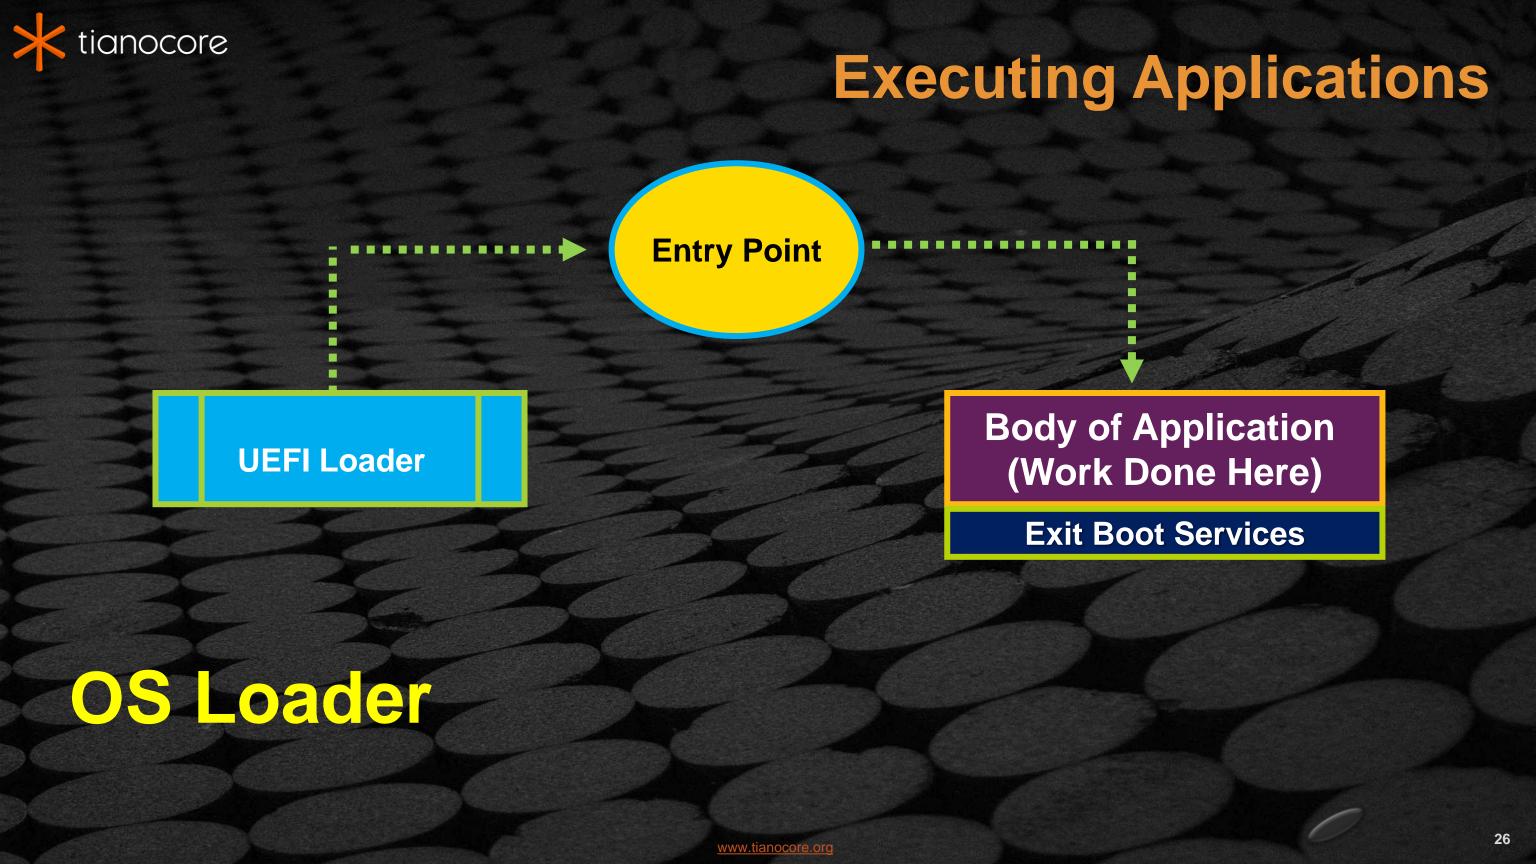

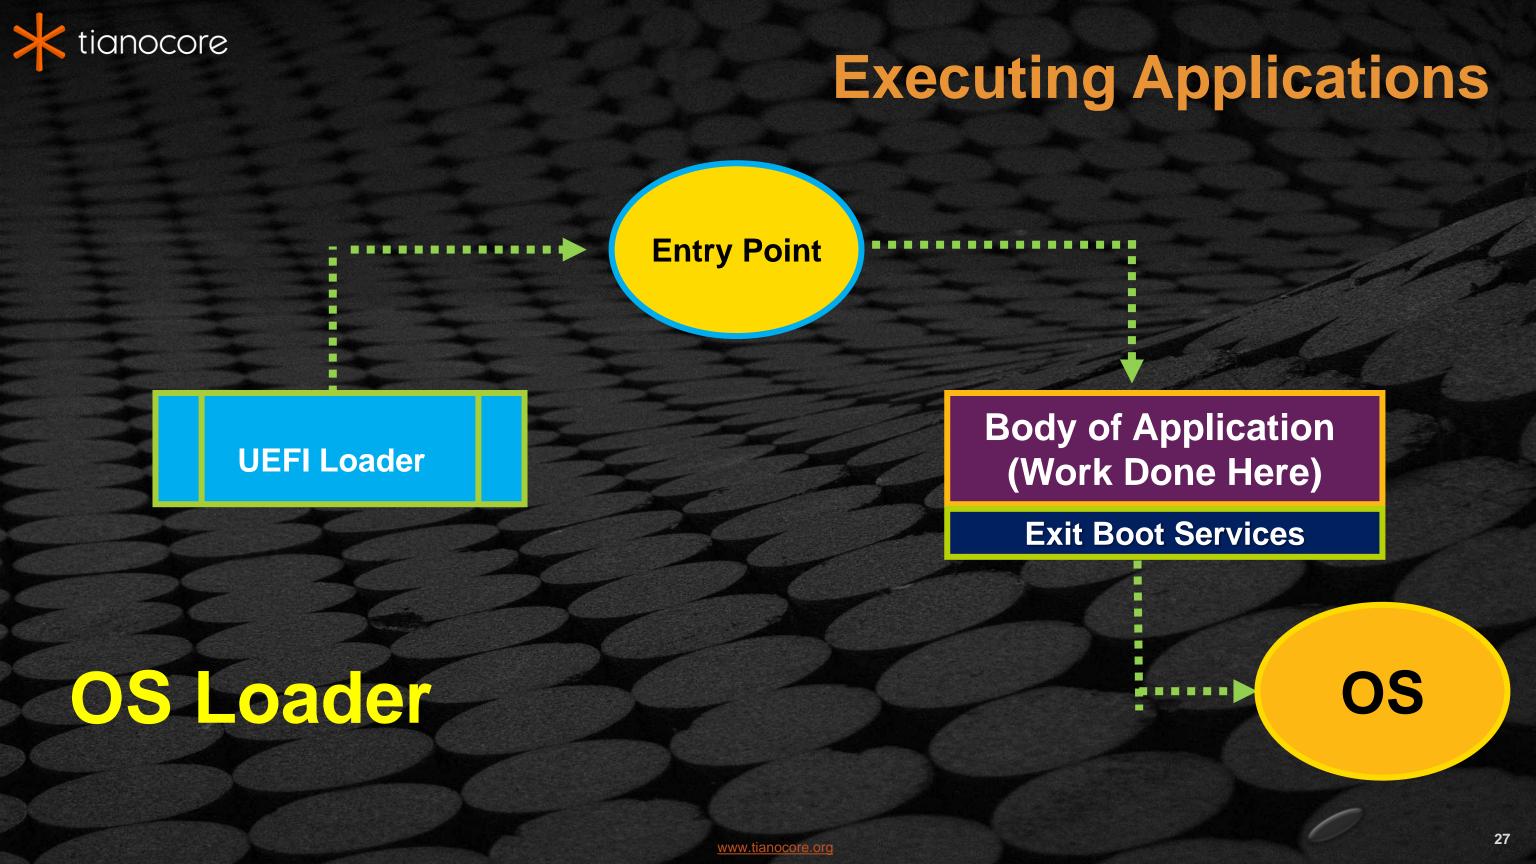

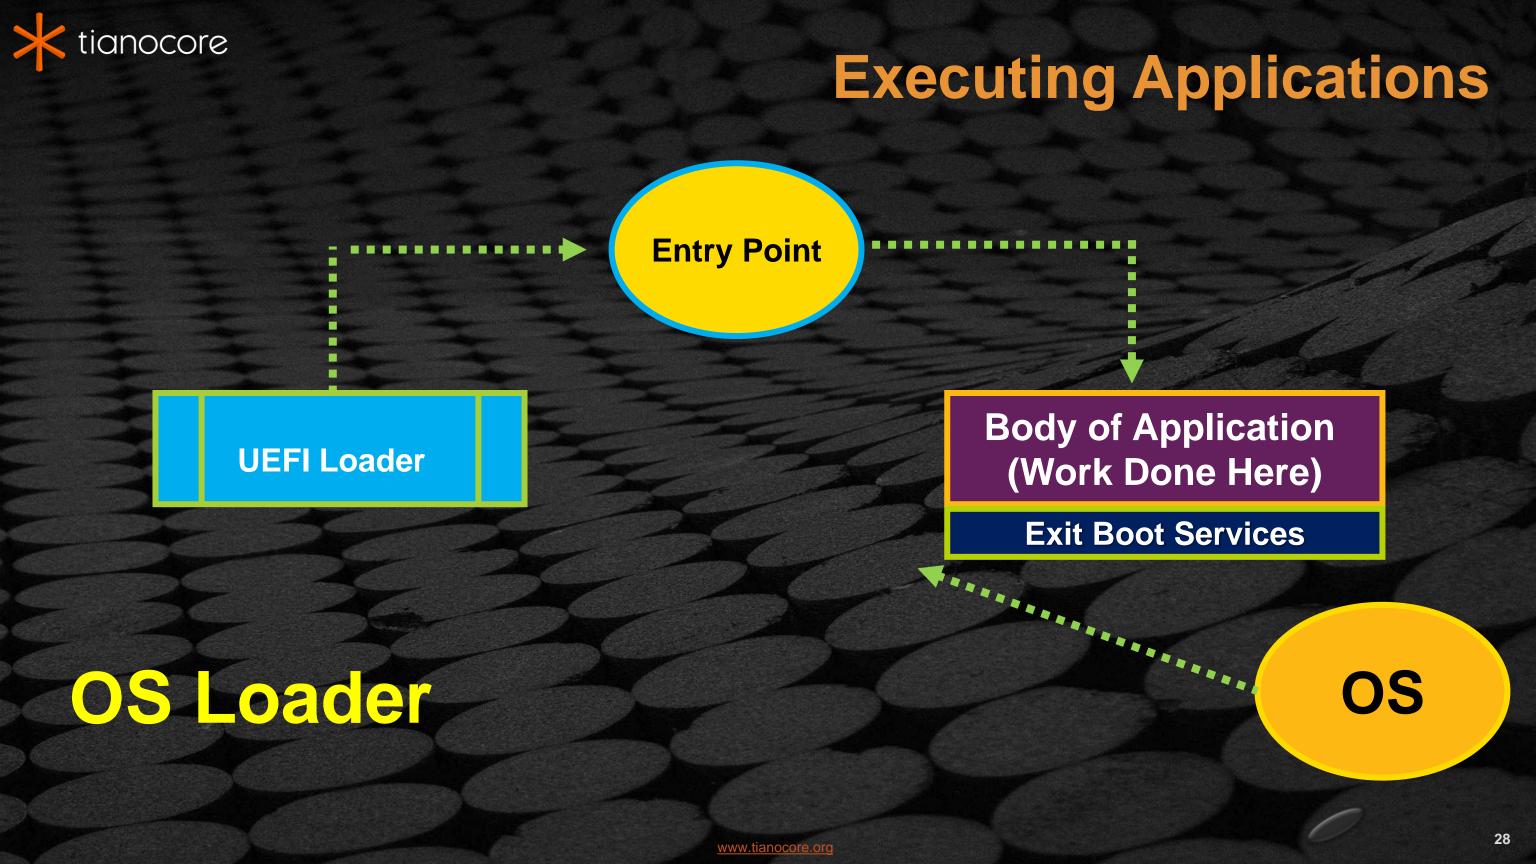

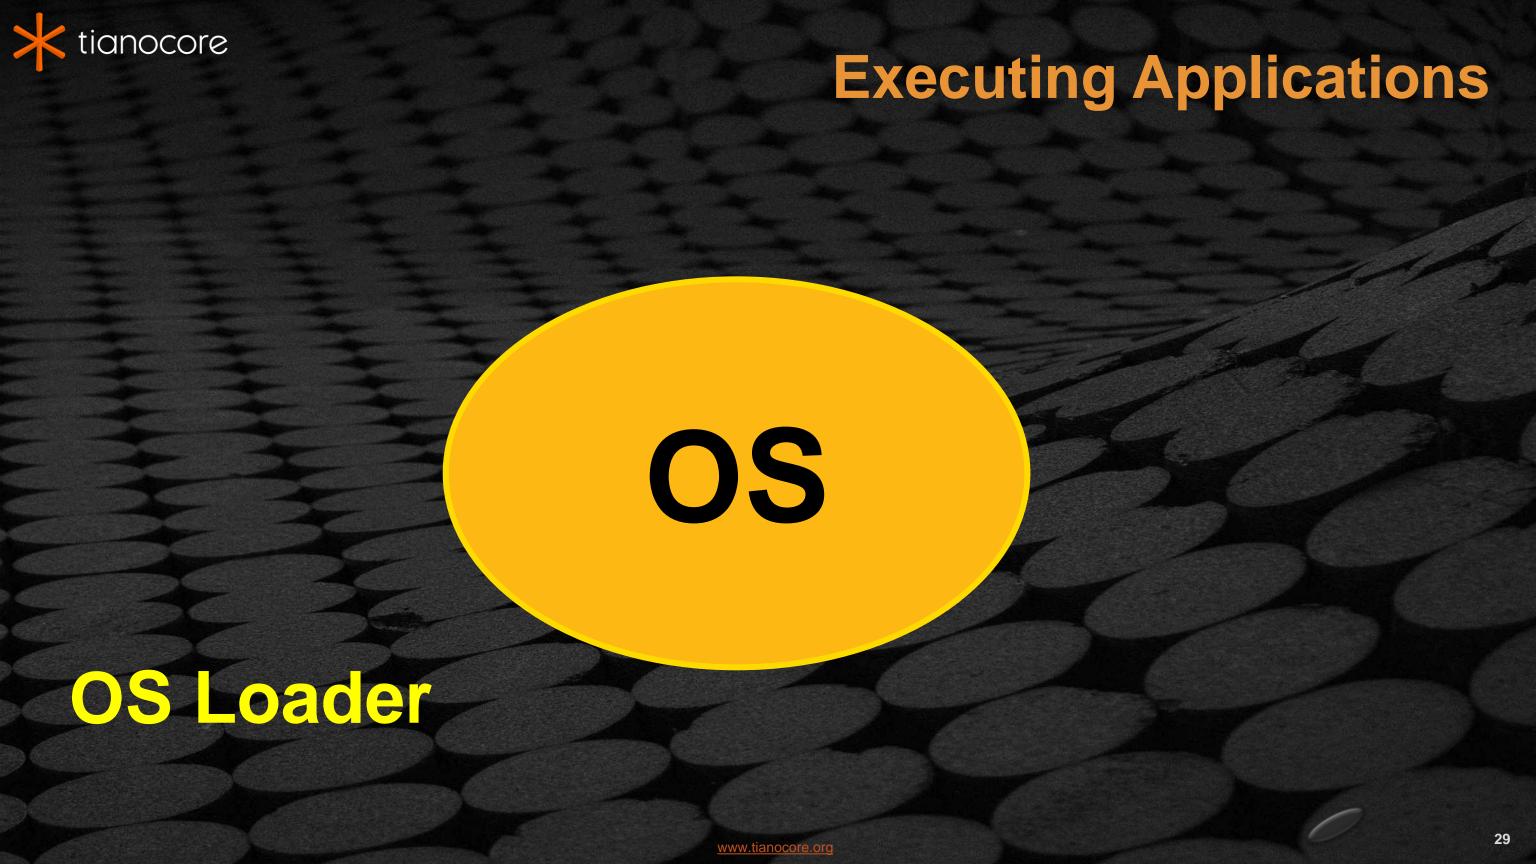



## Driver Vs. Application

	Driver	Application
Loaded by:	UEFI Loader	UEFI Loader
Interfaces available:	ALL	ALL
Consume protocols?	YES	YES
Produce protocols?		
Typically driven by?		
Typical use		



## Driver Vs. Application

	Driver	Application
Loaded by:	UEFI Loader	UEFI Loader
Interfaces available:	ALL	ALL
Consume protocols?	YES	YES
Produce protocols?	YES	NO
Typically driven by?	System	User
Typical use	Support Hardware	Any



## EDK II UEFI APPLICATIONS

How to Write a EDK II UEFI Application



#### **Application Files Placement**

- Application source files can be located anywhere in the EDK II workspace including PACKAGES\_PATH
- All code and include files go under a single directory containing the driver INF
- EDK II Sample Applications can be found here: edk2/MdeModulePkg/Application
- Typically, modules reside within a package:

```
MyWorkSpace/
edk2/
MyPkg/
Application/
MyApp/
MyApp.inf
```



#### Module .INF File

```
INFfile ::=[<Header>]
Syntax
                                          <Defines>
                                          [<BuildOptions>]
                                          [<Sources>]
                                          [<Binaries>]
                                          [<Guids>]
 INF text file example
                                          [<Protocols>]
                                          [<Ppis>]
                                          [<Packages>]
                                          [<LibraryClasses>]
                                          [<Pcds>]
                                          [<UserExtensions>]
                                          [<Depex>]
```



#### **Application INF Files [DEFINES]**

Field	Description
INF_VERSION	1.25* - Version of the INF spec.
BASE_NAME	What's the name of the application
FILE_GUID	Create a GUID for your module
MODULE_UNI_FILE	Meta-data - localization for Description & Abstract
VERSION_STRING	Version number
ENTRY_POINT	Name of the function to call
MODULE_TYPE	UEFI_APPLICATION

 $^3$ 

<sup>\*</sup> EDK II Specifications: <a href="https://github.com/tianocore/tianocore.github.io/wiki/EDK-II-Specifications">https://github.com/tianocore/tianocore.github.io/wiki/EDK-II-Specifications</a>



#### Sample INF file

```
[Defines]
 INF VERSION
                               = 0x00010005
 BASE NAME
                               = MyApplication
 MODULE UNI FILE
                               = MyFile.uni
                               = 10C75C00-30 . . .
 FILE GUID
 MODULE TYPE
                               = UEFI_APPLICATION
 VERSION STRING
                               = 1.0
 ENTRY_POINT
                               = UefiMain
[Sources]
 MyFile.c
[Packages]
 MdePkg/MdePkg.dec
[LibraryClasses]
 UefiApplicationEntryPoint
[Guids]
[Ppis]
[Protocols]
```



### Sample INF file

```
[Defines]
 INF_VERSION
                               = 0x00010005
 BASE NAME
                               = MyApplication
 MODULE UNI FILE
                               = MyFile.uni
                               = 10C75C00-30 . . .
 FILE_GUID
 MODULE TYPE
                               = UEFI_APPLICATION
 VERSION STRING
                               = 1.0
 ENTRY POINT
                               = UefiMain
[Sources]
 MyFile.c
[Packages]
 MdePkg/MdePkg.dec
[LibraryClasses]
 UefiApplicationEntryPoint
[Guids]
[Ppis]
```



### **BUILDING AN APPLICATION**


Platform .DSC references .INF

### Runs:

"Build" for the entire platform

OR

"Build" in the application's directory

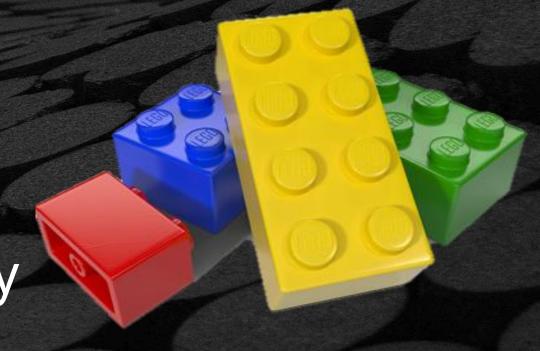



### Sample Application 'C' file

```
#include <Uefi.h>
#include <Library/UefiApplicationEntryPoint.h>
EFI STATUS
EFIAPI
UefiMain (
                       ImageHandle,
  IN EFI HANDLE
  IN EFI_SYSTEM_TABLE
                       *SystemTable
  return EFI_SUCCESS;
```



### Sample Application 'C' file


```
#include <Uefi.h>
#include <Library/UefiApplicationEntryPoint.h>
EFI STATUS
FFTADT
UefiMain
                       ImageHandle,
  IN EFI HANDLE
  IN EFI_SYSTEM_TABLE
                       *SystemTable
  return EFI_SUCCESS;
```



## **UEFI** Application Vs. EADK Application

EDK II Application Development Kit includes the Standard C Libraries in UEFI Shell Applications

Off the shelf "C" application Converted to UEFI application

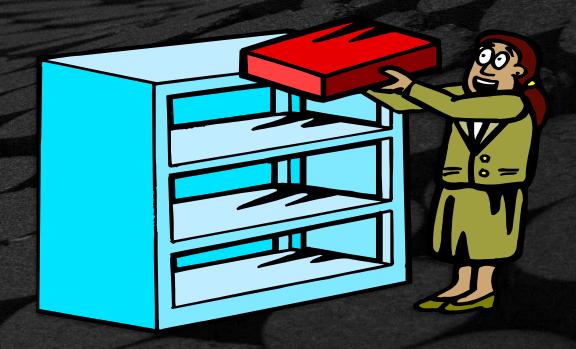



### Sample INF file using EDK II EADK

```
[Defines]
  INF_VERSION
  BASE NAME
  FILE GUID
 MODULE TYPE
  VERSION STRING
  ENTRY POINT
[Sources]
 MyFile.c
[Packages]
 StdLib/StdLib.dec
  ShellPkg/ShellPkg.dec
 MdePkg/MdePkg.dec
[LibraryClasses]
  LibC
  LibStdio
```

```
= 0x00010005
= MyApplication
= 10C75C00-30 . .
= UEFI_APPLICATION
= 1.0
= ShellCEntryLib
```



### Sample INF file using EDK II EADK

```
[Defines]
 INF VERSION
                            = 0x00010005
 BASE NAME
                            = MyApplication
 FILE GUID
                            = 10C75C00-30
 MODULE TYPE
                            = UEFI APPLICATION
 VERSION STRING
                            = 1.0
                            = ShellCEntryLib
 ENTRY POINT
Sources
 MyFile.c
[Packages]
 StdLib/StdLib.dec
 ShellPkg/ShellPkg.dec
 MdePkg/MdePkg.dec
[LibraryClasses]
 LibC
 LibStdio
```



### Sample Application 'C' file Using EDK II EADK

This sample looks a lot like actual "C" source.

```
#include <stdio.h>
int
Main (
    IN int Argc,
    IN char **Argv
    )
{
    return 0;
}
```



### **Driver Files Placement**

- Driver source code can go anywhere in the EDK II workspace
- All code and include files go under a single directory containing an INF
- Good example of UEFI Drivers can be found here: edk2/MdeModulePkg/Bus/ScsiDiskDxe
- Typically, Driver modules reside within a package:

```
MyWorkSpace/
edk2/
MyPkg/
Include/
MyDriver.h
MyDriver.inf
```



# Driver INF Files: [DEFINES]

Field	Description
INF_VERSION	1.25* - Version of the INF spec.
BASE_NAME	What's the name of the driver
FILE_GUID	Create a GUID for your module
MODULE_UNI_FILE	Meta-data - localization for Description & Abstract
VERSION_STRING	Version number
ENTRY_POINT	Name of the function to call
MODULE_TYPE	UEFI_DRIVER, DXE_DRIVER, PEIM, or others



## Changes for a UEFI Driver Module

Applications can be converted to a driver

But ... It remains in memory after it runs



- Driver Binding Protocol
- Component Name2 Protocol (recommended)

DXE/PEIM/other Driver requirements







### Sample INF file

```
[Defines]
  INF_VERSION
                               = 0x00010005
  BASE NAME
                               = MyApplication
  FILE GUID
                               = 10C75C00-30
 MODULE TYPE
                               = UEFI DRIVER
 VERSION STRING
                               = 1.0
  ENTRY POINT
                               = UefiMain
[Sources]
 MyFile.c
[Packages]
 MdePkg/MdePkg.dec
[LibraryClasses]
 UefiDriverEntryPoint
[Guids]
[Ppis]
[Protocols]
```



### INF Usage Fields – DIST files

### Optional UEFI Spec – Package Distribution

Usage Fields used by Build tools for creating the .Dist files for binary modules

- [GUID]
  - [PCD]
  - [PROTOCOL]
    - [PPIS]
- 1 Usage Block "##" After the entry
- n Usage Blocks "##" Precede the entry



#### **Usage Key Word**

- ## UNDEFINED
- ## CONSUMES
- ## SOMETIMES CONSUMES
- ## PRODUCES
- ## SOMETIMES PRODUCES
- ## TO START
- ## BY\_START
- ## NOTIFY

**UEFI** Protocol



### INF File Usage Block examples

```
[Guids]
 ## SOMETIMES_PRODUCES ## Variable:L"ConInDev"
 ## SOMETIMES_CONSUMES ## Variable:L"ConInDev"
 ## SOMETIMES PRODUCES ## Variable:L"ConOutDev"
 ## SOMETIMES_CONSUMES ## Variable:L"ConOutDev"
 ## SOMETIMES PRODUCES ## Variable:L"ErrOutDev"
 ## SOMETIMES CONSUMES ## Variable:L"ErrOutDev"
 gEfiGlobalVariableGuid
                                      ## SOMETIMES_CONSUMES ## GUID # used with a Vendor-Defined
 gEfiVTUTF8Guid
 gEfiVT100Guid
                                      ## SOMETIMES_CONSUMES ## GUID # used with a Vendor-Defined
 gEfiVT100PlusGuid
                                      ## SOMETIMES CONSUMES ## GUID # used with a Vendor-Defined
                                      ## SOMETIMES_CONSUMES ## GUID # used with a Vendor-Defined
 gEfiPcAnsiGuid
                                      ## SOMETIMES CONSUMES ## GUID # used with a Vendor-Defined
 gEfiTtyTermGuid
 gEdkiiStatusCodeDataTypeVariableGuid ## SOMETIMES CONSUMES ## GUID
```

**Example:** TerminalDxe.inf



### INF File Usage Block examples


```
[Protocols]
 gEfiSerialIoProtocolGuid
                                       ## TO START
 ## BY START
 ## TO START
 gEfiDevicePathProtocolGuid
 gEfiSimpleTextInProtocolGuid
                                       ## BY START
 gEfiSimpleTextInputExProtocolGuid
                                       ## BY_START
 gEfiSimpleTextOutProtocolGuid
                                       ## BY_START
[Pcd]
 gEfiMdePkgTokenSpaceGuid.PcdDefaultTerminalType
                                                            ## SOMETIMES CONSUMES
 gEfiMdeModulePkgTokenSpaceGuid.PcdErrorCodeSetVariable
                                                             ## CONSUMES
```

Example: TerminalDxe.inf



(7)

https://github.com/tianocore/edk2/MdeModulePkg/Universal/Disk/DiskloDxe

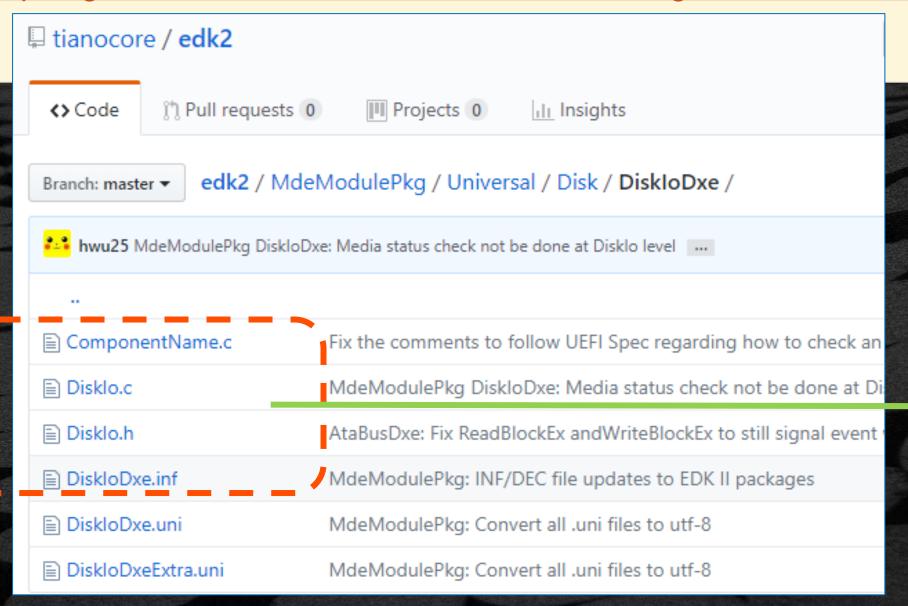

Driver Binding
Supported
Start
Stop





https://github.com/tianocore/edk2/.../Disk/DiskloDxe

**Entry Point** 

#### "C" File

```
EFI STATUS
EET\overline{\Lambda}DT
InitializeDiskIo (
                             ImageHandle,
  IN EFT HANDLE
  IN EFI_SYSTEM_TABLE
                             *SystemTable
  <u>Status</u> = EfiLibInstallDriverBindingComponentName2
              ImageHandle,
              SystemTable,
              &gDiskIoDriverBinding,
              ImageHandle,
              &gDiskIoComponentName,
              &gDiskIoComponentName2
  ASSERT EFI ERROR (Status);
  return Status;
```

#### **INF** File

[Defines]

ENTRY\_POINT

= InitializeDiskIo





https://github.com/tianocore/edk2/.../Disk/DiskloDxe

Supported

#### "C" File

```
EFI STATUS
DiskIoDriverBindingSupported (
                                  ⊀This,
  IN EFI_DRIVER_BINDING_PROTOCOL
 IN EFI HANDLE
                                  ControllerHandle,
 IN EFI_DEVICE_PATH_PROTOCOL
                                   *RemainingDevicePath
OPTIONAL
  Status = gBS->OpenProtocol (
   ControllerHandle,
      &gEfiBlockIoProtocolGuid,
      (VUID **) &BIOCKIO,
     This->DriverBindingHandle,
      ControllerHandle,
      EFI_OPEN_PROTOCOL_BY_DRIVER
```

#### **INF** File

[Protocols]

gEfiBlockIoProtocolGuid ## TO START





https://github.com/tianocore/edk2/.../Disk/DiskloDxe

Start

#### "C" File

```
EFI STATUS
\mathsf{EET}\mathsf{ADT}
 DiskIoDriverBindingStart (
  IN ELT_DKIAEK RINDING LKOLOCOF
                                    ≺This,
  IN EFI HANDLE
                                    ControllerHandle,
  IN EFI_DEVICE_PATH_PROTOCOL
                                    *RemainingDevicePath
OPTIONAL
  if (Instance->BlockIo2 != NULL) {
    Status = gBS->InstallMultipleProtocolInterfaces (
    &ControllerHandle,
    &gEfiDiskIoProtocolGuid, &Instance->DiskIo,
    &gEfiDiskIo2ProtocolGuid, &Instance->DiskIo2,
    NULL
    );
```


#### **INF** File

[Protocols]

gEfiDiskIoProtocolGuid ## BY\_START
gEfiDiskIo2ProtocolGuid ## BY\_START



### DXE Driver Example - PlatformInfoDxe

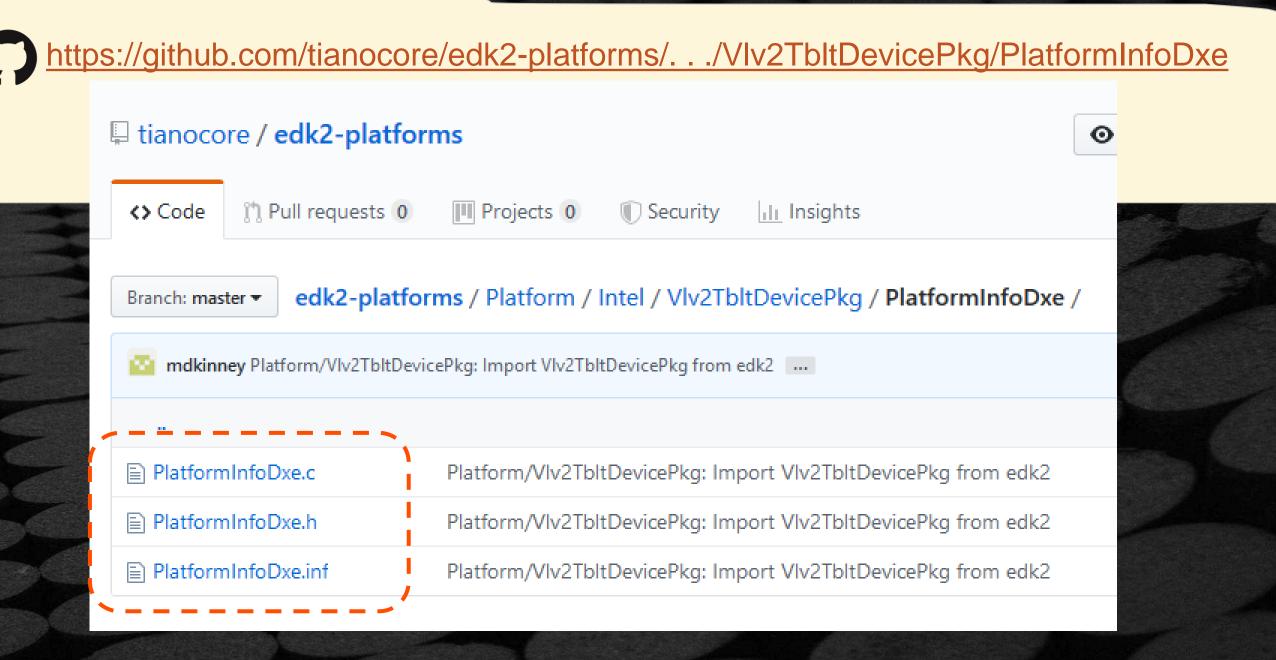



### DXE Driver Example – PlatformInfoDxe

0

https://github.com/tianocore/edk2-platforms/ PlatformInfoDxe

### **Entry Point**

#### "C" File


```
#include "PlatformInfoDxe.h"
EFI STATUS
EFIAPI
PlatformInfoInit (
  IN EFI HANDLE
                       ImageHandle,
  IN EFI SYSTEM TABLE
                       *SystemTable
  return Status;
```

#### **INF** File

Notice the MODULE TYPE, C function Entry point and the [Depex] differences in the INF file



## PEI Driver (PEIM) Example - CpuloPei

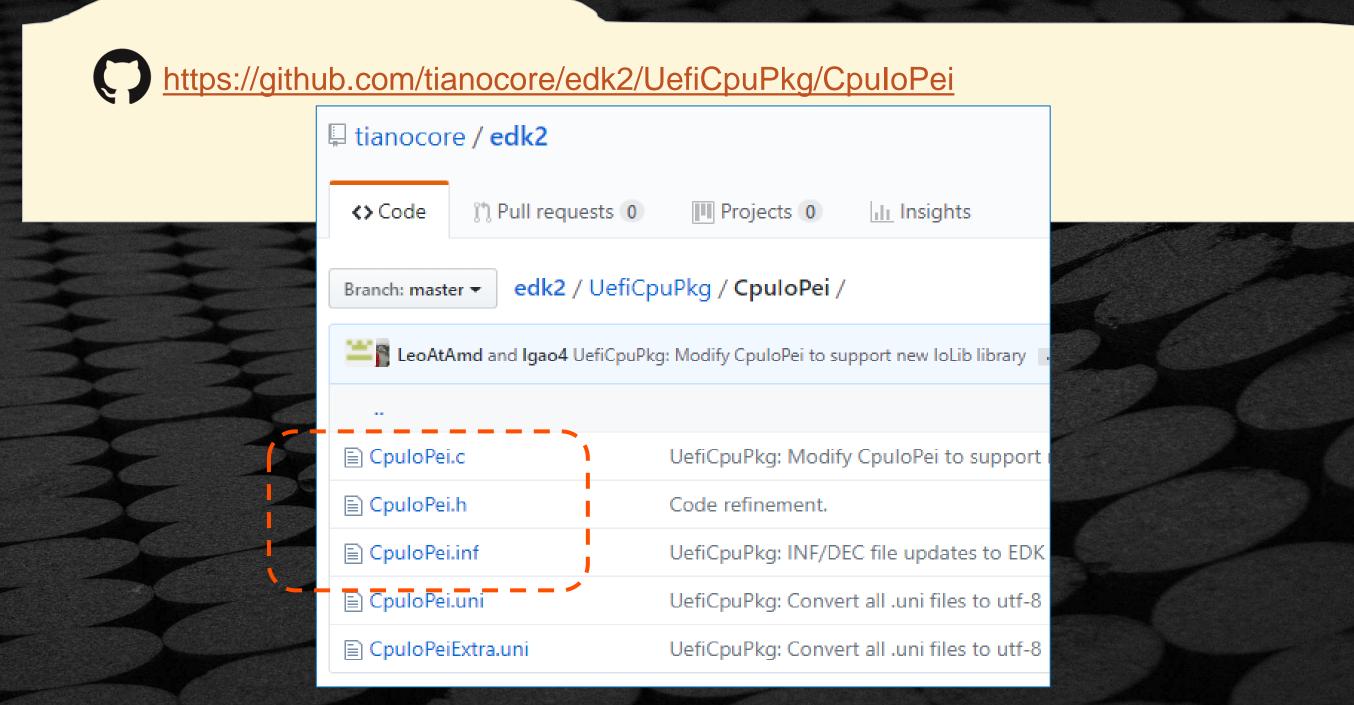



### PEI Driver (PEIM) Example – CpuloPei



https://github.com/tianocore/edk2/UefiCpuPkg/CpuIoPei

**Entry Point** 

#### "C" File

```
#include "CpuIoPei.h"
    //• • •

EFI_STATUS
EFIAPI
CpuIoInitialize (
    IN EFI_PEI_FILE_HANDLE     FileHandle,
    IN CONST EFI_PEI_SERVICES     **PeiServices
    )
{
    EFI_STATUS     Status;
    //• • •
    return EFI_SUCCESS;
}
```

#### **INF** File



# LESSON OBJECTIVE

- What is a EDK II Module
- Use EDK II libraries to write UEFI apps/drivers
- How to Define a UEFI application
- Differences between UEFI App / Drivers INF file







# RETURN TO MAIN TRAINING PAGE



Return to Training Table of contents for next presentation link

