

## ation bold MPS




## **Installation Guide**

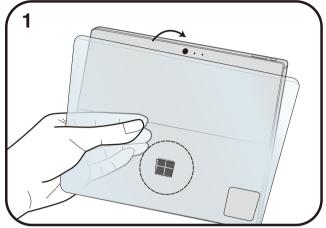


Place the PET tray on the back of your Surface Pro & ensure the square hole on the bottom of the tray is aligned with the Windows logo.

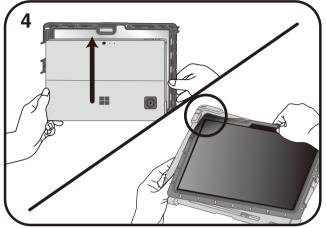


Surface Pro is installed into the hard frame and silicone cover. (Refer to the other installation guide)

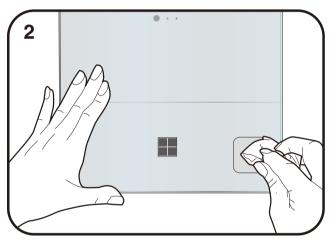

Clean the Surface Pro (square-shaped hole) with the included alcohol pad. A clean and dry surface is required for the VHB tape to adhere properly.

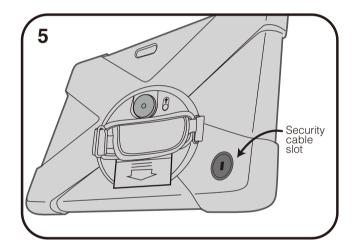

Plug the security cable into the security cable slot.

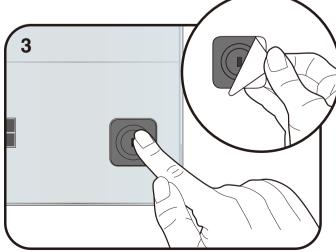

Remove the VHB tape backing and apply the security plate directly onto the square-shaped opening on the PET tray. Remove the PET tray, then press the plate with a heavy object for 48 hours to allow the adhesive to cure.