

## ation bold MPS


## **Installation Guide**

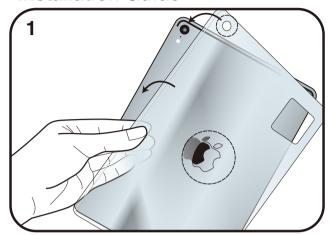


Place the PET tray on the back of your iPad & ensure the hole on the bottom of the tray is aligned with the Apple logo.

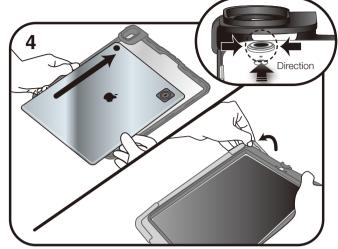

The iPad is installed into the hard frame and silicone cover. (Refer to the other installation guide)

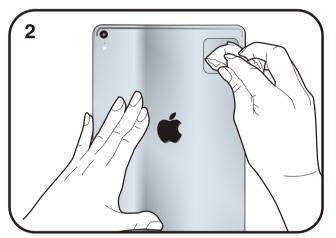


Clean the iPad (square-shaped hole) with the included alcohol pad. A clean and dry surface is required for the VHB tape to adhere properly.

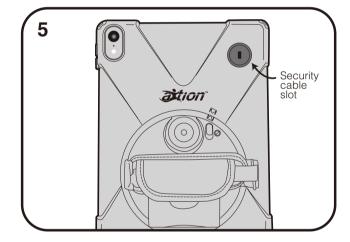

6 and the second second

Plug the security cable into the security cable slot.

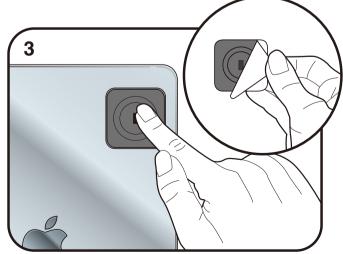

Remove the VHB tape backing and apply the security plate directly onto the square-shaped hole. With a heavy object press the plate for 48 hours to allow the adventive to cure.