

TT201202 - FUP - Change Graphic Page Size

1. There are a few ways to change the graphic page size in FUP. First, let's take a look at the controller configuration. Right click on the controller, click "Configuration", "HTML"

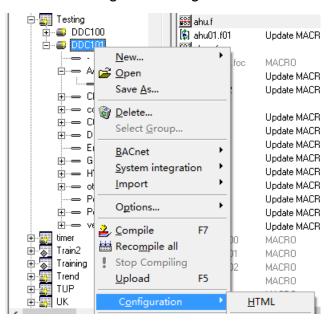

2. Double click on the controller, click "Graphic". This is the standard graphic page size for all the graphic pages in the controller. If you add a new graphic page, this default size will be used

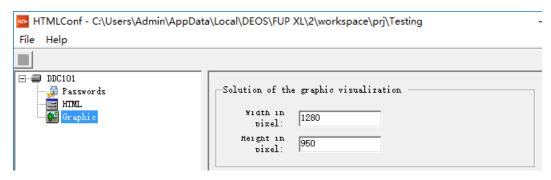

- 3. Assuming you screen resolution is 1920x1080 and without the technical and/or custom tree. Then the suggested standard graphic page size is 1890x890, which works well for both OPENweb and OPENview HTML5 in Chrome
- 4. Now, when you add a new graphic in your FUP page, the default page size 1890x890 will be used, but the exiting graphics will not be changed.




5. Open the other graphic page, and click the "Apply Project Dimension" button if you want to reset the page size to default size

Project width dim	Project height di	
1890	890	
Drawing area width:	Drawing area height:	
1280	950	Apply project dimen


6. If you use OPENweb in full screen mode and without the tree, then the suggested size is 1900x950. Please note that the size also depends on your Windows version, screen settings and OPENweb version and settings




7. To change the size of a particular page, open the graphic page, click "Extra", "Title"



8. Go to "Expanded" tab, change the "Drawing area width" and "height", and click "OK"

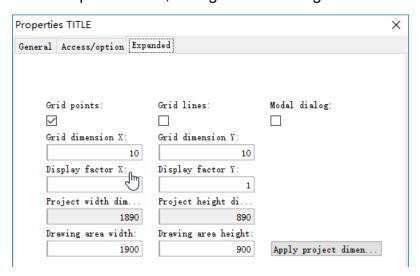

9. Sometimes you have a small graphic page, and you want to set the page size to the exact same size of your graphic.

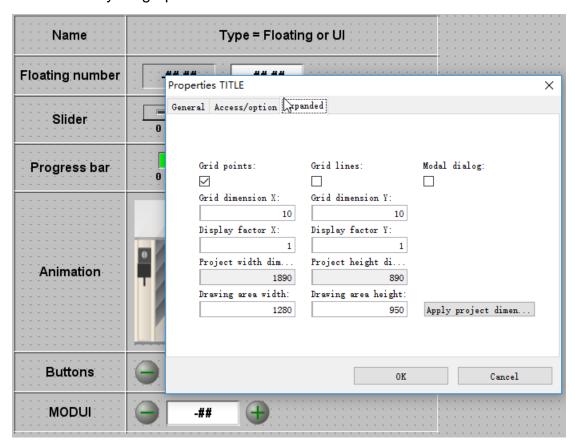

10. An easy way to do it automatically is the check the "Modal Dialog" in title properties, and then click OK



11. Open the title properties again, and now the size is set automatically. Remember to un-check the "Modal Dialog", otherwise you'll not be able to see this graphic page in the tree

