
## QUIK-SHIELD

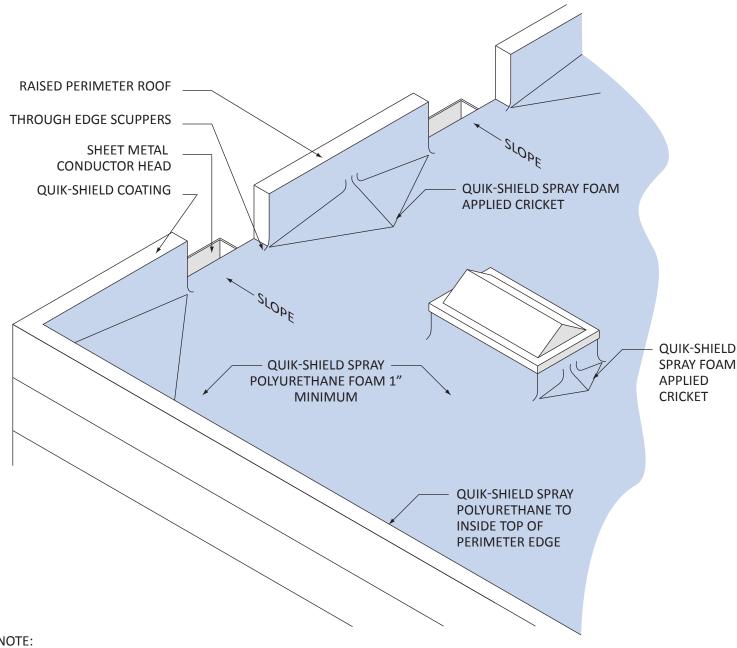

## NOTE:

- 1- SADDLES SHOULD BE LOCATED BETWEEN THROUGH-EDGE OR WALL SCUPPERS & CRICKETS ON THE HIGH SIDE OF CURBS
- 2- RAISED PERIMETER EDGES WHERE TAPERED CRICKETS ARE USED NECESSSITATE THE SPECIFICATION OF RELATIVELY WIDE (TALL) DIMENSIONAL LUMBER OR THE ERECTION OF FRAMED WALLS.

## **SLOPED ROOF AND CRICKETS**



**SWD** Urethane

Mesa, Arizona 800-828-1394 swdurethane.com