
QUIK-SHIELD

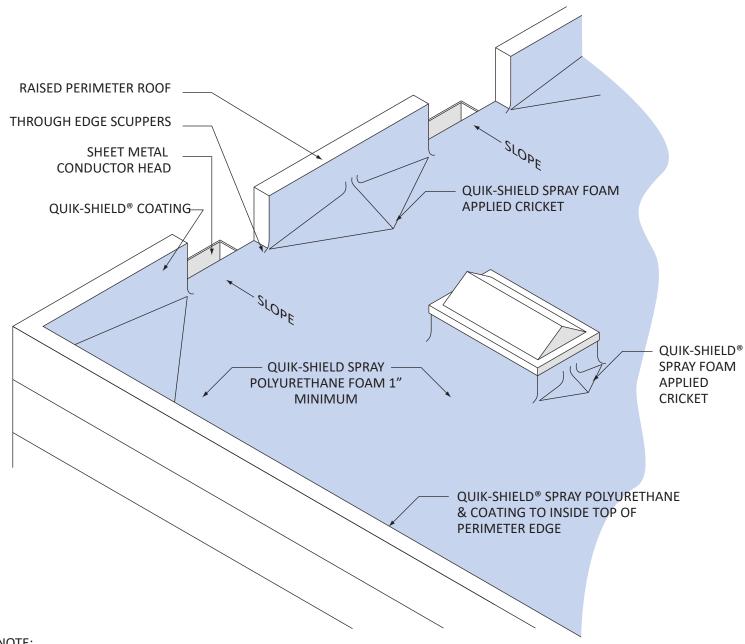

NOTE:

- 1- SADDLES SHOULD BE LOCATED BETWEEN THROUGH-EDGE OR WALL SCUPPERS & CRICKETS ON THE HIGH SIDE OF CURBS
- 2- RAISED PERIMETER EDGES WHERE TAPERED CRICKETS ARE USED NECESSSITATE THE SPECIFICATION OF RELATIVELY WIDE (TALL) DIMENSIONAL LUMBER OR THE ERECTION OF FRAMED WALLS.

SLOPED ROOF AND CRICKETS