




You can do it ,do it like me . JTAG download .JIC to EPCS16

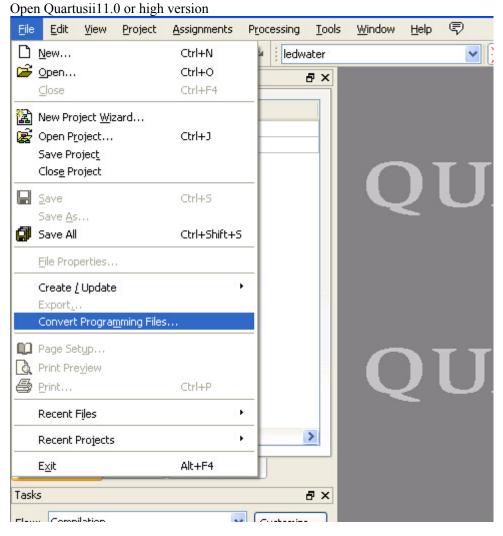


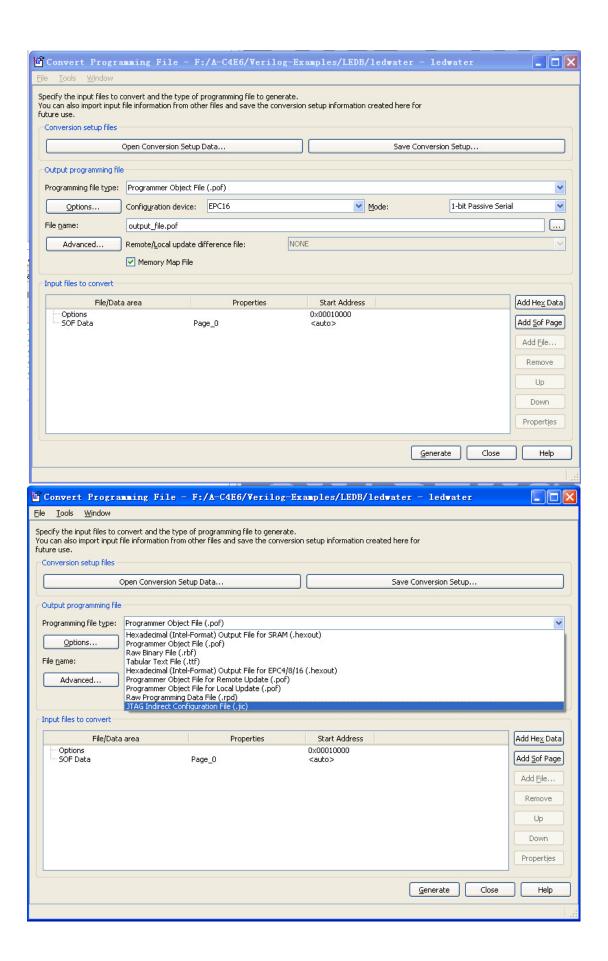


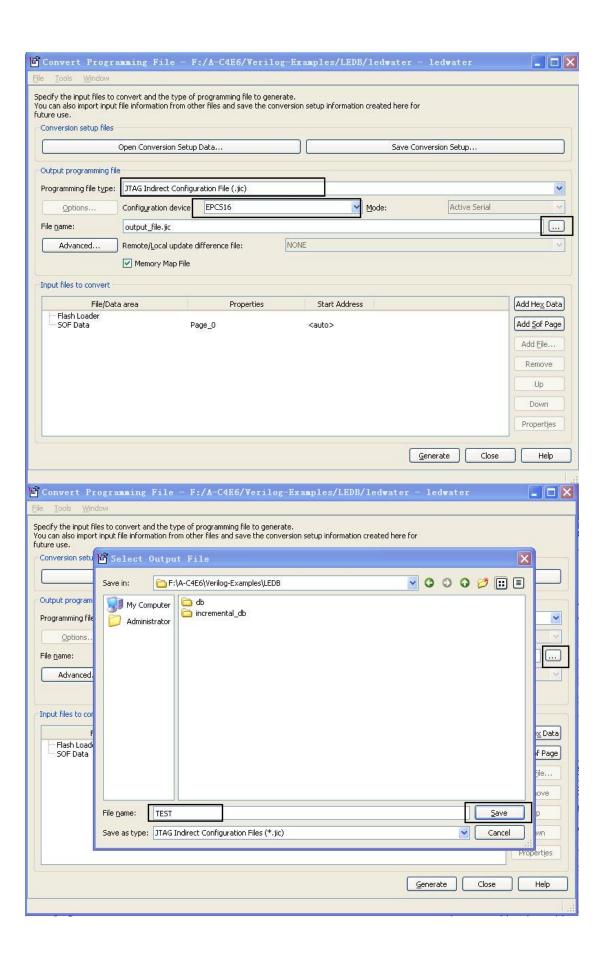


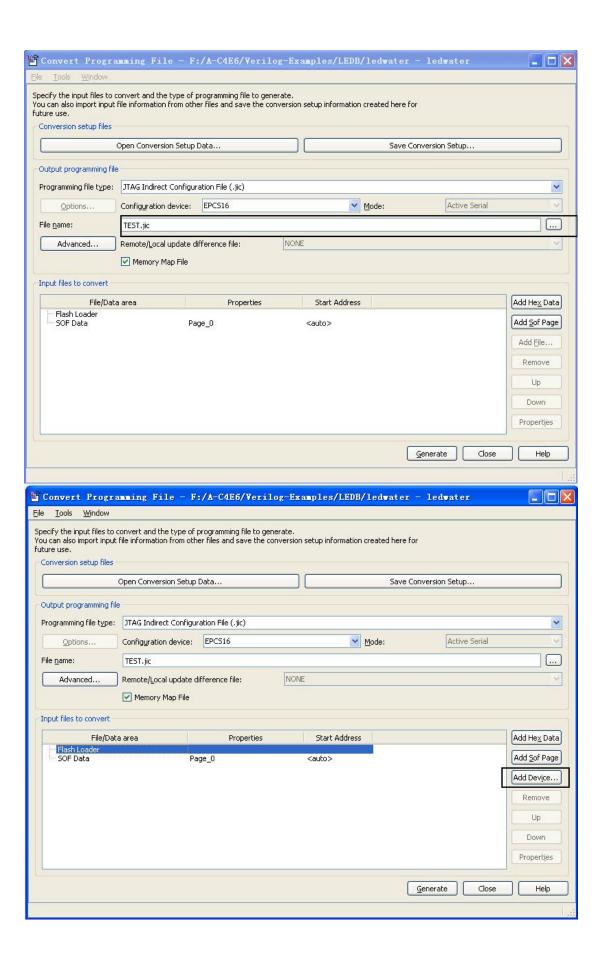


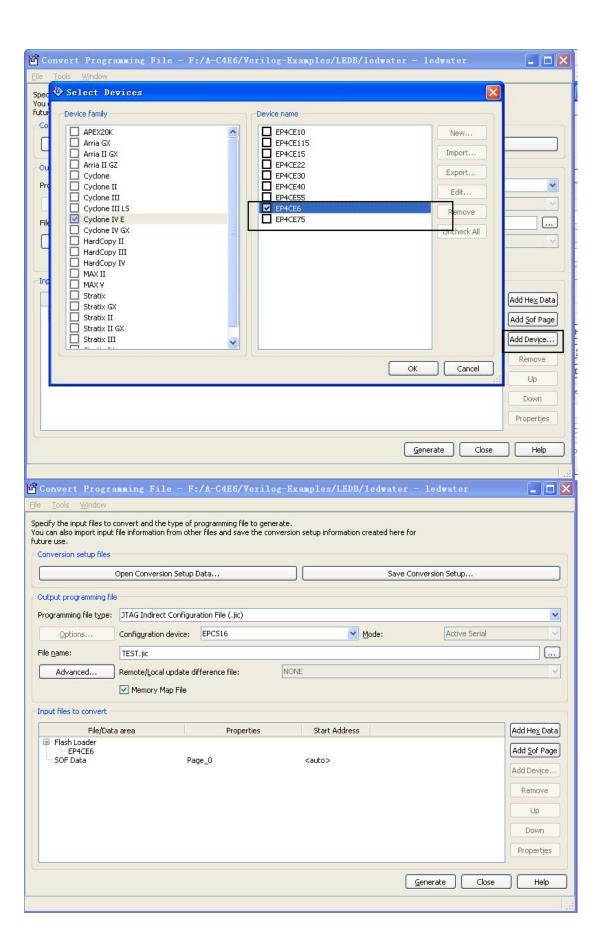


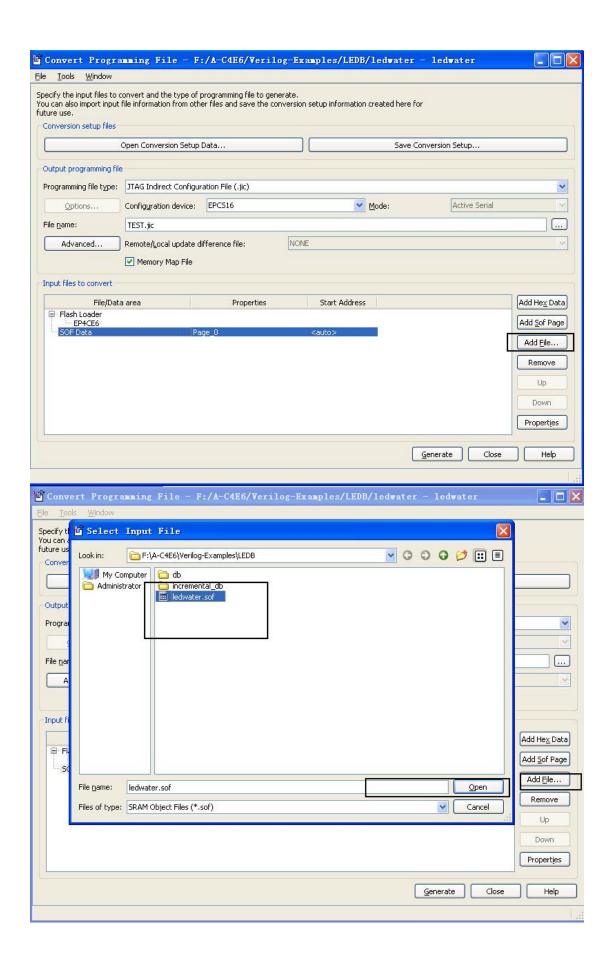


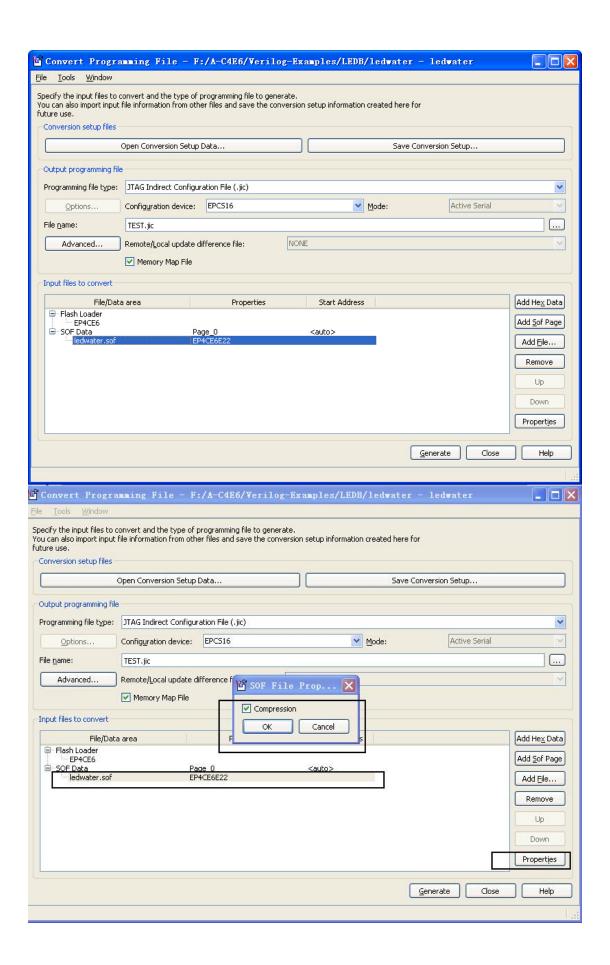

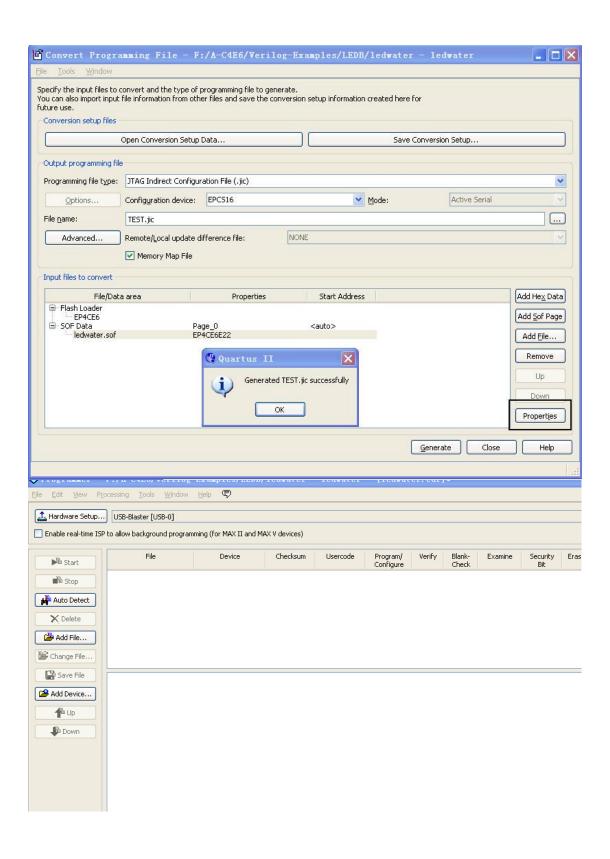

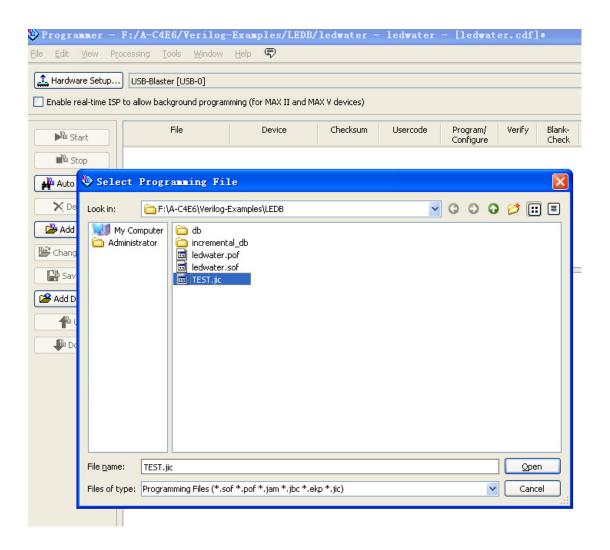

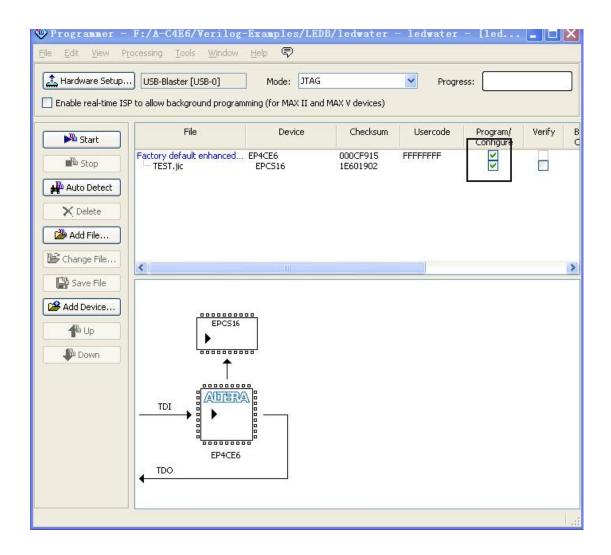

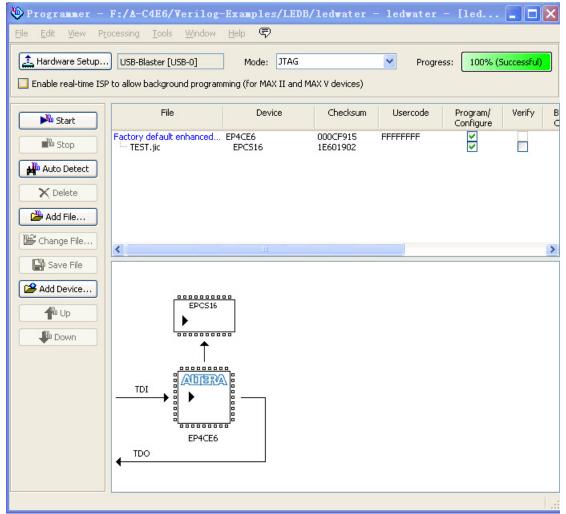

You can power off and power on . Or press K1 REconfiger FPGA. . Will be ok .