


FRONT FENDER FRONT APRON (ASSY)

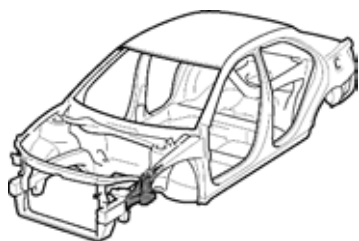

F25707A

With the radiator support removed.

Symbol meaning

REMOVAL

△ △ △ : Remove Weld Points

⊙ : Cut with disc sander, etc.


INSTALLATION

⊙ M I : MIG Plug Weld

⊙ : Tack Weld

F25707B


REMOVAL-INSTALLATION

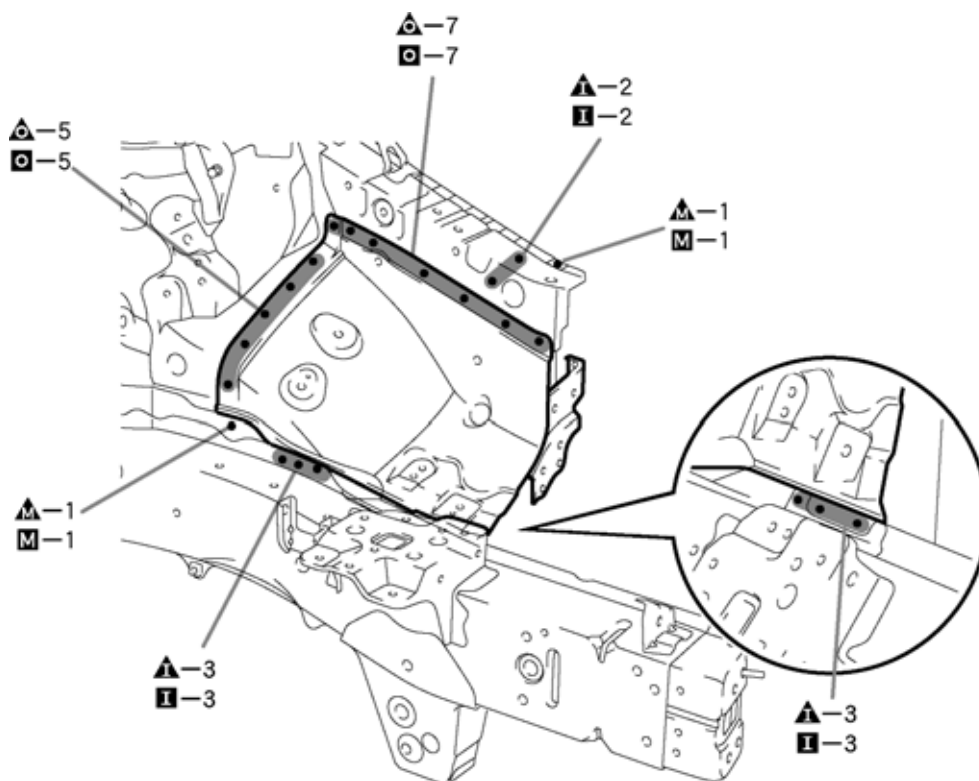

F25707

INSTALLATION POINT

- 1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- 2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)

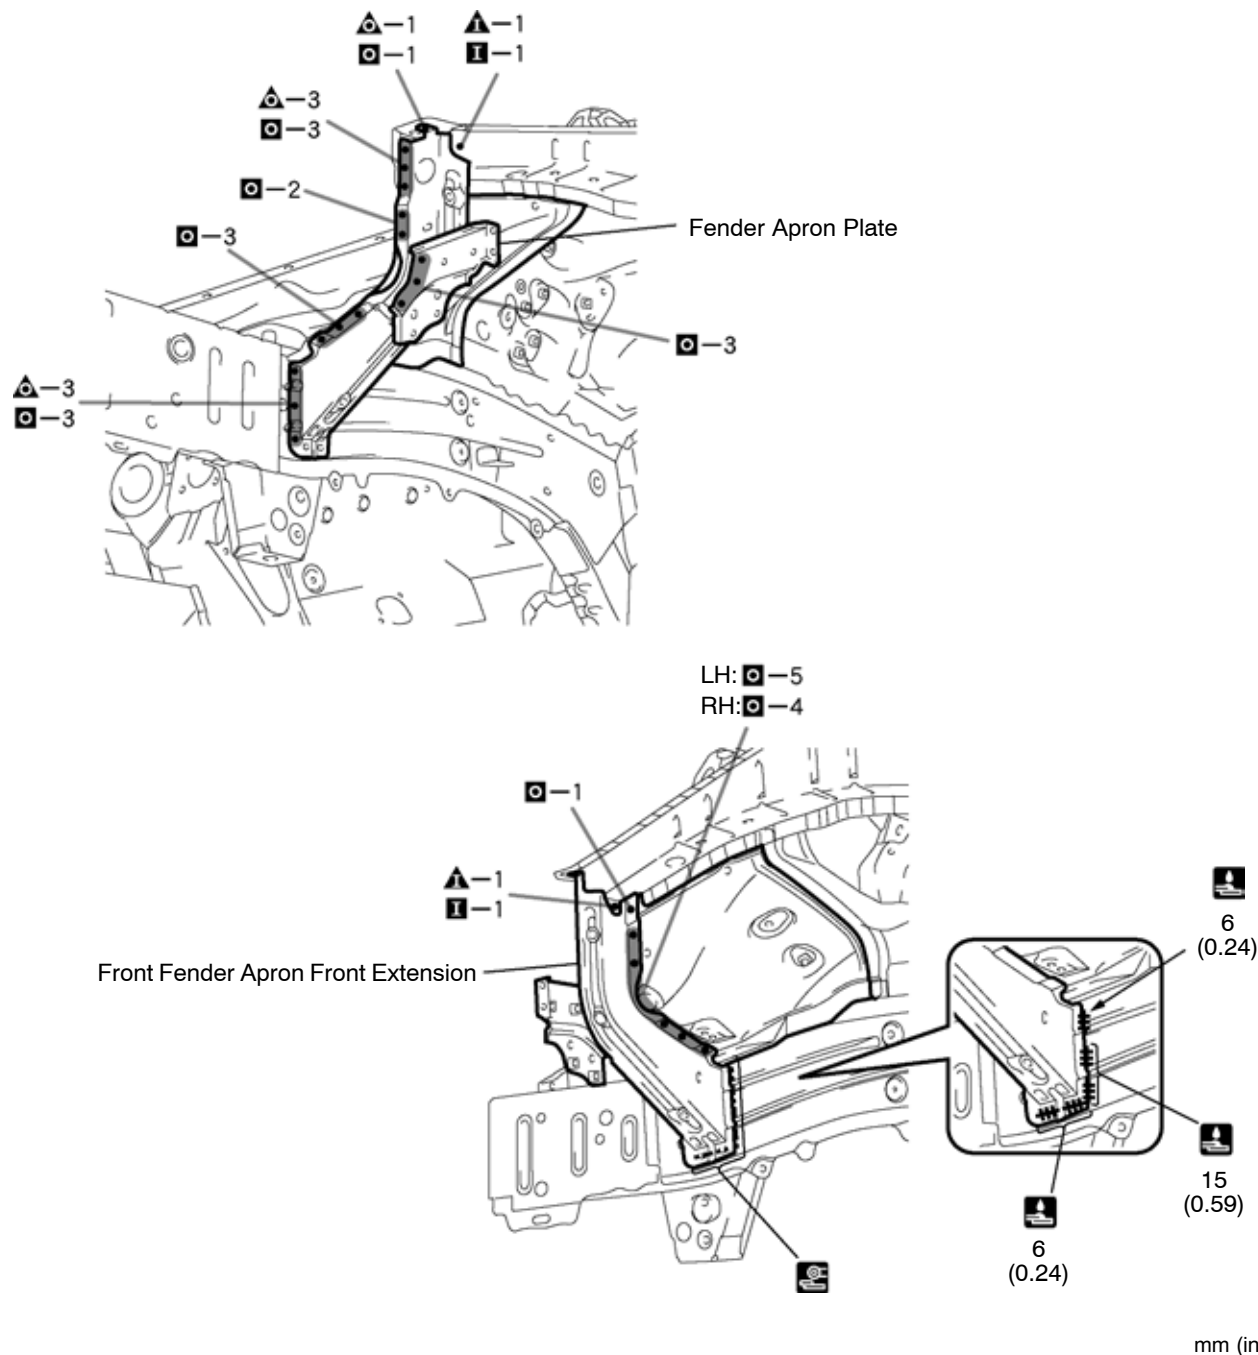

F25708

REMOVAL POINT

- 1 Remove the front fender apron front extension at the same time.

INSTALLATION POINT

- 1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- 2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- 3 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint-coating)
- 4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.