


RADIATOR SUPPORT UPPER BRACE (ASSY): TMC made

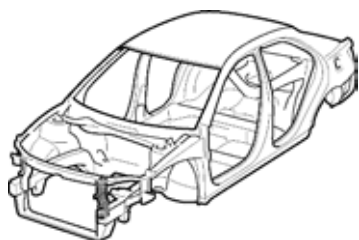

F25702A

With the radiator upper support removed.

Symbol meaning

REMOVAL


: Remove Weld Points

INSTALLATION

: MIG Plug Weld

F25702B

REMOVAL-INSTALLATION

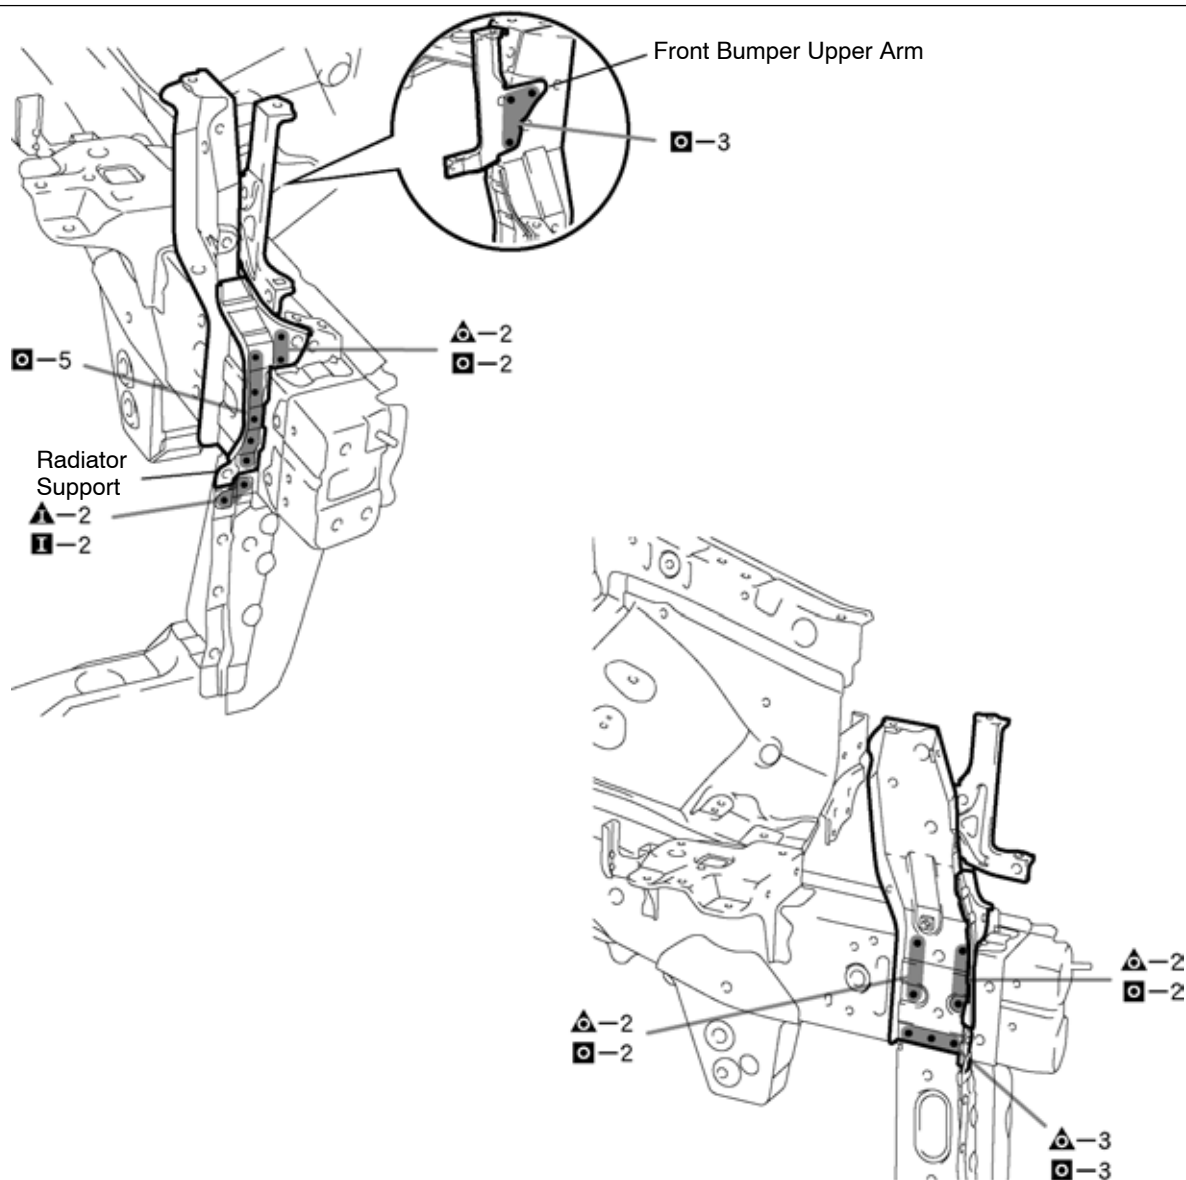


F25702

REMOVAL POINT

- 1 Remove the radiator support at the same time.

INSTALLATION POINT

- 1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- 2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- 3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

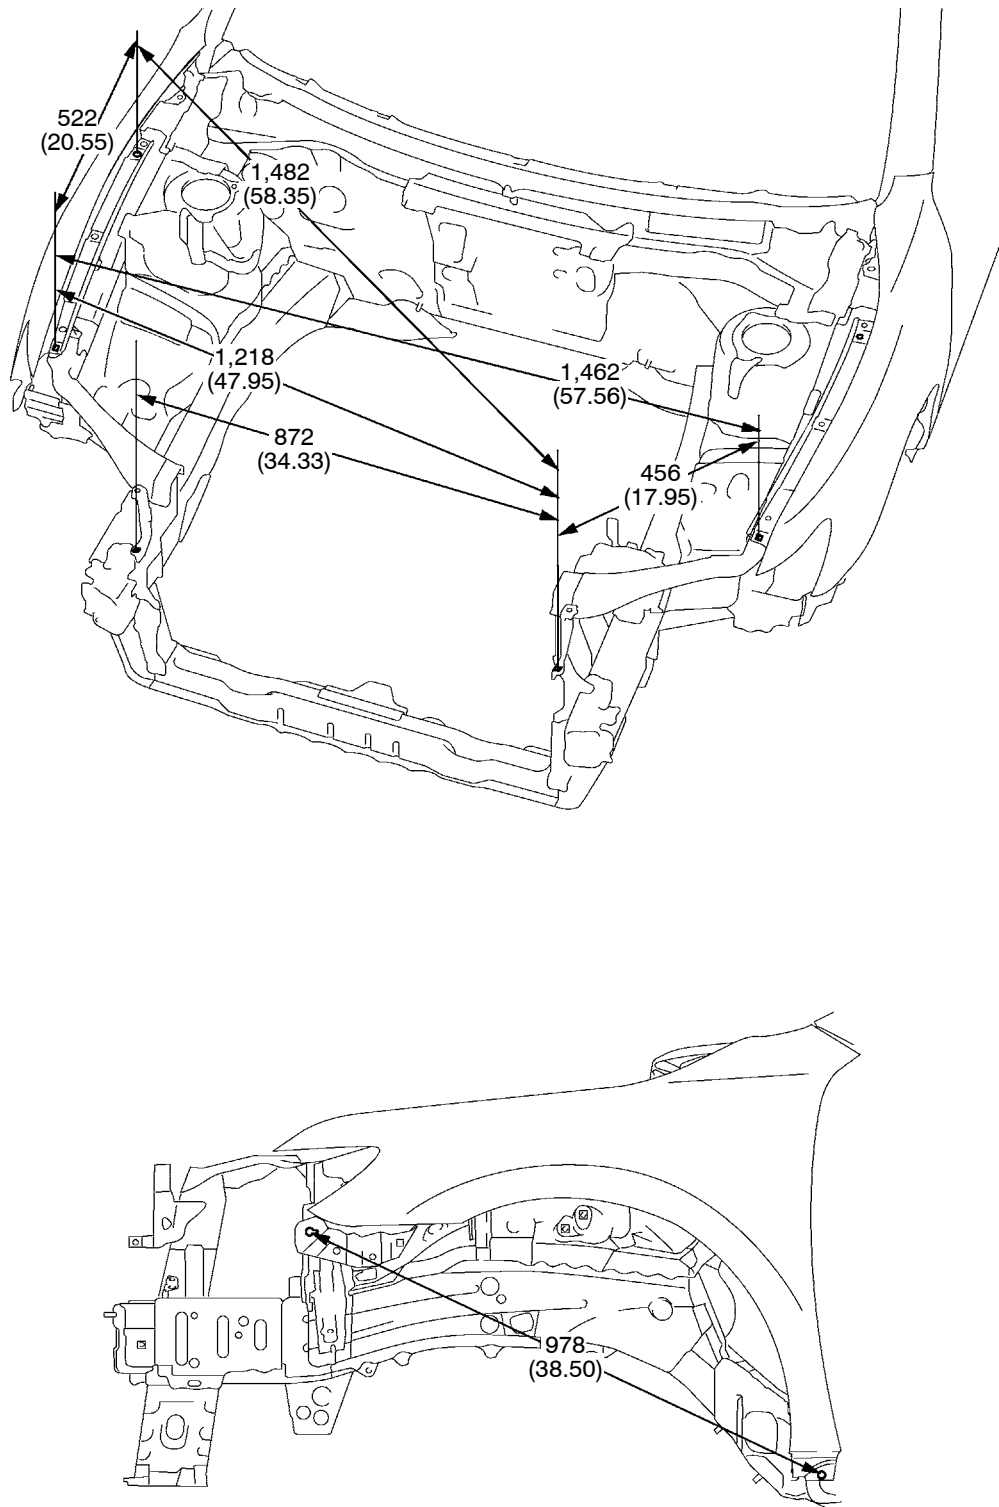

mm (in.)

F25704

INSTALLATION POINT

- 1 Measure the dimensions before installing the headlights.
- 2 These values are reference values.