


FRONT SIDE MEMBER (CUT-H): TMMK made

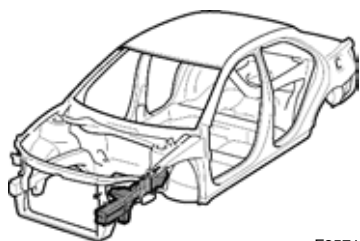

F25716A




With the front fender apron removed.

Symbol meaning

△ : Remove Weld Points

F25716B

REMOVAL

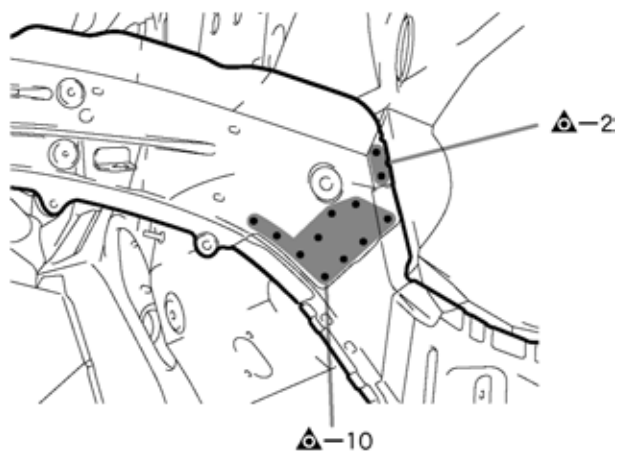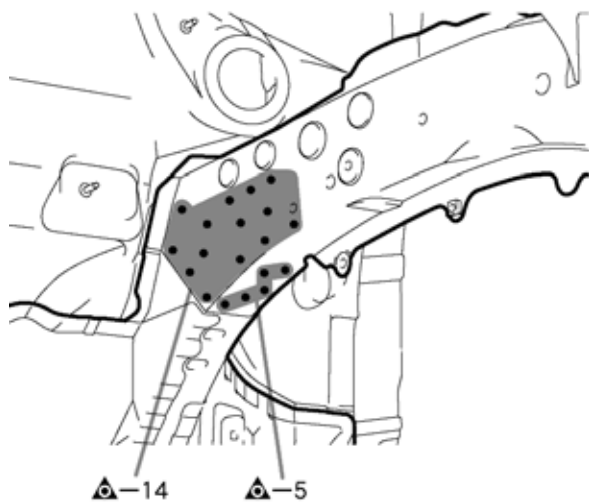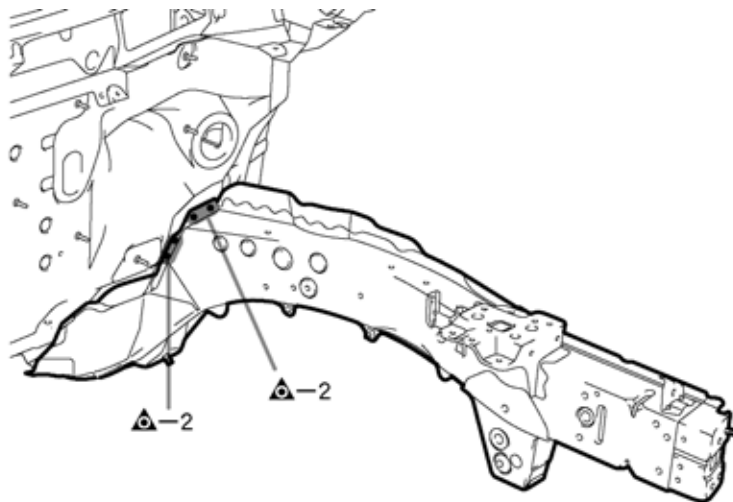


F25716

Symbol meaning

◻ : MIG Plug Weld

F25718B

INSTALLATION

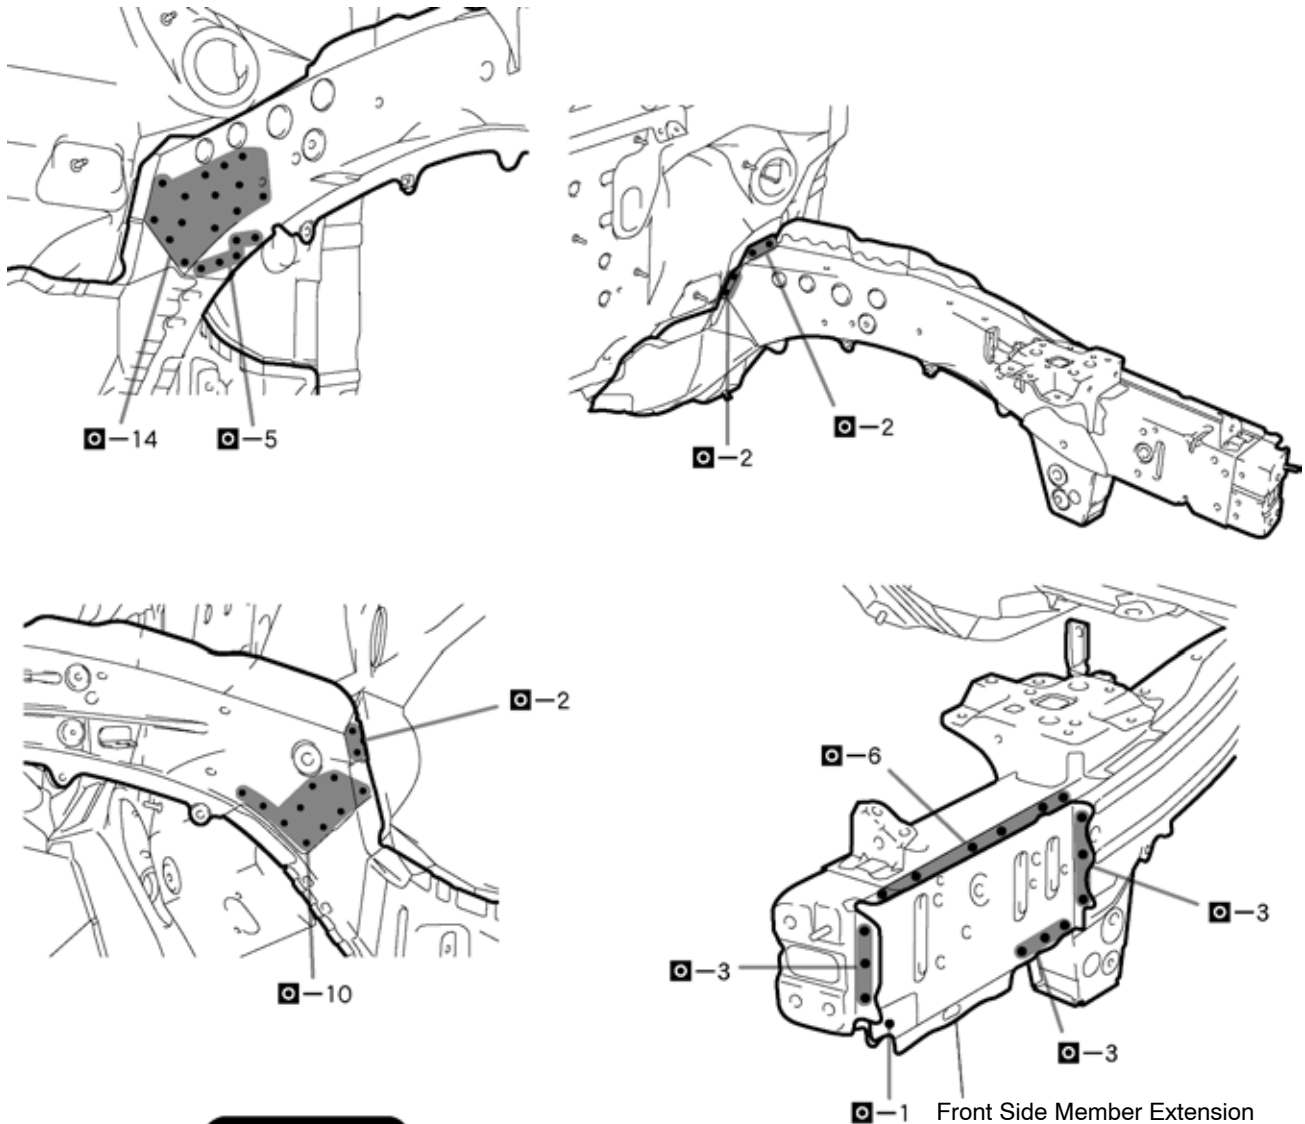**CAUTION**

Make sure to attach correctly in accordance with the body dimension diagram as this part affects the front wheel alignment.

F25718

INSTALLATION POINT

- 1 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- 2 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint-coating)
- 3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.