

## H8 Front Panel Fixes:


1. Pin 4 on IC105 is floating. Please connect a wire between pin 3 and pin 4 as shown in the diagram. Below is a picture showing the fix.

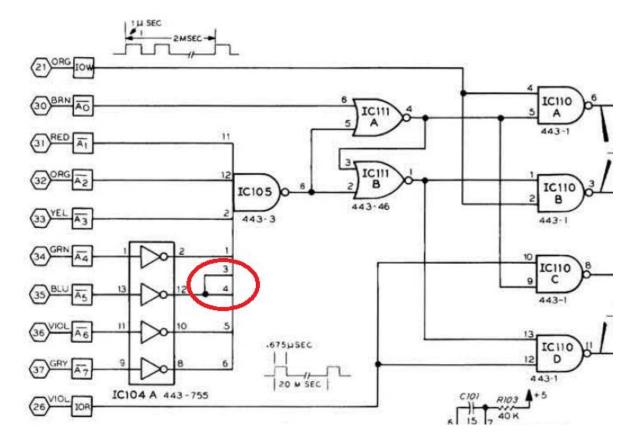

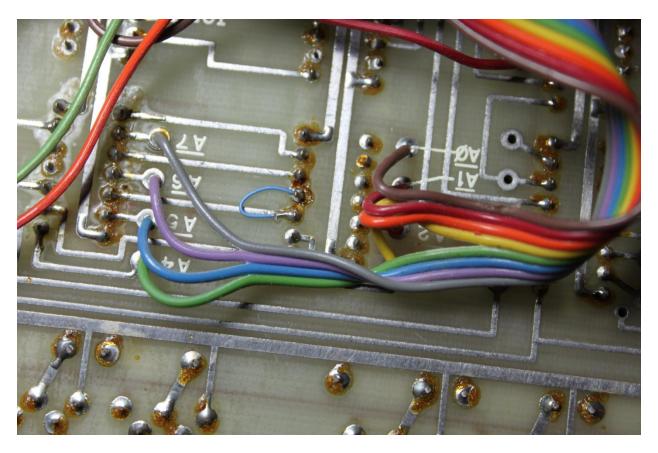


Please connect a wire between pin 3 and pin 4 as shown (blue wire)


1. Cut the following traces as shown;

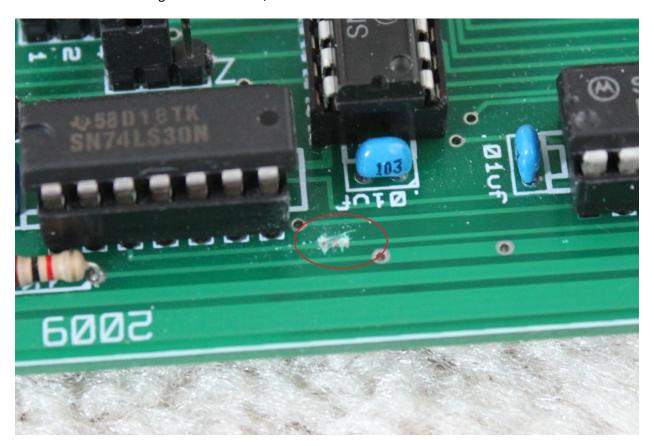

Cut trace between U7 pin 3 and U5 pin 3.

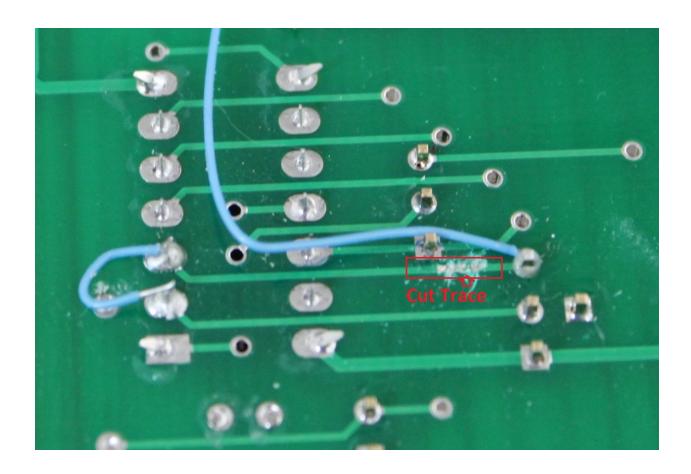


Cut trace between pin 3 of U7 and Y pin 3 header

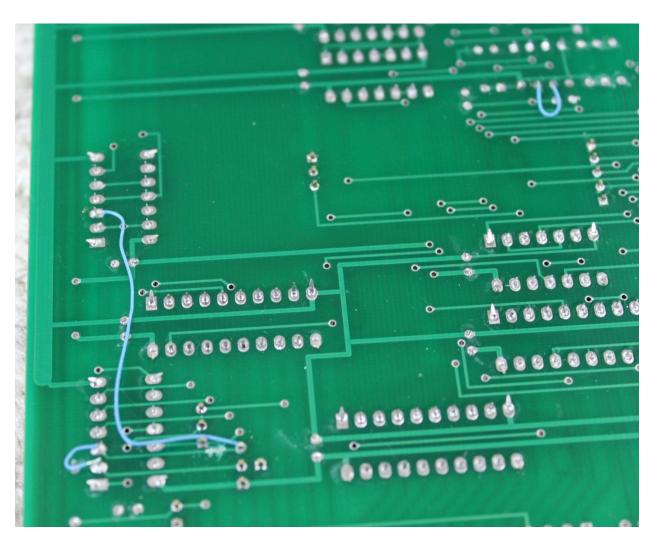

- 1. Connect a cable from U7 pin 3 and U7 pin 2
- 2. Connect a cable from Y header pin 3 to U5 pin 3

## Reset Circuitry Fixes:

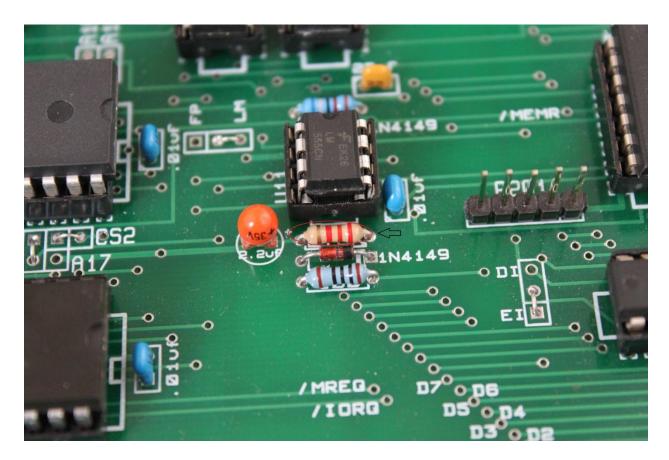

Replace 2.2K resistor with a 470K or a 100K resistor.

## Z80 Boots from H17 and H8-67 Boards:





- 1. Insert PAM-37 ROM in U4
- 2. Insert XCON-8 ROM into U3
- 3. Insert jumper between U4 pin 1 and 2 (Primary ROM PAM-37)
- 4. Insert jumper between U3 pin 2 and 3 (Secondary ROM XCON-8))

