
#### Lecture 2: Goals

- Understand the basic characteristics of signals as vectors: rate, minimum square Euclidean distance
- Know the fundamental tradeoff between data rate, bandwidth, signal power and noise power in communicating binary information (bits) from a source to a destination
- Know the fundamental tradeoff between data rate, and distortion in representing a source signal in binary form (bits)
- Know the fundamental tradeoff between source sample rate, distortion, energy, bandwidth in a communication system.

## Communication System Block Diagram

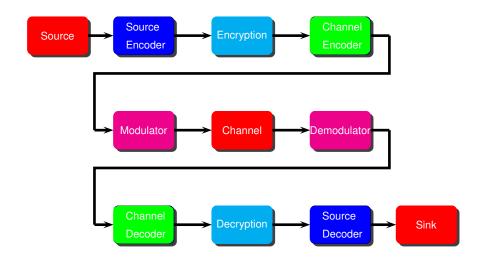


## Signals as Vectors

## Signal Set Parameters

## Signal Set Parameters

# Example 1: Quadriphase Shift Keying (QPSK)

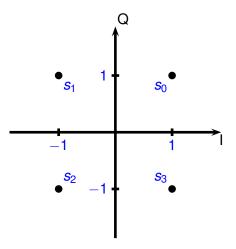


- Energy per signal is 2 for each of the four signals.
- Energy per bit is  $E_b = 1$ .
- Minimum squared Euclidean distance between signals is d<sup>2</sup><sub>E,min</sub> = 4.
- Rate is r = 2 bits/2 dimensions or R = 2 bps/Hz.

#### Bits/dimension vs. bits/second/Hz

- Suppose we have a signal with bandwidth (highest frequency) W.
- We know we can represent such a signal with samples at rate (very slightly greater than) 2W samples/second.
- We can perfectly reconstruct the signal from the samples.
- Any set of samples 2W samples per second can be turned into a waveform with bandwidth W.
- So a vector of samples of length N = 2WT can be turned into a waveform with bandwidth W and duration T.
- The conclusion is that there are 2WT possible dimensions in a bandwidth W and duration T or 2 dimensions/sec/Hz
- So r bits/dimension corresponds to R/W = 2r bits/second/Hz.

# Example 2: 32 Amplitude and Phase Shift Keying (32APSK)

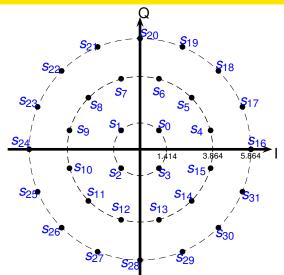

## Example 2: 32 APSK

- Energy per signal is 2 for four of the signals.
- Energy per signal is 14.928 for 12 of the signals.
- Energy per signal is 34.383 for 16 of the signals.
- Average energy per bit is  $\bar{E}_b = 4.608$ .
- Minimum squared Euclidean distance between signals is  $d_{E min}^2 = 4$ .
- Rate is r = 5 bits /2 dimensions, R = 5 bps/Hz.

# Example 3

$$N = 8, M = 8.$$

$$\begin{array}{rcl} 000 \rightarrow s_0 & = & (+1,+1,+1,+1,+1,+1,+1,+1,+1) \\ 001 \rightarrow s_1 & = & (+1,-1,+1,-1,+1,-1,+1,-1) \\ 010 \rightarrow s_2 & = & (+1,+1,-1,-1,+1,+1,-1,-1) \\ 011 \rightarrow s_3 & = & (+1,-1,-1,+1,+1,-1,-1,+1) \\ 100 \rightarrow s_4 & = & (+1,+1,+1,+1,-1,-1,-1,-1,-1) \\ 100 \rightarrow s_5 & = & (+1,-1,+1,-1,-1,+1,+1,+1) \\ 110 \rightarrow s_6 & = & (+1,+1,-1,-1,-1,+1,+1,+1) \\ 111 \rightarrow s_7 & = & (+1,-1,-1,+1,-1,+1,+1,-1) \end{array}$$

# Example 3

## Comparison


Example	Rate (bits/dimension)	$d_{E,min}^2/ar{E}_b$
1	1	4.00
2	2.5	0.868
3	0.375	6.00

- Better distinguishability per unit energy (larger  $d_{E,min}^2/E_b$ ) can be achieved with smaller rate.
- Higher rate means signals are less distinguishable per unit energy.


#### Noise

- Noise is present in virtually all communication system
- Noise is due, in part, to thermal motion of electrons in the receiver electronics
- The noise power is proportional to the temperature of the receiver.
- Thermal noise is white: same power at all frequencies.
- Thermal noise is measured by the power spectral density denoted by  $N_0/2$  where  $N_0 = kT_0$  and k is Boltzmann's constant and  $T_0$  is the temperature in Kelvin.
- The noise power in a bandwidth -W to W is  $N_0/2(2W) = N_0W$ .
- In addition to noise, the propagation characteristics can cause the received signal to differ significantly from the transmitted signal in power but can also cause distortion.


## Noise

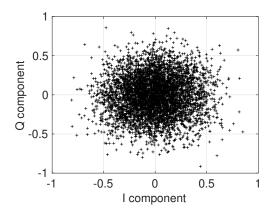


# Signal and Noise: High SNR

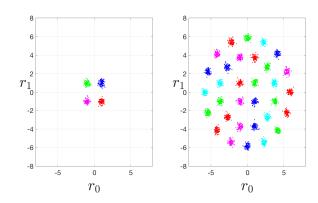

# Signal and Noise: Low SNR

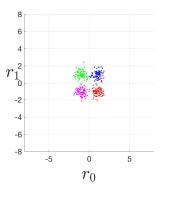


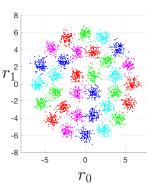

#### Two Fundamental Tradeoffs

- At what rate R in bits/second can we reliably (very very small error probability) communication data when the received power is P, the available bandwidth is W and there is a certain amount of noise N<sub>0</sub> (the noise power spectral density)?
- At what rate R in bits/second can a source of information (e.g. an analog source) be compressed into bits and then the original source be reconstructed with distortion D from the original?

#### **Fundamental Tradeoff One**

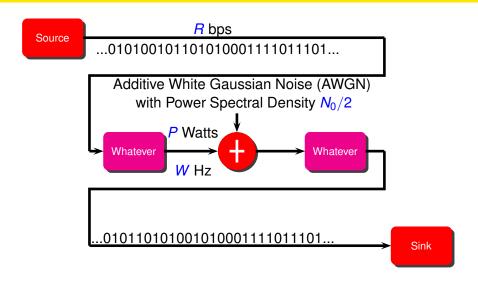

## **Assumptions**

- The source produces equally likely data bits (0s and 1s) at rate R
  bits/second.
- We transmit a signal (waveform) such that the received power is P.
- The transmitted signal has bandwidth W (Hz).
- Noise is added to the transmitted signal. The noise is white (power at all frequencies of interest), Gaussian and has power spectral density N<sub>0</sub>/2 Watts/Hz. This is called an additive white Gaussian noise channel.
- We can allow any delay or complexity.

#### **Fundamental Tradeoff**

- In 1948 Claude Shannon (U of M EE/Math graduate) published a
  paper in which he determined the tradeoff between data rate,
  bandwidth, signal power and noise power for reliable
  communications for an additive white Gaussian noise channel.
- W be the bandwidth (in Hz),
- R be the data rate (in bits per second),
- P be the received signal power (in Watts),
- $N_0/2$  the noise power spectral density (in Watts/Hz).
- Then reliable communication is possible provided

$$R < W \log_2(1 + \frac{P}{N_0 W}).$$

#### Formula Search

Find this equation on bust of Shannon outside the EECS building.


$$C = W \log_2(\frac{P+N}{N})$$

Here  $N = N_0 W$  is the noise power.

# Soni and Goodman: A mind at play: How Claude Shannon invented the information age

Before Shannon's 1948 "A Mathematical Theory of Communication," a century of common sense and engineering trial and error said that noise—the physical world's tax on our messages—had to be lived with. Shannon proved that noise could be defeated, that information sent from Point A cound be received with perfection at Point B, not just often, but essentially always. He gave engineers the conceptual tools to digitize information and send it flawlessly, a result considered hopelessly utopian up until the moment Shannon proved it was not.

#### **Fundamental Tradeoff**

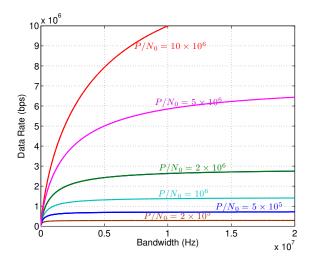

For large values of W the maximum rate (capacity) approaches

Lecture Notes 2

$$\lim_{W \to \infty} W \log_2(1 + \frac{P}{N_0 W}) = \frac{P}{N_0 \ln(2)} = 1.4426 (P/N_0).$$

Let  $E_b$  be the energy transmitted per bit of information. Then

$$E_b = P/R$$
 or  $P = E_bR$ .

Using this relation we can express the capacity formula as

$$R/W < \log_2(1 + \frac{E_b}{N_0} \frac{R}{W}).$$

Inverting this we obtain

$$E_b/N_0>rac{2^{R/W}-1}{R/W}$$
.

$$E_b/N_0>\frac{2^{R/W}-1}{R/W}$$
.

- The interpretation is that reliable communication is possible with bandwidth efficiency R/W provided that the signal-to-noise ratio, E<sub>b</sub>/N<sub>0</sub>, is larger than the right hand side of the above equation.
- For small values of R/W the smallest value of  $E_b/N_0$  where reliable communication is possible is ln(2) = 0.693. That is,

$$\lim_{R/W \to 0} \frac{2^{R/W} - 1}{R/W} = \ln(2).$$

#### dB or not dB?

When the range of values for energy or power are vast we usually employ a dB scale. The conversion is

$$E_b/N_0(dB) = 10 \log_{10}(E_b/N_0).$$

The smallest signal-to-noise ratio for reliable communication (at low rates) is

$$E_b/N_0 > \log(2) = 0.693$$
  
 $E_b/N_0(dB) > 10 \log_{10}(0.693) = -1.59dB$ .

## dBW, dBm


Sometimes **absolute** power levels are also expressed in dB's by referencing them to either 1W or 1mW. When referencing to 1W the dB units are written as dBW. When referencing to 1mW the dB units are written as dBm. So, for example


```
\begin{array}{lcl} 100 \text{Watts} &=& 10 \log_{10}(100 \text{Watts/1Watt}) = 20 \text{dBW} \\ &=& 10 \log_{10}(100 \text{Watts/1mWatt}) = 50 \text{dBm} \end{array}
```


```
10 Watts = 10 \log_{10}(10 \text{Watts/1Watt}) = 10 \text{dBW}
= 10 \log_{10}(10 \text{Watts/1mWatt}) = 40 \text{dBm}
```

## dBW, dBm

```
1Watt = 10 \log_{10}(1Watt/1Watt) = 0dBW
                  10 \log_{10}(1 \text{Watt/1mWatt}) = 30 \text{dBm}
   .1Watts = 10 \log_{10}(.1 \text{Watt/1Watt}) = -10 \text{dBW}
                   10 \log_{10}(.1 \text{Watt/1mWatt}) = 20 \text{dBm}
 .01Watts = 10 \log_{10}(.01Watt/1Watt) = -20dBW
              = 10 \log_{10}(.01 \text{Watt/1mWatt}) = 10 \text{dBm}
.001Watts = 10 \log_{10}(.001Watt/1Watt) = -30dBW
                   10 \log_{10}(.001 \text{Watt/1mWatt}) = 0 \text{dBm}
```

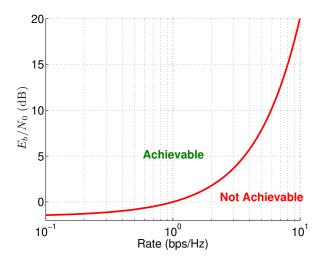

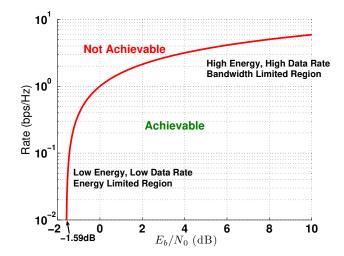

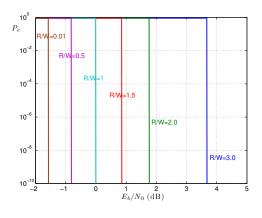

- Each curve represents the achievable error probability for a given rate.
- The error probability achievable becomes zero when the signal-to-noise ratio (E<sub>b</sub>/N<sub>0</sub>) is above some threshold that depends on R/W.


#### **Notes**

- The capacity formula only provides a tradeoff between energy efficiency and bandwidth efficiency. Complexity is essentially infinite, as is delay. The model of the channel is rather benign in that no signal fading is assumed to occur.
- The capacity theorem says that we can communicate with error probability near zero at rates below the capacity or equivalently at values of  $E_b/N_0$  above a threshold.

## Claude Elwood Shannon (1916-2001)




## Claude Elwood Shannon

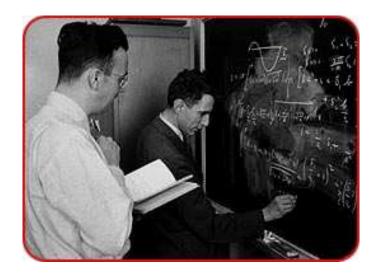


### Claude Elwood Shannon



## Claude Elwood Shannon

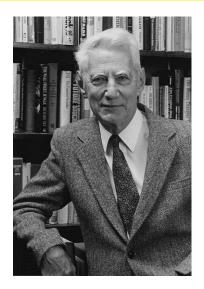

#### Claude Elwood Shannon

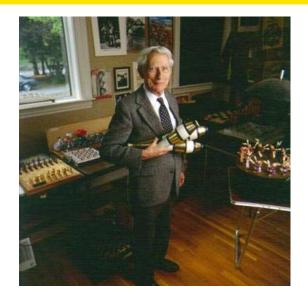

#### Example

ZigBee radios (IEEE 802.15.4) use about 2MHz of bandwidth and have a data rate of 250kbps. The transmitted power is 1mW. The relation between transmitted power and received power as a function of distance in certain environments is

$$P_{r|dBW} = P_{t|dBW} - 50.3 - 40 \log_{10}(d)$$

Determine the maximum possible distance for reliable communications.

#### Example

#### **Solution:** Known quantities:

$$R = 250$$
kbps  
 $W = 2$ MHz  
 $N_0 = 4 \times 10^{-21}$ Watts/Hz

Lecture Notes 2

The capacity formula tells us that

$$R < W \log_2(1 + \frac{P_r}{N_0 W})$$
  
 $(2^{R/W} - 1)N_0 W < P_r$ 

So from the smallest possible received power we can find the largest possible distance using


$$P_{r|dBW} = P_{t|dBW} - 50.3 - 40 \log_{10}(d)$$

$$\begin{split} (2^{(250\times10^3)/(2\times10^6)}-1)(4\times10^{-21})\times(2\times10^6) &< P_r \\ & 7.24\times10^{-16} < P_r \\ & -151\text{dBW} < P_{r|dBW} \\ 40\log_{10}(\textit{d}) &< P_{t|dB} - P_{r|dB} - 50.3 \\ 40\log_{10}(\textit{d}) &< -30+151-50.3 \\ 40\log_{10}(\textit{d}) &< 71.18 \\ \log_{10}(\textit{d}) &< 1.78 \\ \textit{d} &< 59.9 m \end{split}$$

#### Example

- In practice ZigBee radios are far from optimal. They are designed for low power (low complexity).
- A typical ZigBee radio might have a receiver sensitivity of between -90dBm and -100 dBm (-120dBW and -130dBW)<sup>1</sup>.
- Part of this difference is due to the noise factor in the receiver which can be from 2-10 dB.
- Part of this difference is due to the nonideal channel characteristics (multipath fading).
- Much of this is due to the system having low complexity.

#### Second Fundamental Tradeoff

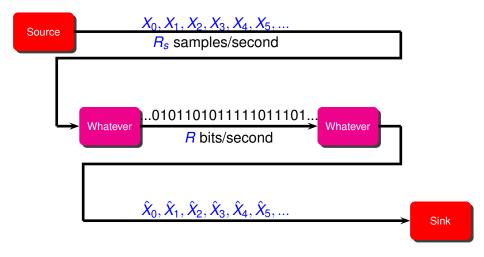

#### Second Fundamental Tradeoff: Example 1

- Suppose a source produces samples at a rate of R<sub>s</sub> samples/second.
- Each sample is a Gaussian distributed random variable (mean 0, variance  $\sigma^2$ ).
- The samples are independent. For example

$$X_0 = -0.4326, \ X_1 = -1.6656, \ X_2 = +0.1253, \ X_3 = +0.2877, \ X_4 = -1.1465, \ X_5 = +1.1909, ...$$

- We want to represent these samples with a sequence of bits at rate R bps.
- The goal is to as accurately as possible reproduce the source samples with the fewest possible bits or the lowest bit rate R.
- The distortion is the mean-squared-error; that is  $D = E[(X_i \hat{X}_i)^2]$ .


#### Fundamental Tradeoff Two: Example 1

Reproduction of the source with distortion D is possible provided

$$R/R_s > \begin{cases} \frac{1}{2} \log_2(\frac{\sigma^2}{D}), & D < \sigma^2 \\ 0, & D > \sigma^2. \end{cases}$$

 One extra bit per sample improves the distortion by a factor of 4 (6dB).

#### Rate-Distortion Function: Example 1

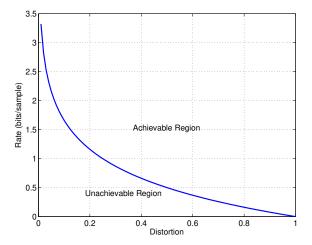


#### Fundamental Tradeoff Two: Example 2

- Suppose we have a binary source which produces bits with equal probability: 0 and 1 each have probability 1/2.
- The source produces bits at rate R<sub>s</sub> bits/second.
- Our goal is to compress the source bits into a smaller rate
   (R < R<sub>s</sub>) of bits understanding that we will not be able to perfectly reconstruct the source bits from the smaller rate sequence of bits.
- Suppose that we require that the source bits are reproduced incorrectly with probability p. This is the distortion measure.
- This is possible provided

$$R/R_s > 1 - H_2(p)$$

where  $H_2(p) = -p \log_2(p) - (1-p) \log_2(1-p)$  is called the binary entropy function.


## Rate-Distortion Function: Example 2

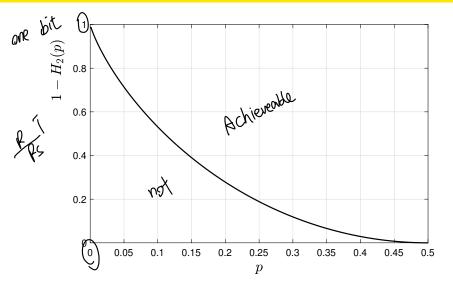

- Gaussian source, additive Gaussian noise channel
- Binary source, additive Gaussian noise channel

#### Joint Source-Channel Coding Problem


- Suppose we have a Gaussian source with (independent) samples  $\wedge$  at rate  $R_s$ , with variance  $\sigma_s^2$ .
  - Suppose we have an additive white Gaussian noise channel with power spectral density  $N_0/2$ .
  - Suppose we have signals with power P and bandwidth W.
  - What distortion D is possible between the source and the sink?



The source can be represented (compressed) by a sequence of bits with rate (bits/second)


 $R = \frac{R_s}{2} \log_2(\frac{\sigma_s^2}{D})$ 

and reproduced from those bits with distortion (mean squared error) of D.



Those bits, produced by the source encoder, can be reliably (essentially no errors) communicated from the transmitter to the receiver with power P and bandwidth W over an additive white Gaussian noise channel with noise power spectral density  $N_0/2$  provided the rate (bits/second) is less than the capacity

$$R < W \log_2(1 + \frac{P}{N_0 W}).$$



So we can communicate the source to the destination with distortion *D* provided

$$\frac{R_s}{2}\log_2(\frac{\sigma_s^2}{D}) < W\log_2(1 + \frac{P}{N_0W})$$

$$D > \frac{\sigma_s^2}{(1 + \frac{P}{N_0W})^{2W/R_s}}$$

This is achieved by first compressing the source to a rate of

$$R_s/2\log_2(\frac{\sigma^2}{D})$$

and then transmitting these over a channel with capacity (maximum achievable rate) of

$$W\log_2(1+\frac{P}{N_0W}).$$

- The transmission of the bits generated by the source encoder is reliable. So the only distortion comes from the source encoder.
- The channel limits the rate at which reliable communication is possible.
- This puts a constraint on the source encoder in terms of the maximum rate that the source can compress the information into.

## Binary Source-Gaussian Channel: Example 2

 $R = R_s(1 - H_2(P_{e,b}))$ 

If we start with a sequence of bits at rate R<sub>s</sub> bits/second, equally likely, then we can compress these bits to a rate of R<sub>1</sub> bits if we allow errors with probability P<sub>e,b</sub> where

$$= R_{s}(1 + P_{e,b} \log_{2}(P_{e,b}) + (1 - P_{e,b}) \log_{2}(1 - P_{e,b}))$$

$$= R_{s}[1 - H_{2}(P_{e,b})]$$

$$H_{2}(x) = -x \log_{2}(x) - (1 - x) \log_{2}(1 - x).$$

 These compressed bits can be reliably communicated over a channel with bandwidth W Hz using power P watts provided

$$R < W \log_2(1 + \frac{P}{N_0 W})$$

where

## Binary Source-Gaussian Channel: Example 2

Thus error probability P<sub>e,b</sub> is possible provided


$$R_s[1 - H_2(P_{e,b})] < W \log_2(1 + \frac{P}{N_0 W})$$

• We can express this in terms of energy per information bit by writing  $E_b = P/R_s$ . Using this relation the condition for achieving error probability  $P_{e,b}$  is


$$1 - H_2(P_{e,b}) < \frac{W}{R_s} \log_2(1 + \frac{E_b}{N_0} \frac{R_s}{W})$$

$$E_b/N_0 > \frac{2^{H_s/W(1 - H_2(P_{e,b}))} - 1}{R_s/W}.$$

Fundamental limit on error probability and signal-to-noise ratio for bandwidth efficiency 2 bps/Hz compared to QPSK

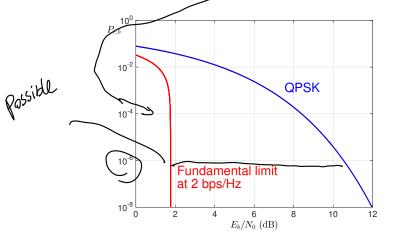

# Fundamental limit on error probability and signal-to-noise ratio for bandwidth efficiency 5 bps/Hz compared to 32-APSK

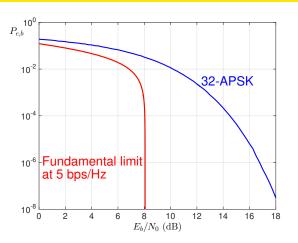

#### **Key Point**

#### **Channel Coding Theorem (Shannon)**

There exists communication systems that have arbitrarily small error probability if and only if the rate of communication is less than the channel capacity.

$$R < W \log_2(1 + \frac{P}{N_0 W})$$
  $E_b/N_0 > \frac{2^{R/W} - 1}{R/W}$ 

This is a fundamental tradeoff between bandwidth efficiency, R/W (bits/second/Hz) and energy efficiency,  $E_b/N_0$ .