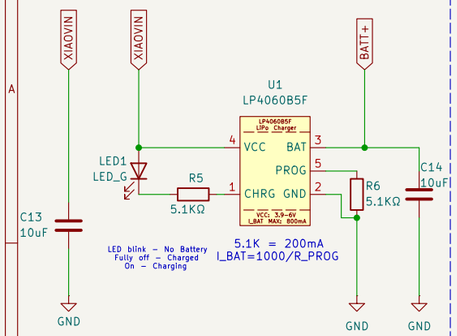

BATTERY IC

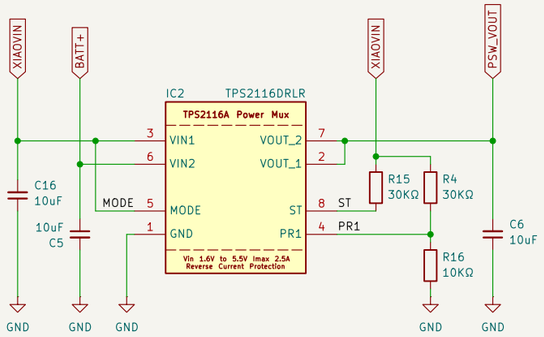

Power Mux

Battery & External USB Power Mux
IN1 is the preferred input when connected unless drop below 4V.
Vthreshold = (30K/10K + 1) * 1V

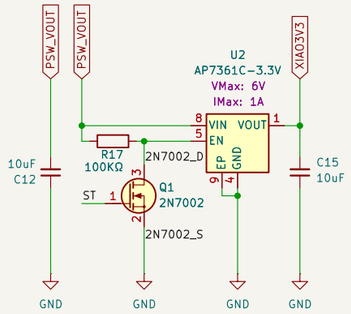

LDO

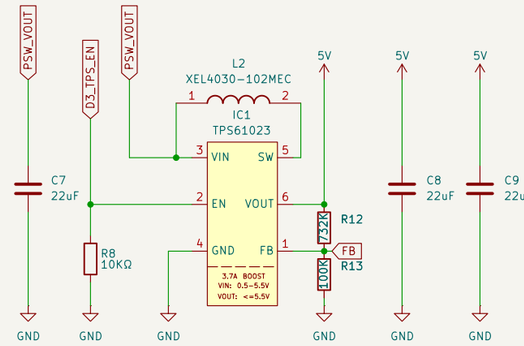

3V3 TO 5V5 BOOSTER

EN pin changed to default pull down.
Previous version is pull up due to assumption of this could jam programming when D3 pin floating. The real issue is voltage rail between batt & USB. Which TPS2116A solved.

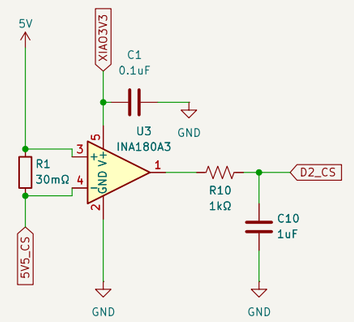

CURRENT SENSE

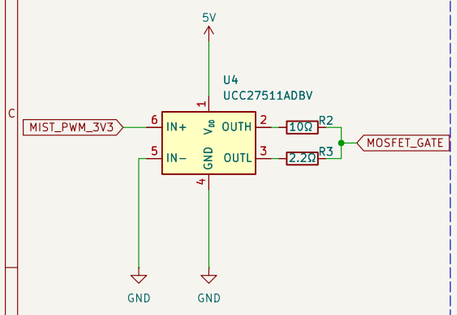

LOGIC VOLTAGE LEVEL SHIFTER

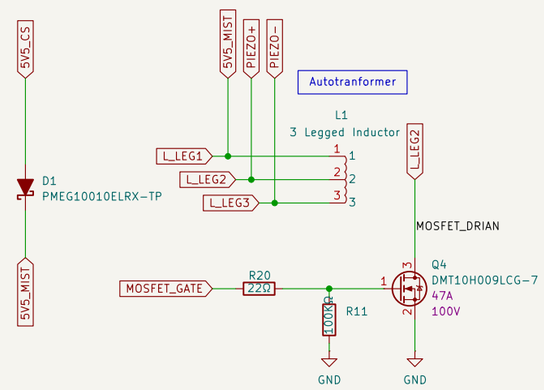

MIST COMPONENTS

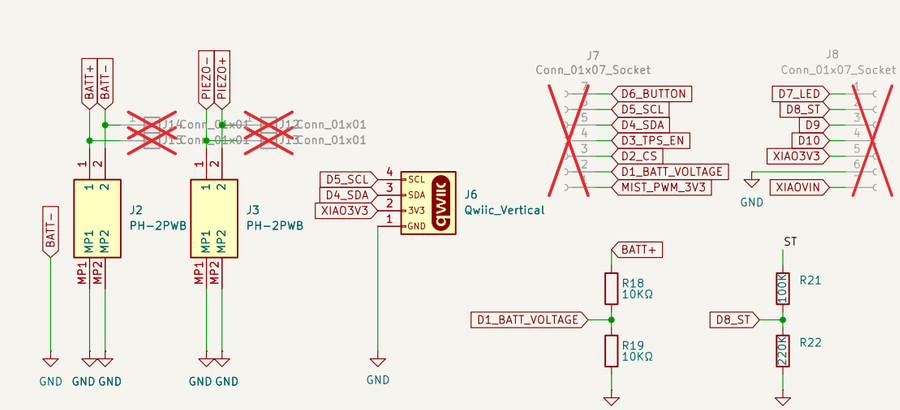

CONNECTORS & JUMPERS

VOLTAGE DIVIDER

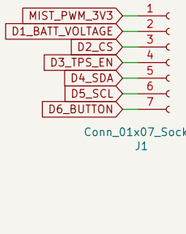

XIAO ESP32-C6 SOCKET

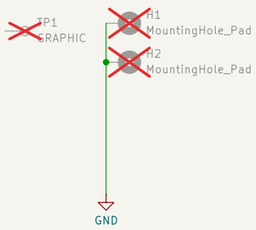

GRAPHICS & MOUNTING HOLES

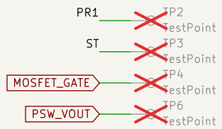

TEST POINTS

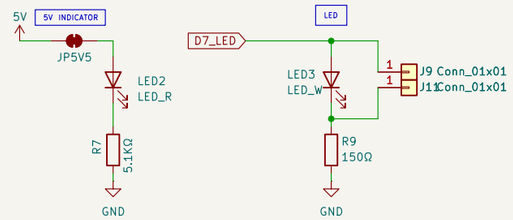

LED & SWITCH

By David Yang & shuang cai
Byproduct Lab
Power Plane LLC

OSHW US002742

Sheet: /
File: MistMaker-Battery-Kit-V0-4.kicad_sch

Title: MistMaker-Battery-kit

Size: A3	Date: 2026-07-04	**Rev: 0-4-1**
KiCad E.D.A. 10.0.1		Id: 1/1