

APPENDIX A - ACCESS DATA AND ZONE DIAGRAMS

A. ZONE LOCATIONS

The 737-600/700/800/900 zone diagram is divided into 8 major zones. These zones encompass the Fuselage, Empennage, Power Plants and Struts, Wings, Landing Gear and Doors. A further breakdown in zone identification is achieved by subdividing the individual major zones into subzones. The 737-600/700/800/900 aircraft is divided into a total of 228 zones. The zones are illustrated and described in the Maintenance Manual and in the Introduction of the Illustrated Parts Catalogue.

The major zone designations are as follows:

MAJOR ZONE	DESCRIPTION
100	Lower Half of Fuselage
200	Upper Half of Fuselage
300	Empennage and Body Section 48
400	Power Plants and Nacelle Struts
500	Left Wing
600	Right Wing
700	Landing Gear and Landing Gear doors
800	Passenger and Cargo Compartment Doors

- 2. The zone designation in each illustration refers to a particular major zone. When the zones are identified, the following criteria was applied.
 - A. Where applicable, an odd number indicates a left side zone and an even number indicates a right side zone relative to the fuselage or nacelle centerline.
 - B. The sequence of zone numbers runs from inboard to outboard and front to back in the wing and horizontal tail; front to back and away from the floorline in the fuselage and from root to tip in the vertical fin.
 - C. Major structural components, passenger cabin doors, cargo doors, landing gear doors, rudders, elevators, flaps, ailerons, spoilers and leading edge devices have individual zone numbers.

B. IDENTIFICATION OF ACCESS DOORS AND PANELS

All maintenance access doors, service doors, fillets and fairings, are identified as follows:

- 1. The identification is prefixed by the three digit zone number that designates the smallest zone in which the door is located.
- 2. A two-character suffix will normally be used and consists of a primary identifier and a locator. If an access panel is identified out of sequence, a third letter "X" will be added to the suffix.
- 3. The first character is the primary letter, which will identify the door in a logical sequence. For example, inboard to outboard or front to rear, starts alphabetically with the letter "A" within each zone. For internal & special access requirements, the first character is a digit between 1 and 8, which refers to the major zone most applicable to the requirement.



4. The second letter locates the door in relation to the airplane.

For example:

- T Top
- B Bottom
- L Left
- R Right
- Z internal
- C Ceiling
- F Floor Panels
- G Floor Panels (used when "F" sequence designation is exhausted)
- S Sloping Sidewall
- W Sidewall
- 5. The third letter "X" is added to indicate that the two letter suffix is not in alphabetical sequence.
- 6. The following are examples of access door and panel identification:

Door or Panel Number (Zone) + (Suffix)		Identification
541	RT	(Top of Wing, left)
631	AB	(Bottom of Wing, right)
324	AL	(Vertical stabilizer - Left side)
324	AR	(Vertical stabilizer - Right side)
136	KZ	(Center Wing Tank, Internal)
121	PW	(Fwd Cargo Compt Sidewall Liners - Left Side)
121	DC	(Fwd Cargo Compt Ceiling Liner - Left Side)
121	HF	(Fwd Cargo Compt Floor Panels - Left Side)
500	1	(Drain/Purge Left Wing Main Fuel Tank)

- 7. Cabin entrance doors, cargo doors and landing gear doors will be identified by the zone number since each is a zone in itself. However, access panels within entrance or cargo doors will be identified in the usual manner.
- 8. The letters I and O will not be used.
- 9. Tank vents are not assigned access identification.



- Doors on the fuselage centerline are assigned the left panel zone number.
- 11. Corresponding access panels on the opposite side of the airplane normally have the same suffix letter designator even though the zone numbers will differ.
- 12. When a door is located on a larger door, the larger door is identified first.
- For doors in more than one zone, the lowest zone number involved is used.
- 14. A door located on a zone boundary takes its number from the zone in which it is removed or opened. Internal & special access requirements will be identified by the zone to which they give access.

C. ACCESS DOORS AND PANELS INFORMATION

1. Panel description/Provides access to:

A brief descriptor of the panel/door is included. "Provides access to" information is included in this column if the primary access to a significant system/component or structure is through the applicable panel/door.

2. Labor-hours OPEN/CLOSE

- A. Open/close labor-hours are provided for most access panels in this section of the MPD. "TBD" appears in this field where labor-hour data has not been calculated and verified. A standard labor-hour factor was used in calculating the man-hour estimates listed in this section. This factor was then multiplied by the number and type of fasteners for a particular panel. Airline operators may need to factor these estimates based upon their own airline operating procedures. Labor-hour calculations are based on the following assumptions:
 - a. All maintenance stands in place.
 - b. Mechanic at workstation.
 - c. Power tools available and hooked up.
 - d. 25 fasteners or less removed manually.
 - e. 26 plus fasteners removed using power tools.
 - f. Sealant removed and installed.
 - g. Even though normal airline operations utilize two mechanics for larger access panel removals, the calculations listed are based upon one mechanic removing all fasteners. Airline operators will have to monitor those occasions where two mechanics are utilized and factor the time accordingly. The "Size of Panel" and "Fastener Quantity" information included in this section may be useful in determining the number of mechanics required for panel removal/installation. The above assumption will keep the labor-hour estimates standard without conditional variations.
 - h. Some panels with specific MM procedures are factored dependent upon the difficulty or complexity of the MM procedure. The general area of the airplane is taken into consideration (accessibility) and size of panel for estimates (I.E. vertical stabilizer).



i. Labor-hour estimates are for new airplane first removal conditions. With airplane age and more frequent removal panel removal/close estimates should be less.

D. SPECIAL ACCESS REQUIREMENTS

Special Access Requirements denote where access is required but a specific access panel does not exist. Special Access requirements are identified by a four-digit number. The first three digits are the zone number and the fourth digit is a sequence number within that zone. These Special Access requirements are needed to prepare the area to accomplish a Scheduled Maintenance Requirement. Table of Special Access Panel numbers are at the end of this section.

E. ACCESS DOORS AND PANELS ILLUSTRATIONS

The information for access doors and panels is presented for the major zones and the number designation follows the same system as used in the zoning diagrams. Access door and panel designations are depicted in the illustrations which follow.

Access panels may vary among operators due to customer configurations. Each operator's Maintenance Manual contains the specific configuration data.



737-600/700/800/900/900ER MAINTENANCE PLANNING DOCUMENT ZONE DIAGRAMS

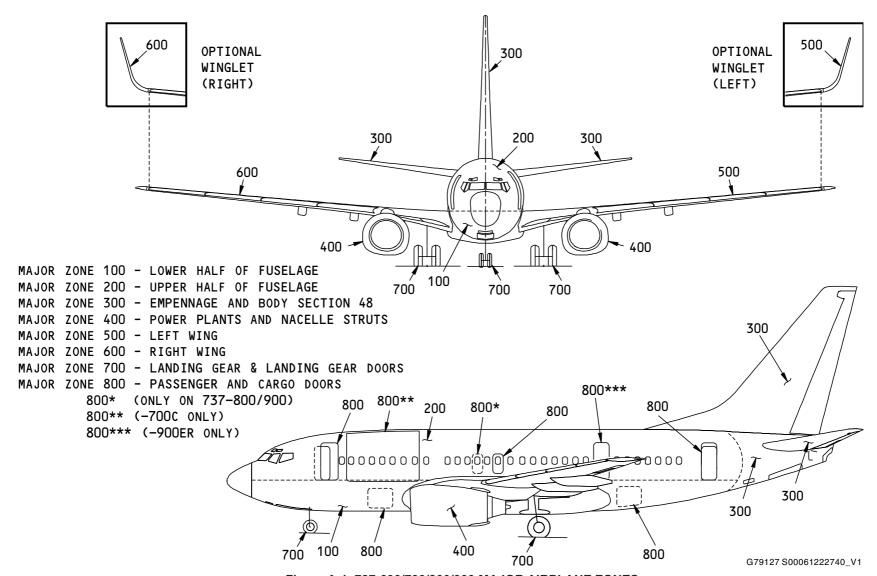


Figure A-1 737-600/700/800/900 MAJOR AIRPLANE ZONES



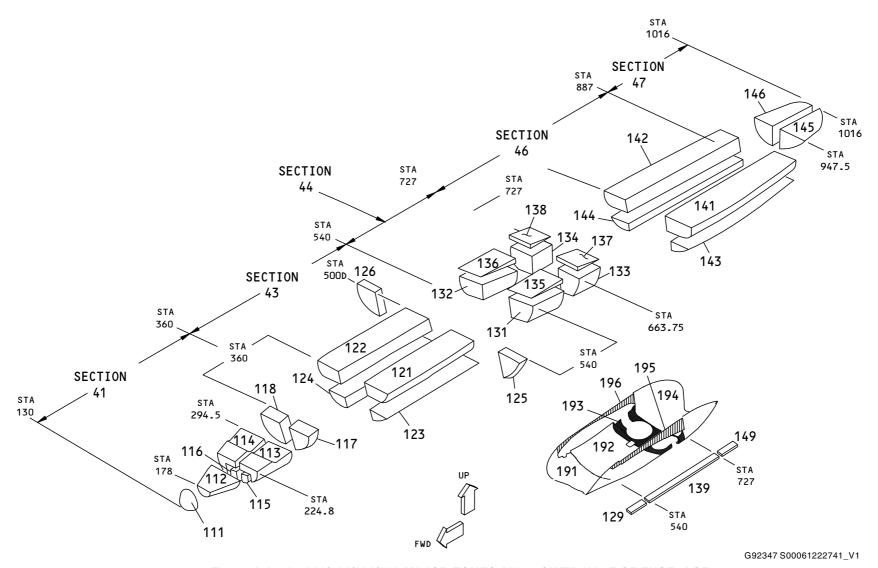


Figure A-2 $\,$ 737-600/700/800/900 MAJOR ZONES 100 - LOWER HALF OF FUSELAGE



737-600/700/800/900 MAJOR ZONES 100 - LOWER HALF OF FUSELAGE		
ZONE	AREA DESCRIPTION	
110	Subzone - STA 130 TO STA 360	
111	RADOME	
112	AREA FWD OF NOSE WHEEL WELL	
113/114	AREA ABOVE NOSE WHEEL WELL AREA OUTBD OF NOSE WHEEL WELL	
115/116	NOSE WHEEL WELL	
117/118	ELECTRICAL AND ELECTRONICS COMPARTMENT	
120	Subzone - BODY STA 360 TO STA 540	
121/122	FWD CARGO COMPARTMENT	
123/124	AREA BELOW FWD CARGO COMPARTMENT	
125/126	AIR CONDITIONING DISTRIBUTION BAY	
129	KEEL BEAM (PART) STA 501.70 TO STA 540	
130	Subzone - BODY STA 540 TO STA 727	
131/132	CENTER SECTION WING BOX (STA 540 TO STA 663.75)	
133/134	MAIN LANDING GEAR WELL (STA 663.75 TO STA 727)	
135/136	AREA ABOVE WING CENTER SECTION (STA 540 TO STA 663.75)	
137/138	AREA ABOVE MAIN LANDING GEAR WELL (STA 663.75 TO STA 727)	
139	KEEL BEAM (PART) STA 540 TO STA 727	
140	Subzone - STA 727 TO STA 1016	
141/142	AFT CARGO COMPARTMENT	
143/144	AREA BELOW AFT CARGO COMPARTMENT	
145/146	AFT CARGO COMPARTMENT EQUIPMENT BAY	
149	KEEL BEAM (PART) STA 727 TO STA 743.95	
190	Subzone - FAIRING BODY STA 500B+15 TO STA 727D+8	
191	LOWER WING, WING TO BODY FAIRING FWD OF WING BOX	
192	LOWER WING, WING TO BODY FAIRING UNDER WING BOX	



737-600/700/800/900 MAJOR ZONES 100 - LOWER HALF OF FUSELAGE	
ZONE	AREA DESCRIPTION
193	LOWER WING, WING TO BODY FAIRING WHEEL WELL
194	LOWER WING, WING TO BODY FAIRING AFT OF WHEEL WELL
195	ABOVE LEFT WING, WING TO BODY FAIRING
196	ABOVE RIGHT WING, WING TO BODY FAIRING



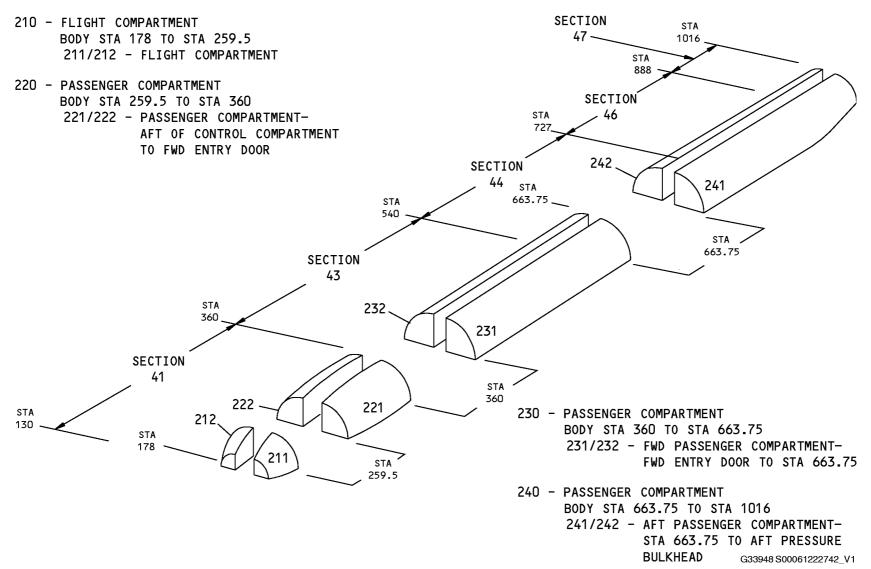


Figure A-3 737-600/700/800/900 MAJOR ZONES 200 - UPPER HALF OF FUSELAGE



737-600/700/800/900 MAJOR ZONES 200 - UPPER HALF OF FUSELAGE	
ZONE	AREA DESCRIPTION
210	Subzone - FLIGHT COMPARTMENT BODY STA 178 TO STA 259.5
211/212	FLIGHT COMPARTMENT
220	Subzone - PASSENGER COMPARTMENT BODY STA 259.5 TO STA 360
221/222	PASSENGER COMPARTMENT - AFT OF CONTROL COMPARTMENT TO FWD ENTRY DOOR
230	Subzone - PASSENGER COMPARTMENT BODY STA 360 TO STA 663.75
231/232	FWD PASSENGER COMPARTMENT - FWD ENTRY DOOR TO STA 663.75
240	Subzone - PASSENGER COMPARTMENT BODY STA 663.75 TO STA 1016
241/242	AFT PASSENGER COMPARTMENT - STA 663.75 TO AFT PRESSURE BULKHEAD



SECTION .

G92297 S00061222743_V1

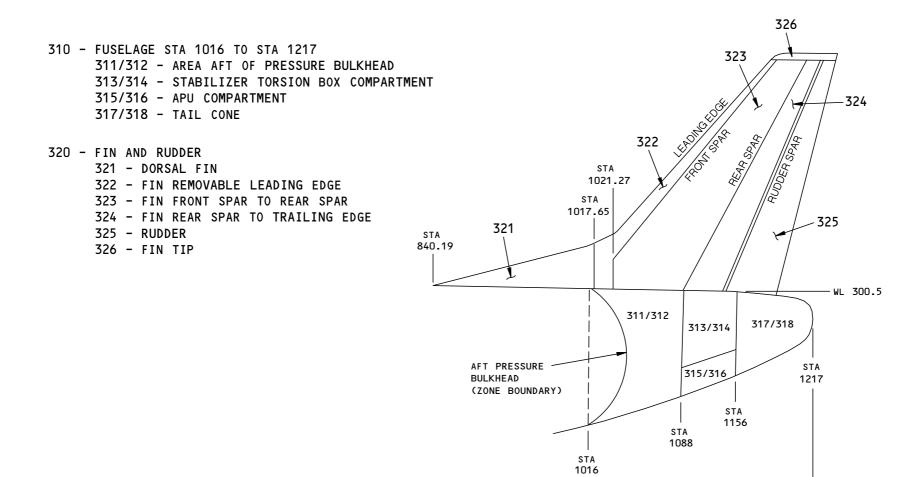


Figure A-4 737-600/700/800/900 MAJOR ZONES 300 - FUSELAGE 310; FIN AND RUDDER 320



737-600/700/800/900 MAJOR ZONES 300 - FUSELAGE 310; FIN AND RUDDER 320	
ZONE	AREA DESCRIPTION
310	Subzone - FUSELAGE STA 1016 TO STA 1217
311/312	AREA AFT OF PRESSURE BULKHEAD
313/314	STABILIZER TORSION BOX COMPARTMENT
315/316	APU COMPARTMENT
317/318	TAIL CONE
320	Subzone - FIN AND RUDDER
321	DORSAL FIN
322	FIN REMOVABLE LEADING EDGE
323	FIN FRONT SPAR TO REAR SPAR
324	FIN REAR SPAR TO TRAILING EDGE
325	RUDDER
326	FIN TIP



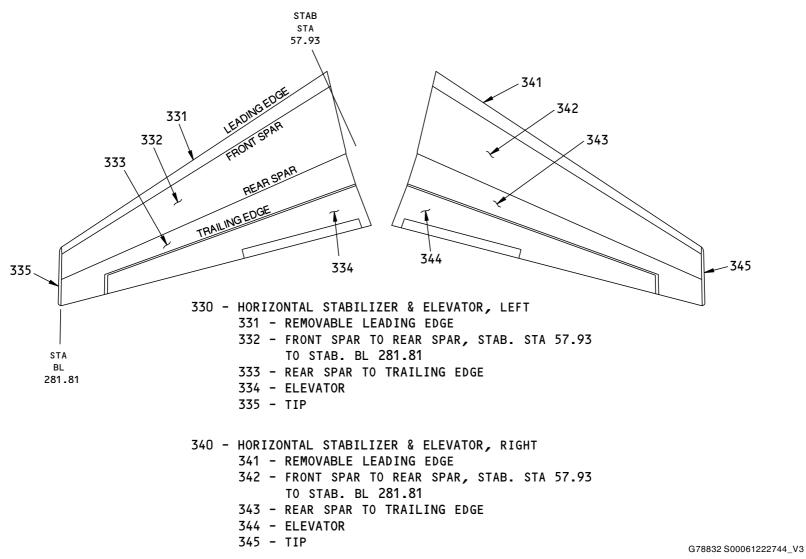


Figure A-5 737-600/700/800/900 MAJOR ZONES 300 - HORIZONTAL STABILIZER



737-600/700/800/900 MAJOR ZONES 300 - HORIZONTAL STABILIZER	
ZONE	AREA DESCRIPTION
330	Subzone - HORIZONTAL STABILIZER & ELEVATOR, LEFT
331	REMOVABLE LEADING EDGE
332	FRONT SPAR TO REAR SPAR, STAB. STA 57.93 TO STAB. BL 281.81
333	REAR SPAR TO TRAILING EDGE
334	ELEVATOR
335	TIP
340	Subzone - HORIZONTAL STABILIZER & ELEVATOR, RIGHT
341	REMOVABLE LEADING EDGE
342	FRONT SPAR TO REAR SPAR, STAB. STA 57.93 TO STAB. BL 281.81
343	REAR SPAR TO TRAILING EDGE
344	ELEVATOR
345	TIP



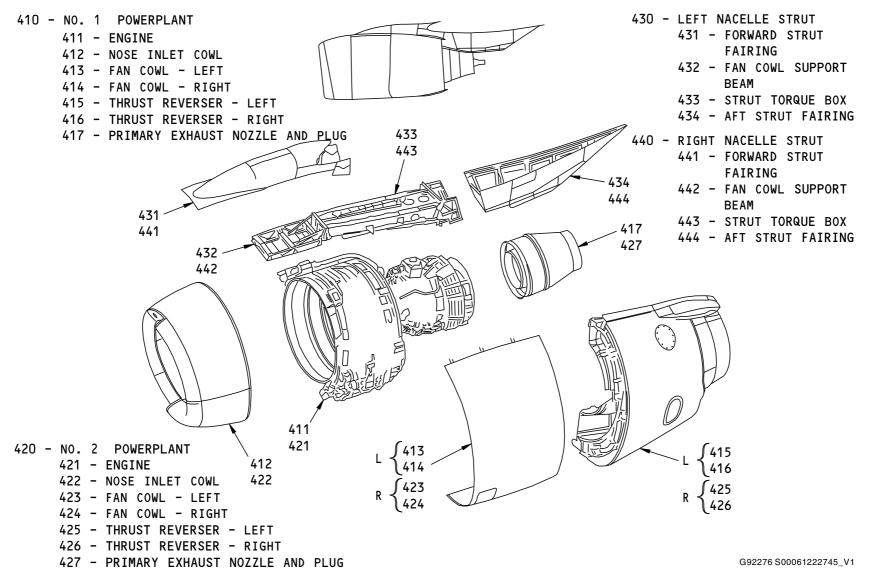


Figure A-6 737-600/700/800/900 MAJOR ZONES 400 - CFM56-7 POWERPLANT AND NACELLE



737-600/700/800/900 MAJOR ZONES 400 - CFM56-7 POWERPLANT AND NACELLE		
ZONE	AREA DESCRIPTION	
410	Subzone - NO. 1 POWERPLANT	
411	ENGINE	
412	NOSE INLET COWL	
413	FAN COWL - LEFT	
414	FAN COWL - RIGHT	
415	THRUST REVERSER - LEFT	
416	THRUST REVERSER - RIGHT	
417	PRIMARY EXHAUST NOZZLE AND PLUG	
420	Subzone - NO. 2 POWERPLANT	
421	ENGINE	
422	NOSE INLET COWL	
423	FAN COWL - LEFT	
424	FAN COWL - RIGHT	
425	THRUST REVERSER - LEFT	
426	THRUST REVERSER - RIGHT	
427	PRIMARY EXHAUST NOZZLE AND PLUG	
430	Subzone - LEFT NACELLE STRUT	
431	FORWARD STRUT FAIRING	
432	FAN COWL SUPPORT BEAM	
433	STRUT TORQUE BOX	
434	AFT STRUT FAIRING	
440	Subzone - RIGHT NACELLE STRUT	
441	FORWARD STRUT FAIRING	
442	FAN COWL SUPPORT BEAM	
443	STRUT TORQUE BOX	
444	AFT STRUT FAIRING	



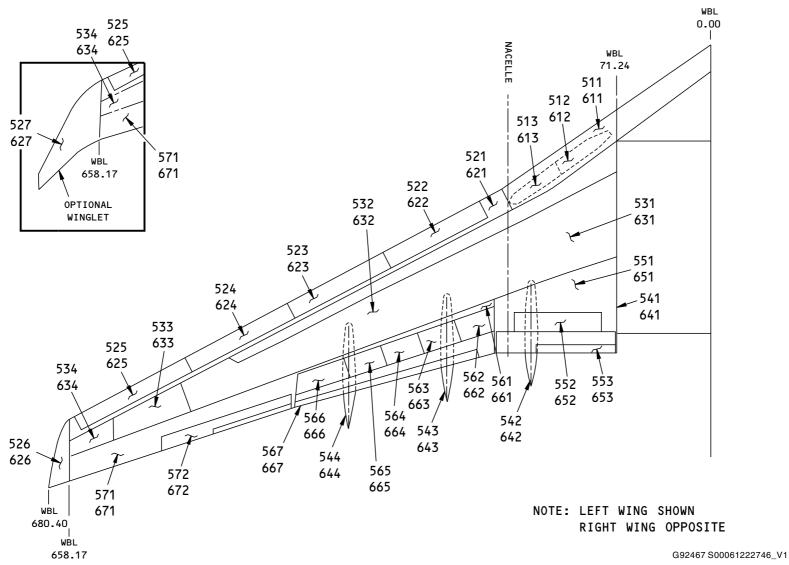


Figure A-7 737-600/700/800/900 MAJOR ZONES 500 - LEFT WING (SHOWN), MAJOR ZONE 600 - RIGHT WING (OPPOSITE)




737-600/700/800/900 MAJOR ZONES 500 - LEFT WING (SHOWN), MAJOR ZONE 600 - RIGHT WING (OPPOSITE)		
ZONE	AREA DESCRIPTION	
510/610	Subzone - WING LEADING EDGE - FORWARD OF FRONT SPAR, INBOARD OF NACELLE STRUT, INCLUDING NACELLE GAP COVER AREA	
511/611	LEADING EDGE TO FRONT SPAR	
512/612	KRUEGER FLAP NO. 2 AND NO. 3	
513/613	KRUEGER FLAP NO. 1 AND NO. 4	
520/620	Subzone - WING LEADING EDGE - FORWARD OF FRONT SPAR, OUTBOARD OF NACELLE STRUT	
521/621	LEADING EDGE TO FRONT SPAR	
522/622	SLATS NO. 4 AND NO. 5	
523/623	SLATS NO. 3 AND NO. 6	
524/624	SLATS NO 2 AND NO. 7	
525/625	SLATS NO. 1 AND NO. 8	
526/626	WING TIP	
527/627	WINGLET	
530/630	Subzone - WING INSPAR AREA (FUEL TANKS) - INBOARD OF WING RIB 25, WING BL 658.17	
531/631	CENTER FUEL TANK RIB 1 TO RIB 5	
532/632	MAIN TANK, RIB 5 TO RIB 22, WING STA 204.25 TO WING STA 643.50	
533/633	SURGE TANK, RIB 22 TO RIB 25, WING STA 643.50 TO WING BL 616.75	
534/634	DRY BAY	
540/640	Subzone - WING TRAILING EDGE FLAP TRACK FAIRINGS	
541/641	FAIRING FLAP SUPPORT NO. 4 AND NO. 5	
542/642	FAIRING FLAP SUPPORT NO. 3 AND NO. 6	
543/643	FAIRING FLAP SUPPORT NO. 2 AND NO. 7	
544/644	FAIRING FLAP SUPPORT NO. 1 AND NO. 8	
550/650	Subzone - WING TRAILING EDGE - AFT OF REAR SPAR, INBOARD OF OUTBOARD TRAILING EDGE FLAP	
551/651	REAR SPAR TO LANDING GEAR SUPPORT BEAM	
552/652	SPOILER NO. 6 AND NO. 7	



737-600/700/800/900 MAJOR ZONES 500 - LEFT WING (SHOWN), MAJOR ZONE 600 - RIGHT WING (OPPOSITE)	
ZONE	AREA DESCRIPTION
553/653	INBOARD FLAP
560/660	Subzone - WING TRAILING EDGE - AFT OF REAR SPAR, OUTBOARD OF INBOARD FLAP, INBOARD OF FIXED TRAILING EDGE
561/661	REAR SPAR TO TRAILING EDGE, OUTBOARD OF INBOARD FLAP, INBOARD OF FIXED TRAILING EDGE
562/662	SPOILER NO. 5 AND NO. 8
563/663	SPOILER NO. 4 AND NO. 9
564/664	SPOILER NO. 3 AND NO. 10
565/665	SPOILER NO. 2 AND NO. 11
566/666	SPOILER NO. 1 AND NO. 12
567/667	OUTBOARD FLAP
570/670	Subzone - WING TRAILING EDGE - OUTBOARD OF OUTBOARD FLAP, INBOARD OF WING TIP, WING BL 658.17
571/671	FIXED TRAILING EDGE
572/672	AILERON



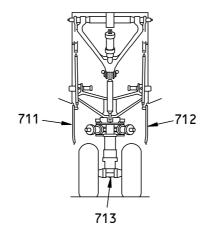


710 - NOSE LANDING GEAR & L.G. DOORS

711 - NOSE LANDING GEAR DOOR, LEFT

712 - NOSE LANDING GEAR DOOR, RIGHT

713 - NOSE LANDING GEAR

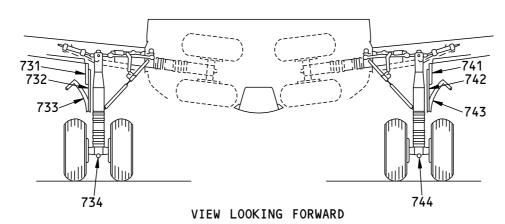

730 - LEFT MAIN LANDING GEAR & L.G. DOORS

731 - OUTBOARD DOOR, LEFT

732 - CENTER DOOR, LEFT

733 - INBOARD DOOR, LEFT

734 - LEFT MAIN LANDING GEAR

740 - RIGHT MAIN LANDING GEAR & L.G. DOORS

741 - OUTBOARD DOOR, RIGHT

742 - CENTER DOOR, RIGHT

743 - INBOARD DOOR, RIGHT

744 - RIGHT MAIN LANDING GEAR


G34016 S00061222747_V1

Figure A-8 737-600/700/800/900 MAJOR ZONES 700 - LANDING GEAR AND LANDING GEAR DOORS



737-600/700/800/900 MAJOR ZONES 700 - LANDING GEAR AND LANDING GEAR DOORS	
ZONE	AREA DESCRIPTION
710	Subzone - NOSE LANDING GEAR & L.G. DOORS
711	NOSE LANDING GEAR DOOR, LEFT
712	NOSE LANDING GEAR DOOR, RIGHT
713	NOSE LANDING GEAR
730	Subzone - LEFT MAIN LANDING GEAR & L.G. DOORS
731	OUTBOARD DOOR, LEFT
732	CENTER DOOR, LEFT
733	INBOARD DOOR, LEFT
734	LEFT MAIN LANDING GEAR
740	Subzone - RIGHT MAIN LANDING GEAR & L.G. DOORS
741	OUTBOARD DOOR, RIGHT
742	CENTER DOOR, RIGHT
743	INBOARD DOOR, RIGHT
744	RIGHT MAIN LANDING GEAR



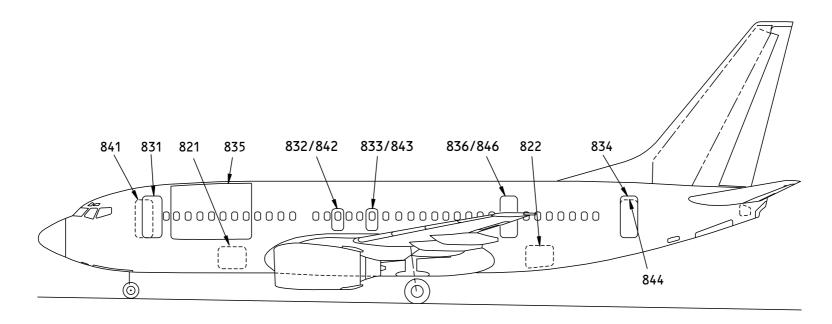

SUBZONE

- 820 LOWER HALF OF FUSELAGE RIGHT SIDE 821 FORWARD CARGO DOOR 822 AFT CARGO DOOR
- 830 UPPER HALF OF FUSELAGE LEFT SIDE
 - 831 FORWARD ENTRY DOOR
 - 832 AUTOMATIC OVERWING EXIT (-800/900)
 - 833 AUTOMATIC OVERWING EXIT
 - 834 AFT ENTRY DOOR
 - 835 MAIN DECK CARGO DOOR (-700C/800BCF)
 - 836 MID-EXIT DOOR LEFT (900ER ONLY)

- 840 UPPER HALF OF FUSELAGE RIGHT SIDE
 - 841 FORWARD ENTRY DOOR
 - 842 AUTOMATIC OVERWING EXIT (-800/900)
 - 843 AUTOMATIC OVERWING EXIT
 - 844 AFT ENTRY DOOR
 - 846 MID-EXIT DOOR RIGHT (900ER ONLY)

U86760 S00061222748_V2

Figure A-9 737-600/700/800/900 MAJOR ZONES 800 - PASSENGER AND CARGO DOORS



737-600/700/800/900 MAJOR ZONES 800 - PASSENGER AND CARGO DOORS		
ZONE	AREA DESCRIPTION	
820	Subzone - LOWER HALF OF FUSELAGE - RIGHT SIDE	
821	FORWARD CARGO DOOR	
822	AFT CARGO DOOR	
830	Subzone - UPPER HALF OF FUSELAGE - LEFT SIDE	
831	FORWARD ENTRY DOOR	
832	AUTOMATIC OVERWING EXIT (-800/900)	
833	AUTOMATIC OVERWING EXIT	
834	AFT ENTRY DOOR	
835	MAIN DECK CARGO DOOR (-700C ONLY)	
836	MID-EXIT DOOR - LEFT (900ER ONLY)	
840	Subzone - UPPER HALF OF FUSELAGE - RIGHT SIDE	
841	FORWARD ENTRY DOOR	
842	AUTOMATIC OVERWING EXIT (-800/900)	
843	AUTOMATIC OVERWING EXIT	
844	AFT ENTRY DOOR	
846	MID-EXIT DOOR - RIGHT (900ER ONLY)	



737-600/700/800/900/900ER MAINTENANCE PLANNING DOCUMENT ACCESS PANELS

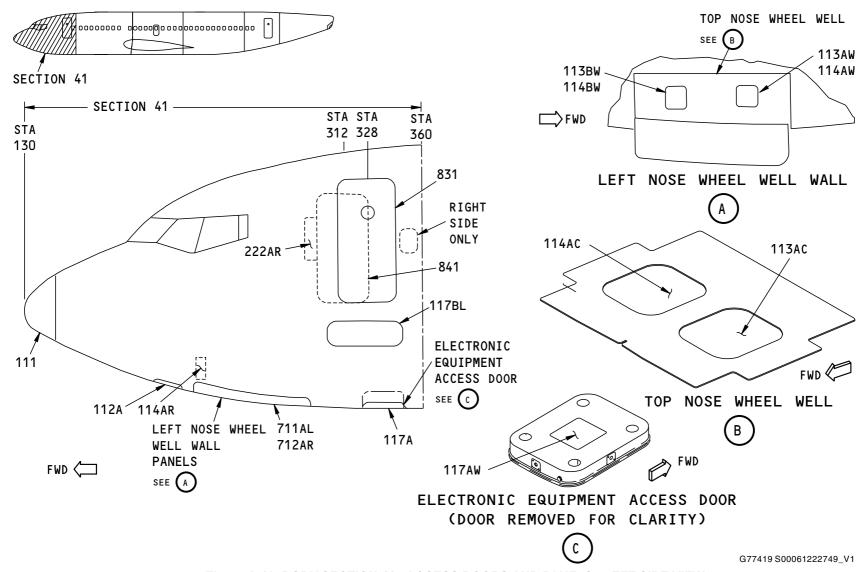


Figure A-10 BODY SECTION 41 - ACCESS DOORS AND PANELS - LEFT SIDE VIEW



ACCESS PANELS FOR BODY SECTION 41							
ACCESS PANEL AND DOOR	MAN-	MAN-HOURS		MAJOR ZONE 100	LOCATION BY		
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 110	ZONE		
111	0.33	0.25	ALL/ALL	RADOME	111		
112A	0.03	0.03	ALL/ALL	FWD ACCESS DOOR	112		
113AC	0.03	0.03	ALL/ALL	FWD NOSE WHEEL WELL UPPER PANEL	113		
113AW	0.25	0.25	ALL/ALL	FWD NOSE WHEEL WELL PANEL	113		
113BW	0.25	0.25	ALL/ALL	FWD NOSE WHEEL WELL PANEL	113		
114AC	0.03	0.03	ALL/ALL	FWD NOSE WHEEL WELL UPPER PANEL	114		
114AR	0.02	0.02	ALL/ALL	EXTERNAL POWER RECEPTACLE DOOR	114		
114AW	0.25	0.25	ALL/ALL	FWD NOSE WHEEL WELL PANEL	114		
114BW	0.25	0.25	ALL/ALL	FWD NOSE WHEEL WELL PANEL	114		
117A	0.03	0.03	ALL/ALL	ELECTRONIC EQUIPMENT ACCESS DOOR	117		
117AW	0.02	0.02	ALL/ALL	ELECTRONIC EQUIPMENT ACCESS DOOR COVER	117		
117BL	0.05	0.05	ALL/ALL	FWD AIR STAIR DOOR	117		

ACCESS PANELS FOR BODY SECTION 41							
ACCESS PANEL MAN-HOURS MAJOR ZONE 200 LOCATION							
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 220	ZONE		
222AR	0.03	0.03	ALL/ALL	FWD GALLEY SVC DOOR HINGE & TORQUE TUBE ACCESS - EXTERIOR PANEL	222		

ACCESS PANELS FOR BODY SECTION 41							
ACCESS PANEL MAN-HOURS MAJOR ZONE 700					LOCATION BY		
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 710	ZONE		
711AL	0.02	0.02	ALL/ALL	FWD NOSE WHEEL DOOR	113		
712AR	0.02	0.02	ALL/ALL	FWD NOSE WHEEL DOOR	114		



ACCESS PANELS FOR BODY SECTION 41							
ACCESS PANEL AND DOOR	MAN-HOURS MAIOR ZONE 800						
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 830/840	ZONE		
831	0.02	0.02	ALL/ALL	FWD ENTRY DOOR	831		
841	0.02	0.02	ALL/ALL	FWD GALLEY SERVICE DOOR	841		





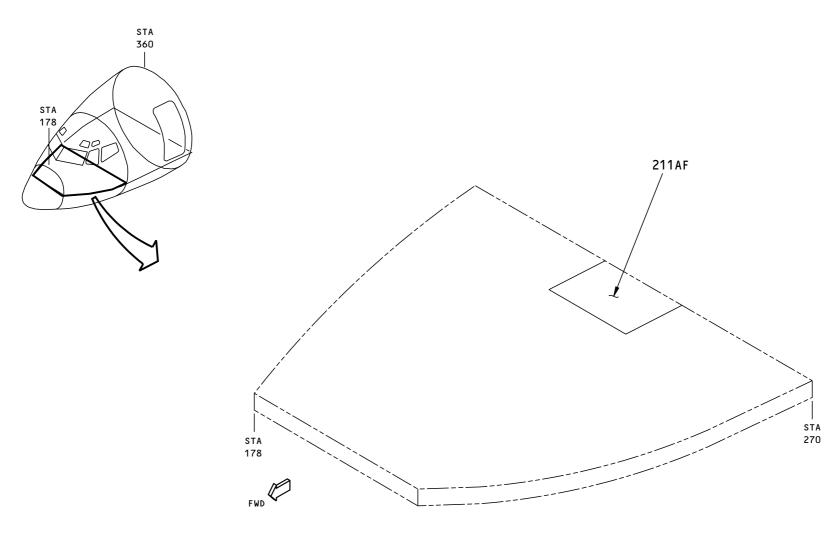


Figure A-11 FLIGHT COMPARTMENT FLOOR PANEL

K18101 S00061222750_V1



ACCESS PANELS FOR FLIGHT COMPARTMENT							
ACCESS PANEL MAN-HOURS MAJOR ZONE 200 LOCATION I							
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 210	ZONE		
211AF	1.00	2.00	ALL/ALL	PANEL ASSY - FLIGHT COMPARTMENT FLOOR	211		





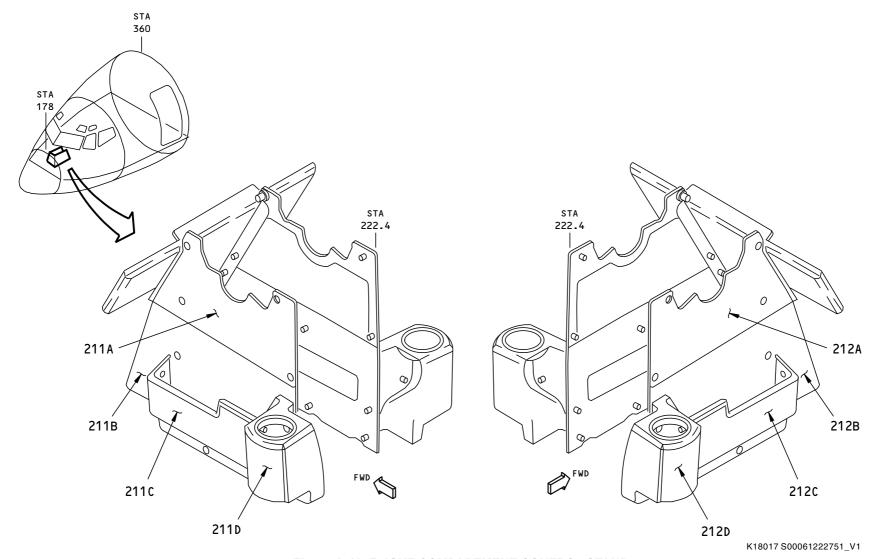


Figure A-12 FLIGHT COMPARTMENT CONTROL STAND



ACCESS PANELS FOR FLIGHT COMPARTMENT CONTROL STAND							
ACCESS PANEL MAN	MAN-HOURS		MAJOR ZONE 200	LOCATION BY			
NUMBER	OPEN	CLOSE	OSE APL/ENG APPLIC	SUBZONE: SUBZONE 210	ZONE		
211A	0.08	0.08	ALL/ALL	PANEL ASSY - CONTROL STAND ACCESS	211		
211B	0.08	0.08	ALL/ALL	PANEL ASSY - CONTROL STAND ACCESS	211		
211C	0.08	0.08	ALL/ALL	PANEL ASSY - CONTROL STAND ACCESS	211		
211D	0.03	0.03	ALL/ALL	PANEL ASSY - CONTROL STAND ACCESS, CUP HOLDER	211		
212A	0.08	0.08	ALL/ALL	PANEL ASSY - CONTROL STAND ACCESS	212		
212B	0.08	0.08	ALL/ALL	PANEL ASSY - CONTROL STAND ACCESS	212		
212C	0.08	0.08	ALL/ALL	PANEL ASSY - CONTROL STAND ACCESS	212		
212D	0.03	0.03	ALL/ALL	PANEL ASSY - CONTROL STAND ACCESS, CUP HOLDER	212		





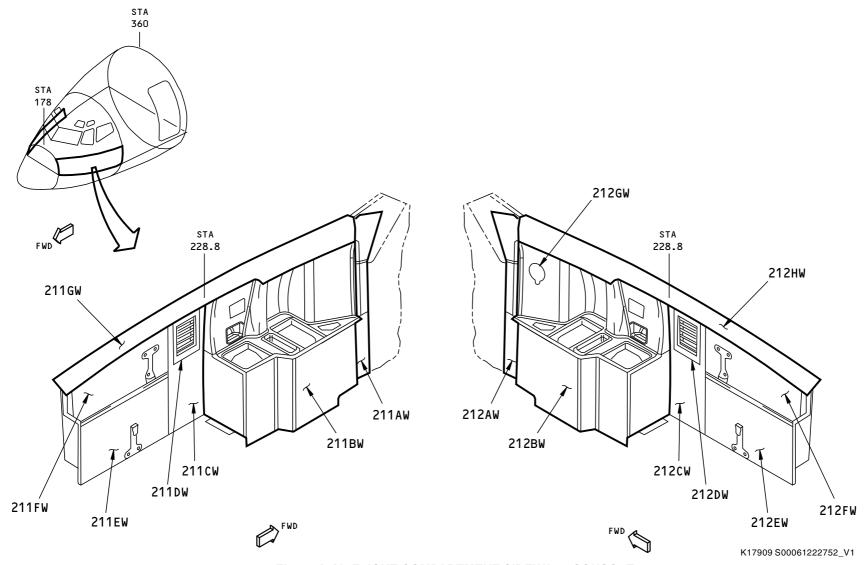


Figure A-13 FLIGHT COMPARTMENT SIDEWALL CONSOLE



	ACCESS PANELS FOR FLIGHT COMPARTMENT SIDEWALL CONSOLE							
ACCESS PANEL AND DOOR	MAN-	MAN-HOURS		MAJOR ZONE 200	LOCATION BY			
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 210	ZONE			
211AW	0.15	0.15	ALL/ALL	PANEL ASSY - FLIGHT COMPARTMENT CONSOLE	211			
211BW	0.25	0.25	ALL/ALL	PANEL ASSY - FLIGHT COMPARTMENT CONSOLE	211			
211CW	0.10	0.10	ALL/ALL	PANEL ASSY - FLIGHT COMPARTMENT CONSOLE	211			
211DW	0.05	0.05	ALL/ALL	PANEL ASSY - FLIGHT COMPARTMENT CONSOLE - VENT COVER	211			
211EW	0.10	0.10	ALL/ALL	PANEL ASSY - FLIGHT COMPARTMENT CONSOLE	211			
211FW	0.10	0.10	ALL/ALL	PANEL ASSY - FLIGHT COMPARTMENT CONSOLE	211			
211GW	0.17	0.17	ALL/ALL	PANEL ASSY - FLIGHT COMPARTMENT CONSOLE - EDGING	211			
212AW	0.15	0.15	ALL/ALL	PANEL ASSY - FLIGHT COMPARTMENT CONSOLE	212			
212BW	0.25	0.25	ALL/ALL	PANEL ASSY - FLIGHT COMPARTMENT CONSOLE	212			
212CW	0.10	0.10	ALL/ALL	PANEL ASSY - FLIGHT COMPARTMENT CONSOLE	212			
212DW	0.05	0.05	ALL/ALL	PANEL ASSY - FLIGHT COMPARTMENT CONSOLE - VENT COVER	212			
212EW	0.10	0.10	ALL/ALL	PANEL ASSY - FLIGHT COMPARTMENT CONSOLE	212			
212FW	0.10	0.10	ALL/ALL	PANEL ASSY - FLIGHT COMPARTMENT CONSOLE	212			
212GW	0.05	0.05	ALL/ALL	PANEL ASSY - FLIGHT COMPARTMENT CONSOLE - COVER PLATE	212			
212HW	0.17	0.17	ALL/ALL	PANEL ASSY - FLIGHT COMPARTMENT CONSOLE - EDGING	212			



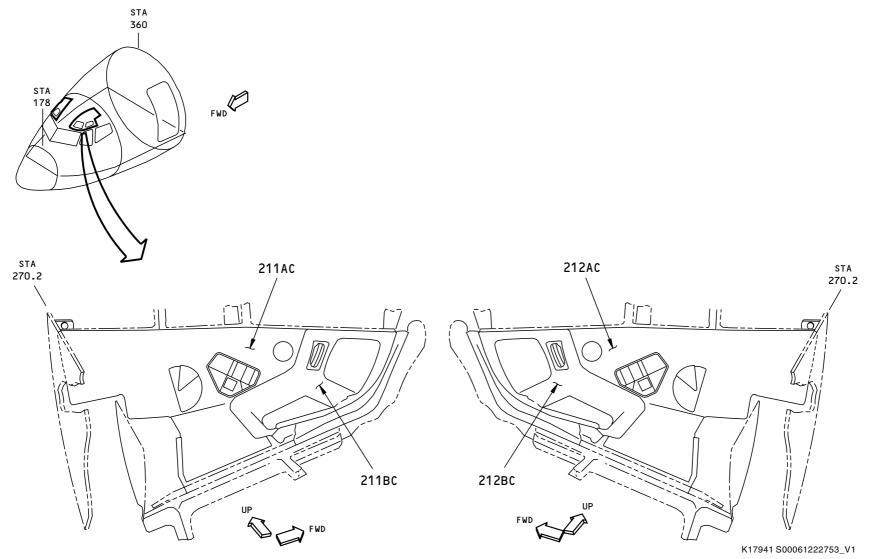


Figure A-14 FLIGHT COMPARTMENT CEILING PANEL



ACCESS PANELS FOR FLIGHT COMPARTMENT CEILING PANEL							
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 200	LOCATION BY		
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 210	ZONE		
211AC	0.17	0.17	ALL/ALL	PANEL ASSY - FLIGHT COMPARTMENT CEILING	211		
211BC	0.05	0.05	ALL/ALL	PANEL ASSY - FLIGHT COMPARTMENT CEILING	211		
212AC	0.17	0.17	ALL/ALL	PANEL ASSY - FLIGHT COMPARTMENT CEILING	212		
212BC	0.05	0.05	ALL/ALL	PANEL ASSY - FLIGHT COMPARTMENT CEILING	212		



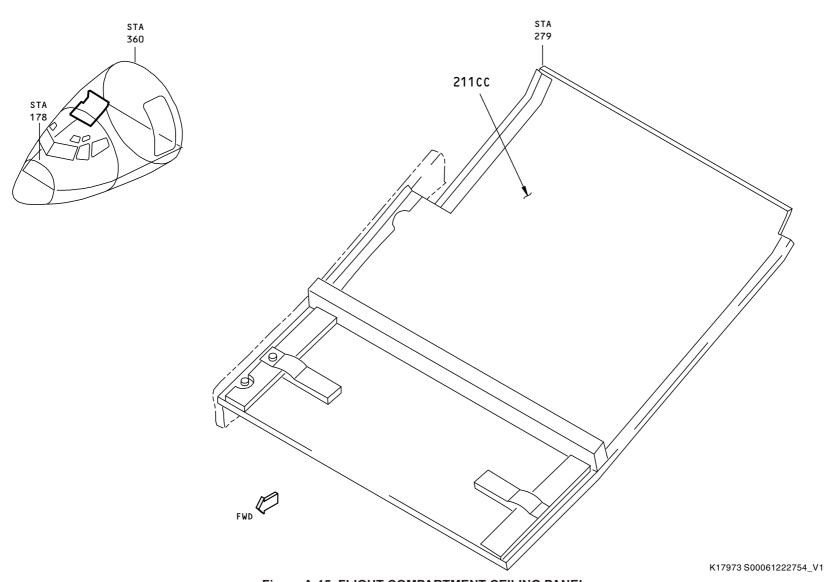



Figure A-15 FLIGHT COMPARTMENT CEILING PANEL



ACCESS PANELS FOR FLIGHT COMPARTMENT CEILING PANEL								
ACCESS PANEL MAN-HOURS			MAJOR ZONE 200	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 210	ZONE			
211CC	0.15	0.15	ALL/ALL	PANEL ASSY - FLIGHT COMPARTMENT CEILING	211			





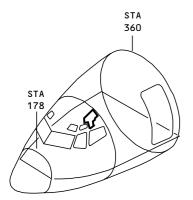


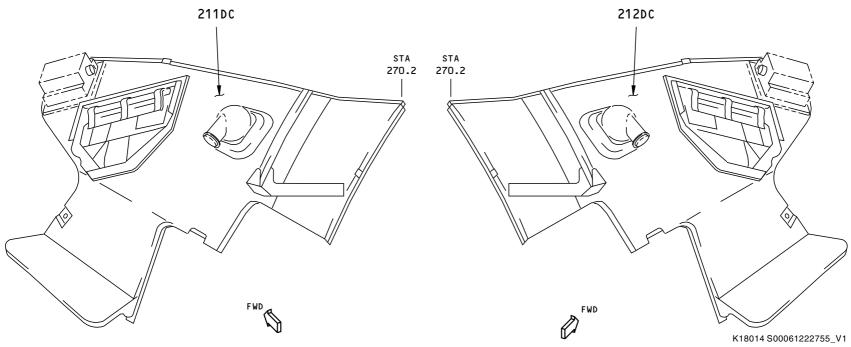


Figure A-16 FLIGHT COMPARTMENT CEILING PANELS



ACCESS PANELS FOR FLIGHT COMPARTMENT CEILING PANELS										
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 200	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 210	ZONE					
211DC	0.17	0.17	ALL/ALL	PANEL ASSY - FLIGHT COMPARTMENT CEILING	211					
212DC	0.17	0.17	ALL/ALL	PANEL ASSY - FLIGHT COMPARTMENT CEILING	212					



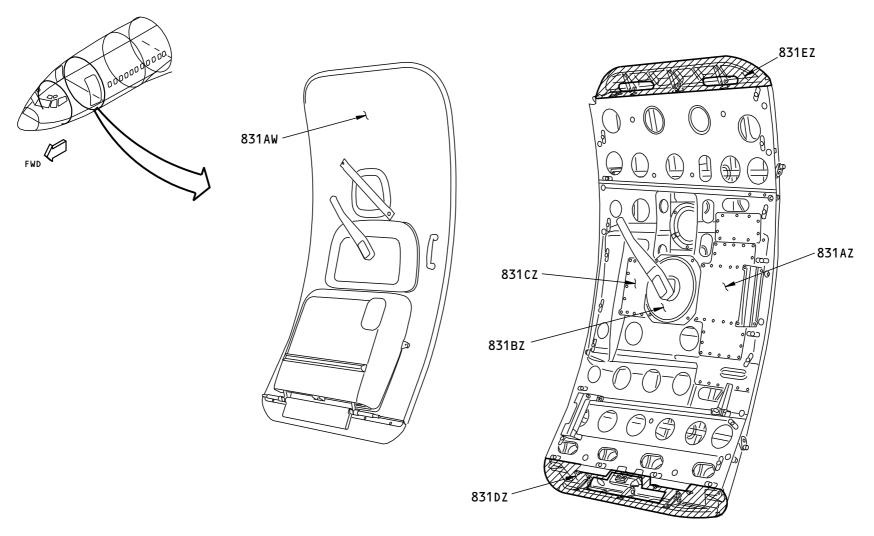

H88864 S00061222756_V1

Figure A-17 FORWARD ENTRY DOOR PANELS



	ACCESS PANELS FOR BODY SECTION 41 - FORWARD ENTRY DOOR PANELS									
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 800	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 830	ZONE					
831AW	0.18	0.18	ALL/ALL	FWD ENTRY DOOR - DOOR LINER	831					
831AZ	0.18	0.20	ALL/ALL	FWD ENTRY DOOR - TORQUE TUBE ACCESS PANEL	831					
831BZ	0.10	0.10	ALL/ALL	FWD ENTRY DOOR - HANDLE BOX AND CAM FOR HANDLE BOX ACCESS	831					
831CZ	0.18	0.20	ALL/ALL	FWD ENTRY DOOR - HANDLE BOX ACCESS	831					
831DZ	0.18	0.20	ALL/ALL	FWD ENTRY DOOR - LOWER HINGE ACCESS PANEL	831					
831EZ	0.18	0.20	ALL/ALL	FWD ENTRY DOOR - UPPER HINGE ACCESS PANEL	831					



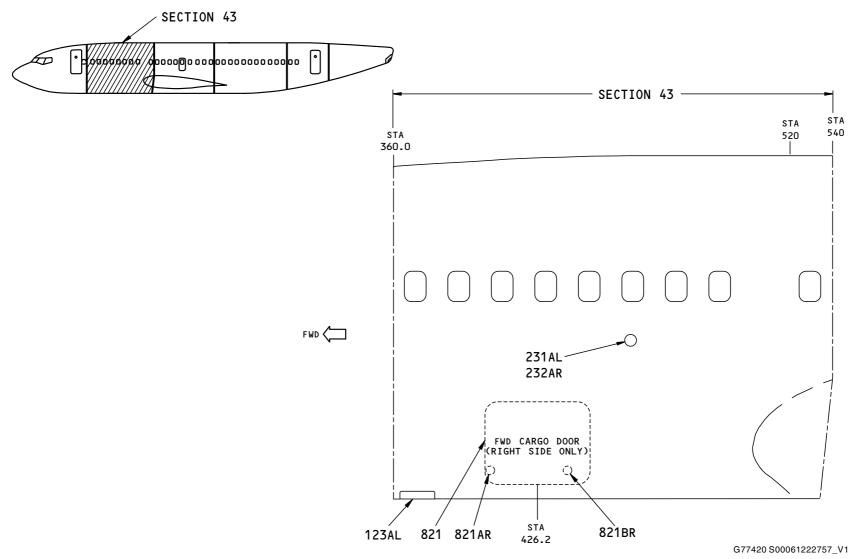


Figure A-18 ACCESS DOORS AND PANELS (-600) LEFT SIDE VIEW



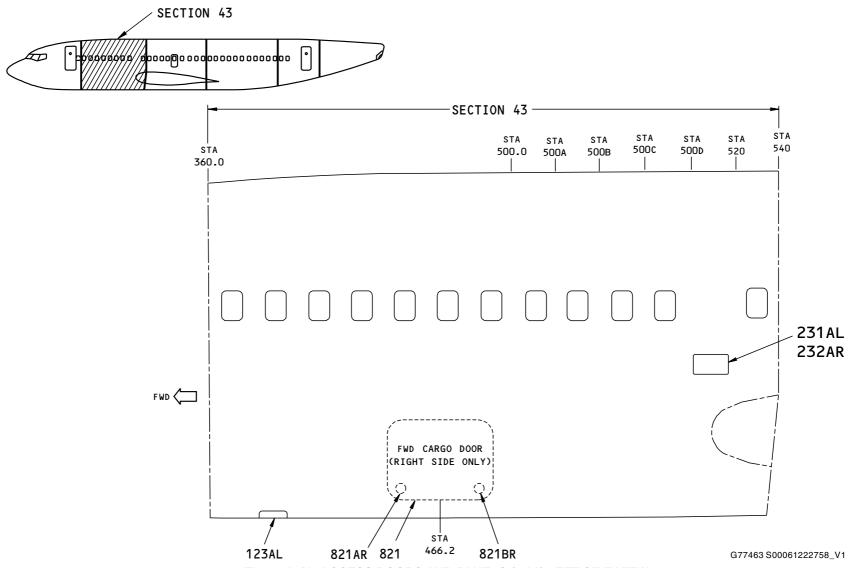


Figure A-19 ACCESS DOORS AND PANELS (-700) LEFT SIDE VIEW





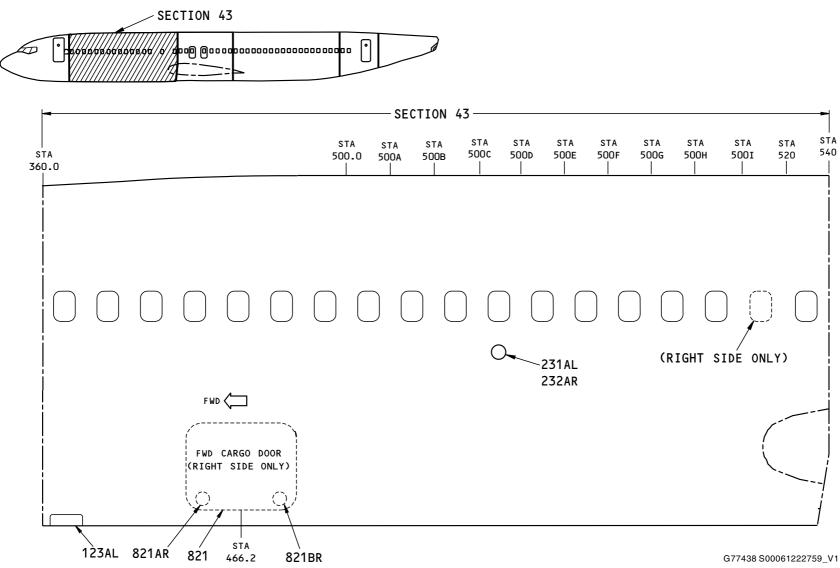


Figure A-20 ACCESS DOORS AND PANELS (-800) LEFT SIDE VIEW





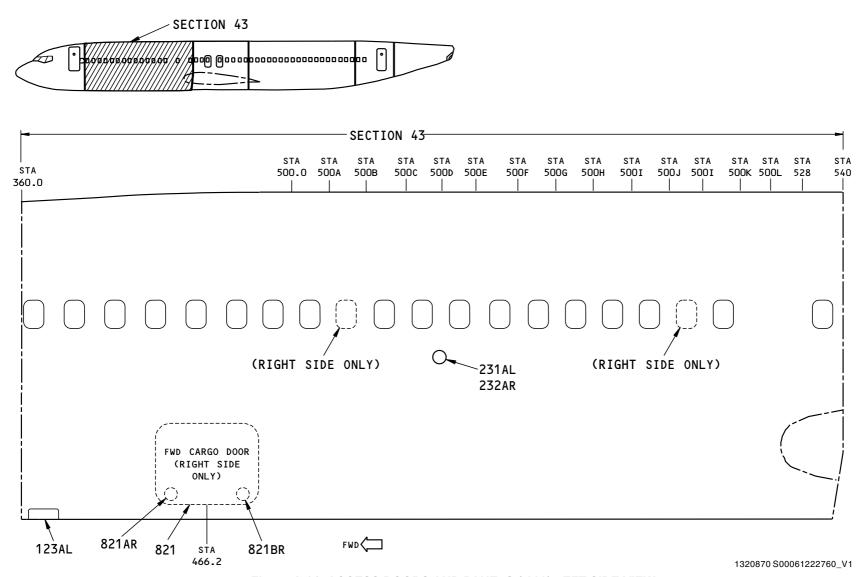


Figure A-21 ACCESS DOORS AND PANELS (-900) LEFT SIDE VIEW



	ACCESS PANELS FOR BODY SECTION 43								
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 100	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 120	ZONE				
123AL	0.07	0.07	ALL/ALL	A/C COOLING EXHAUST	123				

	ACCESS PANELS FOR BODY SECTION 43									
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 200	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 230	ZONE					
231AL	0.05	0.05	ALL/ALL	WING SCANNING LIGHT	231					
232AR	0.05	0.05	ALL/ALL	WING SCANNING LIGHT	232					

	ACCESS PANELS FOR BODY SECTION 43									
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 800	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 820	ZONE					
821	0.02	0.02	ALL/ALL	FWD CARGO DOOR	821					
821AR	0.02	0.02	ALL/ALL	ACCESS PANEL ON FWD CARGO DOOR	821					
821BR	0.02	0.02	ALL/ALL	ACCESS PANEL ON FWD CARGO DOOR	821					



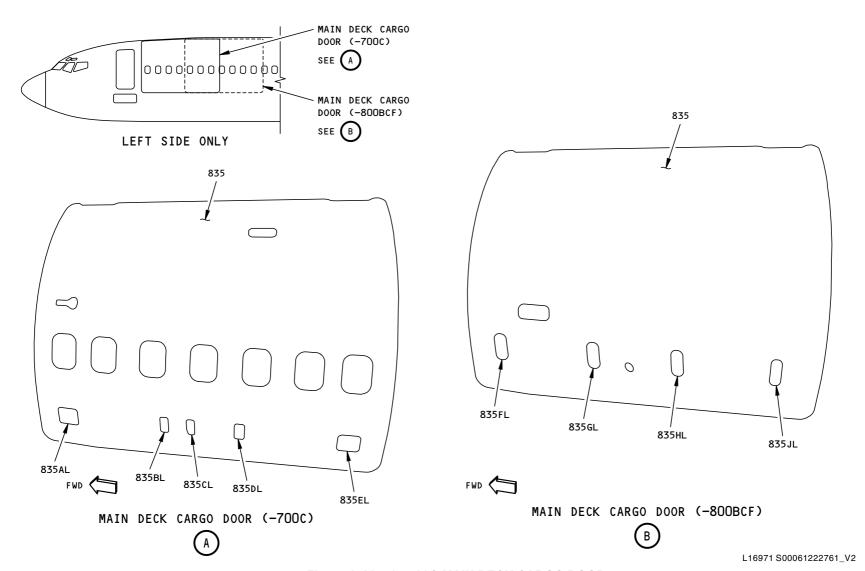


Figure A-22 737-700C MAIN DECK CARGO DOOR



	ACCESS PANELS FOR BODY SECTION 43 - 737-700C AND -800BCF MAIN DECK CARGO DOOR									
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 800	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 830	ZONE					
835	0.03	0.03	700, 800/ALL	MAIN DECK CARGO DOOR	835					
835AL	0.08	0.08	700/ALL	PANEL ASSY - PULLY LOCKS ACCESS (737-700C ONLY)	835					
835BL	0.05	0.05	700/ALL	PANEL ASSY - LADDER TORQUE TUBE ACCESS (737-700C ONLY)	835					
835CL	0.05	0.05	700/ALL	PANEL ASSY - LADDER TORQUE TUBE ACCESS (737-700C ONLY)	835					
835DL	0.05	0.05	700/ALL	PANEL ASSY - LADDER TORQUE TUBE ACCESS (737-700C ONLY)	835					
835EL	0.08	0.08	700/ALL	PANEL ASSY - PULLY LOCKS ACCESS (737-700C ONLY)	835					
835FL	0.05	0.05	800/ALL	PANEL ASSY - TORQUE TUBE ACCESS (737-800BCF ONLY)	835					
835GL	0.05	0.05	800/ALL	PANEL ASSY - TORQUE TUBE ACCESS (737-800BCF ONLY)	835					
835HL	0.05	0.05	800/ALL	PANEL ASSY - TORQUE TUBE ACCESS (737-800BCF ONLY)	835					
835JL	0.05	0.05	800/ALL	PANEL ASSY - TORQUE TUBE ACCESS (737-800BCF ONLY)	835					





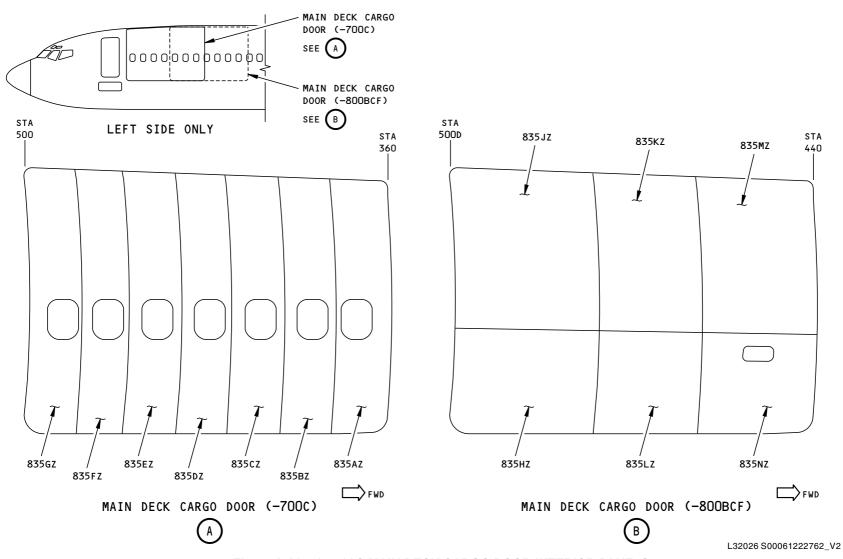


Figure A-23 737-700C MAIN DECK CARGO DOOR INTERIOR PANELS



			ACCESS PANE	ELS FOR BODY SECTION 43	
ACCESS PANEL AND DOOR	MAN	-HOURS		MAJOR ZONE 800	LOCATION BY
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 830	ZONE
835AZ	0.10	0.12	700/ALL	PANEL ASSY - MAIN DECK CARGO DOOR INTERIOR ACCESS (737-700C ONLY)	835
835BZ	0.10	0.12	700/ALL	PANEL ASSY - MAIN DECK CARGO DOOR INTERIOR ACCESS (737-700C ONLY)	835
835CZ	0.10	0.12	700/ALL	PANEL ASSY - MAIN DECK CARGO DOOR INTERIOR ACCESS (737-700C ONLY)	835
835DZ	0.10	0.12	700/ALL	PANEL ASSY - MAIN DECK CARGO DOOR INTERIOR ACCESS (737-700C ONLY)	835
835EZ	0.10	0.12	700/ALL	PANEL ASSY - MAIN DECK CARGO DOOR INTERIOR ACCESS (737-700C ONLY)	835
835FZ	0.10	0.12	700/ALL	PANEL ASSY - MAIN DECK CARGO DOOR INTERIOR ACCESS (737-700C ONLY)	835
835GZ	0.10	0.12	700/ALL	PANEL ASSY - MAIN DECK CARGO DOOR INTERIOR ACCESS (737-700C ONLY)	835
835HZ	0.10	0.12	800/ALL	PANEL ASSY - MAIN DECK CARGO DOOR INTERIOR ACCESS (737-800BCF ONLY)	835
835JZ	0.10	0.12	800/ALL	PANEL ASSY - MAIN DECK CARGO DOOR INTERIOR ACCESS (737-800BCF ONLY)	835
835KZ	0.10	0.12	800/ALL	PANEL ASSY - MAIN DECK CARGO DOOR INTERIOR ACCESS (737-800BCF ONLY)	835
835LZ	0.10	0.12	800/ALL	PANEL ASSY - MAIN DECK CARGO DOOR INTERIOR ACCESS (737-800BCF ONLY)	835
835MZ	0.10	0.12	800/ALL	PANEL ASSY - MAIN DECK CARGO DOOR INTERIOR ACCESS (737-800BCF ONLY)	835
835NZ	0.10	0.12	800/ALL	PANEL ASSY - MAIN DECK CARGO DOOR INTERIOR ACCESS (737-800BCF ONLY)	835



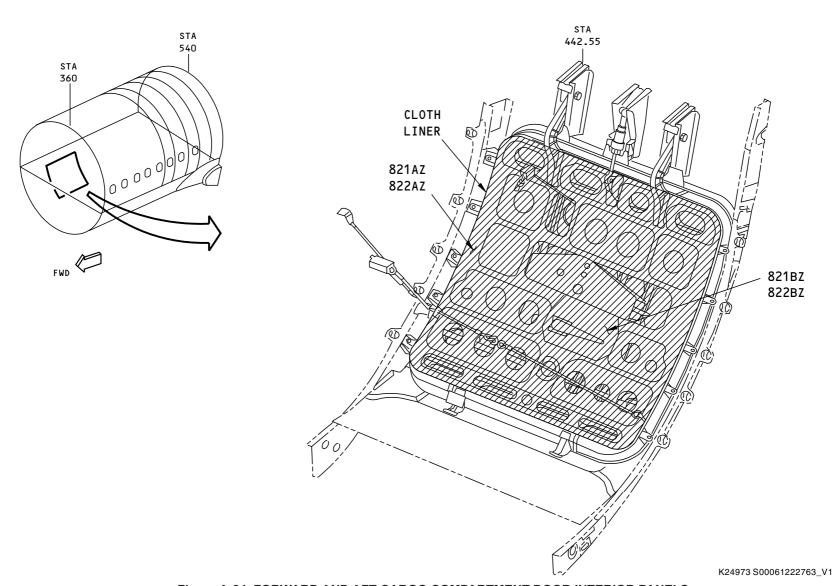


Figure A-24 FORWARD AND AFT CARGO COMPARTMENT DOOR INTERIOR PANELS



	ACCESS PANELS FOR CARGO DOORS - INTERIOR									
ACCESS PANEL MAN-HOURS			MAJOR ZONE 800	LOCATION BY						
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 820	ZONE					
821AZ	0.15	0.15	ALL/ALL	PANEL ASSY - FORWARD CARGO DOOR - LINER	821					
821BZ	0.05	0.05	ALL/ALL	PANEL ASSY - FORWARD CARGO DOOR - HANDLE BOX COVER PLATE	821					
822AZ	0.15	0.15	ALL/ALL	PANEL ASSY - AFT CARGO DOOR - LINER	822					
822BZ	0.05	0.05	ALL/ALL	PANEL ASSY - AFT CARGO DOOR - HANDLE BOX COVER PLATE	822					





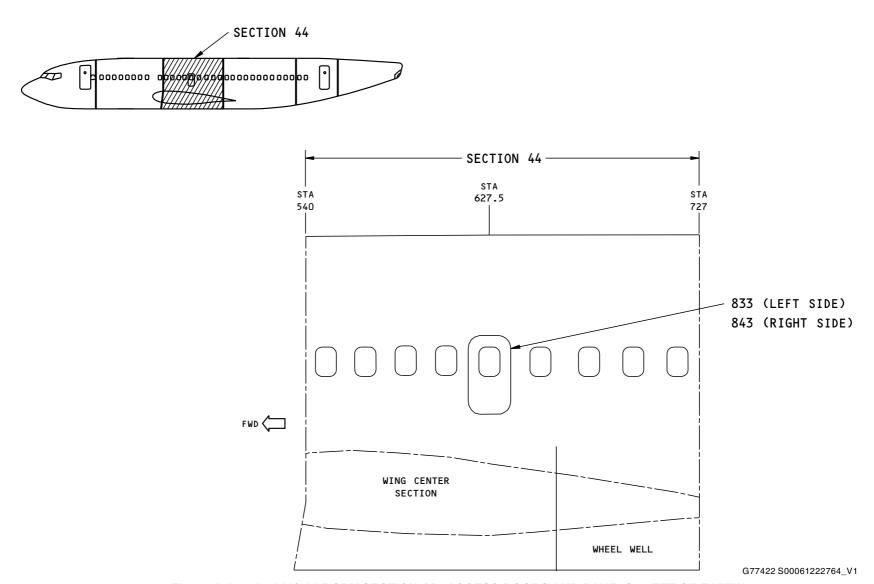


Figure A-25 737-600/700 BODY SECTION 44 - ACCESS DOORS AND PANELS - LEFT SIDE VIEW



ACCESS PANELS FOR BODY SECTION 44									
ACCESS PANEL MAN-HOURS			MAJOR ZONE 800	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 830/840	ZONE				
833	0.05	0.05	ALL/ALL	EMERGENCY HATCH	231				
843	0.05	0.05	ALL/ALL	EMERGENCY HATCH	232				





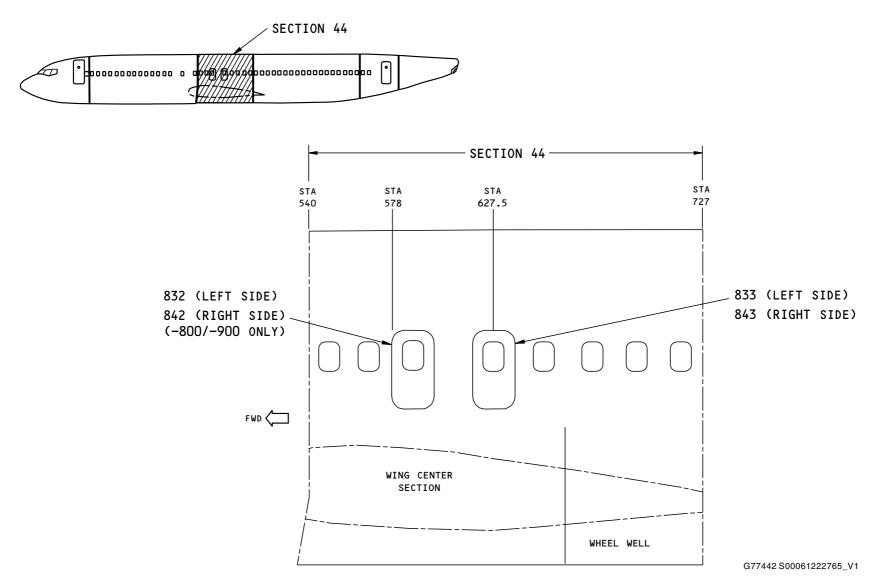


Figure A-26 737-800/900 - BODY SECTION 44 - ACCESS DOORS AND PANELS - LEFT SIDE VIEW



	ACCESS PANELS FOR BODY SECTION 44									
ACCESS PANEL MAN-HOURS		MAJOR ZONE 800	LOCATION BY							
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 830/840	ZONE					
832	0.05	0.05	800, 900/ALL	EMERGENCY HATCH (737-800/900 ONLY)	231					
833	0.05	0.05	ALL/ALL	EMERGENCY HATCH	231					
842	0.05	0.05	800, 900/ALL	EMERGENCY HATCH (737-800/900 ONLY)	232					
843	0.05	0.05	ALL/ALL	EMERGENCY HATCH	232					



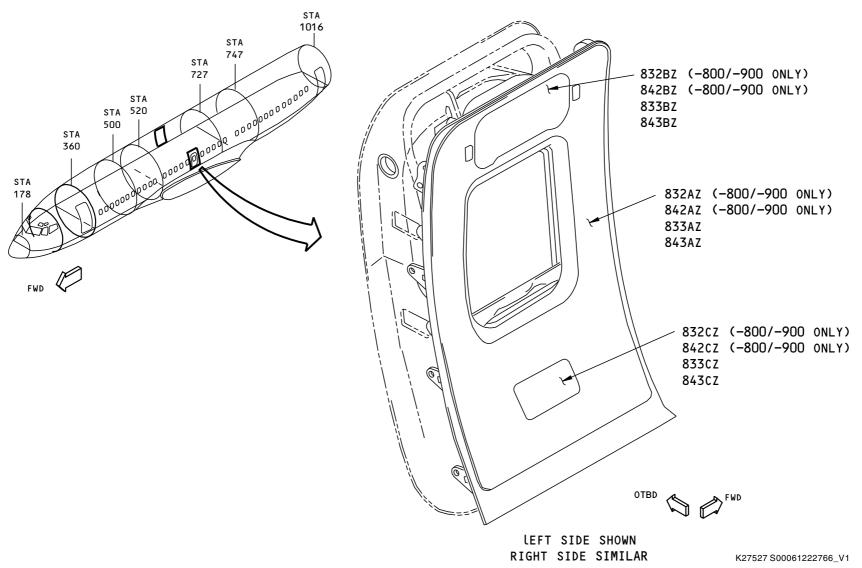


Figure A-27 EMERGENCY ESCAPE HATCH



			ACCESS PANE	ELS FOR BODY SECTION 44	
ACCESS PANEL AND DOOR	MAN-	-HOURS		MAJOR ZONE 800	LOCATION BY
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 830/840	ZONE
832AZ	0.15	0.15	800, 900/ALL	PANEL ASSY - EMERGENCY ESCAPE HATCH - DOOR LINER (737-800/900 ONLY)	832
832BZ	0.05	0.05	800, 900/ALL	PANEL ASSY - EMERGENCY ESCAPE HATCH - COVER PLATE (737-800/900 ONLY)	832
832CZ	0.05	0.05	800, 900/ALL	PANEL ASSY - EMERGENCY ESCAPE HATCH - COVER PLATE (737-800/900)	832
833AZ	0.15	0.15	ALL/ALL	PANEL ASSY - EMERGENCY ESCAPE HATCH - DOOR LINER	833
833BZ	0.05	0.05	ALL/ALL	PANEL ASSY - EMERGENCY ESCAPE HATCH - COVER PLATE	833
833CZ	0.05	0.05	ALL/ALL	PANEL ASSY - EMERGENCY ESCAPE HATCH - COVER PLATE	833
842AZ	0.15	0.15	800, 900/ALL	PANEL ASSY - EMERGENCY ESCAPE HATCH - DOOR LINER (737-800/900 ONLY)	842
842BZ	0.05	0.05	800, 900/ALL	PANEL ASSY - EMERGENCY ESCAPE HATCH - COVER PLATE (737-800/900 ONLY)	842
842CZ	0.05	0.05	800, 900/ALL	PANEL ASSY - EMERGENCY ESCAPE HATCH - COVER PLATE (737-800/900)	842
843AZ	0.15	0.15	ALL/ALL	PANEL ASSY - EMERGENCY ESCAPE HATCH - DOOR LINER	843
843BZ	0.05	0.05	ALL/ALL	PANEL ASSY - EMERGENCY ESCAPE HATCH - COVER PLATE	843
843CZ	0.05	0.05	ALL/ALL	PANEL ASSY - EMERGENCY ESCAPE HATCH - COVER PLATE	843



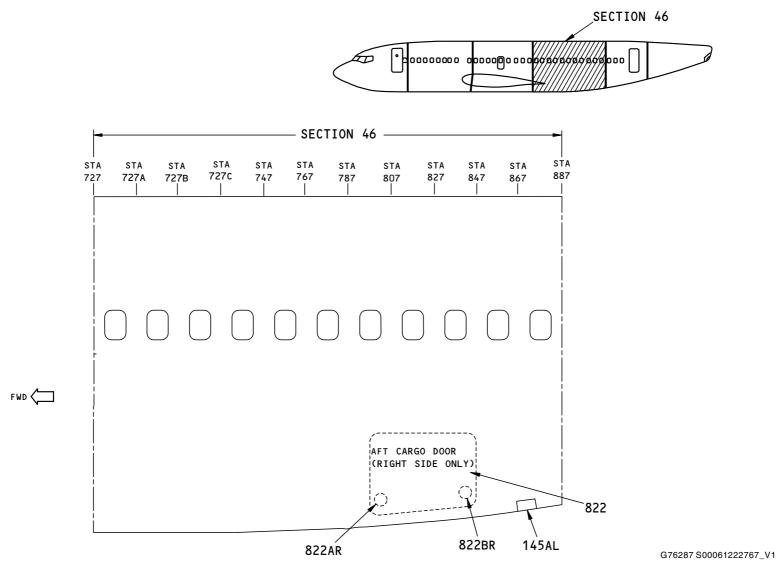


Figure A-28 BODY SECTION 46 - ACCESS DOORS AND PANELS (-600) - LEFT SIDE VIEW



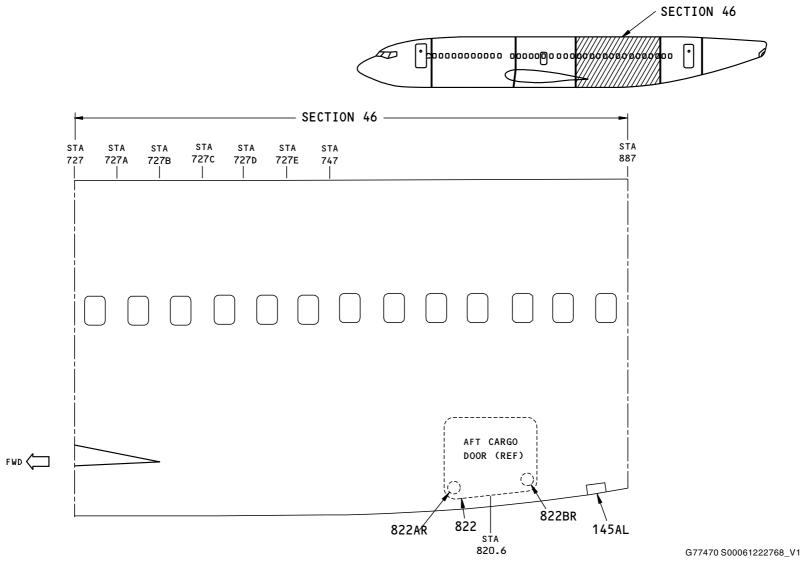


Figure A-29 BODY SECTION 46 - ACCESS DOORS AND PANELS (-700) - LEFT SIDE VIEW



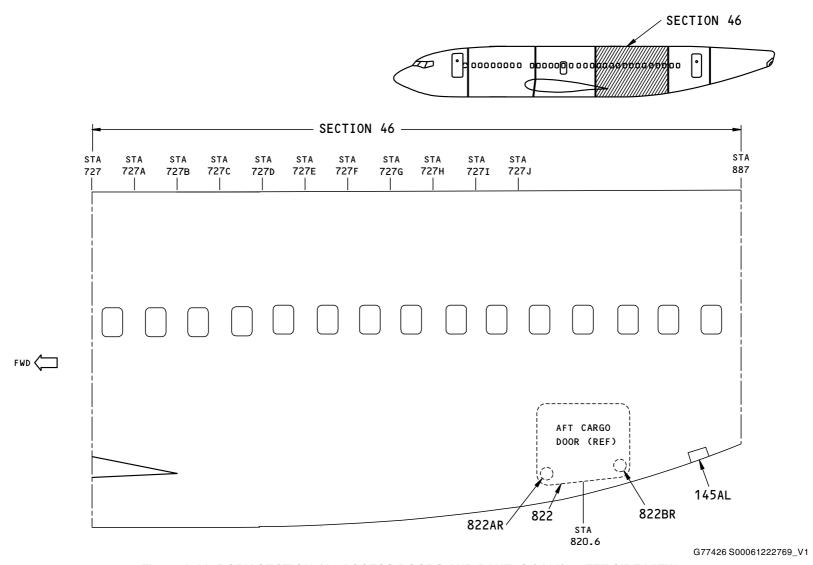


Figure A-30 BODY SECTION 46 - ACCESS DOORS AND PANELS (-800) - LEFT SIDE VIEW



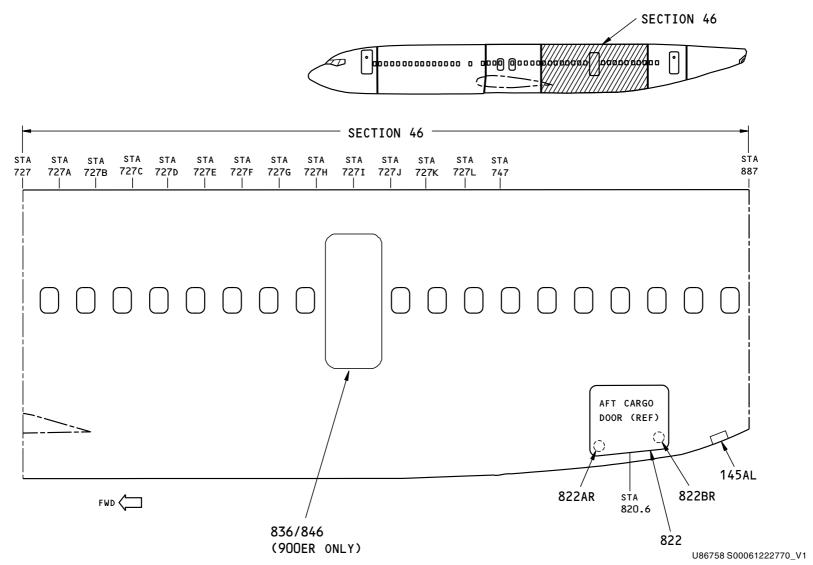


Figure A-31 BODY SECTION 46 - ACCESS DOORS AND PANELS (-900) - LEFT SIDE VIEW



ACCESS PANELS FOR BODY SECTION 46									
ACCESS PANEL AND DOOR	MAN-HOLIRS			MAJOR ZONE 100	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 140	ZONE				
145AL	0.02	0.02	ALL/ALL	TOILET SERVICE DOOR	145				

ACCESS PANELS FOR BODY SECTION 46									
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 800	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 820	ZONE				
822	0.03	0.03	ALL/ALL	AFT CARGO DOOR	142				
822AR	0.02	0.02	ALL/ALL	ACCESS PANEL ON AFT CARGO DOOR	142				
822BR	0.02	0.02	ALL/ALL	ACCESS PANEL ON AFT CARGO DOOR	142				
836	TBD	TBD	900ER/ALL	MID-EXIT DOOR - LEFT	142				
846	TBD	TBD	900ER/ALL	MID-EXIT DOOR - RIGHT	142				

ACCESS PANELS FOR BODY SECTION 46									
ACCESS PANEL MAN-HOURS			MAJOR ZONE 800	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 830/840	ZONE				
836	0.03	0.03	900ER/ALL	MID-EXIT DOOR - LEFT	836				
846	0.03	0.03	900ER/ALL	MID-EXIT DOOR - RIGHT	846				



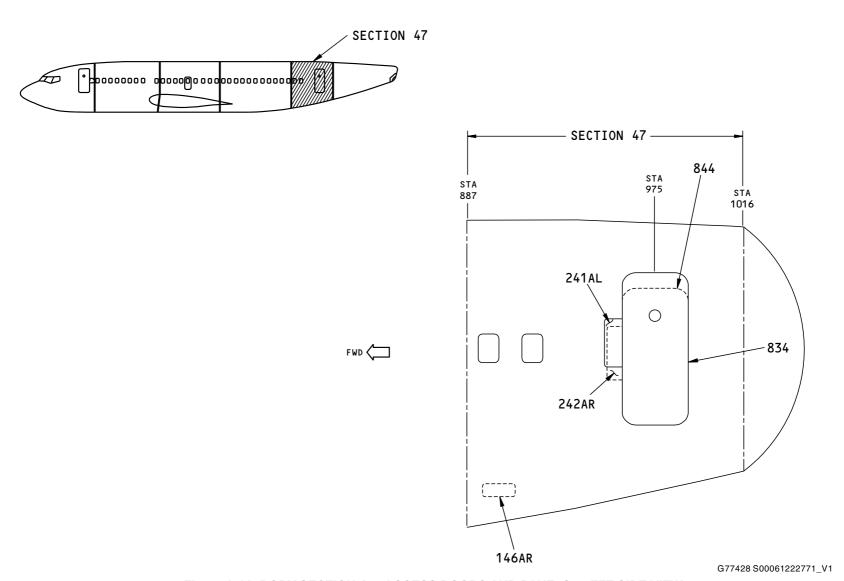


Figure A-32 BODY SECTION 47 - ACCESS DOORS AND PANELS - LEFT SIDE VIEW



ACCESS PANELS FOR BODY SECTION 47									
ACCESS PANEL AND DOOR	MAN-HOLIRS			MAJOR ZONE 100	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 140	ZONE				
146AR	0.02	0.02	ALL/ALL	WATER SERVICE DOOR	146				

	ACCESS PANELS FOR BODY SECTION 47									
ACCESS PANEL MAN-HOURS			MAJOR ZONE 200	LOCATION BY						
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 240	ZONE					
241AL	0.03	0.03	ALL/ALL	AFT ENTRY DOOR HINGE & TORQUE TUBE EXTERIOR ACCESS PANEL	241					
242AR	0.03	0.03	ALL/ALL	AFT GALLEY SVC DOOR HINGE & TORQUE TUBE EXTERIOR ACCESS	242					

ACCESS PANELS FOR BODY SECTION 47									
ACCESS PANEL MAN-HOURS			MAJOR ZONE 800	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 830/840	ZONE				
834	0.02	0.02	ALL/ALL	AFT ENTRY DOOR	834				
844	0.02	0.02	ALL/ALL	AFT GALLEY SVC DOOR	844				



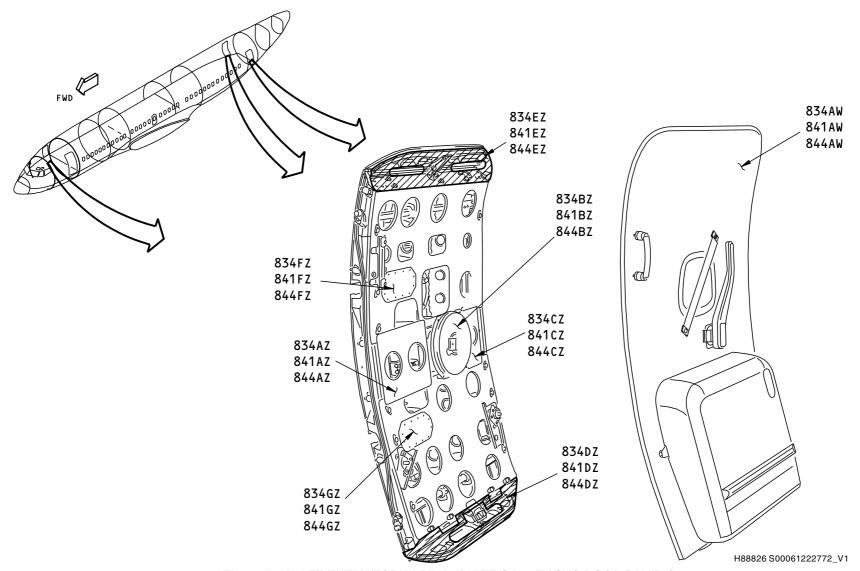


Figure A-33 AFT ENTRY/FORWARD AND AFT GALLEY SVC DOOR PANELS



	ACCESS PANELS FOR BODY SECTION 47									
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 800	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 830	ZONE					
834AW	0.18	0.18	ALL/ALL	AFT ENTRY DOOR - DOOR LINER	834					
834AZ	0.18	0.20	ALL/ALL	AFT ENTRY DOOR - TORQUE TUBE ACCESS	834					
834BZ	0.10	0.10	ALL/ALL	AFT ENTRY DOOR - HANDLE BOX AND CAM FOR HANDLE BOX ACCESS	834					
834CZ	0.18	0.20	ALL/ALL	AFT ENTRY DOOR - HANDLE BOX ACCESS	834					
834DZ	0.18	0.20	ALL/ALL	AFT ENTRY DOOR - LOWER HINGE ACCESS	834					
834EZ	0.18	0.20	ALL/ALL	AFT ENTRY DOOR - UPPER HINGE ACCESS	834					
834FZ	0.18	0.20	ALL/ALL	AFT ENTRY DOOR - TORQUE TUBE ACCESS	834					
834GZ	0.18	0.20	ALL/ALL	AFT ENTRY DOOR - TORQUE TUBE ACCESS	834					

	ACCESS PANELS FOR BODY SECTION 41									
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 800	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 840	ZONE					
841AW	0.18	0.18	ALL/ALL	FWD GALLEY SERVICE DOOR - DOOR LINER	841					
841AZ	0.18	0.20	ALL/ALL	FWD GALLEY SERVICE DOOR - TORQUE TUBE ACCESS	841					
841BZ	0.10	0.10	ALL/ALL	FWD GALLEY SERVICE DOOR - HANDLE BOX AND CAM FOR HANDLE BOX ACCESS	841					
841CZ	0.18	0.20	ALL/ALL	FWD GALLEY SERVICE DOOR - HANDLE BOX ACCESS	841					
841DZ	0.18	0.20	ALL/ALL	FWD GALLEY SERVICE DOOR - LOWER HINGE ACCESS	841					
841EZ	0.18	0.20	ALL/ALL	FWD GALLEY SERVICE DOOR - UPPER HINGE ACCESS	841					
841FZ	0.18	0.20	ALL/ALL	FWD GALLEY SERVICE DOOR - TORQUE TUBE ACCESS	841					
841GZ	0.18	0.20	ALL/ALL	FWD GALLEY SERVICE DOOR - TORQUE TUBE ACCESS	841					




	ACCESS PANELS FOR BODY SECTION 47									
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 800	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 840	ZONE					
844AW	0.18	0.18	ALL/ALL	AFT GALLEY SERVICE DOOR - DOOR LINER	844					
844AZ	0.18	0.20	ALL/ALL	AFT GALLEY SERVICE DOOR - TORQUE TUBE ACCESS	844					
844BZ	0.10	0.10	ALL/ALL	AFT GALLEY SERVICE DOOR - HANDLE BOX AND CAM FOR HANDLE BOX ACCESS	844					
844CZ	0.18	0.20	ALL/ALL	AFT GALLEY SERVICE DOOR - HANDLE BOX ACCESS	844					
844DZ	0.18	0.20	ALL/ALL	AFT GALLEY SERVICE DOOR - LOWER HINGE ACCESS	844					
844EZ	0.18	0.20	ALL/ALL	AFT GALLEY SERVICE DOOR - UPPER HINGE ACCESS	844					
844FZ	0.18	0.20	ALL/ALL	AFT GALLEY SERVICE DOOR - TORQUE TUBE ACCESS	844					
844GZ	0.18	0.20	ALL/ALL	AFT GALLEY SERVICE DOOR - TORQUE TUBE ACCESS	844					





315A

A-A

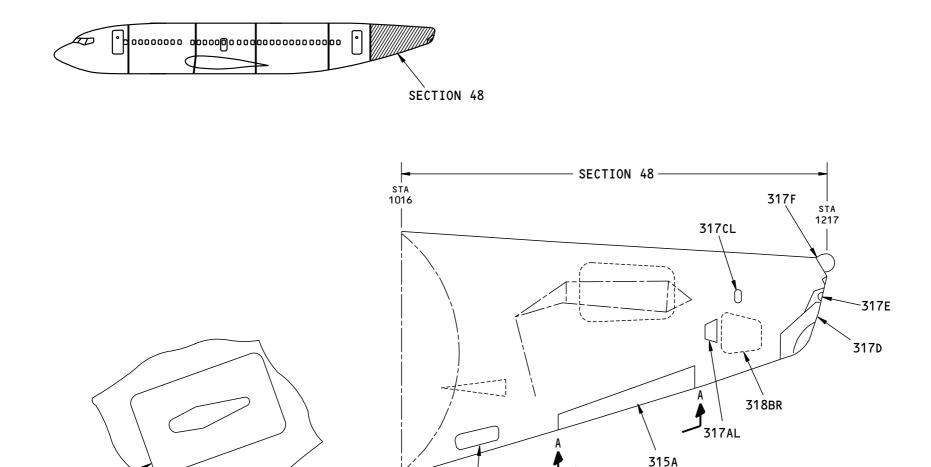

G77430 S00061222773_V1

Figure A-34 BODY SECTION 48 - ACCESS DOORS AND PANELS - LEFT SIDE VIEW

FWD 📛

311BL



	ACCESS PANELS FOR BODY SECTION 48									
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 300	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 310	ZONE					
311BL	0.02	0.02	ALL/ALL	STABILIZER TRIM ACCESS DOOR	311					
315A	0.02	0.02	ALL/ALL	APU COWL DOOR	315					
317AL	0.07	0.07	ALL/ALL	TAIL CONE ACCESS DOOR	317					
317CL	0.09	0.09	ALL/ALL	TAIL CONE COVER PLATE	317					
317D	0.30	0.30	ALL/ALL	APU EXHAUST DUCT	317					
317E	0.30	0.30	ALL/ALL	APU ENDUCTOR INLET	317					
317F	0.12	0.12	ALL/ALL	TAIL CONE LIGHT ASSY	317					
318BR	0.05	0.05	ALL/ALL	TAIL CONE ACCESS DOOR	318					





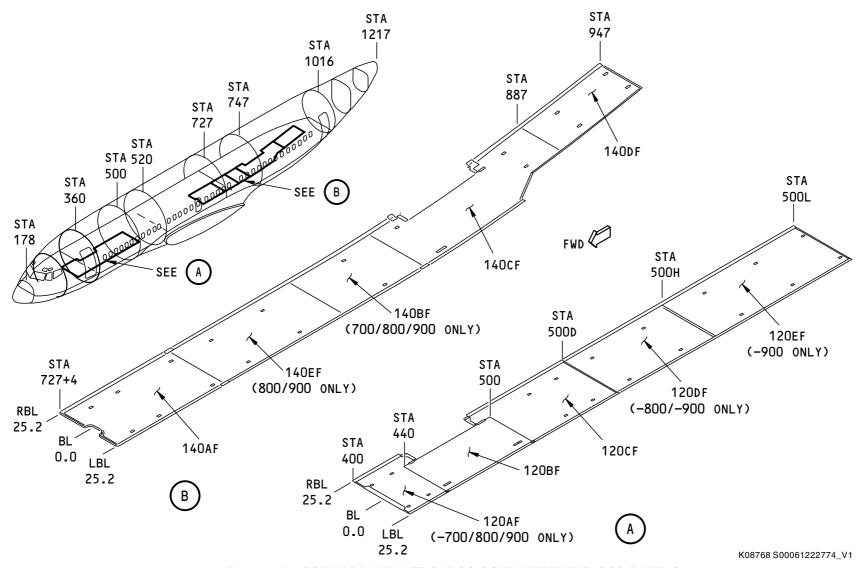


Figure A-35 FORWARD AND AFT CARGO COMPARTMENT FLOOR PANELS



ACCESS PANELS FOR CARGO COMPARTMENT FLOOR										
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 100	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 120	ZONE					
120AF	1.25	0.30	700, 800, 900/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT FLOOR	120					
120BF	2.00	0.40	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT FLOOR	120					
120CF	2.25	0.55	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT FLOOR	120					
120DF	2.40	0.75	800, 900/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT FLOOR (737-800/900 ONLY)	120					
120EF	2.60	0.80	900/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT FLOOR (737-900 ONLY)	120					

	ACCESS PANELS FOR CARGO COMPARTMENT FLOOR									
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 100	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 140	ZONE					
140AF	2.25	0.55	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT FLOOR	140					
140BF	2.00	0.40	700, 800, 900/ALL	PANEL ASSY - AFT CARGO COMPARTMENT FLOOR (737-700/800/900 ONLY)(-700/800 SHORT PANEL, -900 LONG PANEL)	140					
140CF	2.40	0.75	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT FLOOR	140					
140DF	2.25	0.55	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT FLOOR	140					
140EF	2.50	0.70	800, 900/ALL	PANEL ASSY - AFT CARGO COMPARTMENT FLOOR (737-800/900 ONLY)	140					



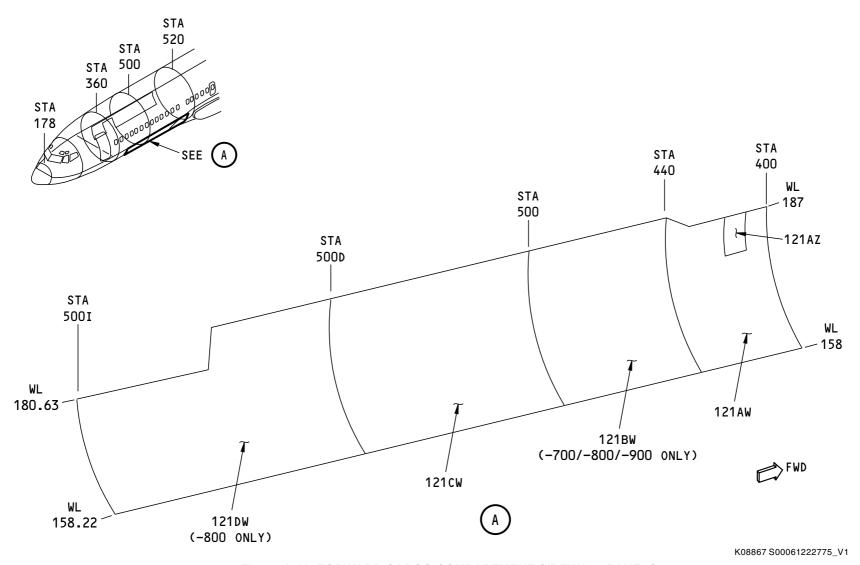


Figure A-36 FORWARD CARGO COMPARTMENT SIDEWALL PANELS

Oct 15/2012 D626A001 **PAGE A.2-49** ECCN 9E991 BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



	ACCESS PANELS FOR FORWARD CARGO COMPARTMENT									
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 100	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 120	ZONE					
121AW	0.17	0.17	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT SIDEWALL	121					
121AZ	0.05	0.05	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT SIDEWALL (ACCESS TO DUCTING)	121					
121BW	0.17	0.17	700, 800, 900/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT SIDEWALL(737-700/800/900 ONLY)	121					
121CW	0.25	0.25	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT SIDEWALL	121					
121DW	0.30	0.30	800/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT SIDEWALL	121					



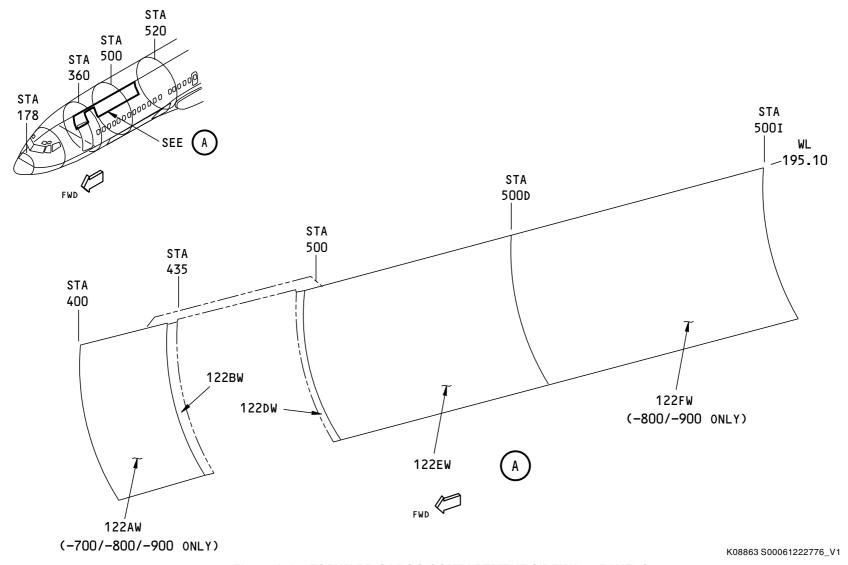


Figure A-37 FORWARD CARGO COMPARTMENT SIDEWALL PANELS

Oct 15/2012 D626A001 PAGE A.2-51



ACCESS PANELS FOR FORWARD CARGO COMPARTMENT										
ACCESS PANEL AND DOOR	MAN	-HOURS		MAJOR ZONE 100	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 120	ZONE					
122AW	0.10	0.10	700, 800, 900/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT SIDEWALL(737-700/800/900 ONLY)	122					
122BW	0.10	0.10	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT SIDEWALL	122					
122DW	0.10	0.10	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT SIDEWALL	122					
122EW	0.30	0.30	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT SIDEWALL	122					
122FW	0.30	0.30	800, 900/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT SIDEWALL (737-800/900 ONLY)	122					



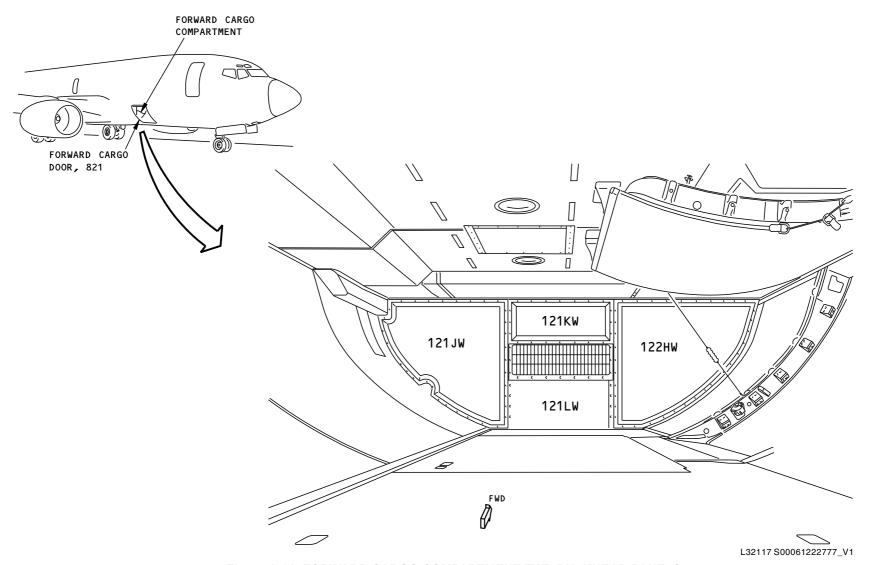


Figure A-38 FORWARD CARGO COMPARTMENT FWD BULKHEAD PANELS



	ACCESS PANELS FOR FORWARD CARGO COMPARTMENT									
ACCESS PANEL	MAN-	MAN-HOURS		MAJOR ZONE 100	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 120	ZONE					
121JW	0.10	0.10	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD	121					
121KW	0.05	0.05	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD FILTER COVER	121					
121LW	0.05	0.05	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD FAN COVER	121					
122HW	0.10	0.10	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD FAN COVER	122					





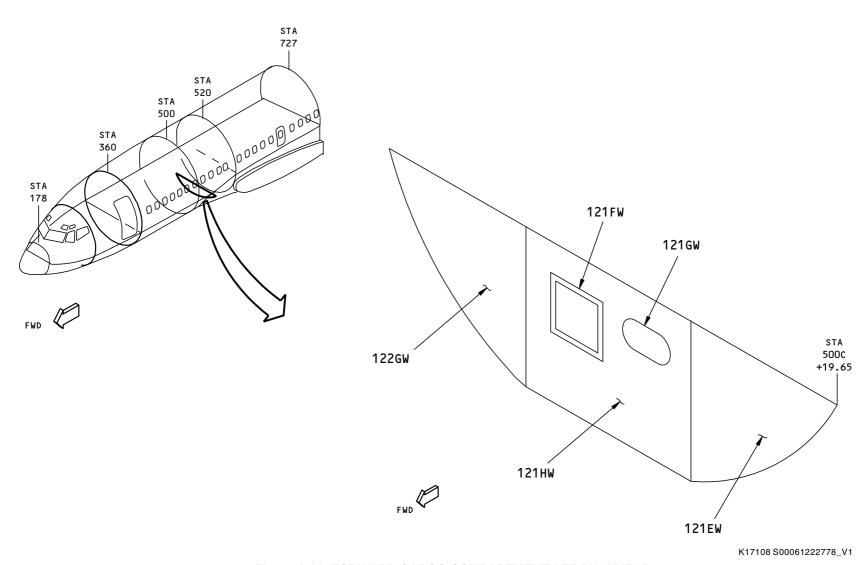



Figure A-39 FORWARD CARGO COMPARTMENT AFT BULKHEAD

Oct 15/2012 D626A001 PAGE A.2-55



ACCESS PANELS FOR FORWARD CARGO COMPARTMENT										
ACCESS PANEL AND DOOR	MAN-H			MAJOR ZONE 100	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 120	ZONE					
121EW	0.10	0.10	ALL/ALL	PANEL ASSY - FWD CARGO COMPARTMENT AFT BULKHEAD	121					
121FW	0.05	0.05	ALL/ALL	PANEL ASSY - FWD CARGO COMPARTMENT AFT BULKHEAD FILTER COVER	121					
121GW	0.05	0.05	ALL/ALL	PANEL ASSY - FWD CARGO COMPARTMENT AFT BULKHEAD FAN COVER	121					
121HW	0.10	0.10	ALL/ALL	PANEL ASSY - FWD CARGO COMPARTMENT AFT BULKHEAD	121					
122GW	0.10	0.10	ALL/ALL	PANEL ASSY - FWD CARGO COMPARTMENT AFT BULKHEAD	122					



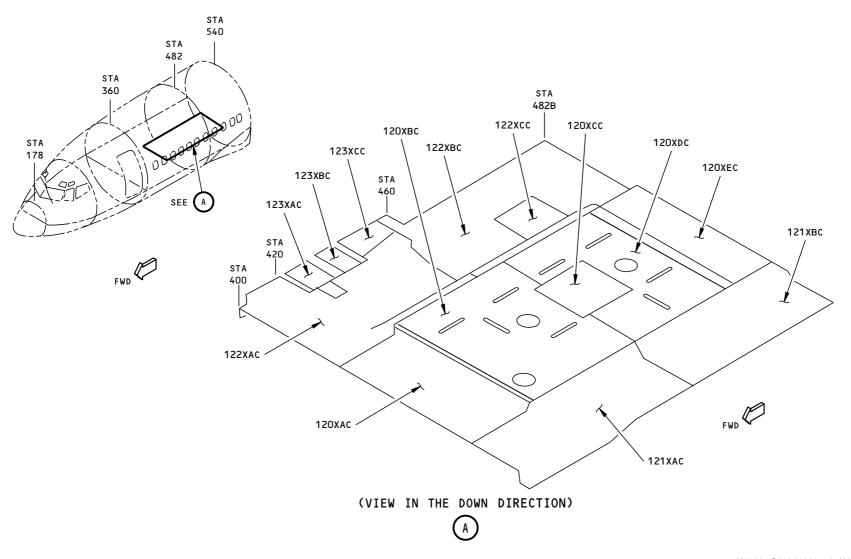

K13095 S00061222779_V2

Figure A-40 FORWARD CARGO COMPARTMENT CEILING PANELS (737-600)



	ACCESS PANELS FOR FORWARD CARGO COMPARTMENT 737-600								
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 100	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 120	ZONE				
120XAC	0.15	0.15	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	120				
120XBC	0.20	0.20	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	120				
120XCC	0.05	0.05	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	120				
120XDC	0.20	0.20	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	120				
120XEC	0.15	0.15	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	120				
121XAC	0.20	0.20	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	121				
121XBC	0.20	0.20	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	121				
122XAC	0.20	0.20	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	122				
122XBC	0.20	0.20	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	122				
122XCC	0.05	0.05	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	122				
123XAC	0.05	0.05	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	123				
123XBC	0.05	0.05	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	123				
123XCC	0.05	0.05	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	123				



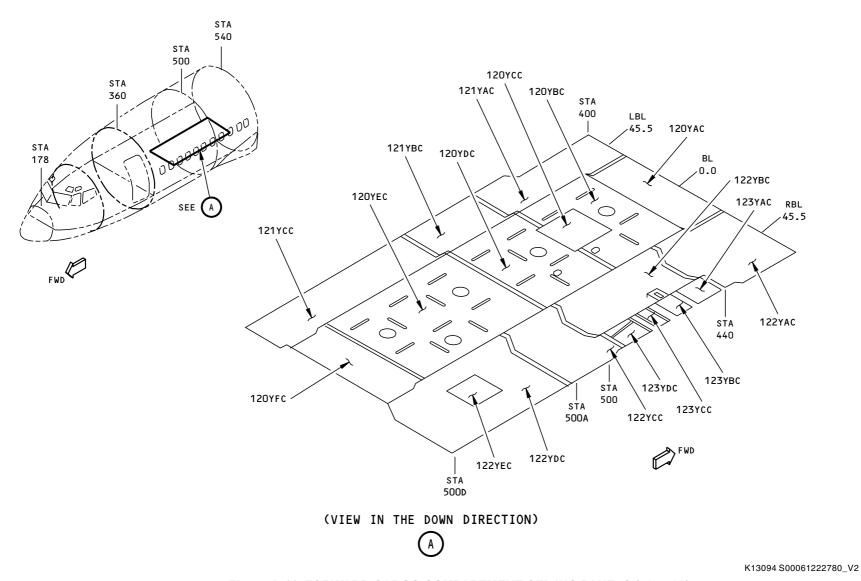


Figure A-41 FORWARD CARGO COMPARTMENT CEILING PANELS (737-700)

Feb 15/2022 D626A001 **PAGE A.2-59** ECCN 9E991 BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



		ACCES	S PANELS FOR FOR	WARD CARGO COMPARTMENT 737-700	
ACCESS PANEL AND DOOR	MAN-HOLIRS			MAJOR ZONE 100	LOCATION BY
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 120	ZONE
120YAC	0.15	0.05	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	120
120YBC	0.20	0.20	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	120
120YCC	0.05	0.05	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	120
120YDC	0.20	0.20	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	120
120YEC	0.40	0.40	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	120
120YFC	0.15	0.15	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	120
121YAC	0.20	0.20	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	121
121YBC	0.10	0.10	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	121
121YCC	0.20	0.20	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	121
122YAC	0.15	0.15	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	122
122YBC	0.20	0.20	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	122
122YCC	0.15	0.15	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	122
122YDC	0.20	0.20	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	122
122YEC	0.05	0.05	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	122
123YAC	0.05	0.05	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	123
123YBC	0.05	0.05	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	123
123YCC	0.05	0.05	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	123
123YDC	0.05	0.05	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	123



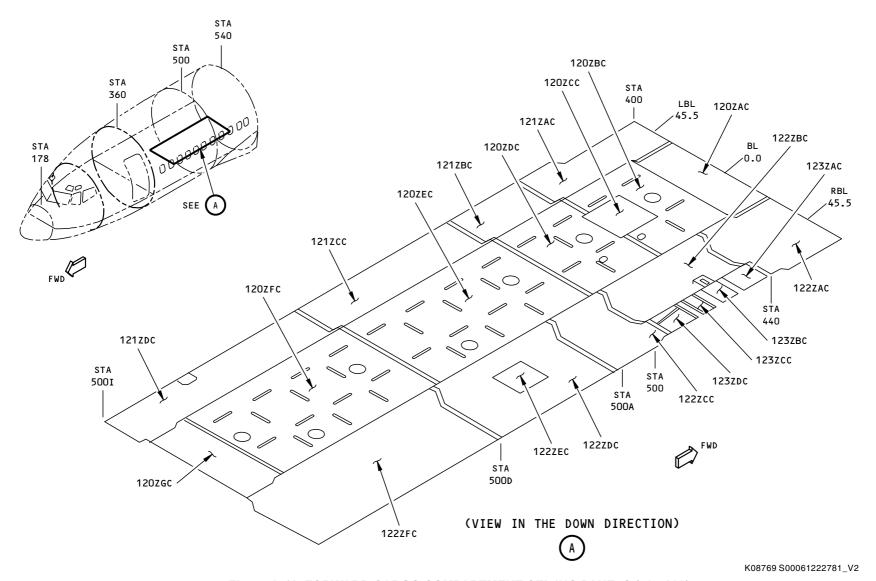


Figure A-42 FORWARD CARGO COMPARTMENT CEILING PANELS (737-800)

 Feb 15/2022
 D626A001
 PAGE A.2-61



ACCESS PANELS FOR FORWARD CARGO COMPARTMENT 737-800									
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 100	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 120	ZONE				
120ZAC	0.15	0.15	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	120				
120ZBC	0.20	0.20	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	120				
120ZCC	0.05	0.05	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	120				
120ZDC	0.20	0.20	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	120				
120ZEC	0.40	0.40	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	120				
120ZFC	0.40	0.40	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	120				
120ZGC	0.15	0.15	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	120				
121ZAC	0.20	0.20	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	121				
121ZBC	0.10	0.10	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	121				
121ZCC	0.20	0.20	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	121				
121ZDC	0.20	0.20	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	121				
122ZAC	0.15	0.15	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	122				
122ZBC	0.20	0.20	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	122				
122ZCC	0.15	0.15	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	122				
122ZDC	0.20	0.20	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	122				
122ZEC	0.05	0.05	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	122				
122ZFC	0.40	0.40	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	122				
123ZAC	0.05	0.05	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	123				
123ZBC	0.05	0.05	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	123				
123ZCC	0.05	0.05	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	123				
123ZDC	0.05	0.05	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	123				



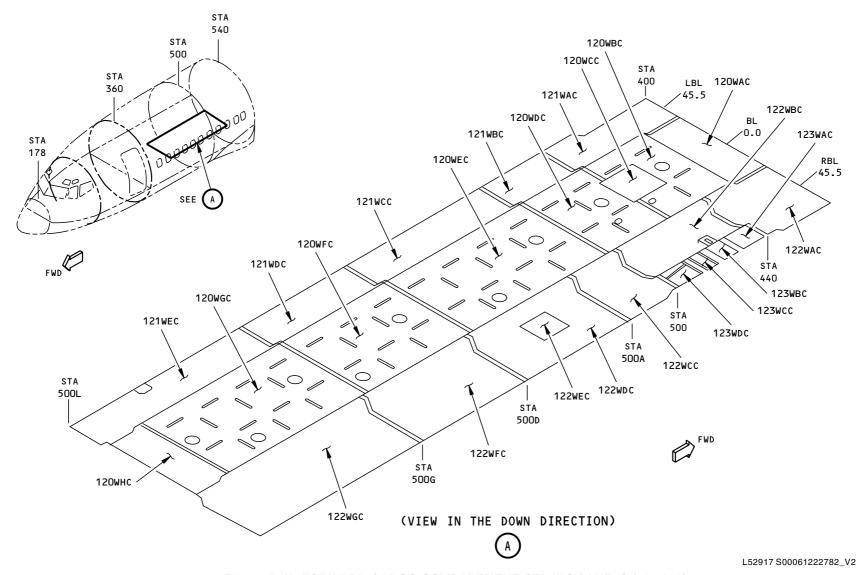


Figure A-43 FORWARD CARGO COMPARTMENT CEILING PANELS (737-900)



	ACCESS PANELS FOR FORWARD CARGO COMPARTMENT 737-900									
ACCESS PANEL AND DOOR	MAN	-HOURS		MAJOR ZONE 100	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 120	ZONE					
120WAC	0.15	0.15	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	120					
120WBC	0.20	0.20	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	120					
120WCC	0.05	0.05	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	120					
120WDC	0.20	0.20	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	120					
120WEC	0.40	0.40	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	120					
120WFC	0.30	0.30	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	120					
120WGC	0.40	0.40	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	120					
120WHC	0.15	0.15	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	120					
121WAC	0.20	0.20	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	121					
121WBC	0.10	0.10	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	121					
121WCC	0.20	0.20	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	121					
121WDC	0.15	0.15	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	121					
121WEC	0.20	0.20	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	121					
122WAC	0.15	0.15	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	122					
122WBC	0.20	0.20	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	122					
122WCC	0.15	0.15	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	122					
122WDC	0.20	0.20	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	122					
122WEC	0.05	0.05	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	122					
122WFC	0.20	0.20	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	122					
122WGC	0.40	0.40	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	122					
123WAC	0.05	0.05	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	123					
123WBC	0.05	0.05	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	123					
123WCC	0.05	0.05	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	123					
123WDC	0.05	0.05	ALL/ALL	PANEL ASSY - FORWARD CARGO COMPARTMENT CEILING	123					



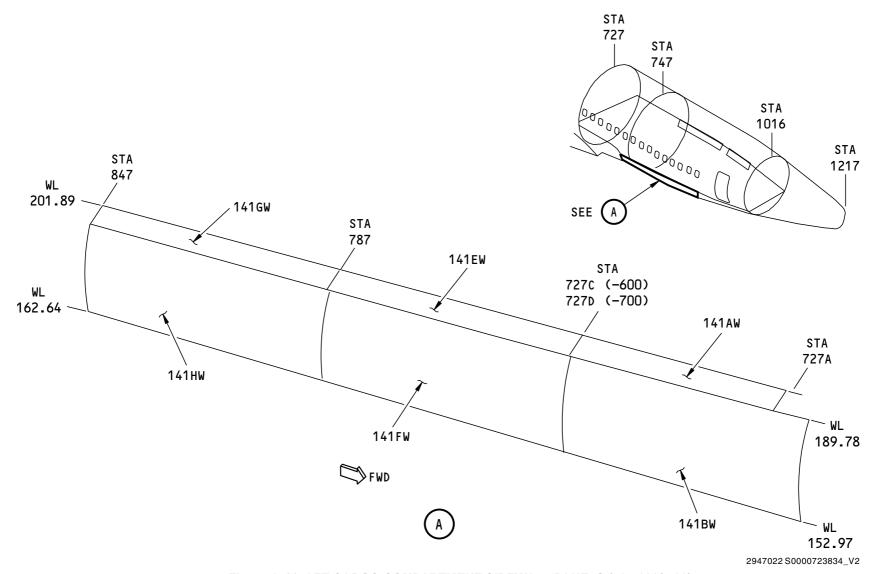


Figure A-44 AFT CARGO COMPARTMENT SIDEWALL PANELS (737-600/-700)



	ACCESS PANELS FOR AFT CARGO COMPARTMENT 737-600/-700									
ACCESS PANEL AND DOOR	MAM	I-HOURS		MAJOR ZONE 100	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 140	ZONE					
141AW	0.10	0.10	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT SIDEWALL	141					
141BW	0.15	0.15	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT SIDEWALL	141					
141EW	0.10	0.10	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT SIDEWALL	141					
141FW	0.15	0.15	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT SIDEWALL	141					
141GW	0.10	0.10	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT SIDEWALL	141					
141HW	0.15	0.15	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT SIDEWALL	141					



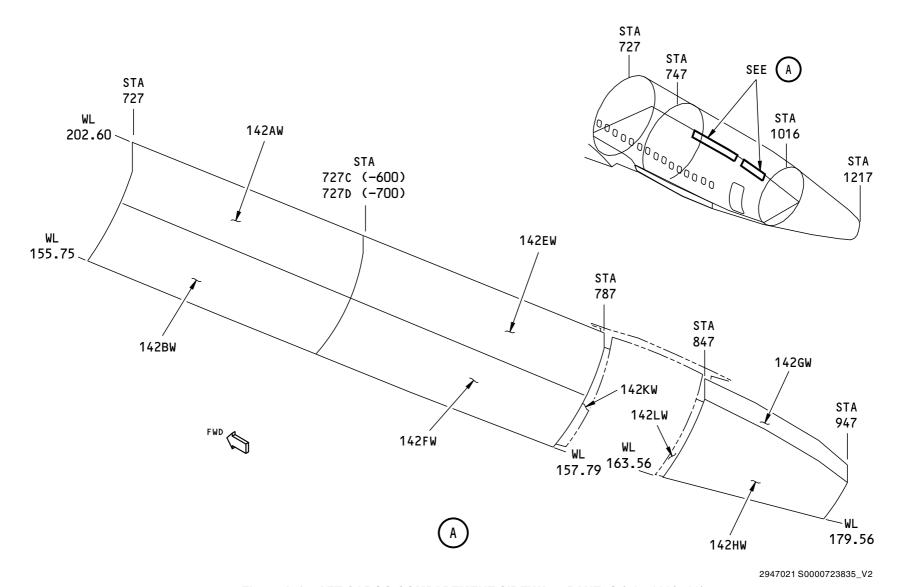


Figure A-45 AFT CARGO COMPARTMENT SIDEWALL PANELS (737-600/-700)



	ACCESS PANELS FOR AFT CARGO COMPARTMENT 737-600/-700										
ACCESS PANEL AND DOOR	ANEL AND MAN-HOURS		IEL AND MAN-HOURS	MAJOR ZONE 100	LOCATION BY						
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 140	ZONE						
142AW	0.15	0.15	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT SIDEWALL	142						
142BW	0.15	0.15	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT SIDEWALL	142						
142EW	0.15	0.15	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT SIDEWALL	142						
142FW	0.15	0.15	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT SIDEWALL	142						
142GW	0.10	0.10	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT SIDEWALL	142						
142HW	0.15	0.15	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT SIDEWALL	142						
42KW	0.05	0.05	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT DOOR LINING	142						
142LW	0.05	0.05	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT DOOR LINING	142						



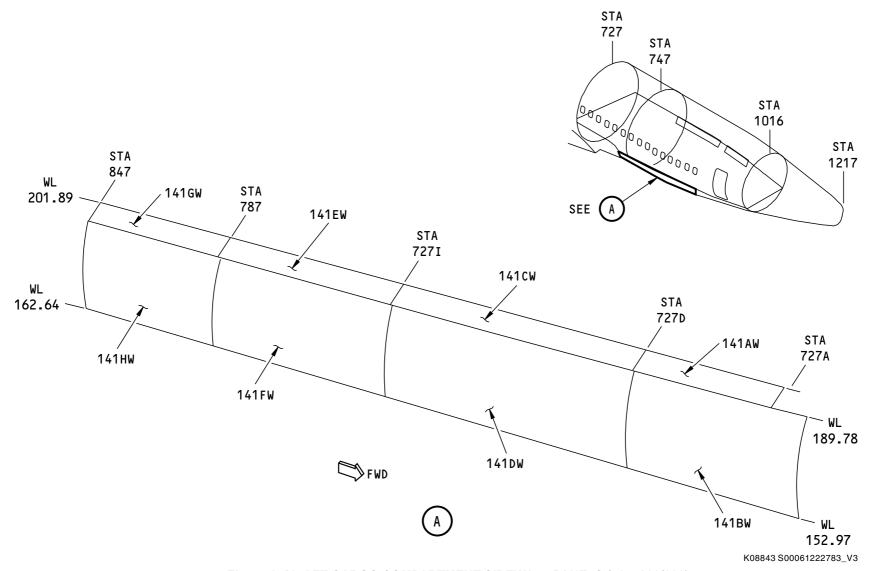


Figure A-46 AFT CARGO COMPARTMENT SIDEWALL PANELS (737–800/900)



	ACCESS PANELS FOR AFT CARGO COMPARTMENT 737–800/900									
ACCESS PANEL AND DOOR	NEL AND MAN-HOURS		MAN-HOURS	MAJOR ZONE 100	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 140	ZONE					
141AW	0.10	0.10	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT SIDEWALL	141					
141BW	0.15	0.15	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT SIDEWALL	141					
141CW	0.10	0.10	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT SIDEWALL	141					
141DW	0.15	0.15	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT SIDEWALL	141					
141EW	0.10	0.10	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT SIDEWALL	141					
141FW	0.15	0.15	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT SIDEWALL	141					
41GW	0.10	0.10	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT SIDEWALL	141					
141HW	0.15	0.15	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT SIDEWALL	141					



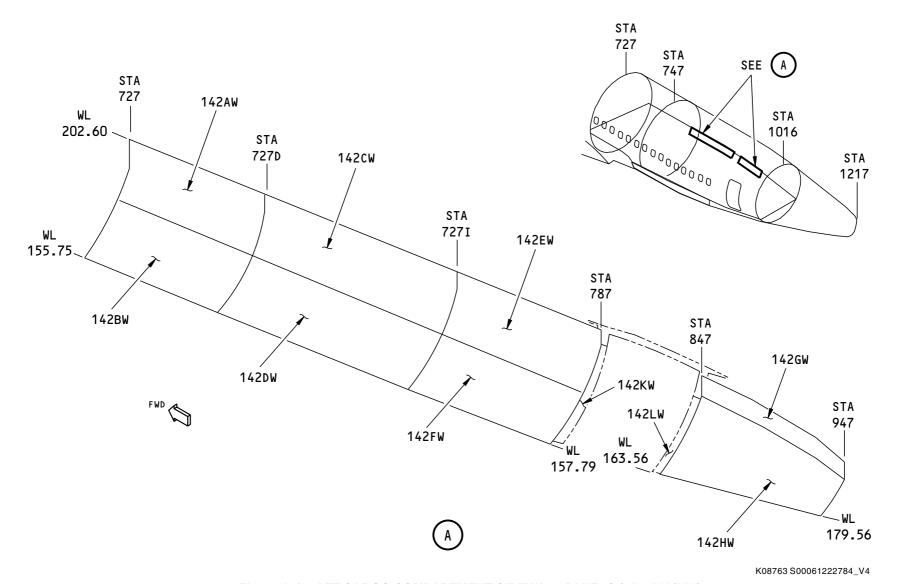


Figure A-47 AFT CARGO COMPARTMENT SIDEWALL PANELS (737–800/900)

Feb 15/2022 D626A001 PAGE A.2-71



	ACCESS PANELS FOR AFT CARGO COMPARTMENT 737-800/900										
ACCESS PANEL AND DOOR	PANEL AND MAN-HOURS	N-HOURS		MAJOR ZONE 100	LOCATION BY						
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 140	ZONE						
142AW	0.15	0.15	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT SIDEWALL	142						
142BW	0.15	0.15	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT SIDEWALL	142						
142CW	0.15	0.15	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT SIDEWALL	142						
142DW	0.15	0.15	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT SIDEWALL	142						
142EW	0.15	0.15	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT SIDEWALL	142						
142FW	0.15	0.15	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT SIDEWALL	142						
142GW	0.10	0.10	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT SIDEWALL	142						
42HW	0.15	0.15	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT SIDEWALL	142						
42KW	0.05	0.05	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT DOOR LINING	142						
I42LW	0.05	0.05	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT DOOR LINING	142						



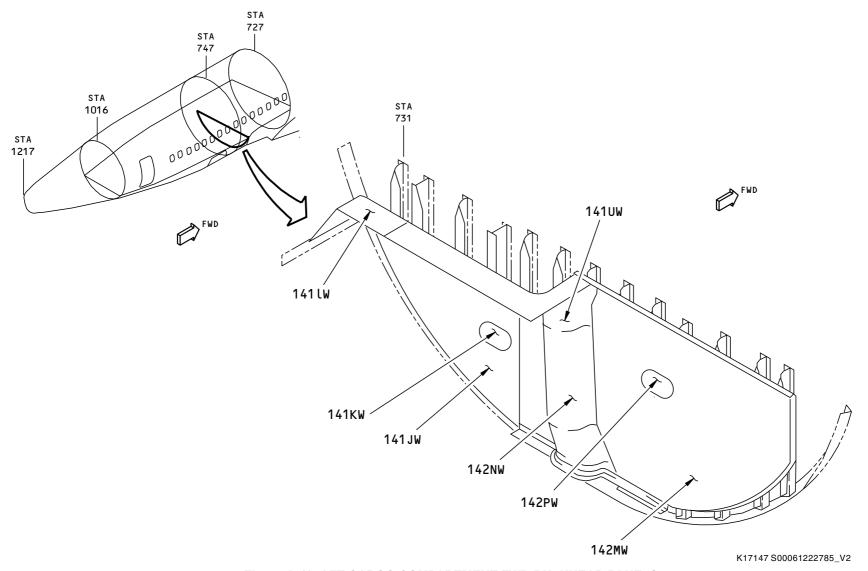


Figure A-48 AFT CARGO COMPARTMENT FWD BULKHEAD PANELS



ACCESS PANELS FOR AFT CARGO COMPARTMENT							
ACCESS PANEL AND DOOR NUMBER	MAN-HOURS			MAJOR ZONE 100	LOCATION BY		
	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 140	ZONE		
141JW	0.08	0.08	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT BULKHEAD	141		
141KW	0.05	0.05	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT BULKHEAD VENT COVER	141		
141LW	0.10	0.10	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT BULKHEAD	141		
142MW	0.10	0.10	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT BULKHEAD	142		
142NW	0.10	0.10	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT BULKHEAD	142		
142PW	0.05	0.05	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT BULKHEAD VENT COVER	142		
141UW	0.10	0.10	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT BULKHEAD	142		



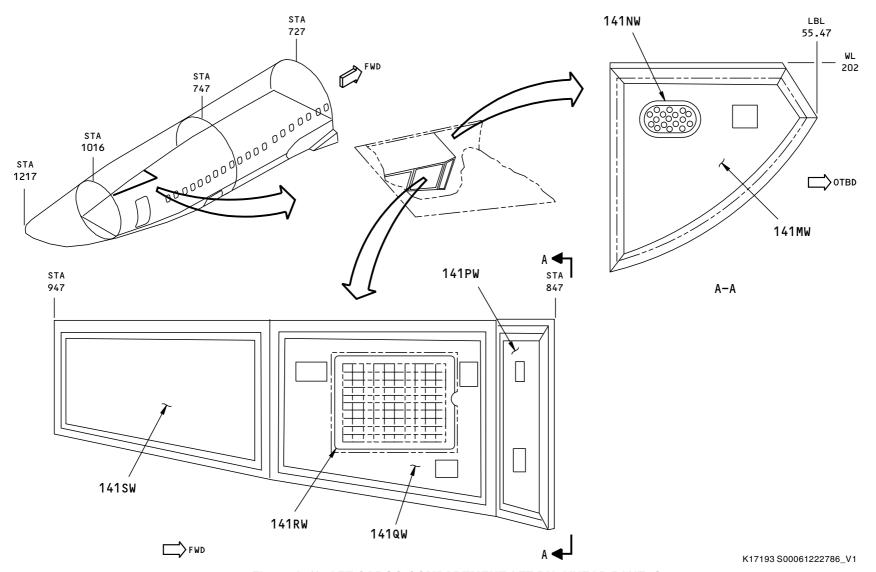


Figure A-49 AFT CARGO COMPARTMENT AFT BULKHEAD PANELS



ACCESS PANELS FOR AFT CARGO COMPARTMENT						
ACCESS PANEL AND DOOR NUMBER	MAN-HOURS			MAJOR ZONE 100	LOCATION BY	
	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 140	ZONE	
141MW	0.10	0.10	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT BULKHEAD VACCUM BLOWER ACCESS	141	
141NW	0.05	0.05	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT BULKHEAD VACCUM BLOWER ACCESS COVER	141	
141PW	0.10	0.10	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT BULKHEAD LOGIC MOD/WASTE TANK ACCESS	141	
141QW	0.10	0.10	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT BULKHEAD	141	
141RW	0.05	0.05	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT BULKHEAD WASTE TANK LEVEL SENSOR ACCESS	141	
141SW	0.10	0.10	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT BULKHEAD	141	





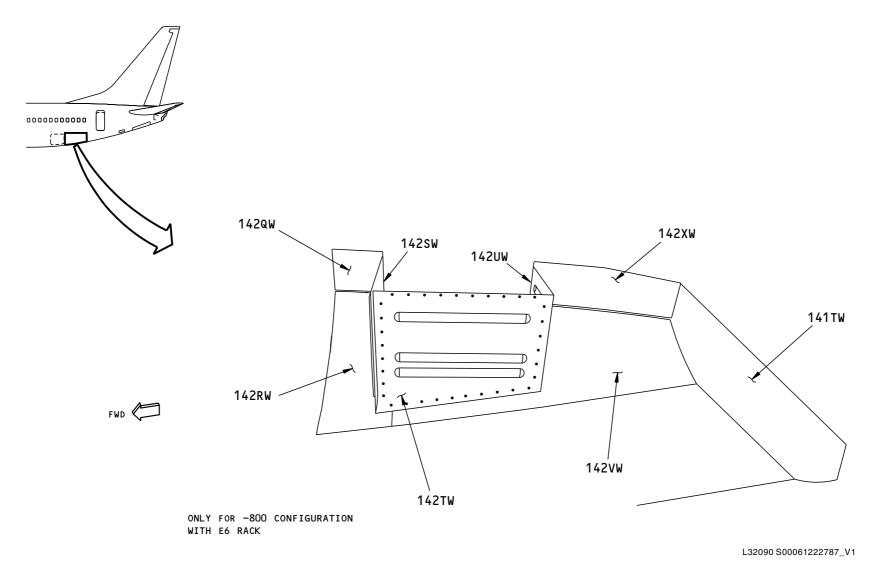


Figure A-50 AFT CARGO COMPARTMENT AFT BULKHEAD PANELS (737-800)



ACCESS PANELS FOR AFT CARGO COMPARTMENT						
ACCESS PANEL AND DOOR NUMBER	MAN-HOURS			MAJOR ZONE 100	LOCATION BY	
	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 140	ZONE	
141TW	0.10	0.12	800/ALL	PANEL ASSY - AFT CARGO COMPARTMENT AFT BULKHEAD PANELS	141	
142QW	0.10	0.12	800/ALL	PANEL ASSY - AFT CARGO COMPARTMENT AFT BULKHEAD PANELS	142	
142RW	0.10	0.12	800/ALL	PANEL ASSY - AFT CARGO COMPARTMENT AFT BULKHEAD PANELS	142	
142SW	0.10	0.12	800/ALL	PANEL ASSY - AFT CARGO COMPARTMENT AFT BULKHEAD PANELS	142	
142TW	0.10	0.12	800/ALL	PANEL ASSY - AFT CARGO COMPARTMENT AFT BULKHEAD PANELS	142	
142UW	0.10	0.12	800/ALL	PANEL ASSY - AFT CARGO COMPARTMENT AFT BULKHEAD PANELS	142	
142VW	0.10	0.12	800/ALL	PANEL ASSY - AFT CARGO COMPARTMENT AFT BULKHEAD PANELS	142	
142XW	0.10	0.12	800/ALL	PANEL ASSY - AFT CARGO COMPARTMENT AFT BULKHEAD PANELS	142	



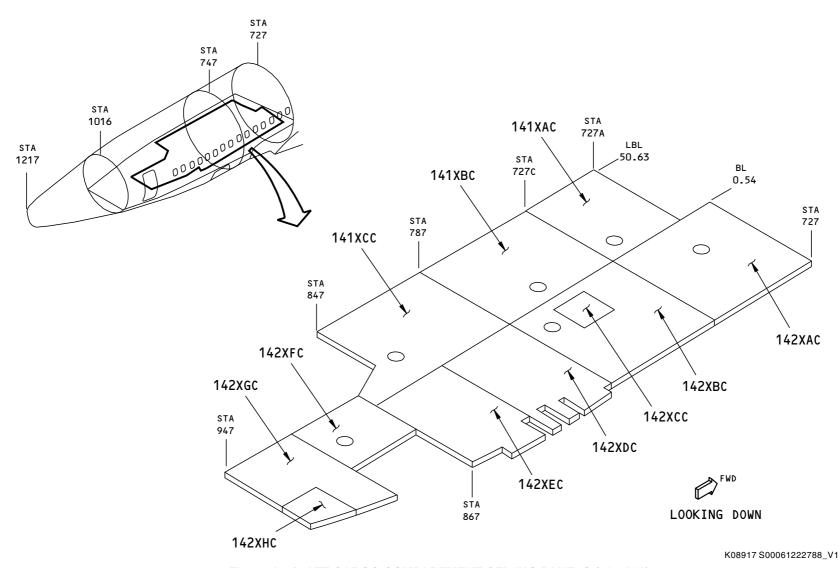


Figure A-51 AFT CARGO COMPARTMENT CEILING PANELS (737-600)



ACCESS PANELS FOR AFT CARGO COMPARTMENT 737-600							
ACCESS PANEL AND DOOR NUMBER	MAN-HOURS			MAJOR ZONE 100	LOCATION BY		
	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 140	ZONE		
141XAC	0.15	0.15	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	141		
141XBC	0.15	0.15	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	141		
141XCC	0.15	0.15	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	141		
142XAC	0.15	0.15	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142		
142XBC	0.15	0.15	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142		
142XCC	0.05	0.05	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142		
142XDC	0.10	0.10	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142		
142XEC	0.10	0.10	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142		
142XFC	0.10	0.10	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142		
142XGC	0.10	0.10	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142		
142XHC	0.05	0.05	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142		



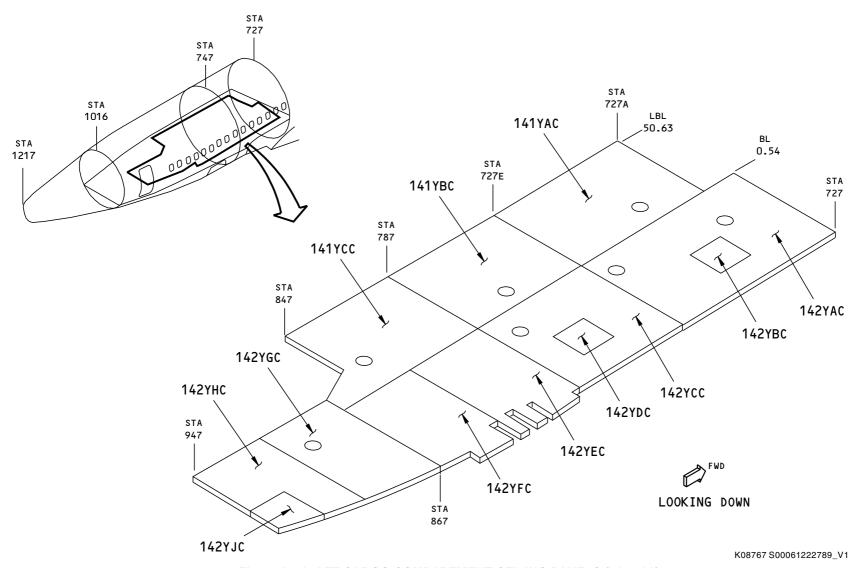


Figure A-52 AFT CARGO COMPARTMENT CEILING PANELS (737-700)



ACCESS PANELS FOR AFT CARGO COMPARTMENT 737-700						
ACCESS PANEL AND DOOR NUMBER	MAN-HOURS			MAJOR ZONE 100	LOCATION BY	
	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 140	ZONE	
141YAC	0.20	0.20	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	141	
141YBC	0.15	0.15	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	141	
141YCC	0.15	0.15	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	141	
142YAC	0.20	0.20	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142	
142YBC	0.05	0.05	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142	
142YCC	0.15	0.15	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142	
142YDC	0.05	0.05	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142	
142YEC	0.10	0.10	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142	
142YFC	0.10	0.10	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142	
142YGC	0.15	0.15	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142	
142YHC	0.10	0.10	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142	
142YJC	0.05	0.05	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142	



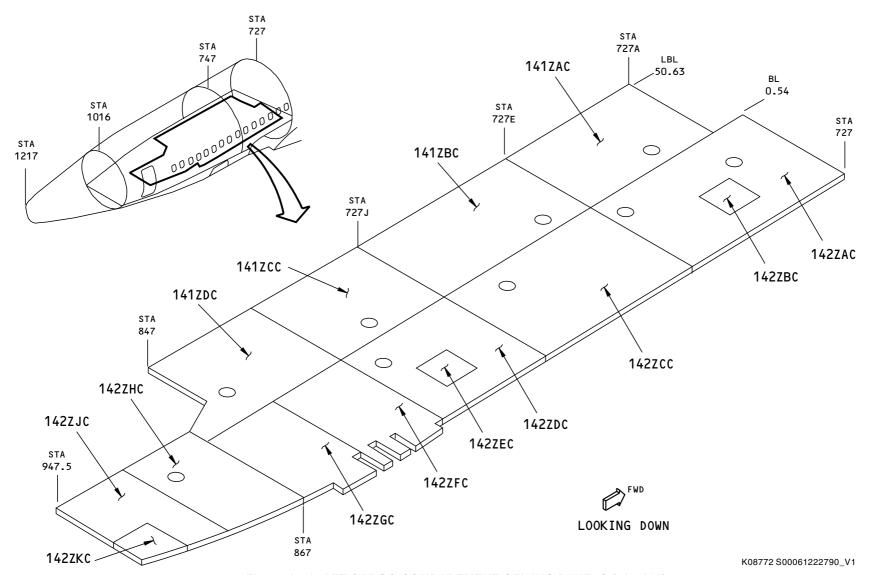


Figure A-53 AFT CARGO COMPARTMENT CEILING PANELS (737-800)



ACCESS PANELS FOR AFT CARGO COMPARTMENT 737-800						
ACCESS PANEL AND DOOR NUMBER	MAN-HOURS			MAJOR ZONE 100	LOCATION BY	
	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 140	ZONE	
141ZAC	0.20	0.20	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	141	
141ZBC	0.20	0.20	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	141	
141ZCC	0.15	0.15	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	141	
141ZDC	0.15	0.15	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	141	
142ZAC	0.20	0.20	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142	
142ZBC	0.05	0.05	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142	
142ZCC	0.20	0.20	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142	
142ZDC	0.15	0.15	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142	
142ZEC	0.05	0.05	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142	
142ZFC	0.10	0.10	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142	
142ZGC	0.10	0.10	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142	
142ZHC	0.10	0.10	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142	
142ZJC	0.10	0.10	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142	
142ZKC	0.05	0.05	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142	



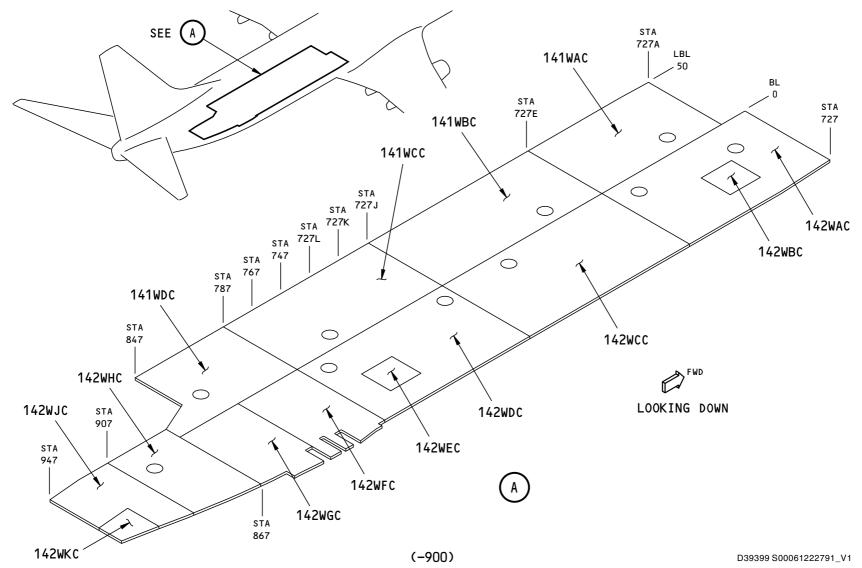


Figure A-54 AFT CARGO COMPARTMENT CEILING PANELS (737-900)



	ACCESS PANELS FOR AFT CARGO COMPARTMENT 737-900									
ACCESS PANEL AND DOOR	MAN-	-HOURS		MAJOR ZONE 100	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 140	ZONE					
141WAC	0.20	0.20	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	141					
141WBC	0.20	0.20	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	141					
141WCC	0.20	0.20	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	141					
141WDC	0.15	0.15	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	141					
142WAC	0.20	0.20	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142					
142WBC	0.05	0.05	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142					
142WCC	0.20	0.20	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142					
142WDC	0.20	0.20	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142					
142WEC	0.05	0.05	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142					
142WFC	0.10	0.10	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142					
142WGC	0.10	0.10	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142					
142WHC	0.15	0.15	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142					
142WJC	0.10	0.10	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING	142					
142WKC	0.05	0.05	ALL/ALL	PANEL ASSY - AFT CARGO COMPARTMENT CEILING ACCESS PANEL TO BLEED AIR IN-LINE FILTER	142					





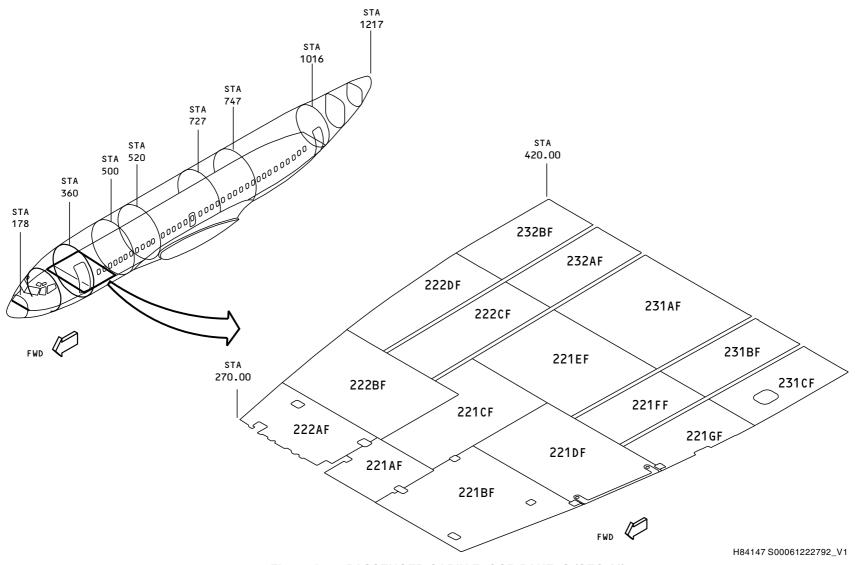


Figure A-55 PASSENGER CABIN FLOOR PANELS (SEC 41)



	ACCESS PANELS FOR PASSENGER CABIN FLOOR PANELS								
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 200	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 220	ZONE				
221AF	1.05	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 41 - WET AREA)	221				
221BF	2.03	0.43	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 41 - WET AREA)	221				
221CF	1.20	0.30	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 41 - WET AREA)	221				
221DF	2.03	0.43	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 41 - WET AREA)	221				
221EF	2.10	0.46	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 41 - WET AREA)	221				
221FF	1.05	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 41 - WET AREA)	221				
221GF	1.05	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 41 - WET AREA)	221				
222AF	1.15	0.30	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 41 - WET AREA)	222				
222BF	2.03	0.43	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 41 - WET AREA)	222				
222CF	2.10	0.46	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 41 - WET AREA)	222				
222DF	2.10	0.46	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 41 - WET AREA)	222				

	ACCESS PANELS FOR PASSENGER CABIN FLOOR PANELS									
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 200	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 230	ZONE					
231AF	2.10	0.46	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 41 - WET AREA)	231					



	ACCESS PANELS FOR PASSENGER CABIN FLOOR PANELS									
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 200	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 230	ZONE					
231BF	1.05	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 41 - WET AREA)	231					
231CF	1.05	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 41 - WET AREA)	231					
232AF	1.05	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 41 - WET AREA)	232					
232BF	1.05	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 41 - WET AREA)	232					





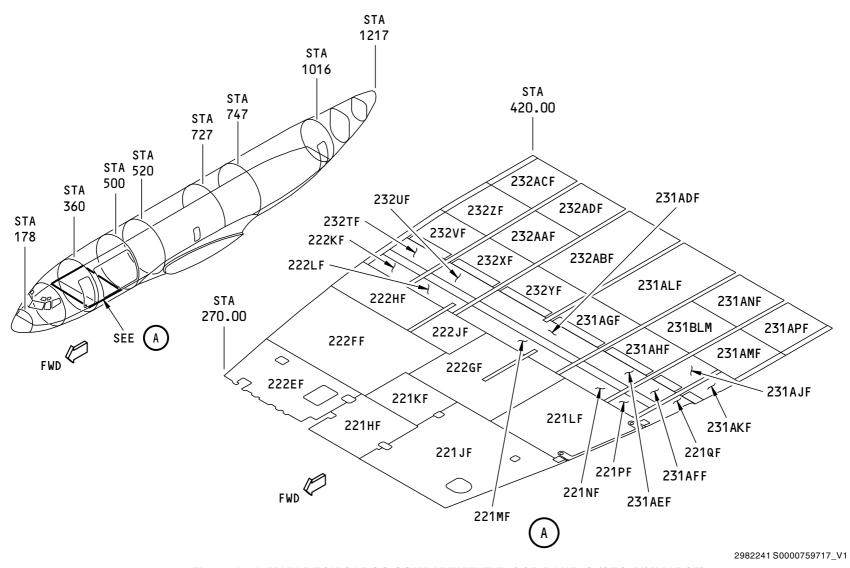


Figure A-56 MAIN DECK CARGO COMPARTMENT FLOOR PANELS (SEC 41)(800BCF)



ACCESS PANELS FOR MAIN DECK FLOOR PANELS								
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 200	LOCATION BY			
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 220	ZONE			
222EF	1.15	0.3	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	222			
221HF	1.05	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	221			
221JF	2.03	0.43	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	221			
222FF	2.03	0.43	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	222			
221KF	1.05	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	221			
221LF	2.03	0.43	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	221			
222GF	2.1	0.46	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	222			
222HF	1.15	0.30	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	222			
222JF	1.05	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	222			
222KF	0.5	0.2	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	222			
222LF	0.5	0.2	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	222			
221MF	1.05	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	221			
221NF	0.5	0.2	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	221			
221PF	0.5	0.2	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	221			
221QF	0.5	0.2	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	221			

ACCESS PANELS FOR MAIN DECK FLOOR PANELS										
ACCESS PANEL AND DOOR	MANILIOIDS			MAJOR ZONE 200	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 230	ZONE					
232TF	0.5	0.2	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	232					
232UF	0.5	0.2	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	232					
231ADF	1.05	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	231					
231AEF	0.5	0.2	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	231					
231AFF	0.5	0.2	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	231					



	ACCESS PANELS FOR MAIN DECK FLOOR PANELS								
ACCESS PANEL AND DOOR	MAN	-HOURS		MAJOR ZONE 200	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 230	ZONE				
232VF	1	0.3	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	232				
232XF	1	0.3	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	232				
232YF	1	0.3	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	232				
231AGF	1	0.3	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	231				
231AHF	1	0.3	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	231				
231AJF	1	0.3	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	231				
231AKF	0.5	0.2	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	231				
232ZF	1	0.3	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	232				
232AAF	1	0.3	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	232				
232ABF	1.05	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	232				
231ALF	1.05	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	231				
231BLM	1	0.3	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	231				
231AMF	1	0.3	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	231				
232ACF	1	0.3	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	232				
232ADF	1	0.3	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	232				
231ANF	1	0.3	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	231				
231APF	1	0.3	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 41 - WET AREA)	231				



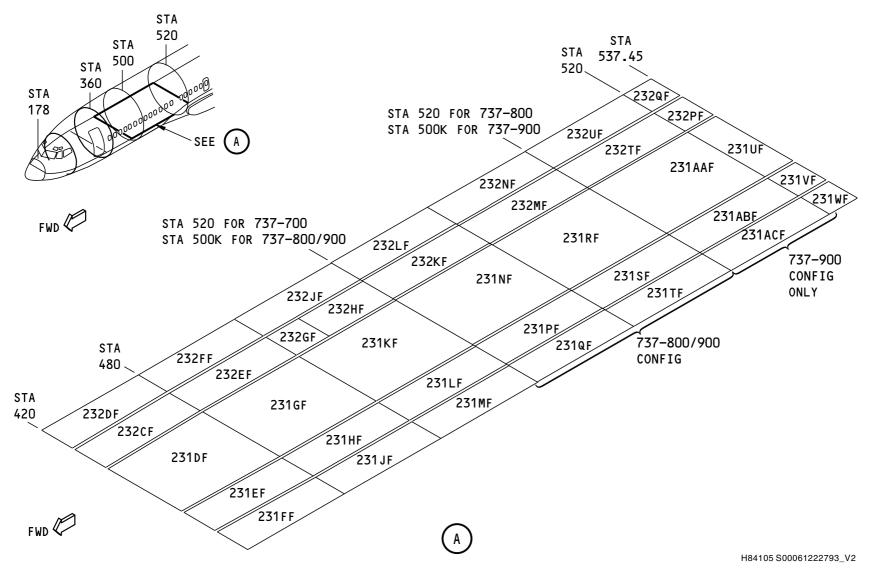


Figure A-57 PASSENGER CABIN FLOOR PANELS (SEC 43)



	ACCESS PANELS FOR PASSENGER CABIN FLOOR PANELS								
ACCESS PANEL AND DOOR	MAN	I-HOURS		MAJOR ZONE 200	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 230	ZONE				
231DF	0.35	0.35	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43)	231				
231EF	0.25	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43)	231				
231FF	0.25	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43)	231				
231GF	0.35	0.35	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43)	231				
231HF	0.25	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43)	231				
231JF	0.25	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43)	231				
231KF	0.35	0.35	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43)	231				
231LF	0.25	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43)	231				
231MF	0.25	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43)	231				
231NF	0.35	0.35	800, 900/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43) (737-800/900 ONLY)	231				
231PF	0.25	0.25	800, 900/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43) (737-800/900 ONLY)	231				
231QF	0.25	0.25	800, 900/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43) (737-800/900 ONLY)	231				
231RF	0.35	0.35	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43)	231				
231SF	0.25	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43)	231				
231TF	0.25	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43)	231				
231UF	0.25	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43)	231				
231VF	0.15	0.15	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43)	231				
231WF	0.15	0.15	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43)	231				
231AAF	0.35	0.35	900/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43) (737-900 ONLY)	231				
231ABF	0.25	0.25	900/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43) (737-900 ONLY)	231				



	ACCESS PANELS FOR PASSENGER CABIN FLOOR PANELS								
ACCESS PANEL AND DOOR	MAN	-HOURS		MAJOR ZONE 200	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 230	ZONE				
231ACF	0.25	0.25	900/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43) (737-900 ONLY)	231				
232CF	0.25	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43)	232				
232DF	0.25	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43)	232				
232EF	0.25	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43)	232				
232FF	0.25	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43)	232				
232GF	0.15	0.15	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43)	232				
232HF	0.25	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43)	232				
232JF	0.25	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43)	232				
232KF	0.25	0.25	800, 900/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43) (737-800/900 ONLY)	232				
232LF	0.25	0.25	800, 900/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43) (737-800/900 ONLY)	232				
232MF	0.25	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43)	232				
232NF	0.25	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43)	232				
232PF	0.15	0.15	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43)	232				
232QF	0.15	0.15	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43)	232				
232TF	0.20	0.20	900/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43) (737-900 ONLY)	232				
232UF	0.20	0.20	900/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 43) (737-900 ONLY)	232				



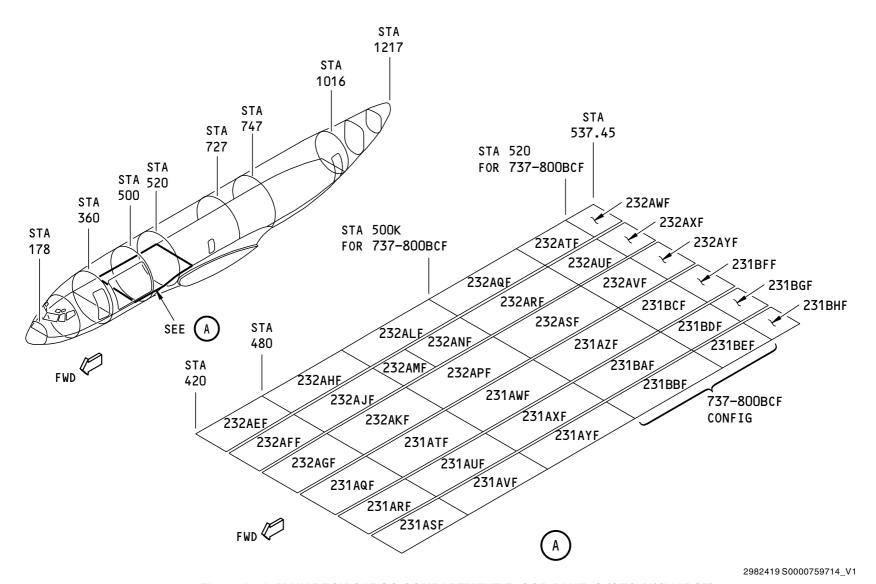


Figure A-58 MAIN DECK CARGO COMPARTMENT FLOOR PANELS (SEC 43)(800BCF)



	ACCESS PANELS FOR MAIN DECK FLOOR PANELS									
ACCESS PANEL MAN-HOU		HOURS		MAJOR ZONE 200	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 230	ZONE					
232AEF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	232					
232AFF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	232					
232AGF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	232					
231AQF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	231					
231ARF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	231					
231ASF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	231					
232AHF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	232					
232AJF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	232					
232AKF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	232					
231ATF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	231					
231AUF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	231					
231AVF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	231					
232ALF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	232					
232AMF	0.15	0.15	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	232					
232ANF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	232					
232APF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	232					
231AWF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	231					
231AXF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	231					
231AYF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	231					
232AQF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	232					
232ARF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	232					
232ASF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	232					
231AZF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	231					
231BAF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	231					



	ACCESS PANELS FOR MAIN DECK FLOOR PANELS									
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 200	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 230	ZONE					
231BBF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	231					
232ATF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	232					
232AUF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	232					
232AVF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	232					
231BCF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	231					
231BDF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	231					
231BEF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	231					
232AWF	0.15	0.15	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	232					
232AXF	0.15	0.15	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	232					
232AYF	0.15	0.15	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	232					
231BFF	0.15	0.15	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	231					
231BGF	0.15	0.15	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	231					
231BHF	0.15	0.15	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 43 - WET AREA)	231					



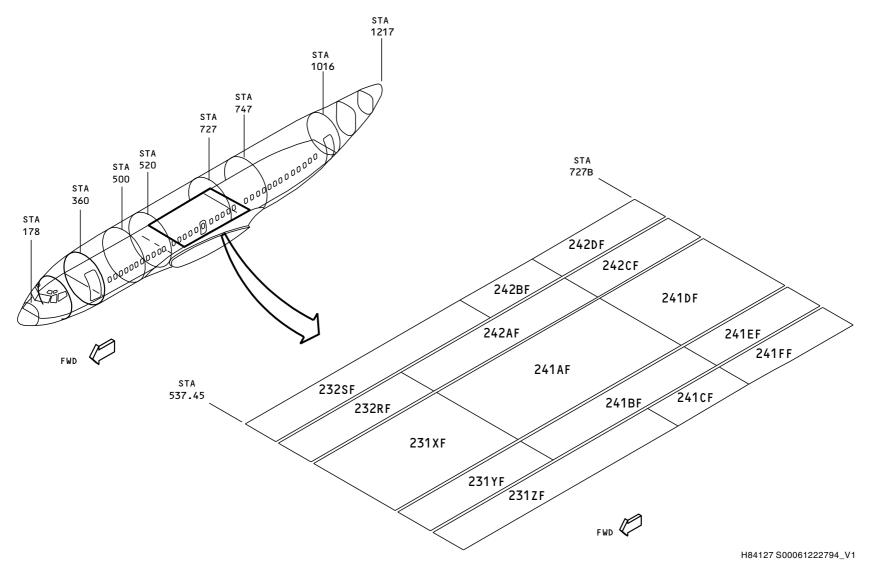


Figure A-59 PASSENGER CABIN FLOOR PANELS (SEC 44)

Oct 15/2021 D626A001 PAGE A.2-99



ACCESS PANELS FOR PASSENGER CABIN FLOOR PANELS										
ACCESS PANEL MAI		HOURS		MAJOR ZONE 200	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 230	ZONE					
231XF	0.35	0.35	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 44)	231					
231YF	0.25	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 44)	231					
231ZF	0.38	0.38	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 44)	231					
232RF	0.25	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 44)	232					
232SF	0.38	0.38	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 44)	232					

	ACCESS PANELS FOR PASSENGER CABIN FLOOR PANELS								
ACCESS PANEL AND DOOR	MAN-HOLIRS			MAJOR ZONE 200	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 240	ZONE				
241AF	0.42	0.42	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 44)	241				
241BF	0.38	0.38	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 44)	241				
241CF	0.25	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 44)	241				
241DF	0.35	0.35	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 44)	241				
241EF	0.25	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 44)	241				
241FF	0.25	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 44)	241				
242AF	0.38	0.38	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 44)	242				
242BF	0.20	0.20	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 44)	242				
242CF	0.25	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 44)	242				
242DF	0.25	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 44)	242				





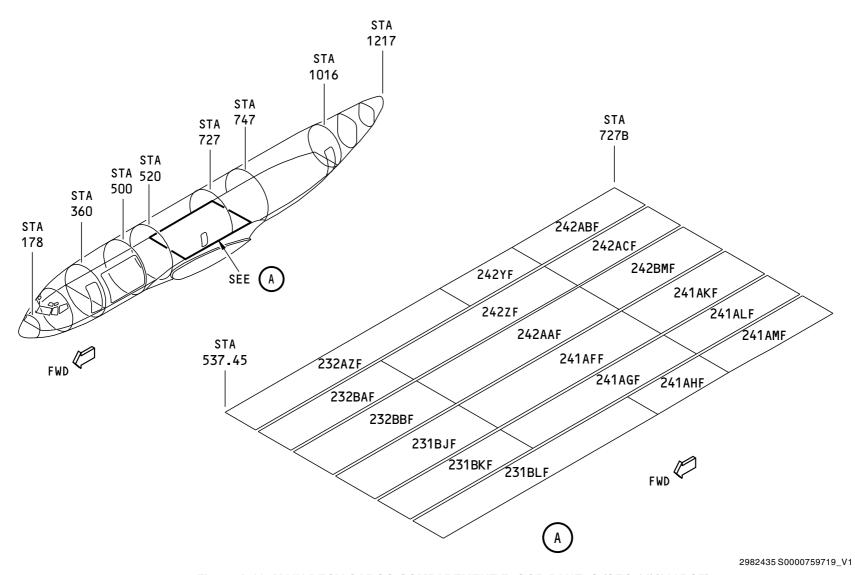


Figure A-60 MAIN DECK CARGO COMPARTMENT FLOOR PANELS (SEC 44)(800BCF)



	ACCESS PANELS FOR MAIN DECK FLOOR PANELS									
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 200	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 230	ZONE					
232AZF	0.38	0.38	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 44 - WET AREA)	232					
232BAF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 44 - WET AREA)	232					
232BBF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 44 - WET AREA)	232					
231BJF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 44 - WET AREA)	231					
231BKF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 44 - WET AREA)	231					
231BLF	0.38	0.38	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 44 - WET AREA)	231					

	ACCESS PANELS FOR MAIN DECK FLOOR PANELS							
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 200	LOCATION BY			
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 240	ZONE			
242YF	0.2	0.2	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 44 - WET AREA)	242			
242ZF	0.38	0.38	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 44 - WET AREA)	242			
242AAF	0.38	0.38	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 44 - WET AREA)	242			
241AFF	0.38	0.38	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 44 - WET AREA)	241			
241AGF	0.38	0.38	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 44 - WET AREA)	241			
241AHF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 44 - WET AREA)	241			
242ABF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 44 - WET AREA)	242			
242ACF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 44 - WET AREA)	242			
242BMF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 44 - WET AREA)	242			
241AKF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 44 - WET AREA)	241			
241ALF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 44 - WET AREA)	241			
241AMF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 44 - WET AREA)	241			



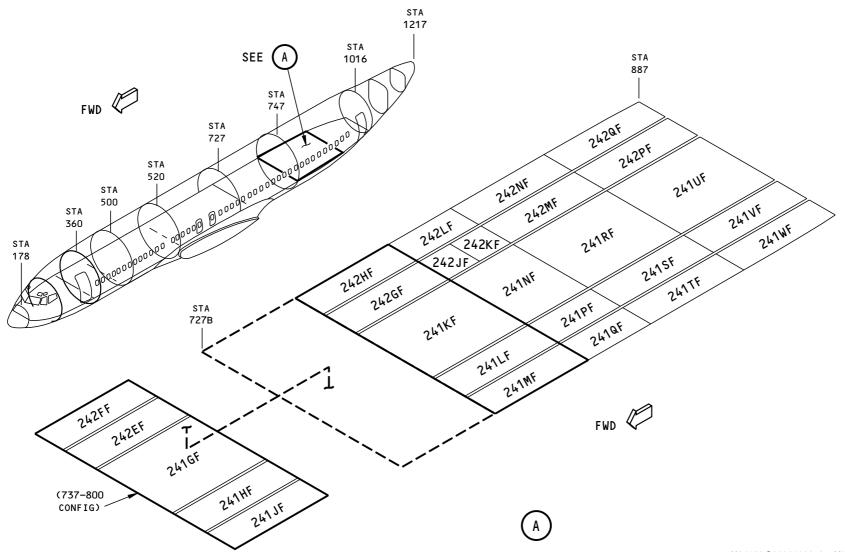


Figure A-61 PASSENGER CABIN FLOOR PANELS (SEC 46)

H84192 S00061222795_V2




	ACCESS PANELS FOR PASSENGER CABIN FLOOR PANELS									
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 200	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 240	ZONE					
241GF	0.35	0.35	800/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 46)	241					
241HF	0.25	0.25	800/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 46)	241					
241JF	0.25	0.25	800/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 46)	241					
241KF	0.35	0.35	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 46)	241					
241LF	0.25	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 46)	241					
241MF	0.25	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 46)	241					
241NF	0.35	0.35	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 46)	241					
241PF	0.20	0.20	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 46)	241					
241QF	2.10	0.46	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 46 - WET AREA)	241					
241RF	0.35	0.35	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 46)	241					
241SF	0.25	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 46)	241					
241TF	0.25	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 46)	241					
241UF	2.03	0.43	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 46 - WET AREA)	241					
241VF	2.10	0.46	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 46 - WET AREA)	241					
241WF	2.10	0.46	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 46 - WET AREA)	241					
242EF	0.25	0.25	800/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 46)	242					
242FF	0.25	0.25	800/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 46)	242					
242GF	0.25	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 46)	242					
242HF	0.25	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 46)	242					
242JF	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 46)	242					
242KF	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 46)	242					
242LF	0.20	0.20	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 46)	242					

Oct 15/2021 D626A001 PAGE A.2-104



ACCESS PANELS FOR PASSENGER CABIN FLOOR PANELS									
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 200	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 240	ZONE				
242MF	0.25	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 46)	242				
242NF	0.25	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 46)	242				
242PF	2.10	0.46	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 46 - WET AREA)	242				
242QF	2.10	0.46	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 46 - WET AREA)	242				



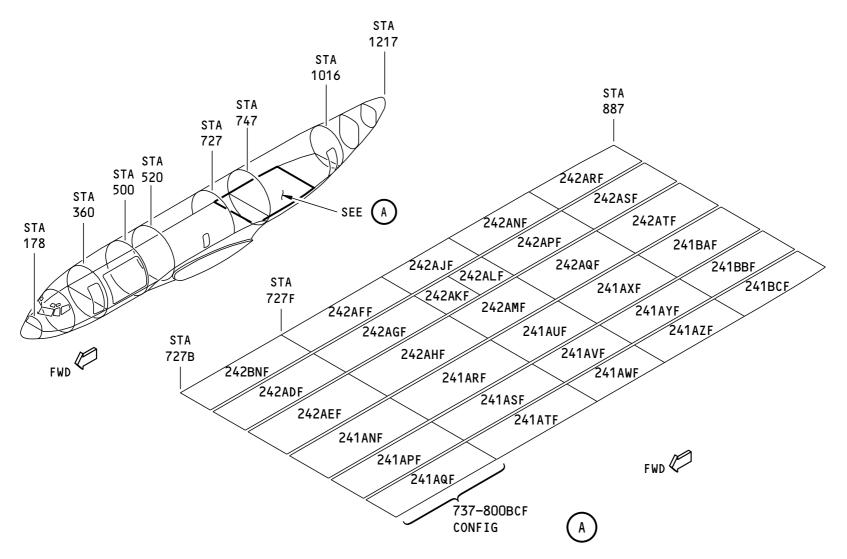

2982452 S0000759718_V1

Figure A-62 MAIN DECK CARGO COMPARTMENT FLOOR PANELS (SEC 46)(800BCF)



	ACCESS PANELS FOR MAIN DECK FLOOR PANELS									
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 200	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 240	ZONE					
242BNF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 46 - WET AREA)	242					
242ADF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 46 - WET AREA)	242					
242AEF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 46 - WET AREA)	242					
241ANF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 46 - WET AREA)	241					
241APF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 46 - WET AREA)	241					
241AQF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 46 - WET AREA)	241					
242AFF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 46 - WET AREA)	242					
242AGF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 46 - WET AREA)	242					
242AHF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 46 - WET AREA)	242					
241ARF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 46 - WET AREA)	241					
241ASF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 46 - WET AREA)	241					
241ATF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 46 - WET AREA)	241					
242AJF	0.2	0.2	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 46 - WET AREA)	242					
242AKF	0.1	0.1	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 46 - WET AREA)	242					
242ALF	0.1	0.1	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 46 - WET AREA)	242					
242AMF	0.2	0.2	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 46 - WET AREA)	242					
241AUF	0.2	0.2	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 46 - WET AREA)	241					
241AVF	0.2	0.2	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 46 - WET AREA)	241					
241AWF	2.1	0.46	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 46 - WET AREA)	241					
242ANF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 46 - WET AREA)	242					
242APF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 46 - WET AREA)	242					
242AQF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 46 - WET AREA)	242					
241AXF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 46 - WET AREA)	241					
241AYF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 46 - WET AREA)	241					



	ACCESS PANELS FOR MAIN DECK FLOOR PANELS									
ACCESS PANEL MAN		HOURS		MAJOR ZONE 200	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 240	ZONE					
241AZF	0.25	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 46 - WET AREA)	241					
242ARF	2.1	0.46	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 46 - WET AREA)	242					
242ASF	2.1	0.46	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 46 - WET AREA)	242					
242ATF	2.03	0.43	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 46 - WET AREA)	242					
241BAF	2.03	0.43	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 46 - WET AREA)	241					
241BBF	2.1	0.46	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 46 - WET AREA)	241					
241BCF	2.1	0.46	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 46 - WET AREA)	241					



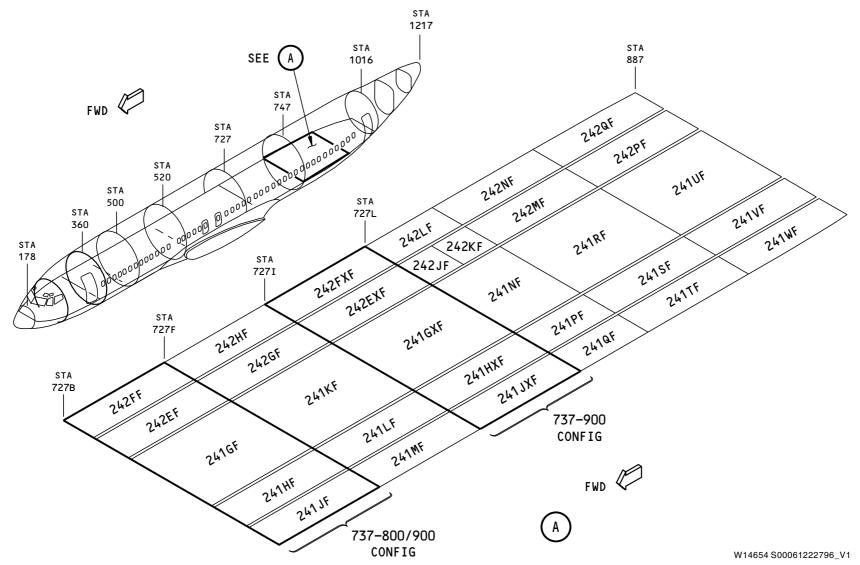


Figure A-63 PASSENGER CABIN FLOOR PANELS (SEC 46) (737-800/900)

Oct 15/2021 D626A001 PAGE A.2-109



		AC	CESS PANELS FOR I	PASSENGER CABIN FLOOR PANELS	
ACCESS PANEL AND DOOR	MAN-	MAN-HOURS		MAJOR ZONE 200	LOCATION BY
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 240	ZONE
241GF	0.35	0.35	900/ALL	PASSENGER COMPARTMENT FLOOR PANELS	241
241HF	0.25	0.25	900/ALL	PASSENGER COMPARTMENT FLOOR PANELS	241
241JF	0.25	0.25	900/ALL	PASSENGER COMPARTMENT FLOOR PANELS	241
241GXF	0.35	0.35	900/ALL	PASSENGER COMPARTMENT FLOOR PANELS	241
241HXF	0.25	0.25	900/ALL	PASSENGER COMPARTMENT FLOOR PANELS	241
241JXF	0.25	0.25	900/ALL	PASSENGER COMPARTMENT FLOOR PANELS	241
241KF	0.35	0.35	ALL/ALL	PASSENGER COMPARTMENT FLOOR PANELS	241
241LF	0.25	0.25	ALL/ALL	PASSENGER COMPARTMENT FLOOR PANELS	241
241MF	0.25	0.25	ALL/ALL	PASSENGER COMPARTMENT FLOOR PANELS	241
241NF	0.35	0.35	ALL/ALL	PASSENGER COMPARTMENT FLOOR PANELS	241
241PF	0.20	0.20	ALL/ALL	PASSENGER COMPARTMENT FLOOR PANELS	241
241QF	2.10	0.46	ALL/ALL	PASSENGER COMPARTMENT FLOOR PANELS	241
241RF	0.35	0.35	ALL/ALL	PASSENGER COMPARTMENT FLOOR PANELS	241
241SF	0.25	0.25	ALL/ALL	PASSENGER COMPARTMENT FLOOR PANELS	241
241TF	0.25	0.25	ALL/ALL	PASSENGER COMPARTMENT FLOOR PANELS	241
241UF	2.03	0.43	ALL/ALL	PASSENGER COMPARTMENT FLOOR PANELS	241
241VF	2.10	0.46	900/ALL	PASSENGER COMPARTMENT FLOOR PANELS	241
241WF	2.10	0.46	900/ALL	PASSENGER COMPARTMENT FLOOR PANELS	241
241XF	2.10	0.46	900/ALL	PASSENGER COMPARTMENT FLOOR PANELS	241
241YF	2.10	0.46	900/ALL	PASSENGER COMPARTMENT FLOOR PANELS	241
242EF	0.25	0.25	900/ALL	PASSENGER COMPARTMENT FLOOR PANELS	242
242FF	0.25	0.25	900/ALL	PASSENGER COMPARTMENT FLOOR PANELS	242
242EXF	0.25	0.25	900/ALL	PASSENGER COMPARTMENT FLOOR PANELS	242
242FXF	0.25	0.25	900/ALL	PASSENGER COMPARTMENT FLOOR PANELS	242



ACCESS PANELS FOR PASSENGER CABIN FLOOR PANELS									
ACCESS PANEL AND DOOR	MA	N-HOURS		MAJOR ZONE 200	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 240	ZONE				
242GF	0.25	0.25	ALL/ALL	PASSENGER COMPARTMENT FLOOR PANELS	242				
242HF	0.25	0.25	ALL/ALL	PASSENGER COMPARTMENT FLOOR PANELS	242				
242JF	0.10	0.10	ALL/ALL	PASSENGER COMPARTMENT FLOOR PANELS	242				
242KF	0.10	0.10	ALL/ALL	PASSENGER COMPARTMENT FLOOR PANELS	242				
242LF	0.20	0.20	ALL/ALL	PASSENGER COMPARTMENT FLOOR PANELS	242				
242MF	0.25	0.25	ALL/ALL	PASSENGER COMPARTMENT FLOOR PANELS	242				
242NF	0.25	0.25	ALL/ALL	PASSENGER COMPARTMENT FLOOR PANELS	242				
242PF	2.10	0.46	ALL/ALL	PASSENGER COMPARTMENT FLOOR PANELS	242				
242QF	2.10	0.46	ALL/ALL	PASSENGER COMPARTMENT FLOOR PANELS	242				



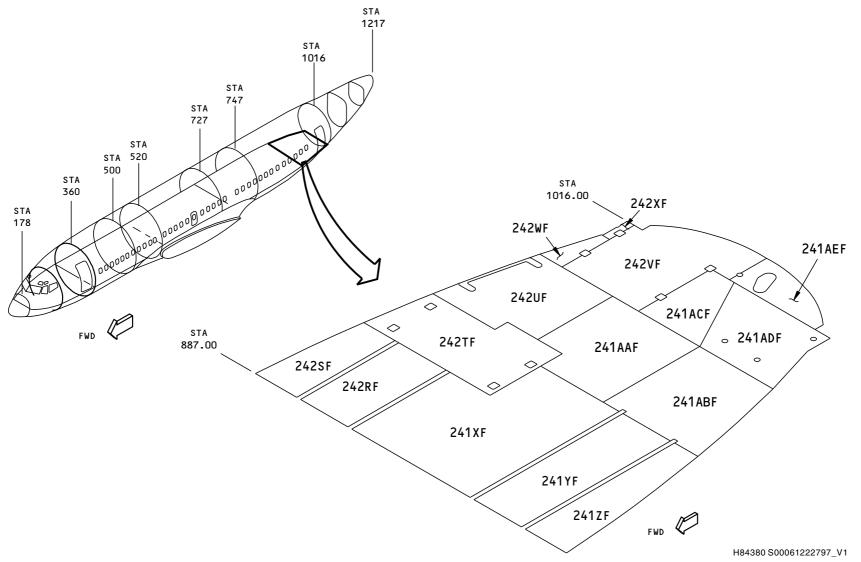


Figure A-64 PASSENGER CABIN FLOOR PANELS (SEC 47)



ACCESS PANEL		A	COLOG FAMELS FOR	PASSENGER CABIN FLOOR PANELS	
AND DOOR	MA	MAN-HOURS		MAJOR ZONE 200	LOCATION BY
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 240	ZONE
241XF	2.20	0.52	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 47 - WET AREA)	241
241YF	2.10	0.46	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 47 - WET AREA)	241
241ZF	2.00	0.41	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 47 - WET AREA)	241
241AAF	2.03	0.43	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 47 - WET AREA)	241
241ABF	2.03	0.43	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 47 - WET AREA)	241
241ACF	1.15	0.30	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 47 - WET AREA)	241
241ADF	1.20	0.34	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 47 - WET AREA)	241
241AEF	1.05	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 47 - WET AREA)	241
242RF	1.20	0.30	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 47 - WET AREA)	242
242SF	1.20	0.30	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 47 - WET AREA)	242
242TF	2.03	0.43	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 47 - WET AREA)	242
242UF	2.03	0.43	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 47 - WET AREA)	242
242VF	2.03	0.43	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 47 - WET AREA)	242
242WF	1.10	0.25	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 47 - WET AREA)	242
242XF	1.00	0.20	ALL/ALL	PANEL ASSY - PASSENGER CABIN FLOOR ACCESS - (SEC 47 - WET AREA)	242

Oct 15/2021 D626A001 PAGE A.2-113





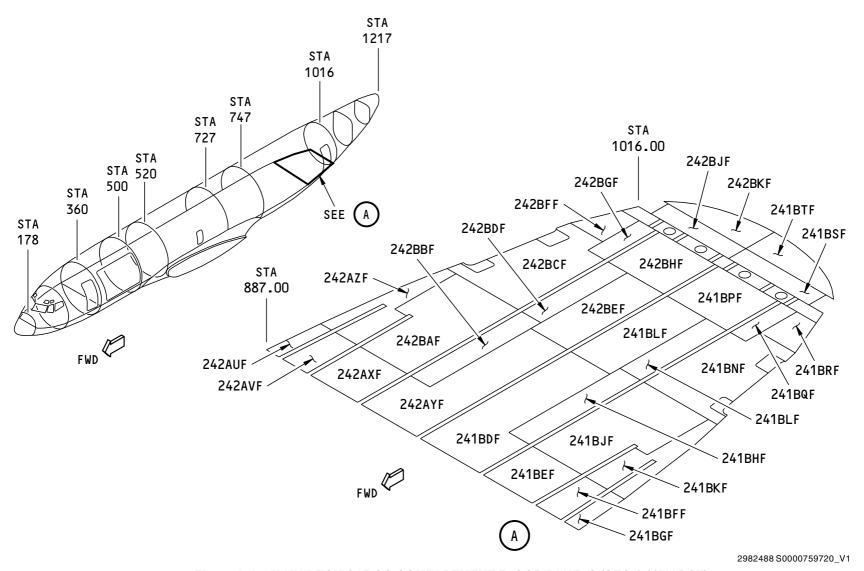


Figure A-65 MAIN DECK CARGO COMPARTMENT FLOOR PANELS (SEC 47)(800BCF)




	ACCESS PANELS FOR MAIN DECK FLOOR PANELS								
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 200	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 240	ZONE				
242AUF	0.5	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 47 - WET AREA)	242				
242AVF	0.65	0.3	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 47 - WET AREA)	242				
242AXF	0.65	0.3	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 47 - WET AREA)	242				
242AYF	1.2	0.5	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 47 - WET AREA)	242				
241BDF	1.2	0.5	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 47 - WET AREA)	241				
241BEF	0.65	0.3	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 47 - WET AREA)	241				
241BFF	0.65	0.3	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 47 - WET AREA)	241				
241BGF	0.5	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 47 - WET AREA)	241				
242AZF	1.2	0.5	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 47 - WET AREA)	242				
242BAF	1.2	0.5	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 47 - WET AREA)	242				
242BBF	0.5	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 47 - WET AREA)	242				
241BHF	0.5	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 47 - WET AREA)	241				
241BJF	1.2	0.5	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 47 - WET AREA)	241				
241BKF	1.2	0.5	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 47 - WET AREA)	241				
242BCF	1.5	0.6	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 47 - WET AREA)	242				
242BDF	0.4	0.2	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 47 - WET AREA)	242				
242BEF	0.4	0.2	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 47 - WET AREA)	242				
241BLF	0.4	0.2	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 47 - WET AREA)	241				
241BMF	0.4	0.2	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 47 - WET AREA)	241				
241BNF	1.5	0.6	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 47 - WET AREA)	241				
242BFF	0.3	0.1	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 47 - WET AREA)	242				
242BGF	0.3	0.1	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 47 - WET AREA)	242				
242BHF	0.7	0.3	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 47 - WET AREA)	242				
241BPF	0.7	0.3	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 47 - WET AREA)	241				



	ACCESS PANELS FOR MAIN DECK FLOOR PANELS									
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 200	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 240	ZONE					
241BQF	0.3	0.1	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 47 - WET AREA)	241					
241BRF	0.3	0.1	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 47 - WET AREA)	241					
242BJF	0.6	0.3	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 47 - WET AREA)	242					
241BSF	0.6	0.3	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 47 - WET AREA)	241					
242BKF	1	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 47 - WET AREA)	242					
241BTF	1	0.25	800BCF/ALL	PANEL ASSY - MAIN DECK FLOOR ACCESS - (SEC 47 - WET AREA)	241					



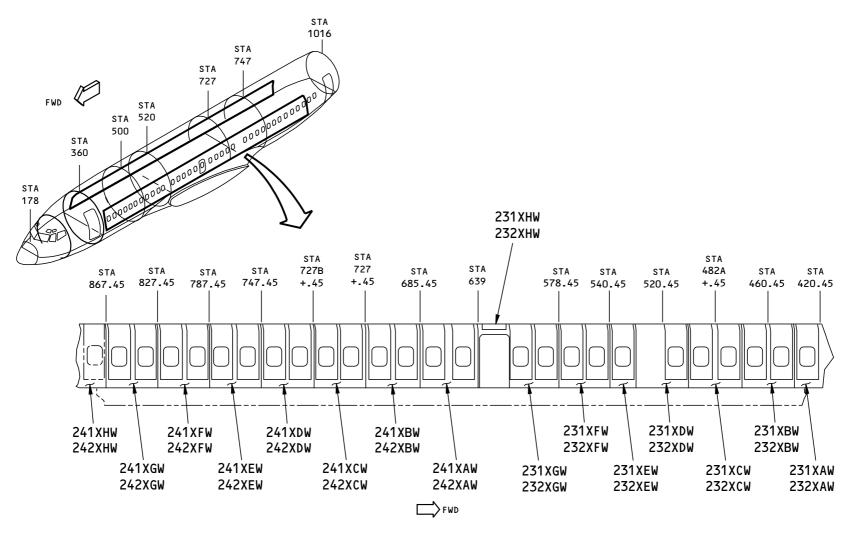

LEFT SIDE SHOWN RIGHT SIDE OPPOSITE

K09064 S00061222798_V1

Figure A-66 PASSENGER CABIN SIDEWALL PANELS (737-600)



ACCESS PANELS FOR PASSENGER CABIN 737-600								
ACCESS PANEL AND DOOR NUMBER	MAN-HOURS			MAJOR ZONE 200	LOCATION BY			
	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 230	ZONE			
231XAW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231			
231XBW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231			
231XCW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231			
231XDW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231			
231XEW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231			
231XFW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231			
231XGW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231			
231XHW	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231			
232XAW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232			
232XBW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232			
232XCW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232			
232XDW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232			
232XEW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232			
232XFW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232			
232XGW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232			
232XHW	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232			

ACCESS PANELS FOR PASSENGER CABIN 737-600								
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 200	LOCATION BY			
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 240	ZONE			
241XAW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241			
241XBW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241			
241XCW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241			
241XDW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241			



ACCESS PANELS FOR PASSENGER CABIN 737-600								
ACCESS PANEL AND DOOR NUMBER	MAN-HOURS			MAJOR ZONE 200	LOCATION BY			
	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 240	ZONE			
241XEW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241			
241XFW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241			
241XGW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241			
241XHW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241			
242XAW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242			
242XBW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242			
242XCW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242			
242XDW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242			
242XEW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242			
242XFW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242			
242XGW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242			
242XHW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242			



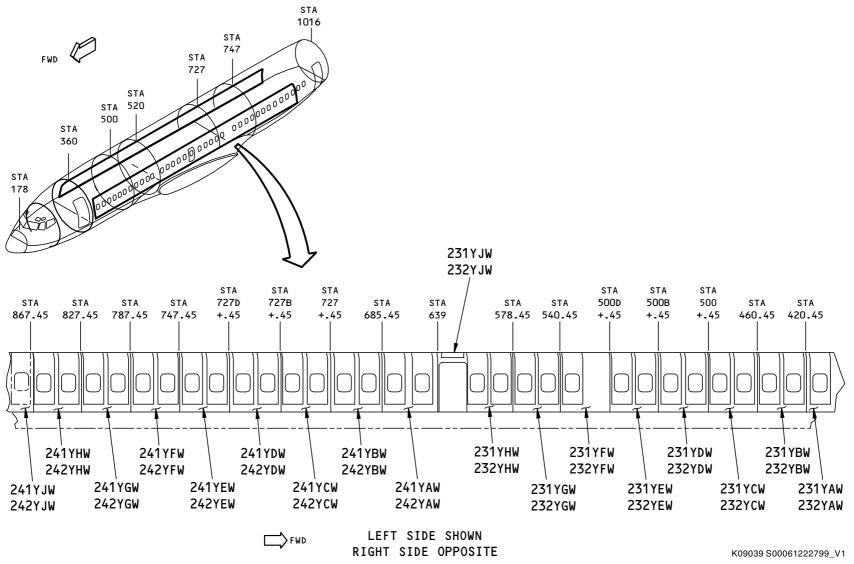


Figure A-67 PASSENGER CABIN SIDEWALL PANELS (737-700)



ACCESS PANELS FOR PASSENGER CABIN 737-700								
ACCESS PANEL AND DOOR	MAN	HOURS		MAJOR ZONE 200	LOCATION BY			
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 230	ZONE			
231YAW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231			
231YBW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231			
231YCW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231			
231YDW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231			
231YEW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231			
231YFW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231			
231YGW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231			
231YHW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231			
231YJW	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231			
232YAW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232			
232YBW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232			
232YCW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232			
232YDW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232			
232YEW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232			
232YFW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232			
232YGW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232			
232YHW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232			
232YJW	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232			

ACCESS PANELS FOR PASSENGER CABIN 737-700										
ACCESS PANEL AND DOOR	MAN-	MAN-HOURS		MAJOR ZONE 200	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 240	ZONE					
241YAW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241					
241YBW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241					



ACCESS PANELS FOR PASSENGER CABIN 737-700								
ACCESS PANEL AND DOOR	MAN	I-HOURS		MAJOR ZONE 200	LOCATION BY			
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 240	ZONE			
241YCW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241			
241YDW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241			
241YEW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241			
241YFW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241			
241YGW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241			
241YHW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241			
241YJW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241			
242YAW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242			
242YBW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242			
242YCW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242			
242YDW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242			
242YEW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242			
242YFW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242			
242YGW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242			
242YHW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242			
242YJW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242			



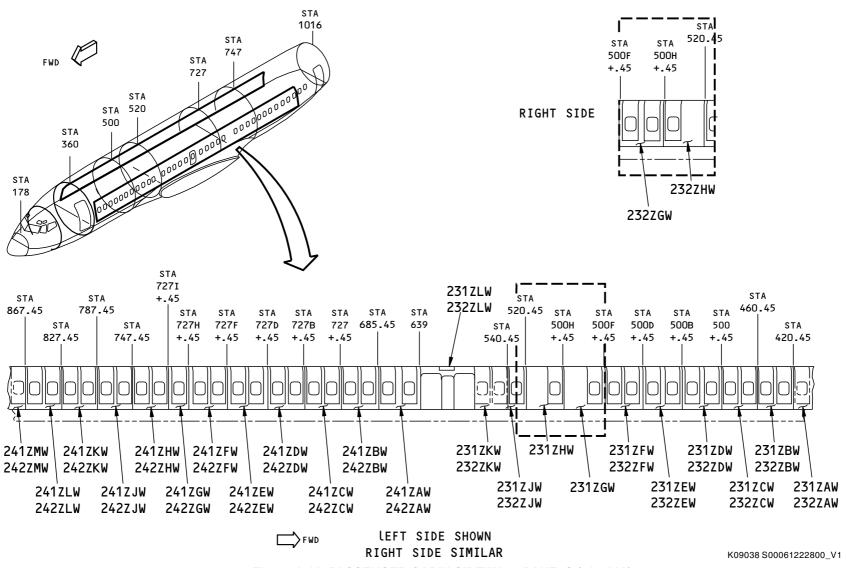


Figure A-68 PASSENGER CABIN SIDEWALL PANELS (737-800)




			ACCESS PANELS F	OR PASSENGER CABIN 737-800	
ACCESS PANEL AND DOOR	MAN-	MAN-HOURS		MAJOR ZONE 200	LOCATION BY
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 230	ZONE
231ZAW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231
231ZBW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231
231ZCW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231
231ZDW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231
231ZEW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231
231ZFW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231
231ZGW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231
231ZHW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231
231ZJW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231
231ZKW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231
231ZLW	0.20	0.20	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231
232ZAW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232
232ZBW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232
232ZCW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232
232ZDW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232
232ZEW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232
232ZFW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232
232ZGW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232
232ZHW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232
232ZJW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232
232ZKW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232
232ZLW	0.20	0.20	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232



			ACCESS PANELS F	OR PASSENGER CABIN 737-800	
ACCESS PANEL AND DOOR	MAN	-HOURS		MAJOR ZONE 200	LOCATION BY
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 240	ZONE
241ZAW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241
241ZBW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241
241ZCW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241
241ZDW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241
241ZEW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241
241ZFW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241
241ZGW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241
241ZHW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241
241ZJW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241
241ZKW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241
241ZLW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241
241ZMW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241
242ZAW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242
242ZBW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242
242ZCW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242
242ZDW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242
242ZEW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242
242ZFW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242
242ZGW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242
242ZHW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242
242ZJW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242
242ZKW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242
242ZLW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242
242ZMW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242



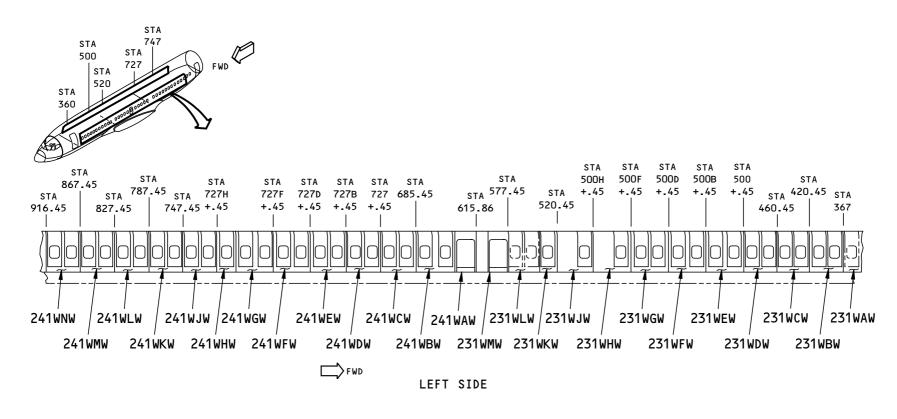

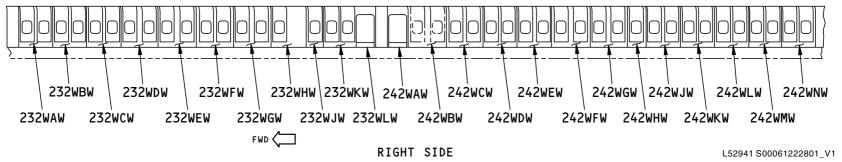


Figure A-69 PASSENGER CABIN SIDEWALL PANELS (737-900)



			ACCESS PANELS F	OR PASSENGER CABIN 737-900	
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 200	LOCATION BY
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 230	ZONE
231WAW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231
231WBW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231
231WCW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231
231WDW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231
231WEW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231
231WFW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231
231WGW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231
231WHW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231
231WJW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231
231WKW	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231
231WLW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231
231WMW	0.20	0.20	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	231
232WAW	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232
232WBW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232
232WCW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232
232WDW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232
232WEW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232
232WFW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232
232WGW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232
232WHW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232
232WJW	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232
232WKW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232
232WLW	0.20	0.20	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	232



			ACCESS PANELS F	OR PASSENGER CABIN 737-900	
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 200	LOCATION BY
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 240	ZONE
241WAW	0.20	0.20	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241
241WBW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241
241WCW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241
241WDW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241
241WEW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241
241WFW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241
241WGW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241
241WHW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241
241WJW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241
241WKW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241
241WLW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241
241WMW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241
241WNW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	241
242WAW	0.20	0.20	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242
242WBW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242
242WCW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242
242WDW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242
242WEW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242
242WFW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242
242WGW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242
242WHW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242
242WJW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242
242WKW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242
242WLW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242




ACCESS PANELS FOR PASSENGER CABIN 737-900									
ACCESS PANEL AND DOOR	MAN-	MAN-HOURS		MAJOR ZONE 200	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 240	ZONE				
242WMW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242				
242WNW	0.17	0.17	ALL/ALL	PANEL ASSY - PASSENGER CABIN SIDEWALL	242				



Oct 15/2021

737-600/700/800/900/900ER MAINTENANCE PLANNING DOCUMENT

K08952 S00061222802_V1

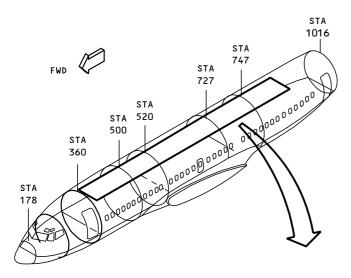

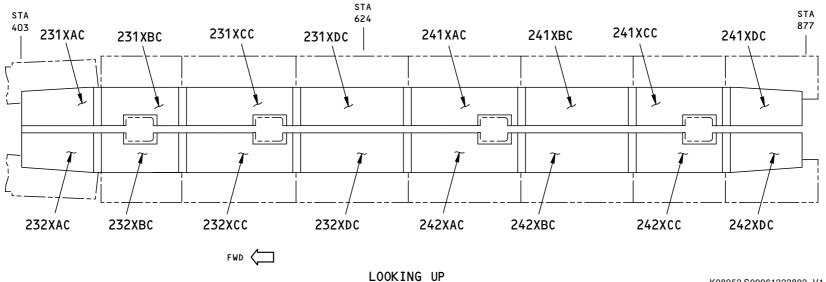


Figure A-70 PASSENGER CABIN CEILING PANELS (737-600)

D626A001 PAGE A.2-130



	ACCESS PANELS FOR PASSENGER CABIN 737-600									
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 200	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 230	ZONE					
231XAC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	231					
231XBC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	231					
231XCC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	231					
232XAC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	232					
232XBC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	232					
232XCC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	232					

	ACCESS PANELS FOR PASSENGER CABIN 737-600								
ACCESS PANEL AND DOOR	MAN	-HOURS		MAJOR ZONE 200	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 240	ZONE				
241XAC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	241				
241XBC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	241				
241XCC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	241				
241XDC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	241				
242XAC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	242				
242XBC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	242				
242XCC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	242				
242XDC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	242				



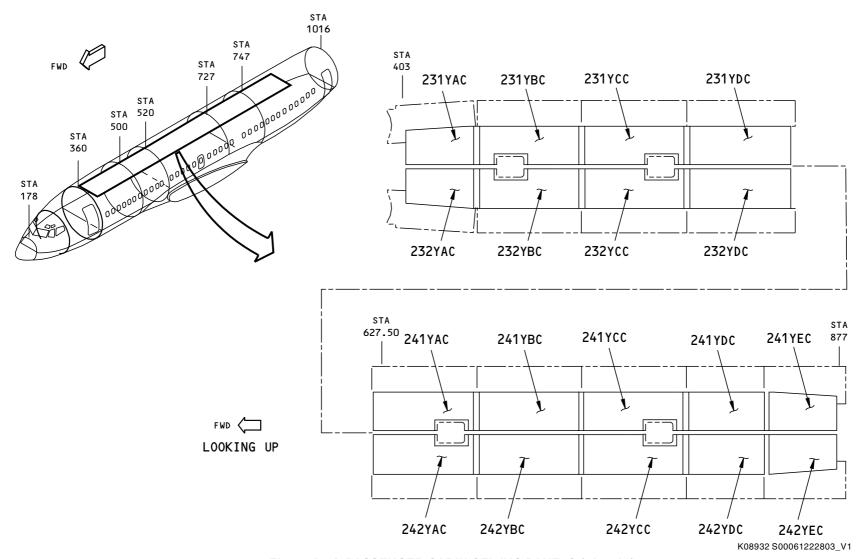


Figure A-71 PASSENGER CABIN CEILING PANELS (737-700)



	ACCESS PANELS FOR PASSENGER CABIN 737-700									
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 200	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 230	ZONE					
231YAC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	231					
231YBC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	231					
231YCC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	231					
231YDC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	231					
232YAC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	232					
232YBC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	232					
232YCC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	232					
232YDC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	232					

	ACCESS PANELS FOR PASSENGER CABIN 737-700								
ACCESS PANEL AND DOOR	MAN-HOLIRS			MAJOR ZONE 200	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 240	ZONE				
241YAC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	241				
241YBC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	241				
241YCC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	241				
241YDC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	241				
241YEC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	241				
242YAC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	242				
242YBC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	242				
242YCC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	242				
242YDC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	242				
242YEC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	242				



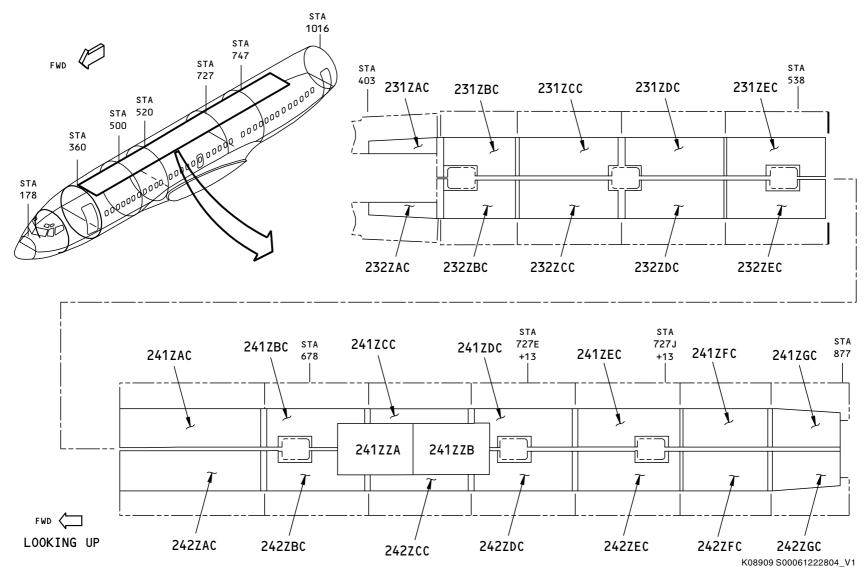


Figure A-72 PASSENGER CABIN CEILING PANELS (737-800)



ACCESS PANELS FOR PASSENGER CABIN 737-800									
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 200	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 230	ZONE				
231ZAC	0.05	0.05	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	231				
231ZBC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	231				
231ZCC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	231				
231ZDC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	231				
231ZEC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	231				
232ZAC	0.05	0.05	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	232				
232ZBC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	232				
232ZCC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	232				
232ZDC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	232				
232ZEC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	232				

	ACCESS PANELS FOR PASSENGER CABIN 737-800								
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 200	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 240	ZONE				
241ZZA	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	241				
241ZZB	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	241				
241ZAC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	241				
241ZBC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	241				
241ZCC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	241				
241ZDC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	241				
241ZEC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	241				
241ZFC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	241				
241ZGC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	241				
242ZAC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	242				



ACCESS PANELS FOR PASSENGER CABIN 737-800										
ACCESS PANEL AND DOOR NUMBER	MAN-HOURS			MAJOR ZONE 200	LOCATION BY					
	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 240	ZONE					
242ZBC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	242					
242ZCC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	242					
242ZDC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	242					
242ZEC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	242					
242ZFC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	242					
242ZGC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	242					



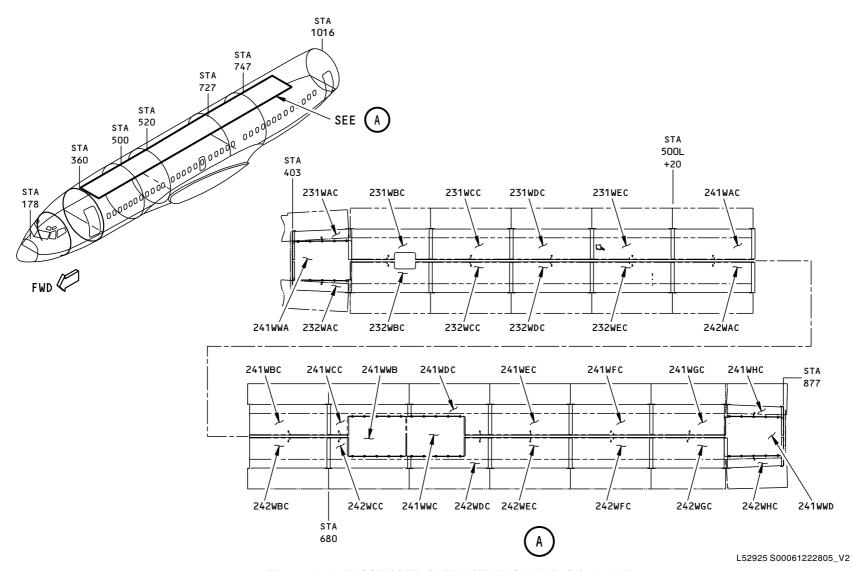


Figure A-73 PASSENGER CABIN CEILING PANELS (737-900)



ACCESS PANELS FOR PASSENGER CABIN 737-900									
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 200	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 230	ZONE				
231WAC	0.05	0.05	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	231				
231WBC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	231				
231WCC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	231				
231WDC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	231				
231WEC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	231				
232WAC	0.05	0.05	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	232				
232WBC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	232				
232WCC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	232				
232WDC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	232				
232WEC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	232				

	ACCESS PANELS FOR PASSENGER CABIN 737-900								
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 200	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 240	ZONE				
241WWA	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	241				
241WWB	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	241				
241WWC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	241				
241WWD	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	241				
241WAC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	241				
241WBC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	241				
241WCC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	241				
241WDC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	241				
241WEC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	241				
241WFC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	241				



ACCESS PANELS FOR PASSENGER CABIN 737-900									
ACCESS PANEL AND DOOR	MAI	N-HOURS		MAJOR ZONE 200	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 240	ZONE				
241WGC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	241				
241WHC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	241				
242WAC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	242				
242WBC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	242				
242WCC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	242				
242WDC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	242				
242WEC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	242				
242WFC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	242				
242WGC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	242				
242WHC	0.10	0.10	ALL/ALL	PANEL ASSY - PASSENGER CABIN CEILING	242				



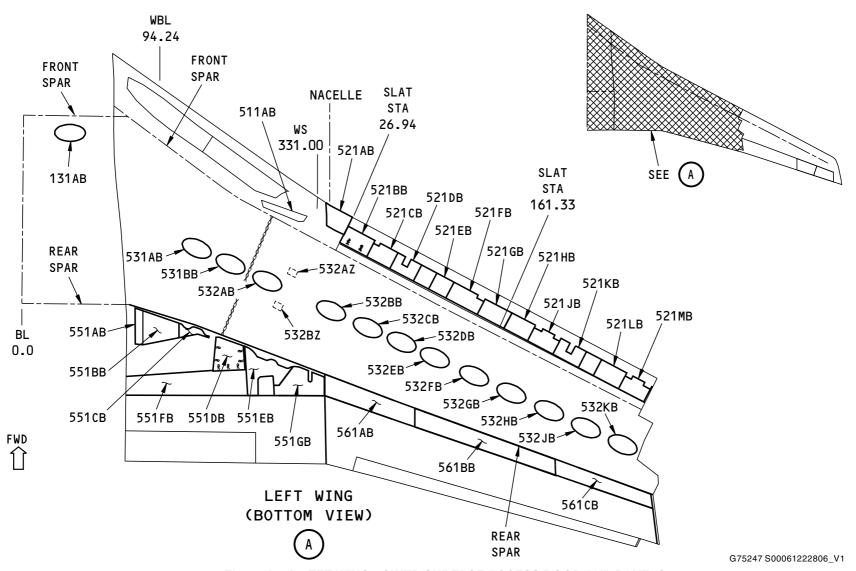


Figure A-74 LEFT WING LOWER SURFACE ACCESS DOOR AND PANELS



ACCESS PANELS FOR WING ACCESS									
ACCESS PANEL MAN-HOURS			MAJOR ZONE 100	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 130	ZONE				
131AB	0.08	0.13	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	131				

ACCESS PANELS FOR WING ACCESS									
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 500	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 510	ZONE				
511AB	0.13	0.15	ALL/ALL	PANEL ASSY - INBD LOWER FIXED LEADING EDGE	511				

	ACCESS PANELS FOR WING ACCESS								
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 500	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 520	ZONE				
521AB	0.05	0.05	ALL/ALL	PANEL ASSY - OUTBD L. E. BLOWOUT DOOR ACCESS	521				
521BB	0.02	0.02	ALL/ALL	DOOR ASSY - OUTBD LWR FIXED LEADING EDGE	521				
521CB	0.07	0.07	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	521				
521DB	0.07	0.07	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	521				
521EB	0.05	0.05	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	521				
521FB	0.07	0.07	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	521				
521GB	0.05	0.05	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	521				
521HB	0.05	0.05	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	521				
521JB	0.07	0.07	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	521				
521KB	0.07	0.07	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	521				
521LB	0.05	0.05	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	521				
521MB	0.07	0.07	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	521				



	ACCESS PANELS FOR WING ACCESS								
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 500	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 530	ZONE				
531AB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	531				
531BB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	531				
532AB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	532				
532AZ	0.20	0.20	ALL/ALL	DOOR ASSY - MAIN TANK INNER ACCESS - INTERNAL	532				
532BB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	532				
532BZ	0.20	0.20	ALL/ALL	DOOR ASSY - MAIN TANK INNER ACCESS - INTERNAL	532				
532CB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	532				
532DB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	532				
532EB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	532				
532FB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	532				
532GB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	532				
532HB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	532				
532JB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	532				
532KB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	532				

	ACCESS PANELS FOR WING ACCESS									
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 500	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 550	ZONE					
551AB	0.08	0.08	ALL/ALL	PANEL ASSY - LOWER INBD FIXED TRAILING EDGE	551					
551BB	0.20	0.25	ALL/ALL	PANEL ASSY - LOWER INBD FIXED TRAILING EDGE	551					
551CB	0.07	0.07	ALL/ALL	PANEL ASSY - LOWER INBD FIXED TRAILING EDGE	551					
551DB	0.07	0.07	ALL/ALL	PANEL ASSY - LOWER INBD FIXED TRAILING EDGE	551					
551EB	0.20	0.25	ALL/ALL	PANEL ASSY - LOWER INBD FIXED TRAILING EDGE	551					
551FB	0.20	0.25	ALL/ALL	PANEL ASSY - LOWER INBD FIXED TRAILING EDGE	551					



ACCESS PANELS FOR WING ACCESS									
ACCESS PANEL MAN-HOURS			MAJOR ZONE 500	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 550	ZONE				
551GB	0.17	0.17	ALL/ALL	PANEL ASSY - LOWER INBD FIXED TRAILING EDGE	551				

ACCESS PANELS FOR WING ACCESS									
ACCESS PANEL MAN-HOURS		HOURS		MAJOR ZONE 500	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 560	ZONE				
561AB	0.13	0.17	ALL/ALL	PANEL ASSY - LOWER MID SPAN TRAILING EDGE	561				
561BB	0.13	0.17	ALL/ALL	PANEL ASSY - LOWER MID SPAN TRAILING EDGE	561				
561CB	0.13	0.17	ALL/ALL	PANEL ASSY - LOWER MID SPAN TRAILING EDGE	561				



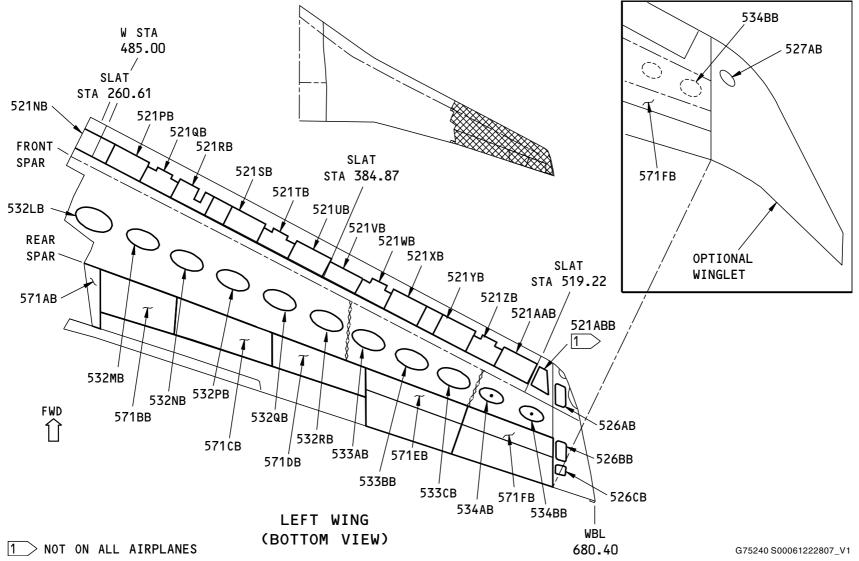


Figure A-75 LEFT WING LOWER SURFACE ACCESS DOOR AND PANELS



			ACCESS PAI	NELS FOR WING ACCESS	
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 500	LOCATION BY
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 520	ZONE
521NB	0.05	0.05	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	521
521PB	0.05	0.05	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	521
521QB	0.07	0.07	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	521
521RB	0.07	0.07	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	521
521SB	0.05	0.05	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	521
521TB	0.07	0.07	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	521
521UB	0.05	0.05	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	521
521VB	0.05	0.05	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	521
521WB	0.07	0.07	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	521
521XB	0.05	0.05	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	521
521YB	0.05	0.05	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	521
521ZB	0.07	0.07	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	521
521AAB	0.05	0.05	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	521
521ABB	0.05	0.05	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	521
526AB	0.07	0.07	ALL/ALL	ACCESS DOOR - LOWER FAIRING, WING TIP	526
526BB	0.07	0.07	ALL/ALL	ACCESS DOOR - LOWER FAIRING, WING TIP	526
526CB	0.10	0.10	ALL/ALL	ACCESS DOOR - LOWER FAIRING, WING TIP - AFT	526
527AB	0.10	0.10	ALL/ALL	ACCESS PANEL - UNDERSIDE, WINGLET - FWD	527


	ACCESS PANELS FOR WING ACCESS									
ACCESS PANEL MAN-HOURS			MAJOR ZONE 500	LOCATION BY						
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 530	ZONE					
532LB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	532					
532MB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	532					




	ACCESS PANELS FOR WING ACCESS									
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 500	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 530	ZONE					
532NB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	532					
532PB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	532					
532QB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	532					
532RB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	532					
533AB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	533					
533BB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	533					
533CB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	533					
534AB	0.05	0.08	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	534					
534BB	0.05	0.08	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	534					

	ACCESS PANELS FOR WING ACCESS									
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 500	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 570	ZONE					
571AB	0.07	0.07	ALL/ALL	PANEL ASSY - LOWER OUTBOARD TRAILING EDGE	571					
571BB	0.10	0.10	ALL/ALL	PANEL ASSY - LOWER OUTBOARD TRAILING EDGE	571					
571CB	0.10	0.10	ALL/ALL	PANEL ASSY - LOWER OUTBOARD TRAILING EDGE	571					
571DB	0.10	0.10	ALL/ALL	PANEL ASSY - LOWER OUTBOARD TRAILING EDGE	571					
571EB	0.10	0.10	ALL/ALL	PANEL ASSY - LOWER OUTBOARD TRAILING EDGE	571					
571FB	0.10	0.10	ALL/ALL	PANEL ASSY - LOWER OUTBOARD TRAILING EDGE	571					



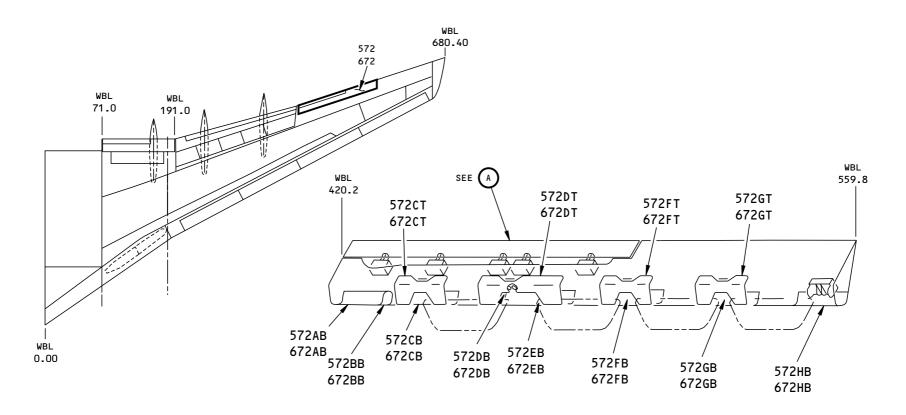



NOTE: LEFT WING SHOWN
RIGHT WING OPPOSITE

H85351 S00061222808_V2

Figure A-76 AILERON HINGE COVER ACCESS PANELS



	ACCESS PANELS FOR WING ACCESS								
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 500	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 570	ZONE				
572AB	0.08	0.08	ALL/ALL	PANEL ASSY - LOWER AILERON HINGE COVER	572				
572BB	0.08	0.08	ALL/ALL	PANEL ASSY - LOWER AILERON ACTUATOR ROD FAIRING	572				
572CB	0.08	0.08	ALL/ALL	PANEL ASSY - LOWER AILERON HINGE COVER	572				
572CT	0.08	0.08	ALL/ALL	PANEL ASSY - UPPER AILERON HINGE COVER	572				
572DB	0.08	0.08	ALL/ALL	PANEL ASSY - LOWER AILERON HINGE COVER	572				
572DT	0.08	0.08	ALL/ALL	PANEL ASSY - UPPER AILERON HINGE COVER	572				
572EB	0.08	0.08	ALL/ALL	PANEL ASSY - LOWER AILERON HINGE COVER	572				
572FB	0.08	0.08	ALL/ALL	PANEL ASSY - LOWER AILERON HINGE COVER	572				
572FT	0.08	0.08	ALL/ALL	PANEL ASSY - UPPER AILERON HINGE COVER	572				
572GB	0.08	0.08	ALL/ALL	PANEL ASSY - LOWER AILERON HINGE COVER	572				
572GT	0.08	0.08	ALL/ALL	PANEL ASSY - UPPER AILERON HINGE COVER	572				
572HB	0.08	0.08	ALL/ALL	PANEL ASSY - LOWER AILERON HINGE COVER	572				

	ACCESS PANELS FOR WING ACCESS									
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 600	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 670	ZONE					
672AB	0.08	0.08	ALL/ALL	PANEL ASSY - LOWER AILERON HINGE COVER	672					
672BB	0.08	0.08	ALL/ALL	PANEL ASSY - LOWER AILERON ACTUATOR ROD FAIRING	672					
672CB	0.08	0.08	ALL/ALL	PANEL ASSY - LOWER AILERON HINGE COVER	672					
672CT	0.08	0.08	ALL/ALL	PANEL ASSY - UPPER AILERON HINGE COVER	672					
672DB	0.08	0.08	ALL/ALL	PANEL ASSY - LOWER AILERON HINGE COVER	672					
672DT	0.08	0.08	ALL/ALL	PANEL ASSY - UPPER AILERON HINGE COVER	672					
672EB	0.08	0.08	ALL/ALL	PANEL ASSY - LOWER AILERON HINGE COVER	672					
672FB	0.08	0.08	ALL/ALL	PANEL ASSY - LOWER AILERON HINGE COVER	672					



ACCESS PANELS FOR WING ACCESS								
ACCESS PANEL MAN-HOURS			MAJOR ZONE 600	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 670	ZONE			
672FT	0.08	0.08	ALL/ALL	PANEL ASSY - UPPER AILERON HINGE COVER	672			
672GB	0.08	0.08	ALL/ALL	PANEL ASSY - LOWER AILERON HINGE COVER	672			
672GT	0.08	0.08	ALL/ALL	PANEL ASSY - UPPER AILERON HINGE COVER	672			
672HB	0.08	0.08	ALL/ALL	PANEL ASSY - LOWER AILERON HINGE COVER	672			



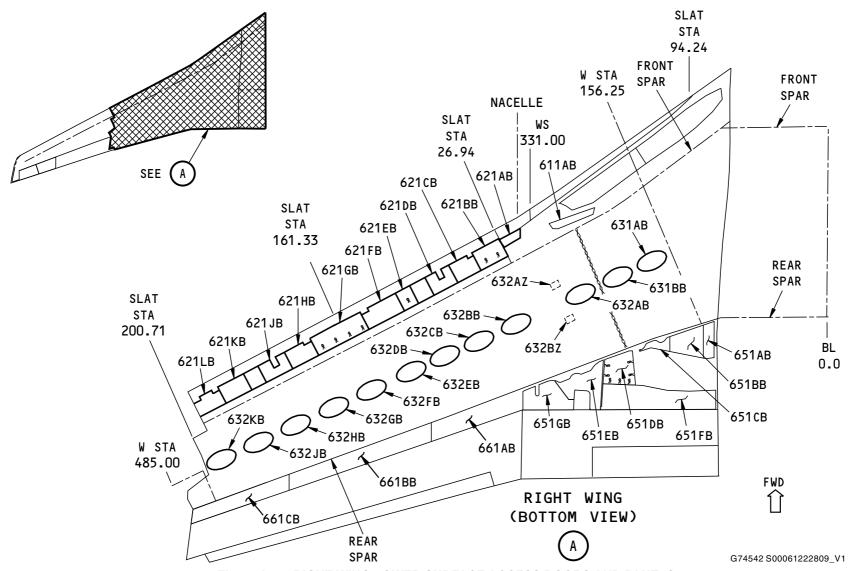


Figure A-77 RIGHT WING LOWER SURFACE ACCESS DOORS AND PANELS



ACCESS PANELS FOR WING ACCESS									
ACCESS PANEL MAN-HOURS			MAJOR ZONE 600	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 610	ZONE				
611AB	0.13	0.15	ALL/ALL	PANEL ASSY - INBD LOWER FIXED LEADING EDGE	611				

	ACCESS PANELS FOR WING ACCESS								
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 600	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 620	ZONE				
621AB	0.05	0.05	ALL/ALL	PANEL ASSY - OUTBD L. E. BLOWOUT DOOR ACCESS	621				
621BB	0.02	0.02	ALL/ALL	DOOR ASSY - OUTBD LWR FIXED LEADING EDGE	621				
621CB	0.07	0.07	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	621				
621DB	0.07	0.07	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	621				
621EB	0.05	0.05	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	621				
621FB	0.07	0.07	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	621				
621GB	0.05	0.05	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	621				
621HB	0.05	0.05	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	621				
621JB	0.07	0.07	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	621				
621KB	0.07	0.07	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	621				
621LB	0.07	0.07	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	621				

	ACCESS PANELS FOR WING ACCESS								
ACCESS PANEL MAN-HOURS			MAJOR ZONE 600	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 630	ZONE				
631AB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	631				
631BB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	631				
632AB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	632				
632AZ	0.20	0.20	ALL/ALL	PANEL ASSY - MAIN TANK INNER ACCESS - INTERNAL	632				



ACCESS PANELS FOR WING ACCESS									
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 600	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 630	ZONE				
632BB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	632				
632BZ	0.20	0.20	ALL/ALL	PANEL ASSY - MAIN TANK INNER ACCESS - INTERNAL	632				
632CB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	632				
632DB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	632				
632EB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	632				
632FB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	632				
632GB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	632				
632HB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	632				
632JB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	632				
632KB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	632				

ACCESS PANELS FOR WING ACCESS						
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 600	LOCATION BY	
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 650	ZONE	
651AB	0.08	0.08	ALL/ALL	PANEL ASSY - LOWER INBD FIXED TRAILING EDGE	651	
651BB	0.20	0.25	ALL/ALL	PANEL ASSY - LOWER INBD FIXED TRAILING EDGE	651	
651CB	0.07	0.07	ALL/ALL	PANEL ASSY - LOWER INBD FIXED TRAILING EDGE	651	
651DB	0.07	0.07	ALL/ALL	PANEL ASSY - LOWER INBD FIXED TRAILING EDGE	651	
651EB	0.20	0.25	ALL/ALL	PANEL ASSY - LOWER INBD FIXED TRAILING EDGE	651	
651FB	0.20	0.25	ALL/ALL	PANEL ASSY - LOWER INBD FIXED TRAILING EDGE	651	
651GB	0.17	0.17	ALL/ALL	PANEL ASSY - LOWER INBD FIXED TRAILING EDGE	651	



ACCESS PANELS FOR WING ACCESS						
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 600	LOCATION BY	
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 660	ZONE	
661AB	0.13	0.17	ALL/ALL	PANEL ASSY - LOWER MID SPAN TRAILING EDGE	661	
661BB	0.13	0.17	ALL/ALL	PANEL ASSY - LOWER MID SPAN TRAILING EDGE	661	
661CB	0.13	0.17	ALL/ALL	PANEL ASSY - LOWER MID SPAN TRAILING EDGE	661	



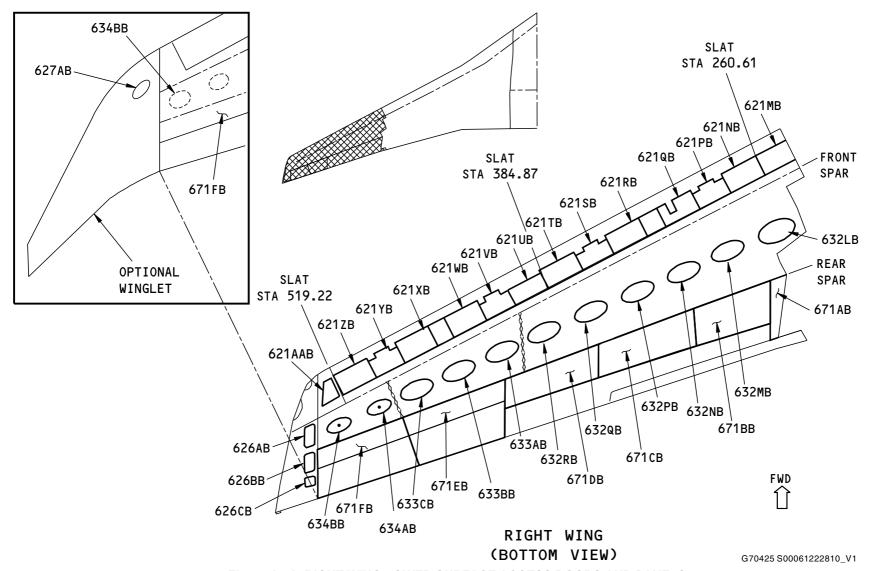


Figure A-78 RIGHT WING LOWER SURFACE ACCESS DOORS AND PANELS



ACCESS PANELS FOR WING ACCESS						
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 600	LOCATION BY	
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 620	ZONE	
621AAB	0.05	0.05	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	621	
621MB	0.07	0.07	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	621	
621NB	0.05	0.05	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	621	
621PB	0.05	0.05	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	621	
621QB	0.07	0.07	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	621	
621RB	0.07	0.07	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	621	
621SB	0.05	0.05	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	621	
621TB	0.07	0.07	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	621	
621UB	0.05	0.05	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	621	
621VB	0.05	0.05	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	621	
621WB	0.07	0.07	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	621	
621XB	0.05	0.05	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	621	
621YB	0.05	0.05	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	621	
621ZB	0.07	0.07	ALL/ALL	PANEL ASSY - LOWER LEADING EDGE ACCESS	621	
626AB	0.07	0.07	ALL/ALL	ACCESS DOOR - LOWER FAIRING, WING TIP	626	
626BB	0.07	0.07	ALL/ALL	ACCESS DOOR - LOWER FAIRING, WING TIP	626	
626CB	0.10	0.10	ALL/ALL	ACCESS DOOR - LOWER FAIRING, WING TIP - AFT	626	
627AB	0.10	0.10	ALL/ALL	ACCESS PANEL - UNDERSIDE, WINGLET - FWD	627	

ACCESS PANELS FOR WING ACCESS							
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 600	LOCATION BY		
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 630	ZONE		
632LB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	632		
632MB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	632		



ACCESS PANELS FOR WING ACCESS						
ACCESS PANEL AND DOOR NUMBER	MAN-HOURS			MAJOR ZONE 600	LOCATION BY	
	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 630	ZONE	
632NB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	632	
632PB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	632	
632QB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	632	
632RB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	632	
633AB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	633	
633BB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	633	
633CB	0.07	0.10	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	633	
634AB	0.05	0.08	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	634	
634BB	0.05	0.08	ALL/ALL	DOOR ASSY - FUEL TANK ACCESS	634	

ACCESS PANELS FOR WING ACCESS						
ACCESS PANEL AND DOOR NUMBER	MAN-HOURS			MAJOR ZONE 600	LOCATION BY	
	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 670	ZONE	
671AB	0.07	0.07	ALL/ALL	PANEL ASSY - LOWER OUTBOARD TRAILING EDGE	671	
671BB	0.10	0.10	ALL/ALL	PANEL ASSY - LOWER OUTBOARD TRAILING EDGE	671	
671CB	0.10	0.10	ALL/ALL	PANEL ASSY - LOWER OUTBOARD TRAILING EDGE	671	
671DB	0.10	0.10	ALL/ALL	PANEL ASSY - LOWER OUTBOARD TRAILING EDGE	671	
671EB	0.10	0.10	ALL/ALL	PANEL ASSY - LOWER OUTBOARD TRAILING EDGE	671	
671FB	0.10	0.10	ALL/ALL	PANEL ASSY - LOWER OUTBOARD TRAILING EDGE	671	



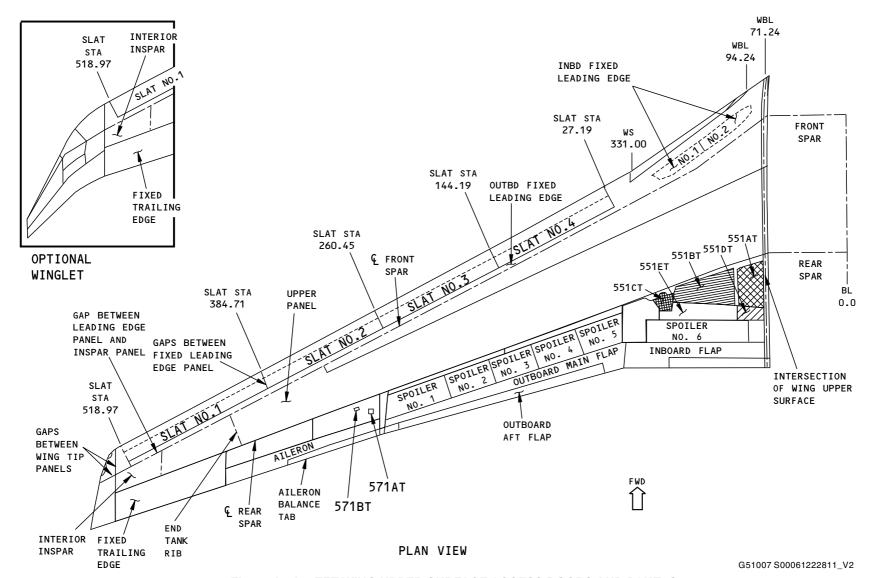


Figure A-79 LEFT WING UPPER SURFACE ACCESS DOORS AND PANELS



ACCESS PANELS FOR WING ACCESS										
ACCESS PANEL MAN-HOURS			MAJOR ZONE 500	LOCATION BY						
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 550	ZONE					
551AT	0.12	0.15	ALL/ALL	PANEL ASSY - UPPER INBD FIXED TRAILING EDGE	551					
551BT	0.17	0.20	ALL/ALL	PANEL ASSY - UPPER INBD FIXED TRAILING EDGE	551					
551CT	0.07	0.10	ALL/ALL	PANEL ASSY - UPPER INBD FIXED TRAILING EDGE	551					
551DT	0.07	0.10	ALL/ALL	PANEL ASSY - UPPER INBD FIXED TRAILING EDGE	551					
551ET	0.17	0.20	ALL/ALL	PANEL ASSY - UPPER INBD FIXED TRAILING EDGE	551					

	ACCESS PANELS FOR WING ACCESS								
ACCESS PANEL MAN-HOURS			MAJOR ZONE 500	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 570	ZONE				
571AT	0.10	0.10	ALL/ALL	PANEL ASSY - UPPER OUTBOARD FIXED TRAILING EDGE QUADRANT BOLT ACCESS	571				
571BT	0.05	0.05	ALL/ALL	PANEL ASSY - UPPER OUTBOARD FIXED TRAILING EDGE PULLY BOLT ACCESS	571				



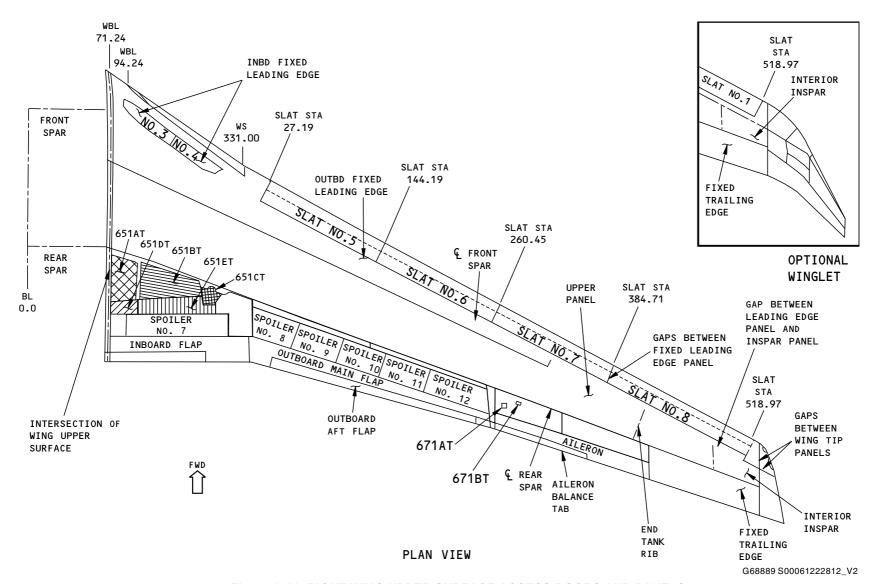


Figure A-80 RIGHT WING UPPER SURFACE ACCESS DOORS AND PANELS

Oct 15/2021 PAGE A.2-159 D626A001



ACCESS PANELS FOR WING ACCESS										
ACCESS PANEL MAN-HOURS			MAJOR ZONE 600	LOCATION BY						
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 650	ZONE					
651AT	0.12	0.15	ALL/ALL	PANEL ASSY - UPPER INBD FIXED TRAILING EDGE	651					
651BT	0.17	0.20	ALL/ALL	PANEL ASSY - UPPER INBD FIXED TRAILING EDGE	651					
651CT	0.07	0.10	ALL/ALL	PANEL ASSY - UPPER INBD FIXED TRAILING EDGE	651					
651DT	0.07	0.10	ALL/ALL	PANEL ASSY - UPPER INBD FIXED TRAILING EDGE	651					
651ET	0.17	0.20	ALL/ALL	PANEL ASSY - UPPER INBD FIXED TRAILING EDGE	651					

	ACCESS PANELS FOR WING ACCESS									
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 600	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 670	ZONE					
671AT	0.10	0.10	ALL/ALL	PANEL ASSY - UPPER OUTBOARD FIXED TRAILING EDGE QUADRANT BOLT ACCESS	671					
671BT	0.05	0.05	ALL/ALL	PANEL ASSY - UPPER OUTBOARD FIXED TRAILING EDGE PULLY BOLT ACCESS	671					



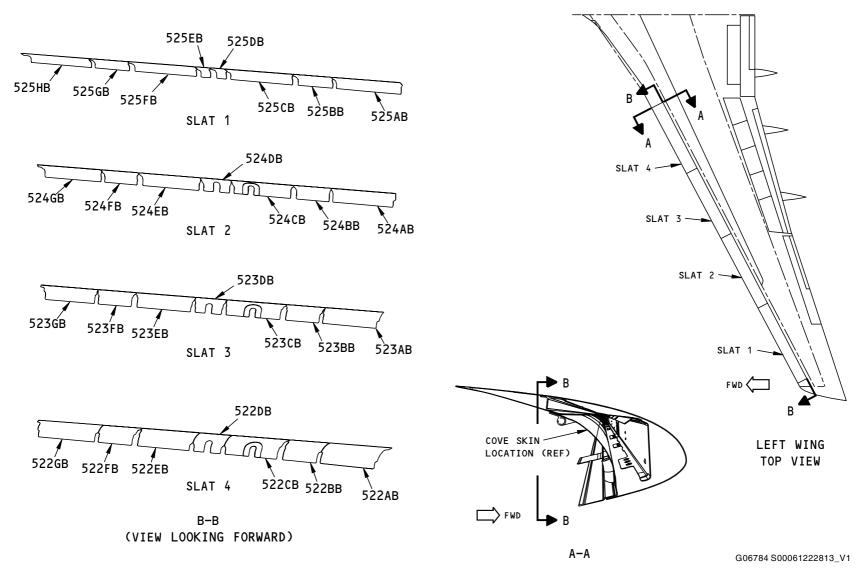


Figure A-81 LEFT WING COVE SKIN PANELS



	ACCESS PANELS FOR WING ACCESS									
ACCESS PANEL	ACCESS PANEL MAN-HOURS			MAJOR ZONE 500	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 520	ZONE					
522AB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #4 COVE SKIN ACCESS	522					
522BB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #4 COVE SKIN ACCESS	522					
522CB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #4 COVE SKIN ACCESS	522					
522DB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #4 COVE SKIN ACCESS	522					
522EB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #4 COVE SKIN ACCESS	522					
522FB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #4 COVE SKIN ACCESS	522					
522GB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #4 COVE SKIN ACCESS	522					
523AB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #3 COVE SKIN ACCESS	523					
523BB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #3 COVE SKIN ACCESS	523					
523CB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #3 COVE SKIN ACCESS	523					
523DB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #3 COVE SKIN ACCESS	523					
523EB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #3 COVE SKIN ACCESS	523					
523FB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #3 COVE SKIN ACCESS	523					
523GB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #3 COVE SKIN ACCESS	523					
524AB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #2 COVE SKIN ACCESS	524					
524BB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #2 COVE SKIN ACCESS	524					
524CB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #2 COVE SKIN ACCESS	524					
524DB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #2 COVE SKIN ACCESS	524					
524EB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #2 COVE SKIN ACCESS	524					
524FB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #2 COVE SKIN ACCESS	524					
524GB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #2 COVE SKIN ACCESS	524					
525AB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #1 COVE SKIN ACCESS	525					
525BB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #1 COVE SKIN ACCESS	525					
525CB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #1 COVE SKIN ACCESS	525					



ACCESS PANELS FOR WING ACCESS									
ACCESS PANEL MAN-HOURS		HOURS		MAJOR ZONE 500	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 520	ZONE				
525DB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #1 COVE SKIN ACCESS	525				
525EB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #1 COVE SKIN ACCESS	525				
525FB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #1 COVE SKIN ACCESS	525				
525GB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #1 COVE SKIN ACCESS	525				
525HB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #1 COVE SKIN ACCESS	525				



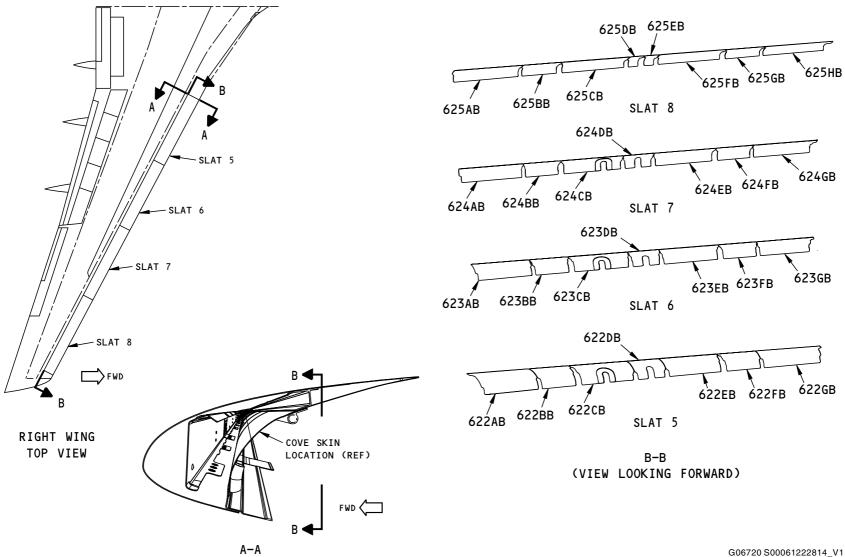


Figure A-82 RIGHT WING COVE SKIN PANELS



ACCESS PANELS FOR WING ACCESS									
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 600	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 620	ZONE				
622AB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #5 COVE SKIN ACCESS	622				
622BB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #5 COVE SKIN ACCESS	622				
622CB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #5 COVE SKIN ACCESS	622				
622DB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #5 COVE SKIN ACCESS	622				
622EB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #5 COVE SKIN ACCESS	622				
622FB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #5 COVE SKIN ACCESS	622				
622GB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #5 COVE SKIN ACCESS	622				
623AB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #6 COVE SKIN ACCESS	623				
623BB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #6 COVE SKIN ACCESS	623				
623CB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #6 COVE SKIN ACCESS	623				
623DB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #6 COVE SKIN ACCESS	623				
623EB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #6 COVE SKIN ACCESS	623				
623FB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #6 COVE SKIN ACCESS	623				
623GB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #6 COVE SKIN ACCESS	623				
624AB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #7 COVE SKIN ACCESS	624				
624BB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #7 COVE SKIN ACCESS	624				
624CB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #7 COVE SKIN ACCESS	624				
624DB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #7 COVE SKIN ACCESS	624				
624EB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #7 COVE SKIN ACCESS	624				
624FB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #7 COVE SKIN ACCESS	624				
624GB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #7 COVE SKIN ACCESS	624				
625AB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #8 COVE SKIN ACCESS	625				
625BB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #8 COVE SKIN ACCESS	625				
625CB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #8 COVE SKIN ACCESS	625				



ACCESS PANELS FOR WING ACCESS									
ACCESS PANEL MAN-HOURS			MAJOR ZONE 600	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 620	ZONE				
625DB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #8 COVE SKIN ACCESS	625				
625EB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #8 COVE SKIN ACCESS	625				
625FB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #8 COVE SKIN ACCESS	625				
625GB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #8 COVE SKIN ACCESS	625				
625HB	0.50	0.58	ALL/ALL	PANEL ASSY - SLAT #8 COVE SKIN ACCESS	625				



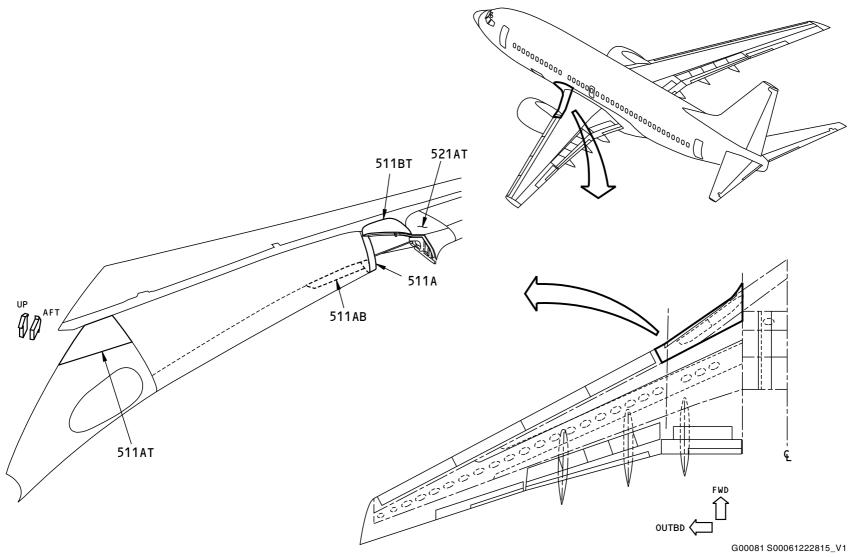


Figure A-83 LEFT WING ACCESS DOORS AND PANELS



ACCESS PANELS FOR WING ACCESS									
ACCESS PANEL MAN-HOURS			MAJOR ZONE 500	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 510	ZONE				
511A	0.10	0.10	ALL/ALL	SKIN ASSY -INBD OF NACELLE STRUT	511				
511AB	0.13	0.15	ALL/ALL	PANEL ASSY - INBD LOWER FIXED LEADING EDGE	511				
511AT	0.10	0.10	ALL/ALL	STRAKELET UPPER-INBD LEADING EDGE	511				
511BT	0.10	0.10	ALL/ALL	FAIRING	511				

	ACCESS PANELS FOR WING ACCESS									
ACCESS PANEL AND DOOR	MAN-	MAN-HOURS		MAJOR ZONE 500	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 520	ZONE					
521AT	0.15	0.15	ALL/ALL	PANEL ASSY - OUTBD FIXED LEADING EDGE - UPPER	521					



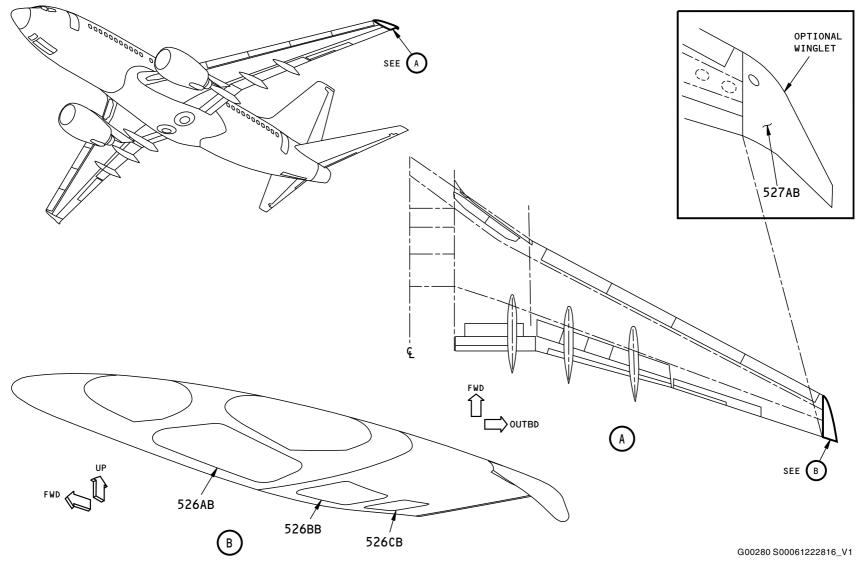


Figure A-84 LEFT WING ACCESS DOORS AND PANELS



ACCESS PANELS FOR WING ACCESS									
ACCESS PANEL MAN-HOURS			MAJOR ZONE 500	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 520	ZONE				
526AB	0.07	0.07	ALL/ALL	ACCESS DOOR - LOWER FAIRING, WING TIP	526				
526BB	0.07	0.07	ALL/ALL	ACCESS DOOR - LOWER FAIRING, WING TIP	526				
526CB	0.10	0.10	ALL/ALL	ACCESS DOOR - LOWER FAIRING, WING TIP - AFT	526				
527AB	0.10	0.10	ALL/ALL	ACCESS PANEL - UNDERSIDE, WINGLET - FWD	527				



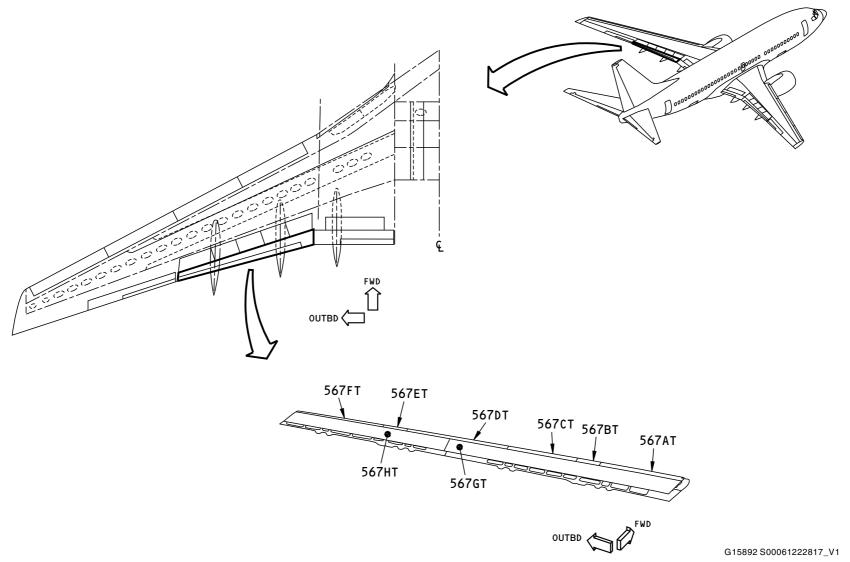


Figure A-85 LEFT WING ACCESS DOORS AND PANELS



	ACCESS PANELS FOR WING ACCESS									
ACCESS PANEL AND DOOR	MAN	-HOURS		MAJOR ZONE 500	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 560	ZONE					
567AT	0.35	0.35	ALL/ALL	PANEL ASSY - OUTBOARD FLAP TRAILING EDGE SKIN	567					
567BT	0.35	0.35	ALL/ALL	PANEL ASSY - OUTBOARD FLAP TRAILING EDGE SKIN	567					
567CT	0.35	0.35	ALL/ALL	PANEL ASSY - OUTBOARD FLAP TRAILING EDGE SKIN	567					
567DT	0.35	0.35	ALL/ALL	PANEL ASSY - OUTBOARD FLAP TRAILING EDGE SKIN	567					
567ET	0.35	0.35	ALL/ALL	PANEL ASSY - OUTBOARD FLAP TRAILING EDGE SKIN	567					
567FT	0.35	0.35	ALL/ALL	PANEL ASSY - OUTBOARD FLAP TRAILING EDGE SKIN	567					
567GT	0.35	0.35	ALL/ALL	PANEL ASSY - OUTBOARD FLAP UPPER SKIN	567					
567HT	0.35	0.35	ALL/ALL	PANEL ASSY - OUTBOARD FLAP UPPER SKIN	567					



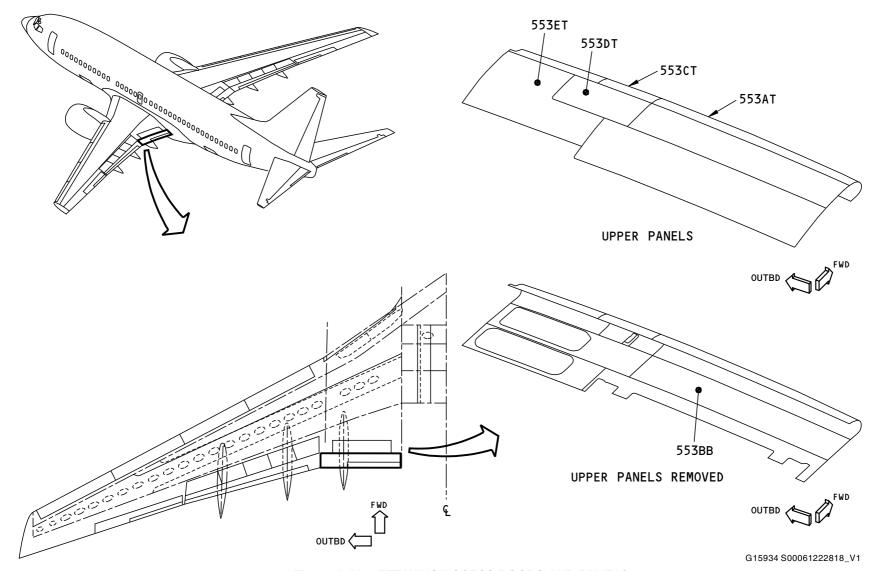


Figure A-86 LEFT WING ACCESS DOORS AND PANELS



	ACCESS PANELS FOR WING ACCESS										
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 500	LOCATION BY						
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 550	ZONE						
553AT	0.50	0.50	ALL/ALL	PANEL ASSY - INBOARD FLAP LEADING EDGE SKIN	553						
553BB	0.58	0.58	ALL/ALL	PANEL ASSY - INBOARD FLAP LWR L. E. SKIN	553						
553CT	0.50	0.50	ALL/ALL	PANEL ASSY - INBOARD FLAP LEADING EDGE SKIN	553						
553DT	0.35	0.35	ALL/ALL	PANEL ASSY - INBOARD FLAP UPPER SKIN	553						
553ET	0.50	0.50	ALL/ALL	PANEL ASSY - INBOARD FLAP UPPER SKIN	553						



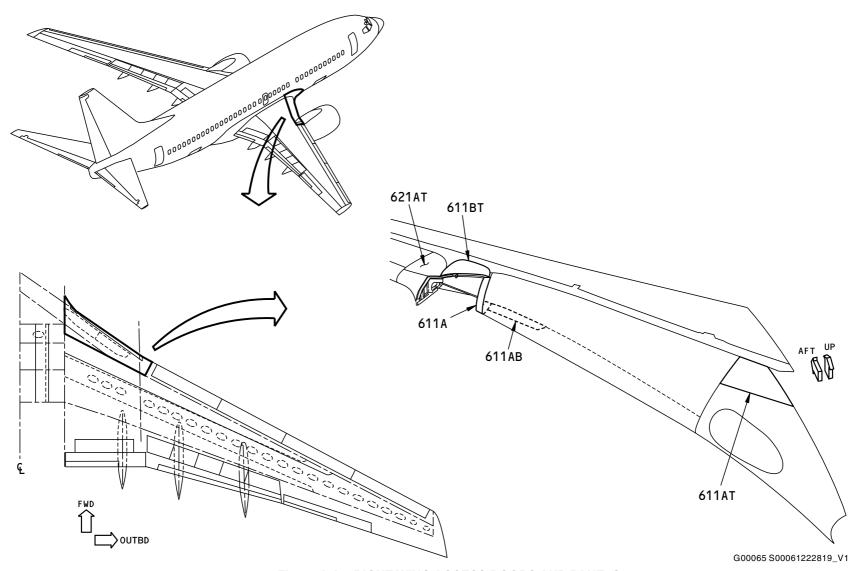


Figure A-87 RIGHT WING ACCESS DOORS AND PANELS



	ACCESS PANELS FOR WING ACCESS									
ACCESS PANEL MAN-HOURS		HOURS		MAJOR ZONE 600						
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 610	LOCATION BY ZONE					
611A	0.10	0.10	ALL/ALL	SKIN ASSY - INBD OF NACELLE STRUT	611					
611AB	0.13	0.15	ALL/ALL	PANEL ASSY - INBD LOWER FIXED LEADING EDGE	611					
611AT	0.10	0.10	ALL/ALL	STRAKELET UPPER-INBD LEADING EDGE	611					
611BT	0.10	0.10	ALL/ALL	FAIRING	611					

	ACCESS PANELS FOR WING ACCESS									
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 600	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 620	ZONE					
621AT	0.15	0.15	ALL/ALL	PANEL ASSY - OUTBD FIXED LEADING EDGE - UPPER	621					



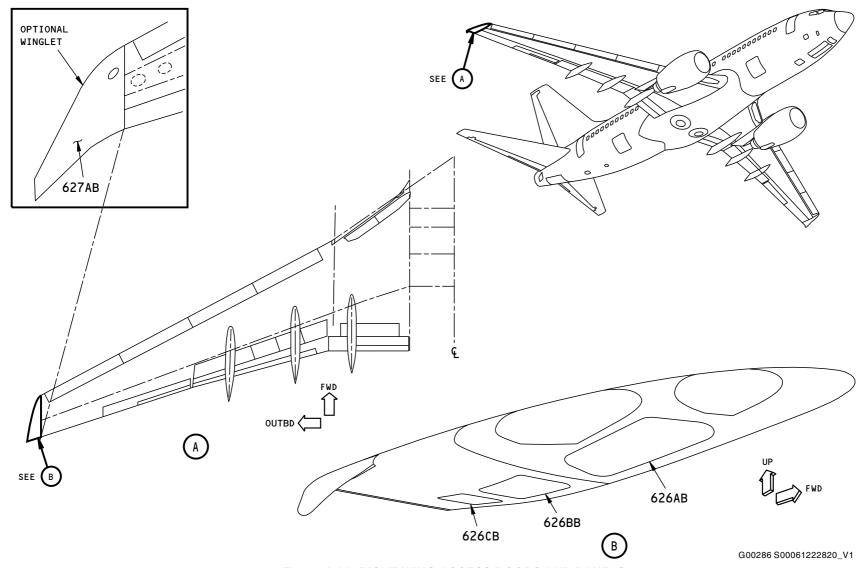


Figure A-88 RIGHT WING ACCESS DOORS AND PANELS



	ACCESS PANELS FOR WING ACCESS									
ACCESS PANEL	CCESS PANEL MAN-HOURS			MAJOR ZONE 600	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 620	ZONE					
626AB	0.07	0.07	ALL/ALL	ACCESS DOOR - LOWER FAIRING, WING TIP	626					
626BB	0.07	0.07	ALL/ALL	ACCESS DOOR - LOWER FAIRING, WING TIP	626					
626CB	0.10	0.10	ALL/ALL	ACCESS DOOR - LOWER FAIRING, WING TIP - AFT	626					
627AB	0.10	0.10	ALL/ALL	ACCESS DOOR - UNDERSIDE, WINGLET - FWD	627					



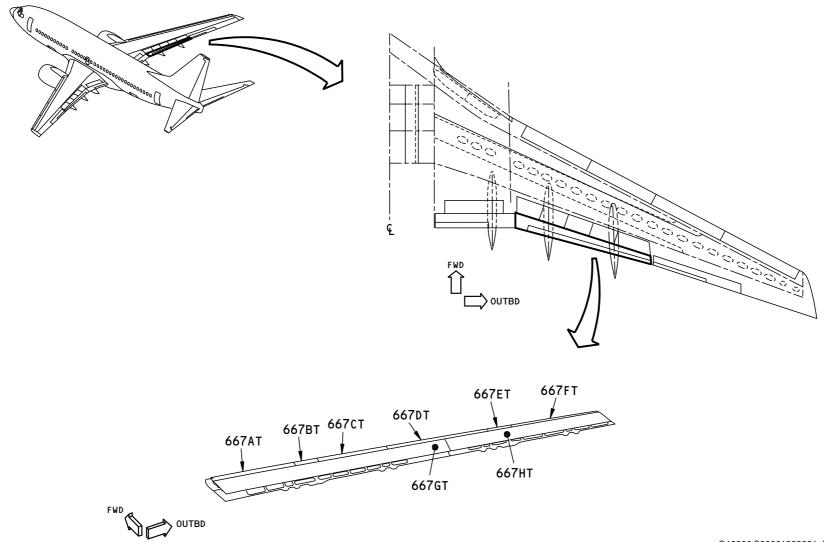


Figure A-89 RIGHT WING ACCESS DOORS AND PANELS

G15896 S00061222821_V1



	ACCESS PANELS FOR WING ACCESS										
ACCESS PANEL AND DOOR	MAN	I-HOURS		MAJOR ZONE 600	LOCATION BY						
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 660	ZONE						
667AT	0.35	0.35	ALL/ALL	PANEL ASSY - OUTBOARD FLAP TRAILING EDGE SKIN	667						
667BT	0.35	0.35	ALL/ALL	PANEL ASSY - OUTBOARD FLAP TRAILING EDGE SKIN	667						
667CT	0.35	0.35	ALL/ALL	PANEL ASSY - OUTBOARD FLAP TRAILING EDGE SKIN	667						
667DT	0.35	0.35	ALL/ALL	PANEL ASSY - OUTBOARD FLAP TRAILING EDGE SKIN	667						
667ET	0.35	0.35	ALL/ALL	PANEL ASSY - OUTBOARD FLAP TRAILING EDGE SKIN	667						
667FT	0.35	0.35	ALL/ALL	PANEL ASSY - OUTBOARD FLAP TRAILING EDGE SKIN	667						
667GT	0.35	0.35	ALL/ALL	PANEL ASSY - OUTBOARD FLAP UPPER SKIN	667						
667HT	0.35	0.35	ALL/ALL	PANEL ASSY - OUTBOARD FLAP UPPER SKIN	667						



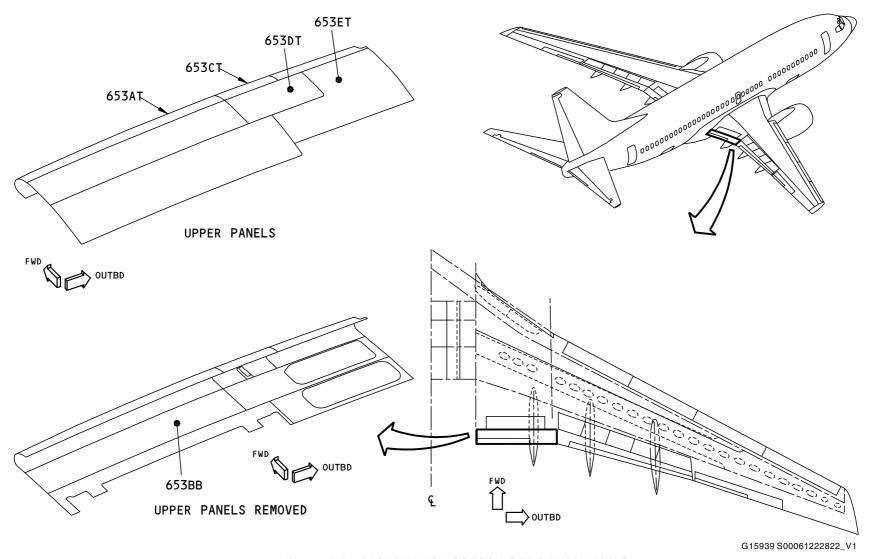


Figure A-90 RIGHT WING ACCESS DOORS AND PANELS



	ACCESS PANELS FOR WING ACCESS									
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 600	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 650/660	ZONE					
653AT	0.50	0.50	ALL/ALL	PANEL ASSY - INBOARD FLAP LEADING EDGE SKIN	653					
653BB	0.58	0.58	ALL/ALL	PANEL ASSY - INBOARD FLAP LWR L. E. SKIN	653					
653CT	0.50	0.50	ALL/ALL	PANEL ASSY - INBOARD FLAP LEADING EDGE SKIN	653					
653DT	0.35	0.35	ALL/ALL	PANEL ASSY - INBOARD FLAP UPPER SKIN	653					
653ET	0.50	0.50	ALL/ALL	PANEL ASSY - INBOARD FLAP UPPER SKIN	653					





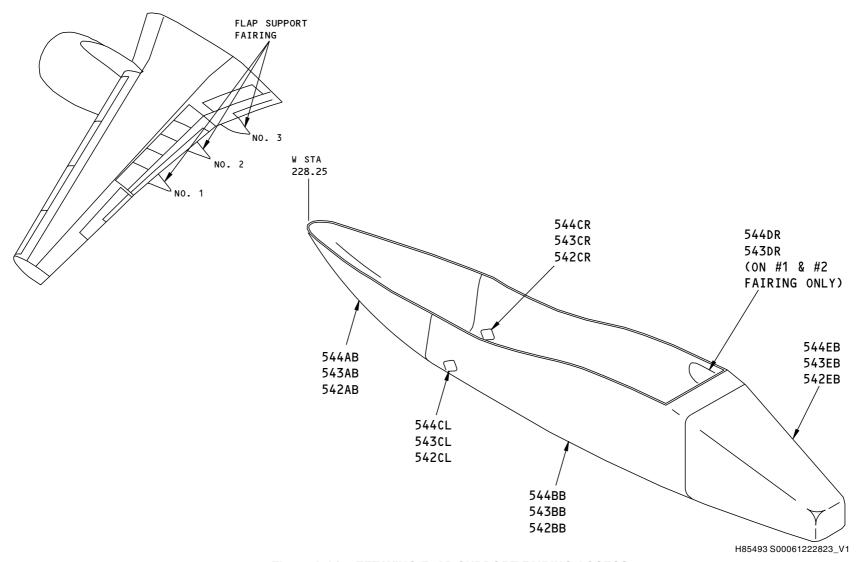


Figure A-91 LEFT WING FLAP SUPPORT FAIRING ACCESS



			ACCESS PAI	NELS FOR WING ACCESS	
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 500	LOCATION BY
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 540	ZONE
542AB	0.15	0.20	ALL/ALL	PANEL ASSY - FLAP SUPPORT #3 FWD ASSY ACCESS	542
542BB	0.25	0.33	ALL/ALL	PANEL ASSY - FLAP SUPPORT #3 AFT ASSY ACCESS	542
542CL	0.03	0.03	ALL/ALL	PANEL ASSY - FLAP SUPPORT #3 ACCESS COVER	542
542CR	0.03	0.03	ALL/ALL	PANEL ASSY - FLAP SUPPORT #3 ACCESS COVER	542
542EB	0.12	0.15	ALL/ALL	PANEL ASSY - FLAP SUPPORT #3 TAILCONE ACCESS	542
543AB	0.15	0.20	ALL/ALL	PANEL ASSY - FLAP SUPPORT #2 FWD ASSY ACCESS	543
543BB	0.25	0.33	ALL/ALL	PANEL ASSY - FLAP SUPPORT #2 AFT ASSY ACCESS	543
543CL	0.03	0.03	ALL/ALL	PANEL ASSY - FLAP SUPPORT #2 ACCESS COVER	543
543CR	0.03	0.03	ALL/ALL	PANEL ASSY - FLAP SUPPORT #2 ACCESS COVER	543
543DR	0.05	0.05	ALL/ALL	PANEL ASSY - FLAP SUPPORT #2 ACCESS DOOR	543
543EB	0.12	0.15	ALL/ALL	PANEL ASSY - FLAP SUPPORT #2 TAILCONE ACCESS	543
544AB	0.15	0.20	ALL/ALL	PANEL ASSY - FLAP SUPPORT #1 FWD ASSY ACCESS	544
544BB	0.25	0.33	ALL/ALL	PANEL ASSY - FLAP SUPPORT #1 AFT ASSY ACCESS	544
544CL	0.03	0.03	ALL/ALL	PANEL ASSY - FLAP SUPPORT #1 ACCESS COVER	544
544CR	0.03	0.03	ALL/ALL	PANEL ASSY - FLAP SUPPORT #1 ACCESS COVER	544
544DR	0.05	0.05	ALL/ALL	PANEL ASSY - FLAP SUPPORT #1 ACCESS DOOR	544
544EB	0.12	0.15	ALL/ALL	PANEL ASSY - FLAP SUPPORT #1 TAILCONE ACCESS	544



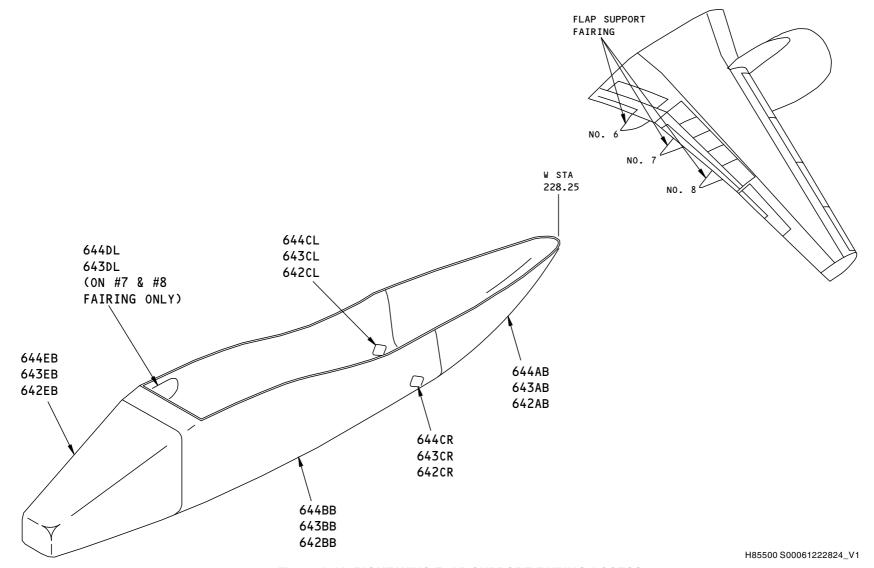


Figure A-92 RIGHT WING FLAP SUPPORT FAIRING ACCESS

D626A001 PAGE A.2-185



	ACCESS PANELS FOR WING ACCESS								
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 600	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 640	ZONE				
642AB	0.15	0.20	ALL/ALL	PANEL ASSY - FLAP SUPPORT #6 FWD ASSY ACCESS	642				
642BB	0.25	0.33	ALL/ALL	PANEL ASSY - FLAP SUPPORT #6 AFT ASSY ACCESS	642				
642CL	0.03	0.03	ALL/ALL	PANEL ASSY - FLAP SUPPORT #6 ACCESS COVER	642				
642CR	0.03	0.03	ALL/ALL	PANEL ASSY - FLAP SUPPORT #6 ACCESS COVER	642				
642EB	0.12	0.15	ALL/ALL	PANEL ASSY - FLAP SUPPORT #6 TAILCONE ACCESS	642				
643AB	0.15	0.20	ALL/ALL	PANEL ASSY - FLAP SUPPORT #7 FWD ASSY ACCESS	643				
643BB	0.25	0.33	ALL/ALL	PANEL ASSY - FLAP SUPPORT #7 AFT ASSY ACCESS	643				
643CL	0.03	0.03	ALL/ALL	PANEL ASSY - FLAP SUPPORT #7 ACCESS COVER	643				
643CR	0.03	0.03	ALL/ALL	PANEL ASSY - FLAP SUPPORT #7 ACCESS COVER	643				
643DL	0.05	0.05	ALL/ALL	PANEL ASSY - FLAP SUPPORT #7 ACCESS DOOR	643				
643EB	0.12	0.15	ALL/ALL	PANEL ASSY - FLAP SUPPORT #7 TAILCONE ACCESS	643				
644AB	0.15	0.20	ALL/ALL	PANEL ASSY - FLAP SUPPORT #8 FWD ASSY ACCESS	644				
644BB	0.25	0.33	ALL/ALL	PANEL ASSY - FLAP SUPPORT #8 AFT ASSY ACCESS	644				
644CL	0.03	0.03	ALL/ALL	PANEL ASSY - FLAP SUPPORT #8 ACCESS COVER	644				
644CR	0.03	0.03	ALL/ALL	PANEL ASSY - FLAP SUPPORT #8 ACCESS COVER	644				
644DL	0.05	0.05	ALL/ALL	PANEL ASSY - FLAP SUPPORT #8 ACCESS DOOR	644				
644EB	0.12	0.15	ALL/ALL	PANEL ASSY - FLAP SUPPORT #8 TAILCONE ACCESS	644				



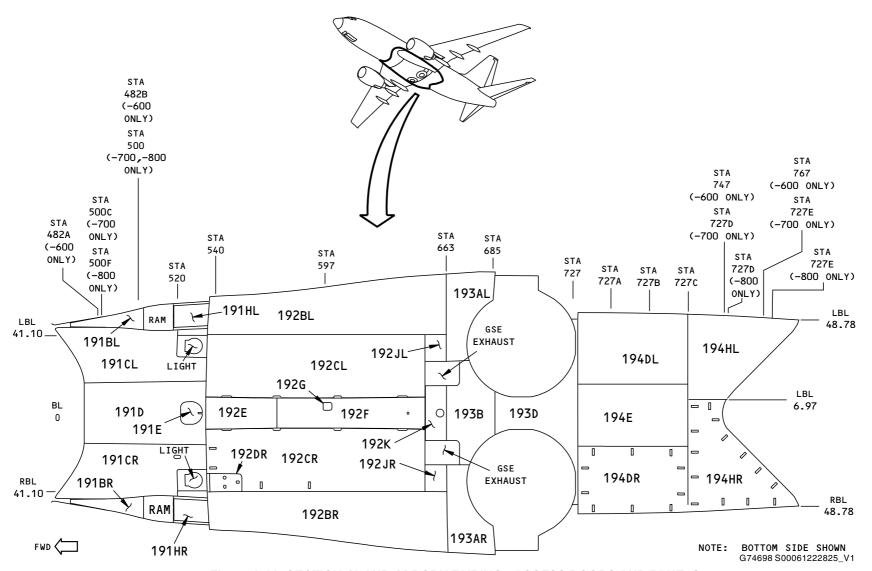


Figure A-93 SECTION 43 AND 44 BODY FAIRING - ACCESS DOORS AND PANELS



	ACCESS PANELS FOR WING TO BODY FAIRING									
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 100	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 190	ZONE					
191BL	0.08	0.10	ALL/ALL	FAIRING - RAM AIR INLET	191					
191BR	0.08	0.10	ALL/ALL	FAIRING - RAM AIR INLET	191					
191CL	0.10	0.10	ALL/ALL	FAIRING - LOWER FORWARD	191					
191CR	0.10	0.10	ALL/ALL	FAIRING - LOWER FORWARD	191					
191D	0.10	0.10	ALL/ALL	FAIRING - MID FORWARD	191					
191E	0.02	0.02	ALL/ALL	ACCESS DOOR - FORWARD FAIRING	191					
191HL	0.02	0.02	ALL/ALL	COVER PLATE - FORWARD FAIRING	191					
191HR	0.02	0.02	ALL/ALL	COVER PLATE - FORWARD FAIRING	191					
192BL	0.10	0.10	ALL/ALL	FAIRING UNDERWING	192					
192BR	0.10	0.10	ALL/ALL	FAIRING UNDERWING	192					
192CL	0.08	0.10	ALL/ALL	ACCESS DOOR - EQUIPMENT COOLING SYSTEM	192					
192CR	0.08	0.10	ALL/ALL	ACCESS DOOR - EQUIPMENT COOLING SYSTEM	192					
192DR	0.08	0.10	ALL/ALL	ACCESS DOOR - HIGH PRESSURE CONNECT	192					
192E	0.08	0.10	ALL/ALL	ACCESS PANEL - UNDER KEEL	192					
192F	0.08	0.10	ALL/ALL	ACCESS PANEL - UNDER KEEL	192					
192G	0.08	0.10	ALL/ALL	PAN ASSY - SUMP DRAIN	192					
192JL	0.08	0.10	ALL/ALL	ACCESS PANEL - EQUIPMENT COOLING BAY	192					
192JR	0.08	0.10	ALL/ALL	ACCESS PANEL - EQUIPMENT COOLING BAY	192					
192K	0.08	0.10	ALL/ALL	ACCESS PANEL - UNDER KEEL	192					
193AL	0.08	0.10	ALL/ALL	ACCESS PANEL - FWD, OUTBD WHEEL WELL	193					
193AR	0.08	0.10	ALL/ALL	ACCESS PANEL - FWD, OUTBD WHEEL WELL	193					
193B	0.08	0.10	ALL/ALL	ACCESS PANEL - AFT, CENTER WHEEL WELL	193					
193D	0.08	0.10	ALL/ALL	ACCESS PANEL - AFT, CENTER WHEEL WELL	193					
194DL	0.08	0.08	ALL/ALL	ACCESS PANEL - LWR AFT FAIRING	194					



ACCESS PANELS FOR WING TO BODY FAIRING									
ACCESS PANEL AND DOOR	MAN-	MAN-HOURS		MAJOR ZONE 100	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 190	ZONE				
194DR	0.08	0.08	ALL/ALL	ACCESS PANEL - LWR AFT FAIRING	194				
194E	0.13	0.17	ALL/ALL	ACCESS PANEL - LWR AFT FAIRING	194				
194HL	0.08	0.08	ALL/ALL	ACCESS PANEL - LOWER AFT FAIRING	194				
194HR	0.13	0.17	ALL/ALL	ACCESS PANEL - LOWER AFT FAIRING	194				



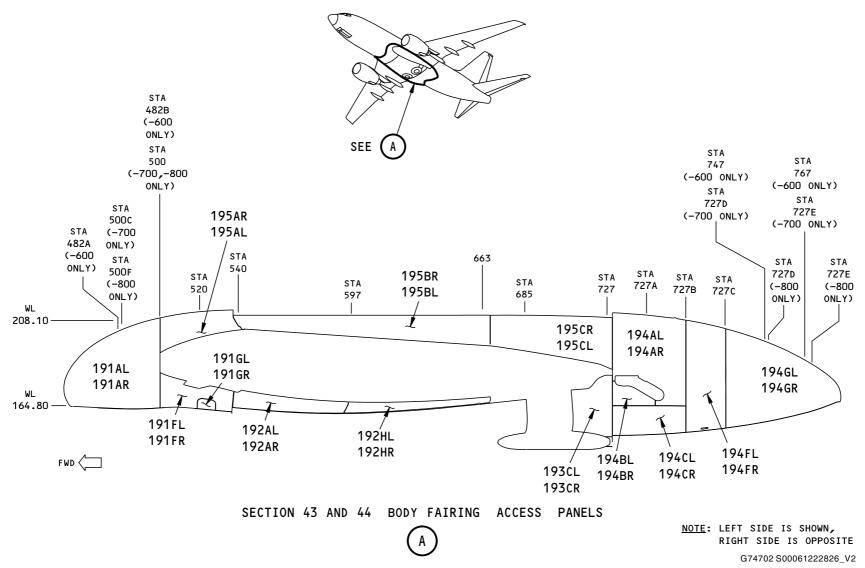


Figure A-94 SECTION 43 AND 44 BODY FAIRING - ACCESS DOORS AND PANELS

Oct 15/2021 D626A001 PAGE A.2-190





	ACCESS PANELS FOR WING TO BODY FAIRING									
ACCESS PANEL AND DOOR	MAN-	MAN-HOURS		MAJOR ZONE 100	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 190	ZONE					
191AL	0.20	0.20	ALL/ALL	FAIRING - UPPER FORWARD	191					
191AR	0.20	0.20	ALL/ALL	FAIRING - UPPER FORWARD	191					
191FL	0.05	0.05	ALL/ALL	FAIRING - FORWARD UNDER WING	191					
191FR	0.05	0.05	ALL/ALL	FAIRING - FORWARD UNDER WING	191					
191GL	0.03	0.03	ALL/ALL	PANEL ASSY	191					
191GR	0.03	0.03	ALL/ALL	PANEL ASSY	191					
192AL	0.05	0.05	ALL/ALL	BOLT COVER - UNDERWING FRONT SPAR	192					
192AR	0.05	0.05	ALL/ALL	BOLT COVER - UNDERWING FRONT SPAR	192					
192HL	0.08	0.10	ALL/ALL	BOLT COVER - UNDERWING REAR SPAR	192					
192HR	0.08	0.10	ALL/ALL	BOLT COVER - UNDERWING REAR SPAR	192					
193CL	0.08	0.10	ALL/ALL	ACCESS PANEL - FWD, OUTBR WHEEL WELL	193					
193CR	0.08	0.10	ALL/ALL	ACCESS PANEL - FWD, OUTBR WHEEL WELL	193					
194AL	0.08	0.10	ALL/ALL	ACCESS PANEL - UPPER FLAP TRACK	194					
194AR	0.08	0.10	ALL/ALL	ACCESS PANEL - UPPER FLAP TRACK	194					
194BL	0.08	0.10	ALL/ALL	ACCESS PANEL - FLAP TRACK AFT FAIRING	194					
194BR	0.08	0.10	ALL/ALL	ACCESS PANEL - FLAP TRACK AFT FAIRING	194					
194CL	0.13	0.20	ALL/ALL	ACCESS PANEL - LWR AFT FAIRING	194					
194CR	0.13	0.20	ALL/ALL	ACCESS PANEL - LWR AFT FAIRING	194					
194FL	0.13	0.17	ALL/ALL	ACCESS PANEL - UPR AFT FAIRING	194					
194FR	0.13	0.17	ALL/ALL	ACCESS PANEL - UPR AFT FAIRING	194					
194GL	0.17	0.20	ALL/ALL	ACCESS PANEL - UPR AFT FAIRING	194					
194GR	0.17	0.20	ALL/ALL	ACCESS PANEL - UPR AFT FAIRING	194					
195AL	0.13	0.17	ALL/ALL	ACCESS PANEL - FORWARD OVERWING FAIRING	195					
195BL	0.13	0.17	ALL/ALL	ACCESS PANEL - OVERWING FAIRING	195					



ACCESS PANELS FOR WING TO BODY FAIRING									
ACCESS PANEL AND DOOR		HOURS		MAJOR ZONE 100	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 190	ZONE				
195CL	0.13	0.17	ALL/ALL	ACCESS PANEL - OVERWING FAIRING	195				
195AR	0.13	0.17	ALL/ALL	ACCESS PANEL - FORWARD OVERWING FAIRING	196				
195BR	0.13	0.17	ALL/ALL	ACCESS PANEL - OVERWING FAIRING	196				
195CR	0.13	0.17	ALL/ALL	ACCESS PANEL - OVERWING FAIRING	196				



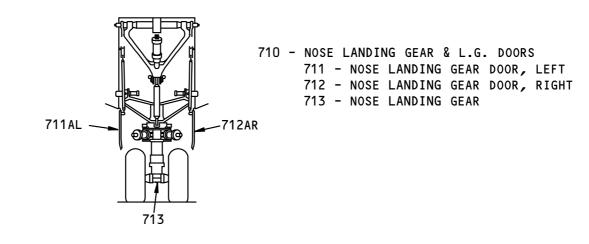

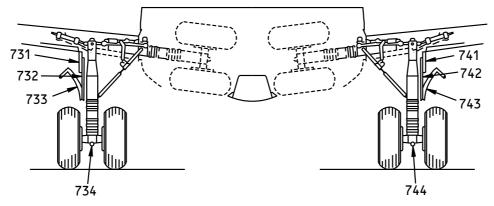

VIEW LOOKING FORWARD

730 - LEFT MAIN LANDING GEAR & L.G. DOORS

731 - OUTBOARD DOOR, LEFT

732 - CENTER DOOR, LEFT

733 - INBOARD DOOR, LEFT

734 - LEFT MAIN LANDING GEAR

740 - RIGHT MAIN LANDING GEAR & L.G. DOORS

741 - OUTBOARD DOOR, RIGHT

742 - CENTER DOOR, RIGHT

743 - INBOARD DOOR, RIGHT

744 - RIGHT MAIN LANDING GEAR

G80835 S00061222827_V1

Figure A-95 LANDING GEAR - ACCESS DOORS AND PANELS




ACCESS PANELS FOR LANDING GEAR									
ACCESS PANEL MAN-HOURS		HOURS		MAJOR ZONE 700	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 710	ZONE				
711AL	0.50	0.50	ALL/ALL	DOOR ASSY - NOSE LANDING GEAR	711				
712AR	0.50	0.50	ALL/ALL	DOOR ASSY - NOSE LANDING GEAR	712				

ACCESS PANELS FOR LANDING GEAR									
ACCESS PANEL MAN-HOURS			MAJOR ZONE 700	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 730	ZONE				
731	0.15	0.15	ALL/ALL	DOOR ASSY - OUTBOARD MAIN LANDING GEAR	731				
732	0.30	0.30	ALL/ALL	DOOR ASSY - CENTER MAIN LANDING GEAR	732				
733	0.15	0.15	ALL/ALL	DOOR ASSY - INBOARD MAIN LANDING GEAR	733				

ACCESS PANELS FOR LANDING GEAR									
ACCESS PANEL MAN-HOURS			MAJOR ZONE 700	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 740	ZONE				
741	0.15	0.15	ALL/ALL	DOOR ASSY - OUTBOARD MAIN LANDING GEAR	741				
742	0.30	0.30	ALL/ALL	DOOR ASSY - CENTER MAIN LANDING GEAR	742				
743	0.15	0.15	ALL/ALL	DOOR ASSY - INBOARD MAIN LANDING GEAR	743				



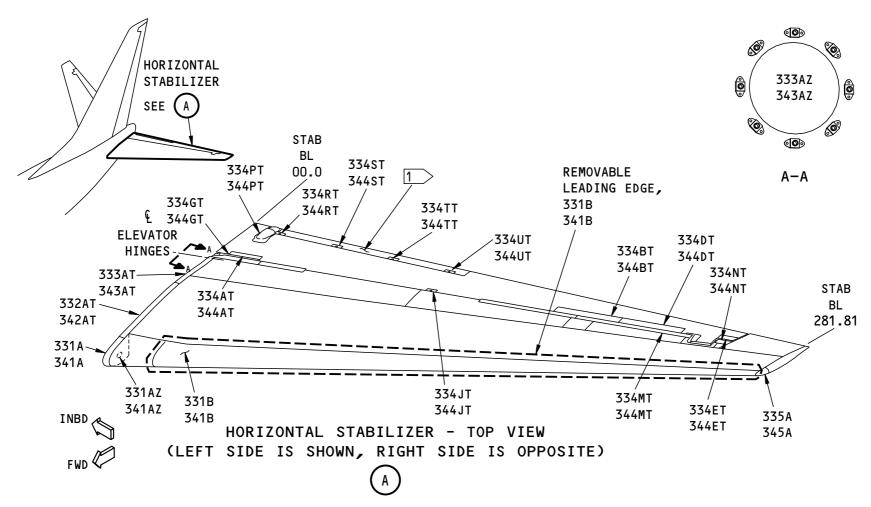

THE ELEVATOR TAB CONFIGURATION SHOWN IS FOR AIRCRAFT LINE NUMBERS BEFORE NO. 1175 THAT HAVE NOT INCORPORATED SB 55-1080 AND/OR 1081. THE REVISED CONFIGURATION HAS SIX HINGES AND NO HINGE COVERS. (LINE NO. 1175 AND ON)

U37902 S00061222828_V3

Figure A-96 HORIZONTAL STABILIZER UPPER SURFACE - ACCESS DOORS AND PANELS



	ACCESS PANELS FOR HORIZONTAL STAB UPPER SURFACE									
ACCESS PANEL AND DOOR	MAN-	MAN-HOURS		MAJOR ZONE 300	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 330	ZONE					
331A	0.15	0.15	ALL/ALL	PANEL ASSY - GAP COVER HORIZONTAL STABILIZER	331					
331B	1.50	1.50	ALL/ALL	LEADING EDGE - HORIZONTAL STABILIZER	331					
332AT	0.15	0.15	ALL/ALL	PANEL ASSY - GAP COVER HORIZONTAL STABILIZER	332					
333AT	0.15	0.15	ALL/ALL	PANEL ASSY - GAP COVER HORIZONTAL STABILIZER	333					
333AZ	0.10	0.10	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER, INBOARD TRAILING EDGE CLOSURE RIB	333					
334AT	0.20	0.20	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER SEAL, TRAILING EDGE TO ELEVATOR ACCESS	334					
334BT	0.20	0.20	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER SEAL, TRAILING EDGE TO ELEVATOR ACCESS	334					
334DT	0.15	0.15	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER SEAL, TRAILING EDGE TO ELEVATOR ACCESS	334					
334ET	0.15	0.15	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER SEAL, TRAILING EDGE TO ELEVATOR ACCESS	334					
334FT	0.15	0.15	ALL/ALL	SEAL, UPPER TRAILING EDGE TO ELEVATOR HORIZONTAL STABILIZER	334					
334RT	0.08	0.08	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER, ELEVATOR TRIM HINGE COVER ACCESS	334					
334ST	0.08	0.08	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER, ELEVATOR TRIM HINGE COVER ACCESS	334					
334TT	0.08	0.08	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER, ELEVATOR TRIM HINGE COVER ACCESS	334					
334UT	0.08	0.08	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER, ELEVATOR TRIM HINGE COVER ACCESS	334					
335A	0.05	0.05	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER, REMOVABLE STABILIZER TIP	335					



ACCESS PANELS FOR HORIZONTAL STAB UPPER SURFACE								
ACCESS PANEL AND DOOR	MAN-	MAN-HOURS		MAJOR ZONE 300	LOCATION BY			
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 340	ZONE			
341A	0.15	0.15	ALL/ALL	PANEL ASSY - GAP COVER HORIZONTAL STABILIZER	341			
342AT	0.15	0.15	ALL/ALL	PANEL ASSY - GAP COVER HORIZONTAL STABILIZER	342			
343AT	0.15	0.15	ALL/ALL	PANEL ASSY - GAP COVER HORIZONTAL STABILIZER	343			
343AZ	0.10	0.10	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER, INBOARD TRAILING EDGE CLOSURE RIB	343			
344AT	0.20	0.20	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER SEAL, TRAILING EDGE TO ELEVATOR ACCESS	344			
344BT	0.20	0.20	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER SEAL, TRAILING EDGE TO ELEVATOR ACCESS	344			
344DT	0.15	0.15	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER SEAL, TRAILING EDGE TO ELEVATOR ACCESS	344			
344ET	0.15	0.15	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER SEAL, TRAILING EDGE TO ELEVATOR ACCESS	344			
344RT	0.08	0.08	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER, ELEVATOR TRIM HINGE COVER ACCESS	344			
344ST	0.08	0.08	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER, ELEVATOR TRIM HINGE COVER ACCESS	344			
344TT	0.08	0.08	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER, ELEVATOR TRIM HINGE COVER ACCESS	344			
344UT	0.08	0.08	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER, ELEVATOR TRIM HINGE COVER ACCESS	344			
345A	0.05	0.05	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER, REMOVABLE STABILIZER TIP	345			



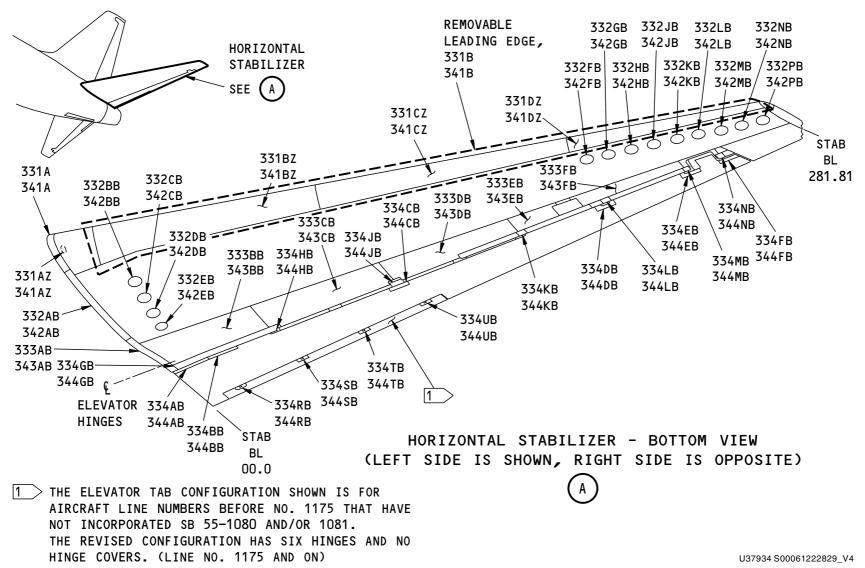


Figure A-97 HORIZONTAL STABILIZER LOWER SURFACE - ACCESS DOORS AND PANELS



	ACCESS PANELS FOR HORIZONTAL STABILIZER LOWER SURFACE								
ACCESS PANEL AND DOOR	MAN-HOLIDS			MAJOR ZONE 300	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 330	ZONE				
331AZ	0.50	0.50	ALL/ALL	PANEL ASSY - L/E HORIZONTAL STAB. CLOSURE RIB	331				
331BZ	0.70	0.70	ALL/ALL	WEB ASSY - HORIZONTAL STABLIZER FRONT SPAR	331				
331CZ	0.70	0.70	ALL/ALL	WEB ASSY - HORIZONTAL STABLIZER FRONT SPAR	331				
331DZ	0.70	0.70	ALL/ALL	WEB ASSY - HORIZONTAL STABLIZER FRONT SPAR	331				
332AB	0.05	0.05	ALL/ALL	GAP COVER - MID LOWER - HORIZONTAL STABILIZER	332				
332BB	0.05	0.05	ALL/ALL	DOOR ASSY - LOWER INSPAR - HORIZONTAL STAB.	332				
332CB	0.05	0.05	ALL/ALL	DOOR ASSY - LOWER INSPAR - HORIZONTAL STAB.	332				
332DB	0.05	0.05	ALL/ALL	DOOR ASSY - LOWER INSPAR - HORIZONTAL STAB.	332				
332EB	0.05	0.05	ALL/ALL	DOOR ASSY - LOWER INSPAR - HORIZONTAL STAB.	332				
332FB	0.05	0.05	ALL/ALL	DOOR ASSY - LOWER INSPAR - HORIZONTAL STAB.	332				
332GB	0.05	0.05	ALL/ALL	DOOR ASSY - LOWER INSPAR - HORIZONTAL STAB.	332				
332HB	0.05	0.05	ALL/ALL	DOOR ASSY - LOWER INSPAR - HORIZONTAL STAB.	332				
332JB	0.05	0.05	ALL/ALL	DOOR ASSY - LOWER INSPAR - HORIZONTAL STAB.	332				
332KB	0.05	0.05	ALL/ALL	DOOR ASSY - LOWER INSPAR - HORIZONTAL STAB.	332				
332LB	0.05	0.05	ALL/ALL	DOOR ASSY - LOWER INSPAR - HORIZONTAL STAB.	332				
332MB	0.05	0.05	ALL/ALL	DOOR ASSY - LOWER INSPAR - HORIZONTAL STAB.	332				
332NB	0.05	0.05	ALL/ALL	DOOR ASSY - LOWER INSPAR - HORIZONTAL STAB.	332				
332PB	0.05	0.05	ALL/ALL	DOOR ASSY - LOWER INSPAR - HORIZONTAL STAB.	332				
333AB	0.05	0.05	ALL/ALL	DOOR ASSY - LOWER T/E - HORIZONTAL STABILIZER	333				
333AZ	0.20	0.20	ALL/ALL	DOOR ASSEMBLY	333				
333BB	0.20	0.20	ALL/ALL	DOOR ASSY - LOWER T/E - HORIZONTAL STABILIZER	333				
333CB	0.20	0.20	ALL/ALL	DOOR ASSY - LOWER T/E - HORIZONTAL STABILIZER	333				
333DB	0.20	0.20	ALL/ALL	DOOR ASSY - LOWER T/E - HORIZONTAL STABILIZER	333				
333EB	0.15	0.15	ALL/ALL	DOOR ASSY - LOWER T/E - HORIZONTAL STABILIZER	333				



	ACCESS PANELS FOR HORIZONTAL STABILIZER LOWER SURFACE								
ACCESS PANEL AND DOOR	MAN	N-HOURS		MAJOR ZONE 300	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 330	ZONE				
333FB	0.35	0.35	ALL/ALL	DOOR ASSY - LOWER T/E - HORIZONTAL STABILIZER	333				
334AB	0.20	0.20	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER SEAL, TRAILING EDGE TO ELEVATOR ACCESS	334				
334BB	0.20	0.20	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER SEAL, TRAILING EDGE TO ELEVATOR ACCESS	334				
334CB	0.15	0.15	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER SEAL, TRAILING EDGE TO ELEVATOR ACCESS	334				
334DB	0.15	0.15	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER SEAL, TRAILING EDGE TO ELEVATOR ACCESS	334				
334EB	0.15	0.15	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER SEAL, TRAILING EDGE TO ELEVATOR ACCESS	334				
334FB	0.25	0.25	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER SEAL, TRAILING EDGE TO ELEVATOR ACCESS	334				
334GB	0.25	0.25	ALL/ALL	PANEL ASSY - ELEVATOR HINGE COVER ACCESS	334				
334HB	0.25	0.25	ALL/ALL	PANEL ASSY - ELEVATOR HINGE COVER ACCESS	334				
334JB	0.25	0.25	ALL/ALL	PANEL ASSY - ELEVATOR HINGE COVER ACCESS	334				
334KB	0.15	0.15	ALL/ALL	PANEL ASSY - ELEVATOR HINGE COVER ACCESS	334				
334LB	0.15	0.15	ALL/ALL	PANEL ASSY - ELEVATOR HINGE COVER ACCESS	334				
334MB	0.15	0.15	ALL/ALL	PANEL ASSY - ELEVATOR HINGE COVER ACCESS	334				
334NB	0.20	0.20	ALL/ALL	PANEL ASSY - ELEVATOR HINGE COVER ACCESS	334				
334DXB	0.15	0.15	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER SEAL, TRAILING EDGE TO ELEVATOR ACCESS	334				
334EXB	0.15	0.15	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER SEAL, TRAILING EDGE TO ELEVATOR ACCESS	334				
334FXB	0.15	0.15	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER SEAL, TRAILING EDGE TO ELEVATOR ACCESS	334				
334NT	0.15	0.15	ALL/ALL	PANEL ASSY - ELEVATOR HINGE COVER ACCESS	334				
334PT	0.20	0.20	ALL/ALL	PANEL ASSY - ELEVATOR FAIRING ACCESS	334				

Feb 15/2022 D626A001 PAGE A.2-200



	ACCESS PANELS FOR HORIZONTAL STABILIZER LOWER SURFACE										
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 300	LOCATION BY						
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 330	ZONE						
334RB	0.08	0.08	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER, ELEVATOR TRIM HINGE COVER ACCESS	334						
334SB	0.08	0.08	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER, ELEVATOR TRIM HINGE COVER ACCESS	334						
334TB	0.08	0.08	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER, ELEVATOR TRIM HINGE COVER ACCESS	334						
334UB	0.08	0.08	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER, ELEVATOR TRIM HINGE COVER ACCESS	334						

	ACCESS PANELS FOR HORIZONTAL STABILIZER LOWER SURFACE								
ACCESS PANEL AND DOOR	MAN-HOLIRS			MAJOR ZONE 300	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 340	ZONE				
341AZ	0.50	0.50	ALL/ALL	PANEL ASSY - L/E HORIZONTAL STAB. CLOSURE RIB	341				
341B	1.50	1.50	ALL/ALL	LEADING EDGE - HORIZONTAL STABILIZER	341				
341BZ	0.70	0.70	ALL/ALL	WEB ASSY - HORIZONTAL STABLIZER FRONT SPAR	341				
341CZ	0.70	0.70	ALL/ALL	WEB ASSY - HORIZONTAL STABLIZER FRONT SPAR	341				
341DZ	0.70	0.70	ALL/ALL	WEB ASSY - HORIZONTAL STABLIZER FRONT SPAR	341				
342AB	0.05	0.05	ALL/ALL	GAP COVER - MID LOWER - HORIZONTAL STABILIZER	342				
342BB	0.05	0.05	ALL/ALL	DOOR ASSY - LOWER INSPAR - HORIZONTAL STAB.	342				
342CB	0.05	0.05	ALL/ALL	DOOR ASSY - LOWER INSPAR - HORIZONTAL STAB.	342				
342DB	0.05	0.05	ALL/ALL	DOOR ASSY - LOWER INSPAR - HORIZONTAL STAB.	342				
342EB	0.05	0.05	ALL/ALL	DOOR ASSY - LOWER INSPAR - HORIZONTAL STAB.	342				
342FB	0.05	0.05	ALL/ALL	DOOR ASSY - LOWER INSPAR - HORIZONTAL STAB.	342				
342GB	0.05	0.05	ALL/ALL	DOOR ASSY - LOWER INSPAR - HORIZONTAL STAB.	342				
342HB	0.05	0.05	ALL/ALL	DOOR ASSY - LOWER INSPAR - HORIZONTAL STAB.	342				
342JB	0.05	0.05	ALL/ALL	DOOR ASSY - LOWER INSPAR - HORIZONTAL STAB.	342				




ACCESS PANELS FOR HORIZONTAL STABILIZER LOWER SURFACE									
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 300	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 340	ZONE				
342KB	0.05	0.05	ALL/ALL	DOOR ASSY - LOWER INSPAR - HORIZONTAL STAB.	342				
342LB	0.05	0.05	ALL/ALL	DOOR ASSY - LOWER INSPAR - HORIZONTAL STAB.	342				
342MB	0.05	0.05	ALL/ALL	DOOR ASSY - LOWER INSPAR - HORIZONTAL STAB.	342				
342NB	0.05	0.05	ALL/ALL	DOOR ASSY - LOWER INSPAR - HORIZONTAL STAB.	342				
342PB	0.05	0.05	ALL/ALL	DOOR ASSY - LOWER INSPAR - HORIZONTAL STAB.	342				
343AB	0.05	0.05	ALL/ALL	DOOR ASSY - LOWER T/E - HORIZONTAL STABILIZER	343				
343AZ	0.20	0.20	ALL/ALL	DOOR ASSEMBLY	343				
343BB	0.20	0.20	ALL/ALL	DOOR ASSY - LOWER T/E - HORIZONTAL STABILIZER	343				
343CB	0.20	0.20	ALL/ALL	DOOR ASSY - LOWER T/E - HORIZONTAL STABILIZER	343				
343DB	0.20	0.20	ALL/ALL	DOOR ASSY - LOWER T/E - HORIZONTAL STABILIZER	343				
343EB	0.15	0.15	ALL/ALL	DOOR ASSY - LOWER T/E - HORIZONTAL STABILIZER	343				
343FB	0.35	0.35	ALL/ALL	DOOR ASSY - LOWER T/E - HORIZONTAL STABILIZER	343				
344AB	0.20	0.20	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER SEAL, TRAILING EDGE TO ELEVATOR ACCESS	344				
344BB	0.20	0.20	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER SEAL, TRAILING EDGE TO ELEVATOR ACCESS	344				
344CB	0.15	0.15	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER SEAL, TRAILING EDGE TO ELEVATOR ACCESS	344				
344DB	0.15	0.15	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER SEAL, TRAILING EDGE TO ELEVATOR ACCESS	344				
344EB	0.15	0.15	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER SEAL, TRAILING EDGE TO ELEVATOR ACCESS	344				
344FB	0.25	0.25	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER SEAL, TRAILING EDGE TO ELEVATOR ACCESS	344				
344GB	0.25	0.25	ALL/ALL	PANEL ASSY - ELEVATOR HINGE COVER ACCESS	344				
344HB	0.25	0.25	ALL/ALL	PANEL ASSY - ELEVATOR HINGE COVER ACCESS	344				



	ACCESS PANELS FOR HORIZONTAL STABILIZER LOWER SURFACE								
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 300	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 340	ZONE				
344JB	0.25	0.25	ALL/ALL	PANEL ASSY - ELEVATOR HINGE COVER ACCESS	344				
344KB	0.15	0.15	ALL/ALL	PANEL ASSY - ELEVATOR HINGE COVER ACCESS	344				
344LB	0.15	0.15	ALL/ALL	PANEL ASSY - ELEVATOR HINGE COVER ACCESS	344				
344MB	0.15	0.15	ALL/ALL	PANEL ASSY - ELEVATOR HINGE COVER ACCESS	344				
344NB	0.20	0.20	ALL/ALL	PANEL ASSY - ELEVATOR HINGE COVER ACCESS	344				
344RB	0.08	0.08	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER, ELEVATOR TRIM HINGE COVER ACCESS	344				
344SB	0.08	0.08	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER, ELEVATOR TRIM HINGE COVER ACCESS	344				
344TB	0.08	0.08	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER, ELEVATOR TRIM HINGE COVER ACCESS	344				
344UB	0.08	0.08	ALL/ALL	PANEL ASSY - HORIZONTAL STABILIZER, ELEVATOR TRIM HINGE COVER ACCESS	344				
344NT	0.15	0.15	ALL/ALL	PANEL ASSY - ELEVATOR HINGE COVER ACCESS	344				
344PT	0.20	0.20	ALL/ALL	PANEL ASSY - ELEVATOR FAIRING ACCESS	344				



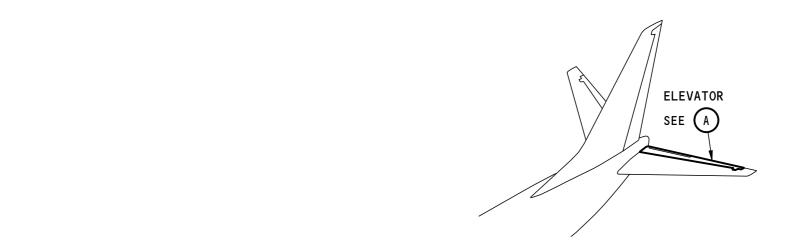

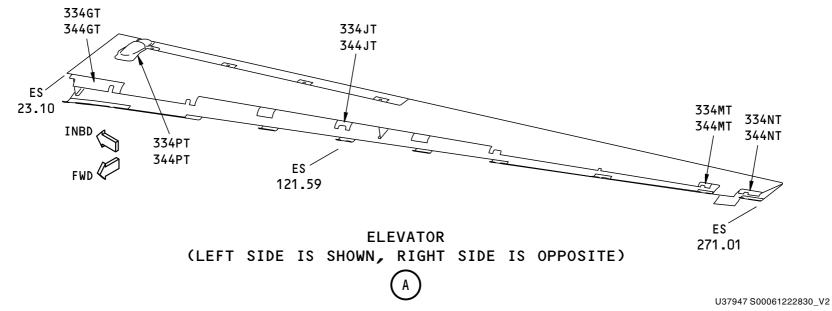


Figure A-98 ELEVATOR HINGE COVER ACCESS PANELS - TOP SURFACE



ACCESS PANELS FOR ELEVATOR UPPER SURFACE										
ACCESS PANEL MAN-HOURS			MAJOR ZONE 300	LOCATION BY						
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 330	ZONE					
334GT	0.25	0.25	ALL/ALL	PANEL ASSY - ELEVATOR HINGE COVER ACCESS	334					
334JT	0.15	0.15	ALL/ALL	PANEL ASSY - ELEVATOR HINGE COVER ACCESS	334					
334MT	0.15	0.15	ALL/ALL	PANEL ASSY - ELEVATOR HINGE COVER ACCESS	334					
334PT	0.20	0.20	ALL/ALL	PANEL ASSY - ELEVATOR HINGE COVER ACCESS	334					





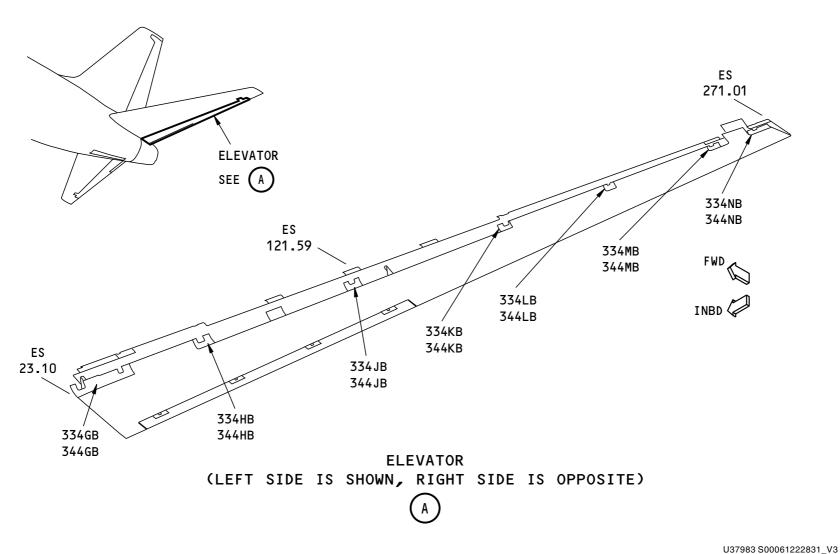


Figure A-99 ELEVATOR HINGE COVER ACCESS PANELS - BOTTOM SURFACES



ACCESS PANELS FOR ELEVATOR BOTTOM SURFACE										
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 300	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 340	ZONE					
344GT	0.25	0.25	ALL/ALL	PANEL ASSY - ELEVATOR HINGE COVER ACCESS	344					
344JT	0.15	0.15	ALL/ALL	PANEL ASSY - ELEVATOR HINGE COVER ACCESS	344					
344MT	0.15	0.15	ALL/ALL	PANEL ASSY - ELEVATOR HINGE COVER ACCESS	344					
344PT	0.20	0.20	ALL/ALL	PANEL ASSY - ELEVATOR HINGE COVER ACCESS	344					



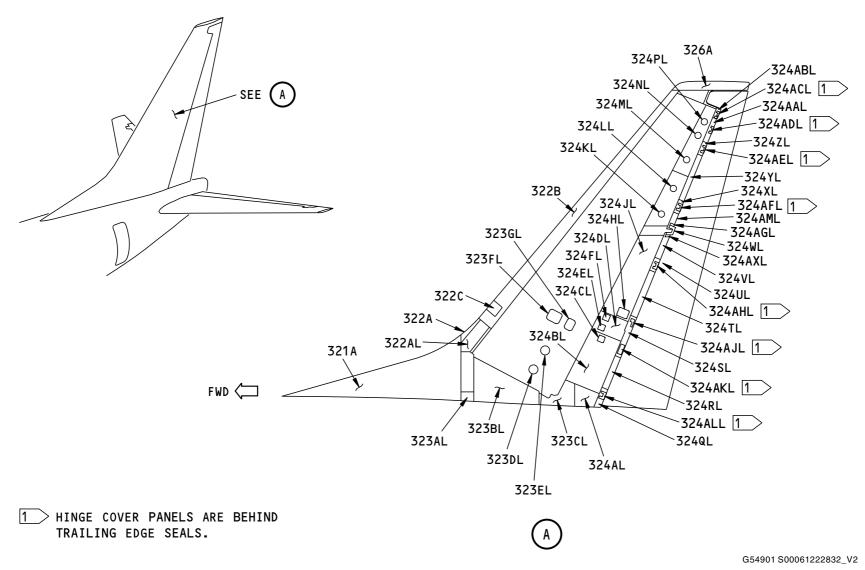


Figure A-100 VERTICAL STABILIZER - ACCESS DOORS AND PANELS - LEFT SIDE VIEW



	ACCESS PANELS FOR VERTICAL FIN									
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 300	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 320	ZONE					
321A	0.30	0.30	ALL/ALL	VERTICAL FIN, DORSAL FIN	321					
322A	0.25	0.25	ALL/ALL	LEADING EDGE - VERT FIN	322					
322AL	0.15	0.15	ALL/ALL	LEADING EDGE - VERT FIN	322					
322B	1.50	1.50	ALL/ALL	REMOVABLE LE ASSY - VERT FIN	322					
322C	0.05	0.05	ALL/ALL	REM - LEADING EDGE - HF ANTENNA	322					
323AL	0.05	0.05	ALL/ALL	DOOR ASSY - FWD CLOSEOUT VERT FIN	323					
323BL	0.20	0.20	ALL/ALL	PANEL ASSY - FIN TO BODY, VERT FIN	323					
323CL	0.15	0.15	ALL/ALL	PANEL ASSY - FIN TO BODY, VERT FIN	323					
323DL	0.05	0.05	ALL/ALL	ACCESS DOOR - INTER SPAR, VERT FIN	323					
323EL	0.05	0.05	ALL/ALL	ACCESS DOOR - INTER SPAR, VERT FIN	323					
323FL	0.05	0.05	ALL/ALL	ACCESS DOOR - INTER SPAR, VERT FIN	323					
323GL	0.05	0.05	ALL/ALL	ACCESS DOOR - INTER SPAR, VERT FIN	323					
324AAL	0.10	0.10	ALL/ALL	DOOR ASSY - TRAILING EDGE, BEAM SEAL, VERT FIN	324					
324ABL	0.10	0.10	ALL/ALL	DOOR ASSY - TRAILING EDGE, BEAM SEAL, VERT FIN	324					
324ACL	0.10	0.10	ALL/ALL	RUDDER NOSE COVER / RUDDER HINGE NO. 8 AT RUDDER STA. 276.24	324					
324ADL	0.10	0.10	ALL/ALL	RUDDER NOSE COVER / RUDDER HINGE NO. 7 AT RUDDER STA. 257.92	324					
324AEL	0.10	0.10	ALL/ALL	RUDDER NOSE COVER / RUDDER HINGE NO. 6 AT RUDDER STA. 239.61	324					
324AFL	0.10	0.10	ALL/ALL	RUDDER NOSE COVER / RUDDER HINGE NO. 5 AT RUDDER STA. 184.67	324					
324AGL	0.10	0.10	ALL/ALL	TOP RUDDER GAP COVER AT RUDDER STA. 164.90	324					
324AHL	0.10	0.10	ALL/ALL	RUDDER NOSE COVER / RUDDER HINGE NO. 4 AT RUDDER STA. 124.74	324					



	ACCESS PANELS FOR VERTICAL FIN									
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 300	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 320	ZONE					
324AJL	0.10	0.10	ALL/ALL	RUDDER NOSE COVER / RUDDER HINGE NO. 3 AT RUDDER STA. 70.65	324					
324AKL	0.10	0.10	ALL/ALL	RUDDER NOSE COVER / RUDDER HINGE NO. 2 AT RUDDER STA. 53.48	324					
324AL	0.15	0.15	ALL/ALL	ACCESS PANEL - FIN TO BODY, VERT FIN	324					
324ALL	0.10	0.10	ALL/ALL	RUDDER NOSE COVER / RUDDER HINGE NO. 1 AT RUDDER STA. 6.93	324					
324AXL	0.10	0.10	ALL/ALL	BOTTOM RUDDER GAP COVER	324					
324BL	0.15	0.15	ALL/ALL	PANEL ASSY - TRAILING EDGE, VERT FIN	324					
324CL	0.05	0.05	ALL/ALL	DOOR ASSY - TRAILING EDGE, VERT FIN	324					
324DL	0.10	0.10	ALL/ALL	PANEL ASSY - TRAILING EDGE, VERT FIN	324					
324EL	0.05	0.05	ALL/ALL	DOOR ASSY - TRAILING EDGE, VERT FIN	324					
324FL	0.05	0.05	ALL/ALL	DOOR ASSY - TRAILING EDGE, VERT FIN	324					
324JL	0.15	0.15	ALL/ALL	PANEL ASSY - TRAILING EDGE, VERT FIN	324					
324HL	0.05	0.05	ALL/ALL	DOOR ASSY - TRAILING EDGE, VERT FIN	324					
324KL	0.05	0.05	ALL/ALL	DOOR ASSY - TRAILING EDGE, VERT FIN	324					
324LL	0.05	0.05	ALL/ALL	DOOR ASSY - TRAILING EDGE, VERT FIN	324					
324ML	0.05	0.05	ALL/ALL	DOOR ASSY - TRAILING EDGE, VERT FIN	324					
324NL	0.05	0.05	ALL/ALL	DOOR ASSY - TRAILING EDGE, VERT FIN	324					
324PL	0.05	0.05	ALL/ALL	DOOR ASSY - TRAILING EDGE, VERT FIN	324					
324QL	0.10	0.10	ALL/ALL	DOOR ASSY - TRAILING EDGE, BEAM SEAL, VERT FIN	324					
324RL	0.15	0.15	ALL/ALL	DOOR ASSY - TRAILING EDGE, BEAM SEAL, VERT FIN	324					
324SL	0.15	0.15	ALL/ALL	DOOR ASSY - TRAILING EDGE, BEAM SEAL, VERT FIN	324					
324TL	0.15	0.15	ALL/ALL	DOOR ASSY - TRAILING EDGE, BEAM SEAL, VERT FIN	324					
324UL	0.10	0.10	ALL/ALL	DOOR ASSY - TRAILING EDGE, BEAM SEAL, VERT FIN	324					



	ACCESS PANELS FOR VERTICAL FIN									
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 300	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 320	ZONE					
324VL	0.10	0.10	ALL/ALL	DOOR ASSY - TRAILING EDGE, BEAM SEAL, VERT FIN	324					
324WL	0.10	0.10	ALL/ALL	DOOR ASSY - TRAILING EDGE, BEAM SEAL, VERT FIN	324					
324AML	0.10	0.10	ALL/ALL	DOOR ASSY - TRAILING EDGE, BEAM SEAL, VERT FIN	324					
324XL	0.10	0.10	ALL/ALL	DOOR ASSY - TRAILING EDGE, BEAM SEAL, VERT FIN	324					
324YL	0.10	0.10	ALL/ALL	DOOR ASSY - TRAILING EDGE, BEAM SEAL, VERT FIN	324					
324ZL	0.10	0.10	ALL/ALL	DOOR ASSY - TRAILING EDGE, BEAM SEAL, VERT FIN	324					
326A	0.25	0.25	ALL/ALL	TIP ASSY - VERTICAL FIN	326					






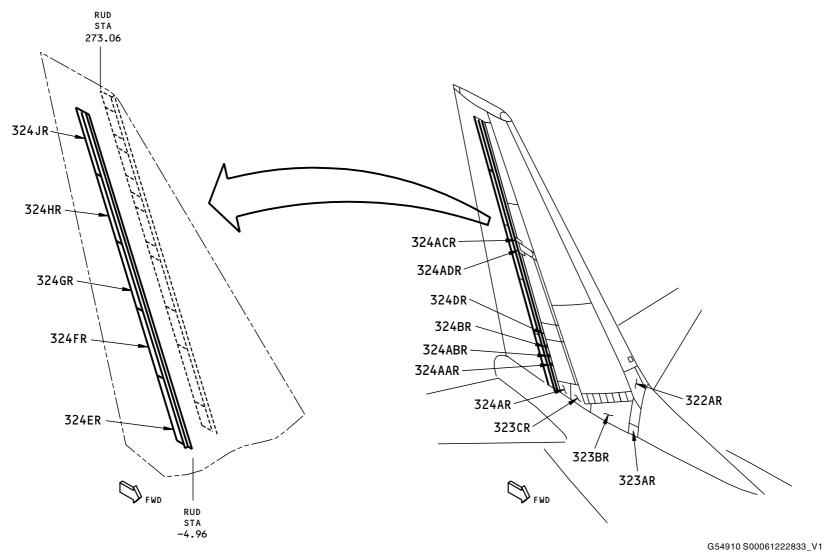


Figure A-101 VERTICAL STABILIZER - ACCESS DOORS AND PANELS - RIGHT SIDE VIEW



	ACCESS PANELS FOR VERTICAL FIN									
ACCESS PANEL AND DOOR	MAN-	-HOURS		MAJOR ZONE 300	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 320	ZONE					
322AR	0.15	0.15	ALL/ALL	LEADING EDGE - VERT FIN	322					
323AR	0.05	0.05	ALL/ALL	DOOR ASSY FWD CLOSEOUT VERT FIN	323					
323BR	0.20	0.20	ALL/ALL	PANEL ASSY - FIN TO BODY, VERT FIN	323					
323CR	0.15	0.15	ALL/ALL	PANEL ASSY - FIN TO BODY, VERT FIN	323					
324AR	0.15	0.15	ALL/ALL	ACCESS PANEL - FIN TO BODY, VERT FIN	324					
324BR	0.15	0.15	ALL/ALL	PANEL ASSY - TRAILING EDGE VERT FIN	324					
324DR	0.05	0.05	ALL/ALL	DOOR ASSY - TRAILING EDGE VERT FIN	324					
324ER	0.15	0.15	ALL/ALL	PANEL ASSY - TRAILING EDGE, BEAM SEAL, VERT FIN	324					
324FR	0.15	0.15	ALL/ALL	PANEL ASSY - TRAILING EDGE, BEAM SEAL, VERT FIN	324					
324GR	0.15	0.15	ALL/ALL	PANEL ASSY - TRAILING EDGE, BEAM SEAL, VERT FIN	324					
324HR	0.15	0.15	ALL/ALL	PANEL ASSY - TRAILING EDGE, BEAM SEAL, VERT FIN	324					
324JR	0.15	0.15	ALL/ALL	PANEL ASSY - TRAILING EDGE, BEAM SEAL, VERT FIN	324					
324AAR	0.10	0.10	ALL/ALL	RUDDER NOSE COVER / RUDDER HINGE NO. 1 AT RUDDER STATION 56.48	324					
324ABR	0.10	0.10	ALL/ALL	RUDDER NOSE COVER / RUDDER HINGE NO. 2 AT RUDDER STATION 66.42	324					
324ACR	0.10	0.10	ALL/ALL	TOP RUDDER GAP COVER AT RUDDER STATION 164.90	324					
324ADR	0.10	0.10	ALL/ALL	BOTTOM RUDDER GAP COVER	324					



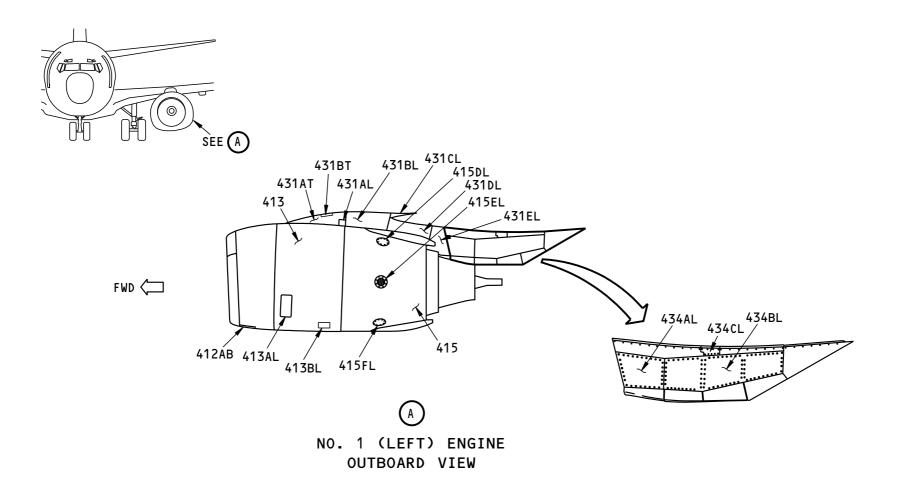

NOTE: SUBZONE 410 - LEFT POWER PLANT SUBZONE 420 - RIGHT POWER PLANT

SUBZONE 430 - LEFT NACELLE STRUT SUBZONE 440 - RIGHT NACELLE STRUT

G80805 S00061222834_V1


Figure A-102 CFM56-7 NO. 1 POWER PLANT AND NACELLE STRUT FAIRING - ACCESS DOORS AND PANELS



	ACCESS PANELS FOR CFM56-7 ENGINE NO. 1									
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 400	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 410	ZONE					
412AB	0.05	0.05	ALL/ALL	PANEL ASSY - INLET ACCESS	412					
413	0.10	0.10	ALL/ALL	COWL ASSY - FAN	413					
413AL	0.05	0.05	ALL/ALL	DOOR ASSY - IDG	413					
413BL	0.05	0.05	ALL/ALL	DOOR ASSY - CHIP DETECTOR/PRESSURE RELIEF	413					
415	0.25	0.25	ALL/ALL	FAN DUCT COWL AND THRUST REVERSER ASSY	415					
415DL	0.05	0.05	ALL/ALL	ACCESS DOOR - THRUST REVERSER ACTUATOR	415					
415EL	0.05	0.05	ALL/ALL	ACCESS DOOR - THRUST REVERSER ACTUATOR	415					
415FL	0.05	0.05	ALL/ALL	ACCESS DOOR - THRUST REVERSER ACTUATOR	415					

	ACCESS PANELS FOR CFM56-7 ENGINE NO. 1								
ACCESS PANEL AND DOOR	MAN	-HOURS		MAJOR ZONE 400	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 430	ZONE				
431AL	0.05	0.05	ALL/ALL	FAIRING ASSY - THUMBNAIL	431				
431AT	0.05	0.05	ALL/ALL	ACCESS PANEL - THUMBNAIL	431				
431BL	0.15	0.15	ALL/ALL	PANEL ASSY - FWD FAIRING - MID STRUT	431				
431BT	0.05	0.05	ALL/ALL	DOOR ASSY - FWD FAIRING	431				
431CL	0.15	0.15	ALL/ALL	PANEL ASSY - OVERWING FAIRING	431				
431DL	0.15	0.15	ALL/ALL	PANEL ASSY - UNDERWING FAIRING	431				
431EL	0.15	0.15	ALL/ALL	PANEL ASSY - THRUST REVERSER FAIRING	431				
434AL	0.05	0.05	ALL/ALL	PANEL ASSY - AFT FAIRING	434				
434BL	0.15	0.15	ALL/ALL	PANEL ASSY - AFT FAIRING	434				
434CL	0.15	0.15	ALL/ALL	PANEL ASSY - ACCESS TO FUEL DOOR	434				



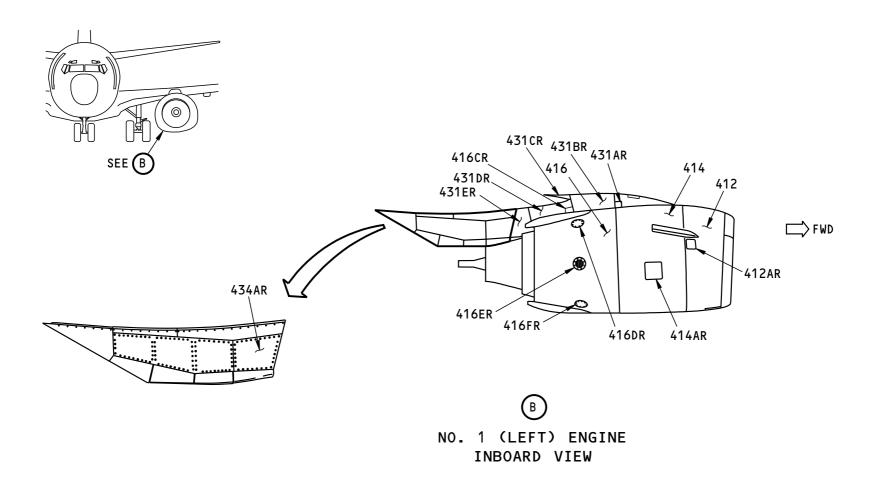

NOTE: SUBZONE 410 - LEFT POWER PLANT

SUBZONE 420 - RIGHT POWER PLANT SUBZONE 430 - LEFT NACELLE STRUT SUBZONE 440 - RIGHT NACELLE STRUT

L32144 S00061222835_V1


Figure A-103 CFM56-7 NO. 1 POWER PLANT AND NACELLE STRUT FAIRING - ACCESS DOORS AND PANELS



	ACCESS PANELS FOR CFM56-7 ENGINE NO. 1									
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 400	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 410	ZONE					
412	0.10	0.10	ALL/ALL	COWL ASSY - INLET	412					
412AR	0.05	0.05	ALL/ALL	DOOR ASSY - PRESSURE RELIEF AND T-12	412					
414	0.10	0.10	ALL/ALL	COWL ASSY - FAN	414					
414AR	0.05	0.05	ALL/ALL	DOOR ASSY - OIL TANK	414					
416	0.25	0.25	ALL/ALL	FAN DUCT COWL AND THRUST REVERSER ASSY	416					
416CR	0.15	0.15	ALL/ALL	BUMP FAIRING FOR THRUST REVERSER HINGE FAIRING	416					
416DR	0.05	0.05	ALL/ALL	ACCESS DOOR - THRUST REVERSER ACTUATOR	416					
416ER	0.05	0.05	ALL/ALL	ACCESS DOOR - THRUST REVERSER ACTUATOR	416					
416FR	0.05	0.05	ALL/ALL	ACCESS DOOR - THRUST REVERSER ACTUATOR	416					

	ACCESS PANELS FOR CFM56-7 ENGINE NO. 1									
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 400	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 430	ZONE					
431AR	0.05	0.05	ALL/ALL	FAIRING ASSY - THUMBNAIL	431					
431BR	0.15	0.15	ALL/ALL	PANEL ASSY - FWD FAIRING - MID STRUT	431					
431CR	0.15	0.15	ALL/ALL	PANEL ASSY - OVERWING FAIRING	431					
431DR	0.15	0.15	ALL/ALL	PANEL ASSY - UNDERWING FAIRING	431					
431ER	0.15	0.15	ALL/ALL	PANEL ASSY - THRUST REVERSER FAIRING	431					
434AR	0.05	0.05	ALL/ALL	PANEL ASSY - AFT FAIRING	434					



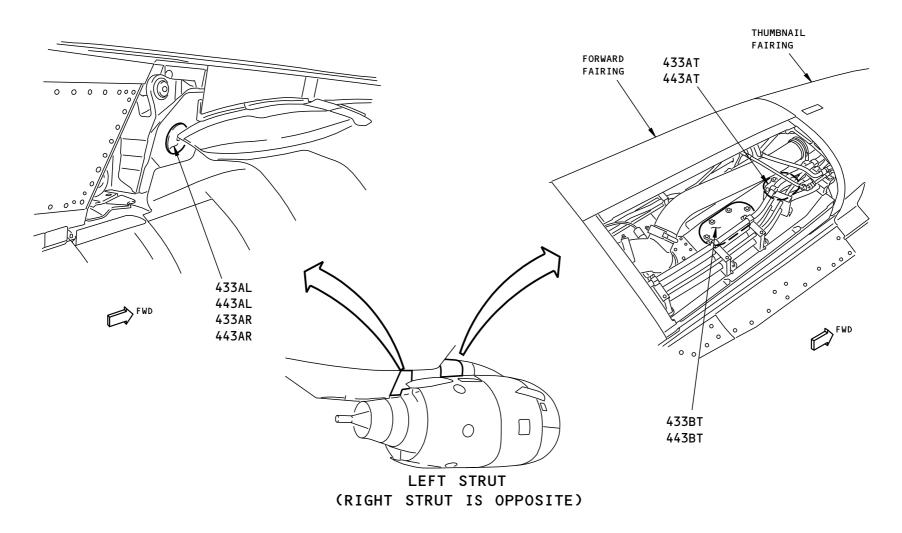

L05944 S00061222836_V1

Figure A-104 CFM56-7 NO. 1 & 2 POWER PLANT AND NACELLE STRUT FAIRING - ACCESS DOORS AND PANELS




ACCESS PANELS FOR CFM56-7 ENGINE NO. 1									
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 400	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 430	ZONE				
433AL	0.25	0.25	ALL/ALL	PANEL ASSY - STRUT	433				
433AR	0.25	0.25	ALL/ALL	PANEL ASSY - STRUT	433				
433AT	0.13	0.13	ALL/ALL	PANEL ASSY - STRUT, FORWARD SPAR WEB	433				
433BT	0.13	0.13	ALL/ALL	PANEL ASSY - UPPER SPAR WEB	433				


	ACCESS PANELS FOR CFM56-7 ENGINE NO. 2									
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 400	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 440	ZONE					
443AL	0.25	0.25	ALL/ALL	PANEL ASSY - STRUT	443					
443AR	0.25	0.25	ALL/ALL	PANEL ASSY - STRUT	443					
443AT	0.13	0.13	ALL/ALL	PANEL ASSY - STRUT, FORWARD SPAR WEB	443					
443BT	0.13	0.13	ALL/ALL	PANEL ASSY - UPPER SPAR WEB	443					





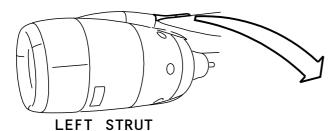

(RIGHT STRUT IS OPPOSITE)

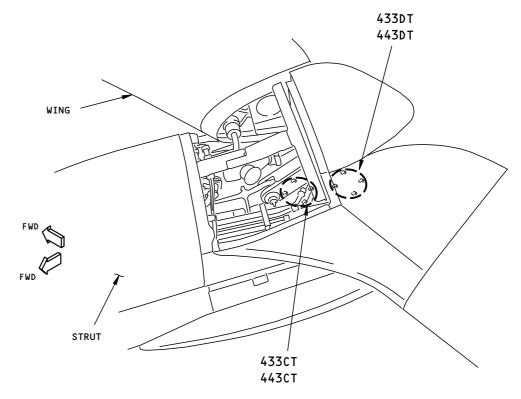

L05945 S00061222837_V1


Figure A-105 CFM56-7 NO. 1 & 2 POWER PLANT AND NACELLE STRUT FAIRING - ACCESS DOORS AND PANELS



ACCESS PANELS FOR CFM56-7 ENGINE NO. 1										
ACCESS PANEL AND DOOR	MAN-	MAN-HOURS		MAJOR ZONE 400	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 430	ZONE					
433CT	0.13	0.13	ALL/ALL	PANEL ASSY - UPPER SPAR WEB	433					
433DT	0.13	0.13	ALL/ALL	PANEL ASSY - UPPER SPAR WEB	433					

ACCESS PANELS FOR CFM56-7 ENGINE NO. 2								
ACCESS PANEL MAN-HOURS MAJOR ZONE 400					LOCATION BY			
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 440	ZONE			
443CT	0.13	0.13	ALL/ALL	PANEL ASSY - UPPER SPAR WEB	443			
443DT	0.13	0.13	ALL/ALL	PANEL ASSY - UPPER SPAR WEB	443			



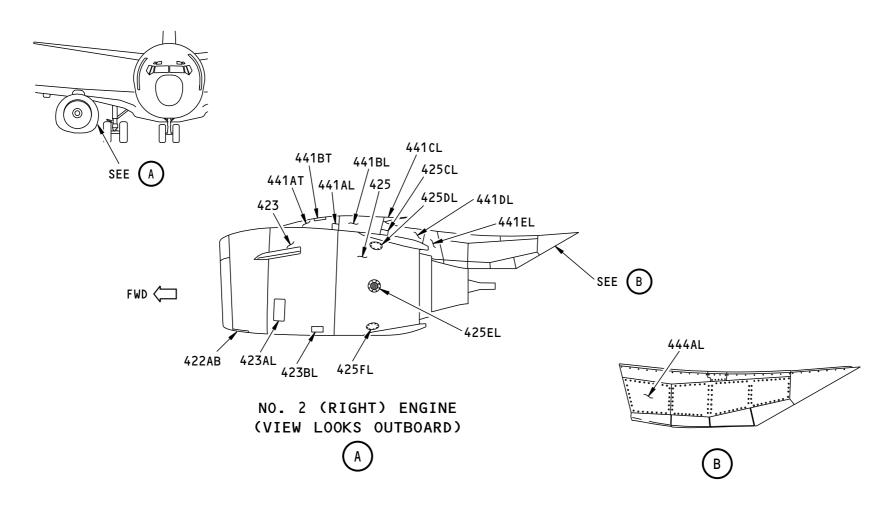

NOTE: SUBZONE 410 - LEFT POWER PLANT

SUBZONE 420 - RIGHT POWER PLANT SUBZONE 430 - LEFT NACELLE STRUT SUBZONE 440 - RIGHT NACELLE STRUT

G80811 S00061222838_V2


Figure A-106 CFM56-7 NO. 2 POWER PLANT AND NACELLE STRUT FAIRING - ACCESS DOORS AND PANELS



ACCESS PANELS FOR CFM56-7 ENGINE NO. 2							
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 400	LOCATION BY		
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 420	ZONE		
422AB	0.05	0.05	ALL/ALL	PANEL ASSY - INLET ACCESS	422		
423	0.10	0.10	ALL/ALL	COWL ASSY - FAN	423		
423AL	0.05	0.05	ALL/ALL	DOOR ASSY - IDG	423		
423BL	0.05	0.05	ALL/ALL	DOOR ASSY - CHIP DETECTOR/PRESSURE REL. VAL.	423		
425	0.25	0.25	ALL/ALL	FAN DUCT COWL AND THRUST REVERSER ASSY.	425		
425CL	0.15	0.15	ALL/ALL	BUMP FAIRING FOR THRUST REVERSER HINGE FAIRING	425		
425DL	0.05	0.05	ALL/ALL	ACCESS DOOR THRUST REVERSER ACTUATOR	425		
425EL	0.05	0.05	ALL/ALL	ACCESS DOOR THRUST REVERSER ACTUATOR	425		
425FL	0.05	0.05	ALL/ALL	ACCESS DOOR THRUST REVERSER ACTUATOR	425		

ACCESS PANELS FOR CFM56-7 ENGINE NO. 2							
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 400	LOCATION BY		
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 440	ZONE		
441AL	0.05	0.05	ALL/ALL	FAIRING ASSY - THUMBNAIL	441		
441AT	0.05	0.05	ALL/ALL	ACCESS PANEL - THUMBNAIL	441		
441BL	0.15	0.15	ALL/ALL	PANEL ASSY - FWD FAIRING - MID STRUT	441		
441BT	0.05	0.05	ALL/ALL	DOOR ASSY - FWD FAIRING	441		
441CL	0.15	0.15	ALL/ALL	PANEL ASSY - OVERWING FAIRING	441		
441DL	0.15	0.15	ALL/ALL	PANEL ASSY - UNDERWING FAIRING	441		
441EL	0.15	0.15	ALL/ALL	PANEL ASSY - THRUST REVERSER FAIRING	441		
444AL	0.10	0.10	ALL/ALL	PANEL ASSY - AFT FAIRING	444		



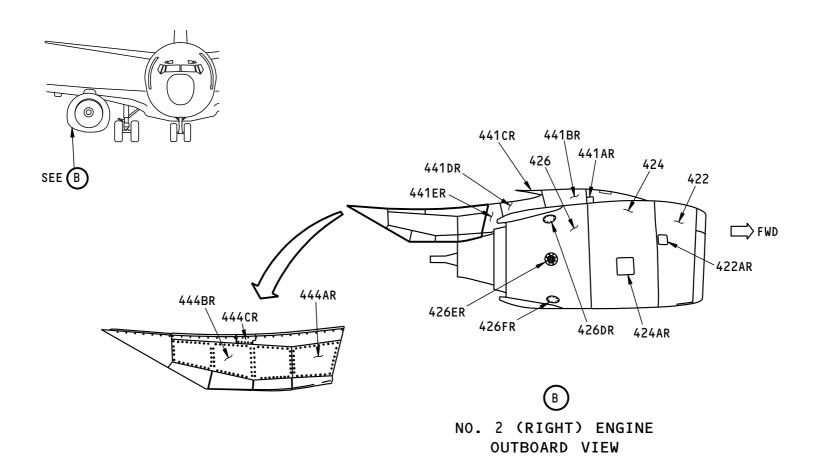

NOTE: SUBZONE 410 - LEFT POWER PLANT

SUBZONE 420 - RIGHT POWER PLANT SUBZONE 430 - LEFT NACELLE STRUT SUBZONE 440 - RIGHT NACELLE STRUT

L32150 S00061222839_V1

Figure A-107 CFM56-7 NO. 2 POWER PLANT AND NACELLE STRUT FAIRING - ACCESS DOORS AND PANELS



ACCESS PANELS FOR CFM56-7 ENGINE NO. 2							
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 400	LOCATION BY		
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 420	ZONE		
422	1.00	1.00	ALL/ALL	COWL ASSY - INLET	422		
422AR	0.01	0.01	ALL/ALL	DOOR ASSY - PRESSURE RELIEF AND T-12	422		
424	0.10	0.10	ALL/ALL	COWL ASSY - FAN	424		
424AR	0.05	0.05	ALL/ALL	DOOR ASSY - OIL TANK	424		
426	0.25	0.25	ALL/ALL	FAN DUCT COWL AND THRUST REVERSER ASSY	426		
426DR	0.05	0.05	ALL/ALL	ACCESS DOOR - THRUST REVERSER ACTUATOR	426		
426ER	0.05	0.05	ALL/ALL	ACCESS DOOR - THRUST REVERSER ACTUATOR	426		
426FR	0.05	0.05	ALL/ALL	ACCESS DOOR - THRUST REVERSER ACTUATOR	426		

ACCESS PANELS FOR CFM56-7 ENGINE NO. 2							
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 400	LOCATION BY		
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 440	ZONE		
441AR	0.05	0.05	ALL/ALL	FAIRING ASSY - THUMBNAIL	441		
441BR	0.15	0.15	ALL/ALL	PANEL ASSY - FWD FAIRING - MID STRUT	441		
441CR	0.15	0.15	ALL/ALL	PANEL ASSY - OVERWING FAIRING	441		
441DR	0.15	0.15	ALL/ALL	PANEL ASSY - UNDERWING FAIRING	441		
441ER	0.15	0.15	ALL/ALL	PANEL ASSY - THRUST REVERSER FAIRING	441		
444AR	0.10	0.10	ALL/ALL	PANEL ASSY - AFT FAIRING	444		
444BR	0.15	0.15	ALL/ALL	PANEL ASSY - AFT FAIRING	444		
444CR	0.15	0.15	ALL/ALL	PANEL ASSY - ACCESS TO FUEL DOOR	444		





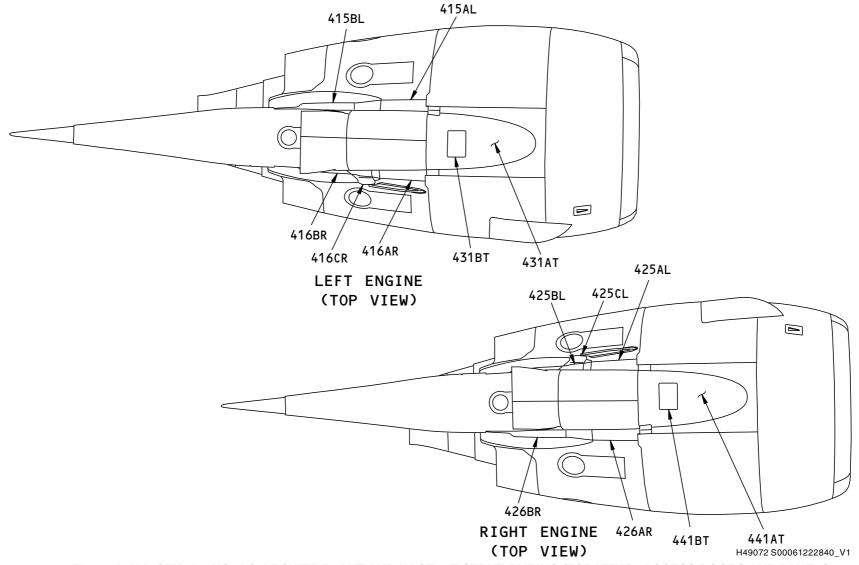


Figure A-108 CFM56-7 NO. 1 & 2 POWER PLANT AND NACELLE STRUT FAIRING (TOP VIEW) - ACCESS DOORS AND PANELS



ACCESS PANELS FOR CFM56-7 ENGINE NO. 1 & 2 (TOP VIEW)								
ACCESS PANEL AND DOOR NUMBER	MAN-	MAN-HOURS		MAJOR ZONE 400	LOCATION BY			
	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 410	ZONE			
415AL	0.15	0.15	ALL/ALL	FORWARD THRUST REVERSER HINGE FAIRING	415			
415BL	0.15	0.15	ALL/ALL	AFT THRUST REVERSER HINGE FAIRING	416			
416AR	0.15	0.15	ALL/ALL	FORWARD THRUST REVERSER HINGE FAIRING	416			
416BR	0.15	0.15	ALL/ALL	AFT THRUST REVERSER HINGE FAIRING	416			
416CR	0.15	0.15	ALL/ALL	BUMP FAIRING FOR TR HINGE FAIRING	416			

ACCESS PANELS FOR CFM56-7 ENGINE NO. 1 & 2 (TOP VIEW)								
ACCESS PANEL AND DOOR NUMBER	MAN-	HOURS		MAJOR ZONE 400	LOCATION BY			
	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 420	ZONE			
425AL	0.15	0.15	ALL/ALL	FORWARD THRUST REVERSER HINGE FAIRING	425			
425BL	0.15	0.15	ALL/ALL	AFT THRUST REVERSER HINGE FAIRING	425			
425CL	0.15	0.15	ALL/ALL	BUMP FAIRING FOR TR HINGE FAIRING	425			
426AR	0.15	0.15	ALL/ALL	FORWARD THRUST REVERSER HINGE FAIRING	426			
426BR	0.15	0.15	ALL/ALL	AFT THRUST REVERSER HINGE FAIRING	426			

ACCESS PANELS FOR CFM56-7 ENGINE NO. 1 & 2 (TOP VIEW)								
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 400	LOCATION BY			
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 430	ZONE			
431AT	0.15	0.15	ALL/ALL	ACCESS PANEL - THUMBNAIL	431			
431BT	0.15	0.15	ALL/ALL	DOOR ASSY - FORWARD FAIRING	431			



ACCESS PANELS FOR CFM56-7 ENGINE NO. 1 & 2 (TOP VIEW)								
ACCESS PANEL MAN-HOURS MAJOR ZONE 400					LOCATION BY			
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 440	ZONE			
441AT	0.15	0.15	ALL/ALL	ACCESS PANEL - THUMBNAIL	441			
441BT	0.05	0.05	ALL/ALL	DOOR ASSY - FORWARD FAIRING	441			



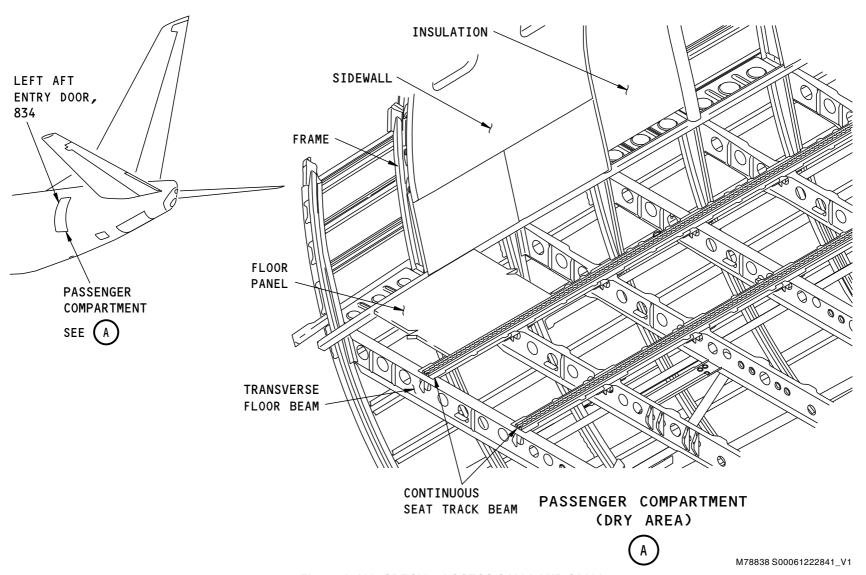


Figure A-109 SPECIAL ACCESS S1001 AND S2002



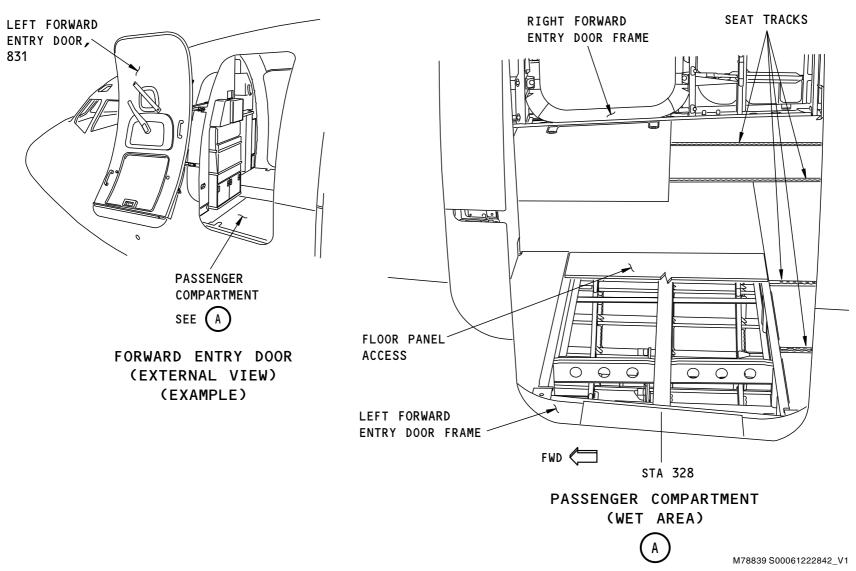


Figure A-110 SPECIAL ACCESS S1002,S2003 AND S2004





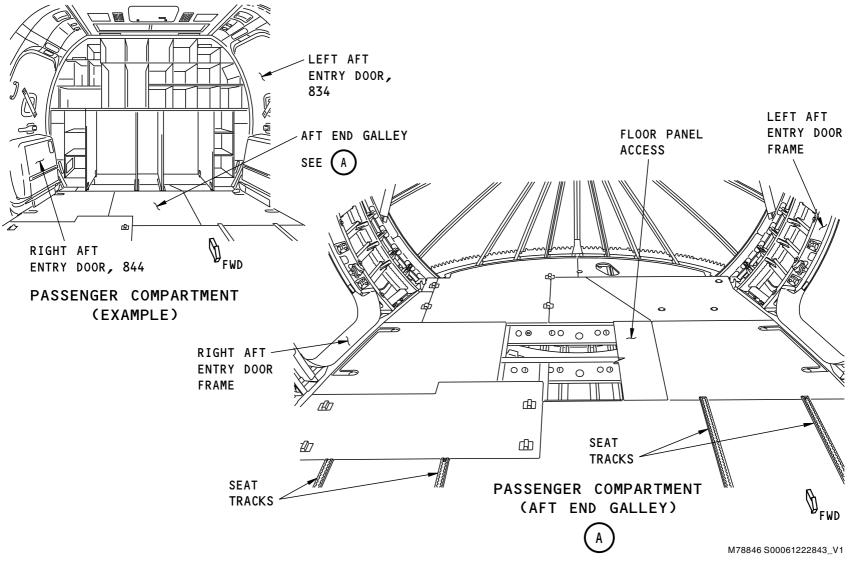


Figure A-111 SPECIAL ACCESS S1002,S2003 AND S2004 (CONTINUED)



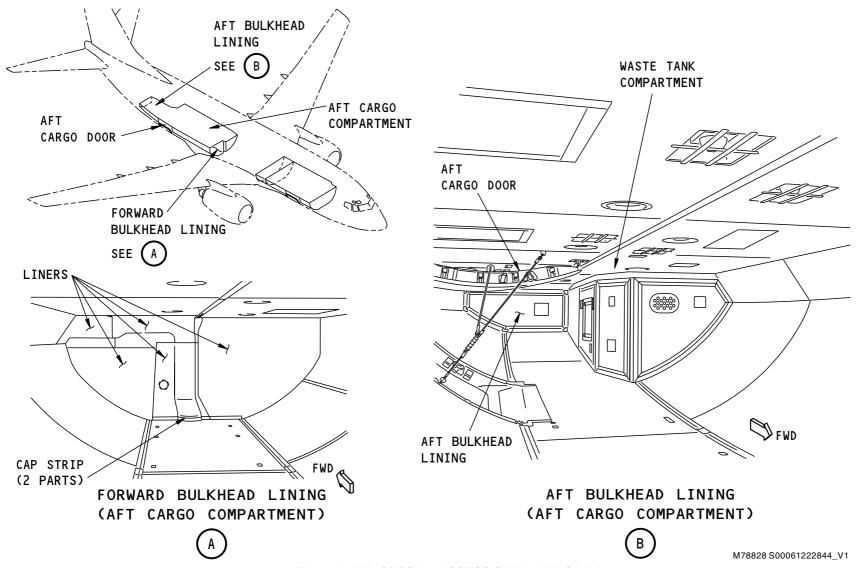


Figure A-112 SPECIAL ACCESS S1003 AND S1401



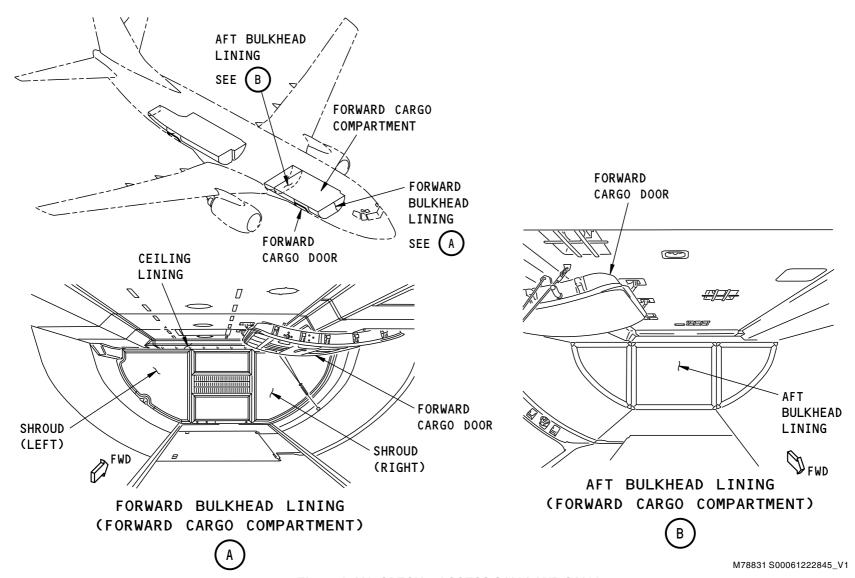


Figure A-113 SPECIAL ACCESS S1201 AND S1203



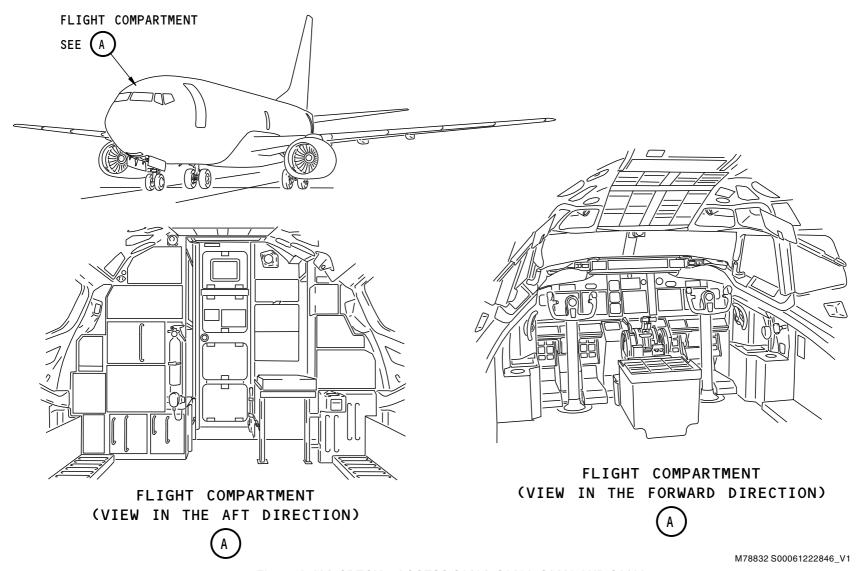


Figure A-114 SPECIAL ACCESS S2101, S2102, S2113 AND S2123



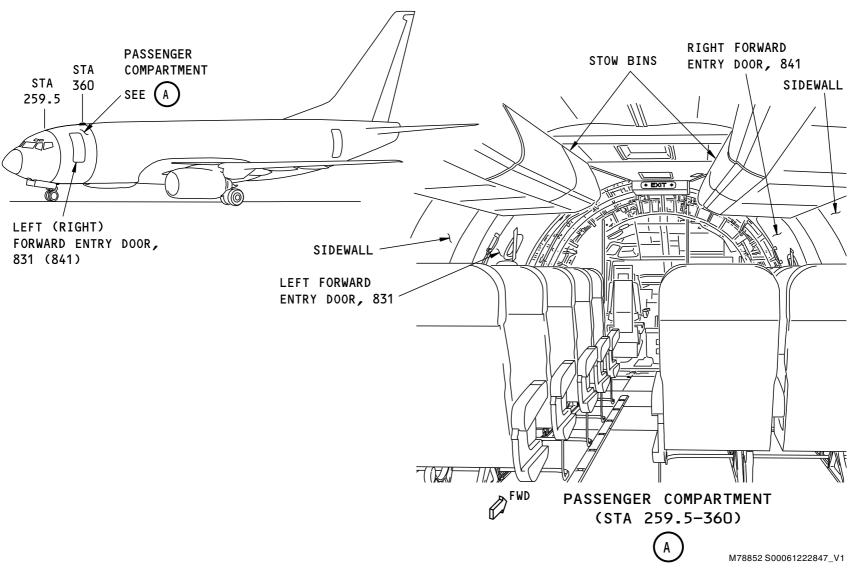


Figure A-115 SPECIAL ACCESS S2201



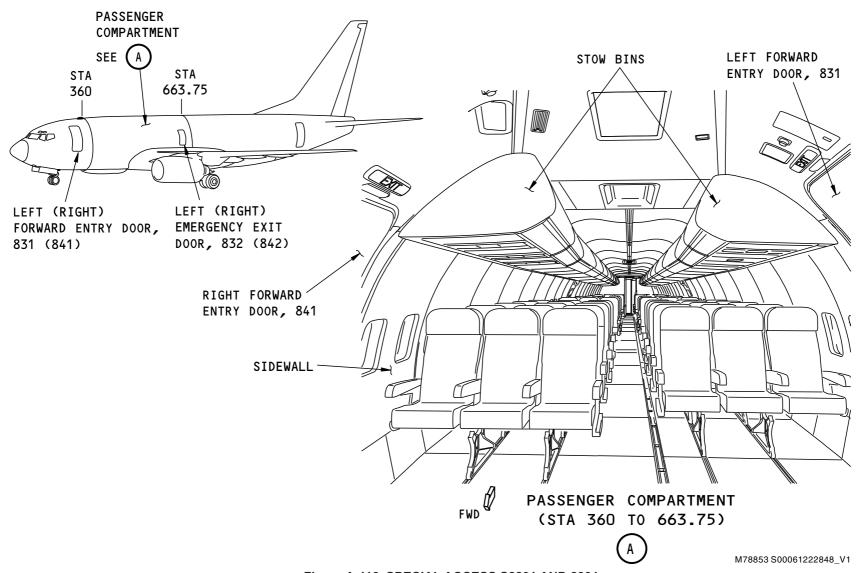


Figure A-116 SPECIAL ACCESS S2201 AND 2301



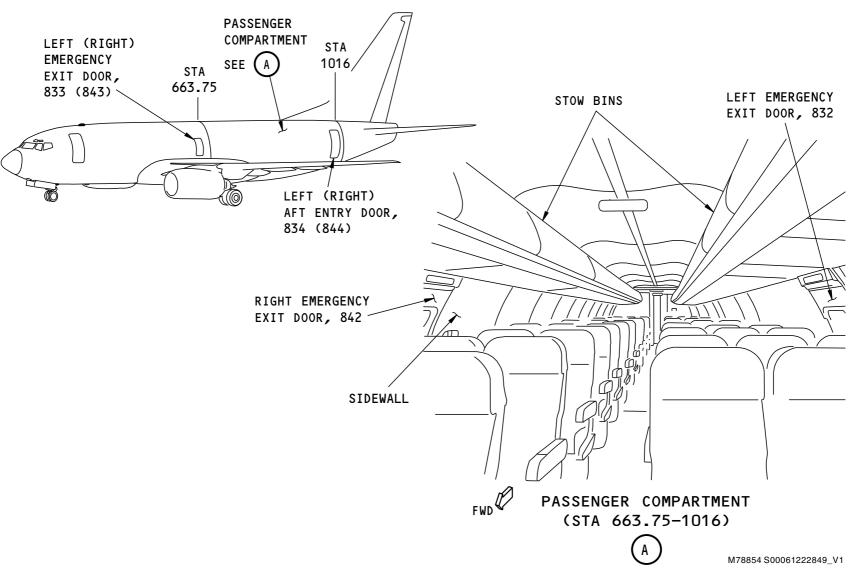


Figure A-117 SPECIAL ACCESS S2401



	ACCESS PANELS FOR SPECIAL ACCESS REQUIREMENTS									
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 100	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 100	ZONE					
S1001	2.50	3.50	ALL/ALL	PASSENGER COMPARTMENT FLOOR STRUCTURE - DRY AREA	100					
S1002	2.50	3.50	ALL/ALL	PASSENGER COMPARTMENT FLOOR STRUCTURE - WET AREA	100					
S1003	7.00	20.00	ALL/ALL	FORWARD AFT CARGO COMPARTMENT FLOOR STRUCTURE	100					
S1004	2.00	2.00	ALL/ALL	KEEL BEAM UNDER WING-TO-BODY FAIRING	100					
S1005	1.00	1.00	ALL/ALL	KEEL BEAM IN MAIN WHEEL WELL	100					
S1006	2.00	2.00	ALL/ALL	FORWARD SIDE WING CENTER SECTION INSPECTION	100					
S1007	1.00	1.00	ALL/ALL	AFT SIDE WING CENTER SECTION INSPECTION	100					
S1008	1.00	1.00	ALL/ALL	LOWER SIDE WING CENTER SECTION INSPECTION	100					

	ACCESS PANELS FOR SPECIAL ACCESS REQUIREMENTS									
ACCESS PANEL AND DOOR NUMBER	MAN-HOURS			MAJOR ZONE 100	LOCATION BY					
	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 110	ZONE					
S1101	1.00	1.30	ALL/ALL	AREA ABOVE AND OUTBOARD OF NOSE WHEEL WELL	110					
S1102	1.00	1.50	ALL/ALL	E/E COMPARTMENT INSPECTION	110					
S1121	0.50	0.65	ALL/ALL	FORWARD ACCESS DOOR INSPECTION	112					
S1122	1.50	1.75	ALL/ALL	AREA FORWARD OF NOSE WHEEL WELL	112					
S1171	2.50	3.25	ALL/ALL	E/E EQUIPMENT COMPARTMENT DOOR INSPECTION	117					
S1172	0.65	1.00	ALL/ALL	FORWARD AIRSTAIRS INSPECTION	117					

ACCESS PANELS FOR SPECIAL ACCESS REQUIREMENTS									
ACCESS PANEL MAN-HOURS			MAJOR ZONE 100	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 120	ZONE				
S1201	1.50	2.00	ALL/ALL	FORWARD CARGO COMPARTMENT	120				
S1202	6.00	6.00	ALL/ALL	FORWARD BILGE INSPECTION	120				



ACCESS PANELS FOR SPECIAL ACCESS REQUIREMENTS									
ACCESS PANEL MAN-HOURS			MAJOR ZONE 100	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 120	ZONE				
S1203	3.00	3.00	ALL/ALL	AREA AFT OF FORWARD CARGO COMPARTMENT	120				
S1221	2.00	2.50	ALL/ALL	FORWARD CARGO DOOR CUTOUT	122				

ACCESS PANELS FOR SPECIAL ACCESS REQUIREMENTS									
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 100	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 130	ZONE				
S1301	3.00	3.00	ALL/ALL	AREA ABOVE WINGBOX CENTER SECTION	130				
S1302	2.00	2.00	ALL/ALL	AREA ABOVE MAIN LANDING GEAR WHEEL WELL	130				
S1303	2.00	2.00	ALL/ALL	UPPER SIDE WING CENTER SECTION INSPECTION	130				

	ACCESS PANELS FOR SPECIAL ACCESS REQUIREMENTS									
ACCESS PANEL MAN-HOURS			MAJOR ZONE 100	LOCATION BY						
NUMBER		CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 140	ZONE					
S1401	3.00	3.00	ALL/ALL	AFT CARGO COMPARTMENT	140					
S1402	5.00	14.50	ALL/ALL	AFT BILGE	140					
S1403	2.00	2.00	ALL/ALL	AREA AFT OF CARGO COMPARTMENT	140					
S1421	2.00	2.00	ALL/ALL	AFT CARGO DOOR CUTOUT	142					

ACCESS PANELS FOR SPECIAL ACCESS REQUIREMENTS									
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 200	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 200	ZONE				
S2001	4.00	5.00	ALL/ALL	PASSENGER COMPARTMENT DOOR CUTOUTS	200				
S2002	7.00	7.00	ALL/ALL	PASSENGER COMPARTMENT FLOOR STRUCTURE - DRY AREA	200				
S2003	9.00	15.00	ALL/ALL	PASSENGER COMPARTMENT FLOOR STRUCTURE - WET AREA	200				



ACCESS PANELS FOR SPECIAL ACCESS REQUIREMENTS									
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 200	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 200	ZONE				
S2004	5.00	5.00	ALL/ALL	PASSENGER COMPARTMENT FLOOR STRUCTURE - WET AREA	200				

	ACCESS PANELS FOR SPECIAL ACCESS REQUIREMENTS									
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 200	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 210	ZONE					
S2101	3.00	4.50	ALL/ALL	FLIGHT COMPARTMENT	210					
S2102	3.00	3.00	ALL/ALL	FLIGHT COMPARTMENT FLOOR STRUCTURE	210					
S2111	0.25	0.25	ALL/ALL	CONTROL STAND ACCESS COVERS	211					
S2113	0.30	0.30	ALL/ALL	SIDEWALL & CEILING LINING - CONTROL CABIN	211					
S2121	0.25	0.25	ALL/ALL	CONTROL STAND ACCESS COVERS	212					
S2122	0.01	0.01	ALL/ALL	MANUAL EXTENSION ACCESS DOOR - LANDING GEAR	212					
S2123	0.30	0.30	ALL/ALL	SIDEWALL & CEILING LINING - CONTROL CABIN	212					

ACCESS PANELS FOR SPECIAL ACCESS REQUIREMENTS									
ACCESS PANEL MAN-HOURS MAJOR ZONE 200					LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 220	ZONE				
S2201	5.00	5.00	ALL/ALL	PASSENGER COMPARTMENT	220				

	ACCESS PANELS FOR SPECIAL ACCESS REQUIREMENTS									
ACCESS PANEL MAN-HOURS MAJOR ZONE 200 LOC					LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 230	ZONE					
S2301	5.00	5.00	ALL/ALL	FORWARD PASSENGER COMPARTMENT STA 360 TO 663.75	230					



ACCESS PANELS FOR SPECIAL ACCESS REQUIREMENTS									
ACCESS PANEL AND DOOR	MAN-HOLIRS			MAJOR ZONE 200	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 240	ZONE				
S2401	6.00	8.50	ALL/ALL	AFT PASSENGER COMPARTMENT	240				

	ACCESS PANELS FOR SPECIAL ACCESS REQUIREMENTS									
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 300	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 300	ZONE					
S3001	1.50	1.50	ALL/ALL	RUDDER, ELEVATOR, AND ELEVATOR TAB ATTACH FITTINGS INSPECTION	300					

	ACCESS PANELS FOR SPECIAL ACCESS REQUIREMENTS										
ACCESS PANEL MAN-HOURS			MAJOR ZONE 300	LOCATION BY							
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 310	ZONE						
S3101	5.00	7.50	ALL/ALL	STABILIZER TORSION BOX AND APU COMPARTMENT	310						
S3102	1.00	1.00	ALL/ALL	STABILIZER TORSION BOX COMPARTMENT INSPECTION	310						

ACCESS PANELS FOR SPECIAL ACCESS REQUIREMENTS									
ACCESS PANEL AND DOOR	MAN-	MAN-HOURS		MAJOR ZONE 300	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 320	ZONE				
S3231	2.00	2.00	ALL/ALL	VERTICAL FIN REAR SPAR FITTING	323				
S3232	2.00	2.00	ALL/ALL	VERTICAL FIN INSPECTION	323				

ACCESS PANELS FOR SPECIAL ACCESS REQUIREMENTS									
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 300	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 330	ZONE				
S3311	1.50	1.50	ALL/ALL	LEFT HORIZONTAL STABILIZER LEADING EDGE INSPECTION	331				
S3331	1.00	1.00	ALL/ALL	LEFT HORIZONTAL STABILIZER LEADING EDGE INSPECTION	333				



ACCESS PANELS FOR SPECIAL ACCESS REQUIREMENTS									
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 300	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 340	ZONE				
S3411	1.50	1.50	ALL/ALL	RIGHT HORIZONTAL STABILIZER LEADING EDGE INSPECTION	341				
S3431	1.00	1.00	ALL/ALL	RIGHT HORIZONTAL STABILIZER LEADING EDGE INSPECTION	343				

ACCESS PANELS FOR SPECIAL ACCESS REQUIREMENTS									
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 400	LOCATION BY				
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 400	ZONE				
S4001	16.00	16.00	ALL/ALL	LEFT STRUT FORWARD AND AFT ENGINE MOUNT ASSEMBLIES INSPECTION	400				
S4002	16.00	16.00	ALL/ALL	RIGHT STRUT FORWARD AND AFT ENGINE MOUNT ASSEMBLIES INSPECTION	400				

	ACCESS PANELS FOR SPECIAL ACCESS REQUIREMENTS									
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 400	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 410	ZONE					
S4101	0.45	1.00	ALL/ALL	LEFT FORWARD ENGINE MOUNT ASSEMBLY INSPECTION	410					

ACCESS PANELS FOR SPECIAL ACCESS REQUIREMENTS									
ACCESS PANEL MAN-HOURS			MAJOR ZONE 400	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 420	ZONE				
S4201	0.45	1.00	ALL/ALL	RIGHT FORWARD ENGINE MOUNT ASSEMBLY INSPECTION	420				

	ACCESS PANELS FOR SPECIAL ACCESS REQUIREMENTS									
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 400	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 430	ZONE					
S4331	1.50	1.50	ALL/ALL	LEFT STRUT BOX EXTERNAL INSPECTION	433					



ACCESS PANELS FOR SPECIAL ACCESS REQUIREMENTS										
ACCESS PANEL MAN-HO		HOURS		MAJOR ZONE 400	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 430	ZONE					
S4332	2.00	2.00	ALL/ALL	LEFT STRUT BOX INTERNAL INSPECTION	433					

ACCESS PANELS FOR SPECIAL ACCESS REQUIREMENTS										
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 400	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 440	ZONE					
S4431	1.50	1.50	ALL/ALL	RIGHT STRUT BOX EXTERNAL INSPECTION	443					
S4432	2.00	2.00	ALL/ALL	RIGHT STRUT BOX INTERNAL INSPECTION	443					

	ACCESS PANELS FOR SPECIAL ACCESS REQUIREMENTS									
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 500	LOCATION BY					
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 500	ZONE					
S5001	1.00	1.00	ALL/ALL	LEFT WING OUTBOARD TRAILING EDGE STRUCTURE INSPECTION	500					

ACCESS PANELS FOR SPECIAL ACCESS REQUIREMENTS						
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 500	LOCATION BY	
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 530	ZONE	
S5321	1.50	1.50	ALL/ALL	LEFT OUTBOARD INTERNAL WING INSPECTION	532	

ACCESS PANELS FOR SPECIAL ACCESS REQUIREMENTS						
ACCESS PANEL MAN-HOURS			MAJOR ZONE 500 LOG	LOCATION BY		
NUMBER			APL/ENG APPLIC	SUBZONE: SUBZONE 550	ZONE	
S5521	0.25	0.25	ALL/ALL	LEFT INBOARD GROUND SPOILER INSPECTION	552	



			ACCESS PANELS FOR	SPECIAL ACCESS REQUIREMENTS		
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 600	LOCATION BY	
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 600	ZONE	
S6001	1.00	1.00	ALL/ALL	RIGHT WING OUTBOARD TRAILING EDGE STRUCTURE INSPECTION	600	
			ACCESS PANELS FOR	SPECIAL ACCESS REQUIREMENTS		
ACCESS PANEL AND DOOR	MA	N-HOURS		MAJOR ZONE 600	LOCATION BY	
NUMBER	OPEN	CLOSE	CLOSE APL/ENG APPLIC SUBZONE: SUBZONE 630 ALL/ALL RIGHT OUTBOARD INTERNAL WING INSPECTION ACCESS PANELS FOR SPECIAL ACCESS REQUIREMENTS	SUBZONE: SUBZONE 630	ZONE	
S6321	1.50	1.50	ALL/ALL	RIGHT OUTBOARD INTERNAL WING INSPECTION	632	
			ACCESS PANELS FOR	SPECIAL ACCESS REQUIREMENTS		
ACCESS PANEL AND DOOR	MAN-HOURS			MAJOR ZONE 600	LOCATION BY	
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 650	ZONE	
S6521	0.25	0.25	ALL/ALL	RIGHT INBOARD GROUND SPOILER INSPECTION	652	
			ACCESS PANELS FOR	SPECIAL ACCESS REQUIREMENTS		
ACCESS PANEL AND DOOR	MA	N-HOURS		MAJOR ZONE 700	LOCATION BY	
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 710	ZONE	
S7131	8.00	8.00	ALL/ALL	NOSE LANDING GEAR ASSEMBLY INSPECTION	713	
			ACCESS PANELS FOR	SPECIAL ACCESS REQUIREMENTS		
ACCESS PANEL AND DOOR	MA	N-HOURS		MAJOR ZONE 700	LOCATION BY	
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 730	ZONE	
S7341	10.00	10.00	ALL/ALL	LEFT MAIN LANDING GEAR ASSEMBLY INSPECTION	734	



ACCESS PANELS FOR SPECIAL ACCESS REQUIREMENTS					
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 700	LOCATION BY
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 740	ZONE
S7441	10.00	10.00	ALL/ALL	RIGHT MAIN LANDING GEAR ASSEMBLY INSPECTION	744

ACCESS PANELS FOR SPECIAL ACCESS REQUIREMENTS							
ACCESS PANEL MAN-HOURS MAJOR ZO			MAJOR ZONE 800	LOCATION BY			
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 820	ZONE		
S8211	2.00	2.50	ALL/ALL	FORWARD CARGO COMPARTMENT DOOR	821		
S8221	2.00	2.50	ALL/ALL	AFT CARGO COMPARTMENT DOOR	822		

ACCESS PANELS FOR SPECIAL ACCESS REQUIREMENTS						
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 800	LOCATION BY	
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 830	ZONE	
S8311	4.00	4.60	ALL/ALL	FORWARD PASSENGER ENTRY DOOR	831	
S8321	5.00	7.50	800/ALL	EMERGENCY HATCH (737-800 ONLY)	832	
S8331	5.00	7.50	ALL/ALL	EMERGENCY HATCH	833	
S8341	4.00	4.60	ALL/ALL	AFT ENTRY DOOR	834	

ACCESS PANELS FOR SPECIAL ACCESS REQUIREMENTS						
ACCESS PANEL AND DOOR	MAN-	HOURS		MAJOR ZONE 800	LOCATION BY	
NUMBER	OPEN	CLOSE	APL/ENG APPLIC	SUBZONE: SUBZONE 840	ZONE	
S8411	4.00	4.60	ALL/ALL	FORWARD GALLEY SERVICE DOOR	841	
S8421	5.00	7.50	800/ALL	EMERGENCY HATCH (737-800 ONLY)	842	
S8431	5.00	7.50	ALL/ALL	EMERGENCY HATCH	843	
S8441	4.00	4.60	ALL/ALL	AFT GALLEY SERVICE DOOR	844	