




1. Physical Layer (Main Parcel)

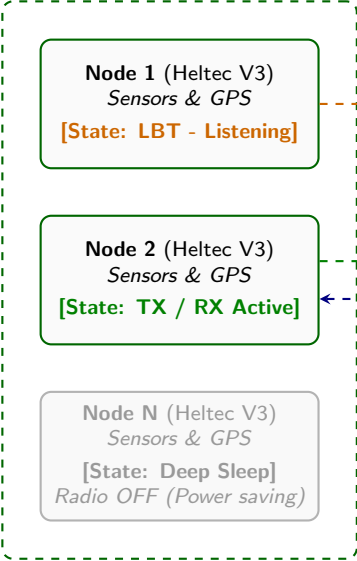

2. Edge/Fog Layer

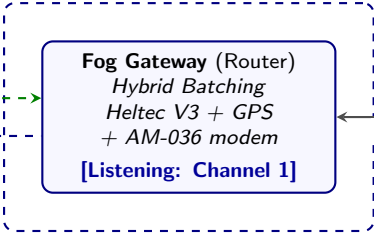

3. Application & Cloud Layer (Proxmox VE)

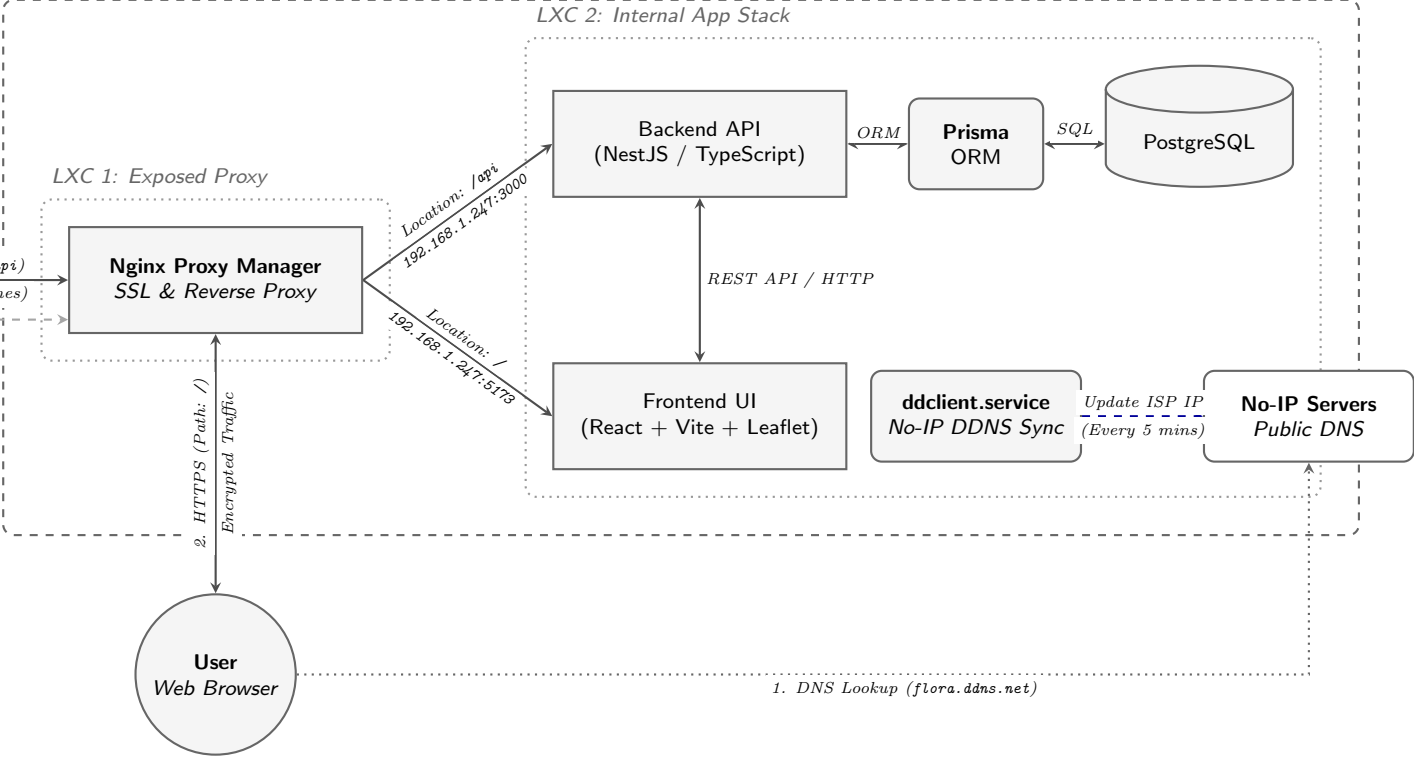

Neighboring Network (Channel Isolation Scenario)



Radio & MAC Terminology

LBT: Listen Before Talk  
CCA: Clear Channel Assessment  
RSSI: Received Signal Strength Indicator

FLoRa Channel Plan (868 MHz)

Channel 0 (868.100 MHz)  
Channel 1 (868.300 MHz) ✓  
Channel 2 (868.500 MHz)  
Channel 3 (869.525 MHz)

\* Gateways perform periodic DNS lookups to flora.ddns.net to maintain connection despite ISP IP changes.