WAGON FITTERS HANDBOOK

FG1.0		January 2025	Group Handbook 1.0

INTRODUCTION

This handbook has been developed by the Health & Safety Team of the Fox Group as a guide for Wagon Fitters to help them understand and manage the risks that they face and create when fixing and operating vehicles for work. It will help people make safer choices about the way they maintain and behave around vehicles.

This is a guidance document, but using the information given should help you to comply with your statutory duties in respect of safe work practices. The document is not exhaustive and provides information, in no particular order, on the main risks that fitters may encounter.

All information contained in this document is accurate at the time of publication (January 2025). It is the responsibility of the reader to ensure they update themselves regularly on any changes to Workshop safety or changes to health and safety.

CONTENTS **PAGE NUMBER**

1. ABRASIVE WHEELS **WF001** 5
2. COMPRESSED GAS CYLINDERS **WF002** 7
3. ELECTRICAL WELDING **WF003** 9
4. ELECTRICITY **WF004** 14
5. HOT WORKS **WF005** 16
6. LIFTING OPERATIONS **WF006** 17
7. DUST **WF007** 19
8. MANUAL HANDLING **WF008** 20
9. POWER TOOLS **WF009** 23
10. USE OF VEHICLE PIT **WF010** 24
11. VEHICLE AND PLANT MOVEMENTS **WF011** 25
12. REFUELLING OF VEHICLES AND PLANT **WF012** 30
13. WORKING AT HEIGHT **WF013** 32
14. NOISE **WF014** 37
15. VIBRATION **WF015** 43
16. PPE **WF016** 45
17. SLIPS, TRIPS AND FALLS **WF017** 48
18. USE OF WASHDOWN **WF018** 51
19. WORKING UNDER VEHICLES **WF019** 53
20. WORKING WITH BATTERIES **WF020** 56
21. WORKING ON ELECTRIC VEHICLES **WF021** 58
22. REPAIRING VEHICLE BRAKES **WF022** 60
23. WORKING ON COOLING SYSTEMS **WF023** 62
24. TYRE MAINTENANCE **WF024** 64
25. HGV WORKSHOP TYRE STORAGE FACILITY **WF025** 71
26. GENERAL JACKING AND BLOCKING **WF026** 73
27. CHECKING AND CHANGING HOSES **WF027** 75
28. REPAIR AND MAINTENANCE OF SWEEPER VEHICLES **WF028** 77
29. ENTER AND EXIT FROM WAGONS **WF029** 86
30. DRIVING IN FOX GROUP YARDS **WF030** 87
31. WORKING UNDER PROPPED BODY **WF031** 89

32. FORKLIFT TRUCK OPERATIONS **WF032** 91
33. OPERATION OF VEHICLE LIFT TABLE **WF033** 95
34. OPERATION OF INDUSTRIAL RADIAL ARM DRILL **WF034** 98
35. GANTRY CRANE OPERATIONS **WF035** 101
36. WORKING AT HEIGHT – USE OF PODIUM PLATFORMS **WF036** 104
37. OPERATION OF A PILLAR DRILL **WF037** 107
38. SAFE USE OF HARNESSES **WF038** 110
39. EMERGENCY RESPONSE PROCEDURE **WF039** 113
40. EMERGENCY SPILL RESPONSE **WF040** 115
41. FIRST AID **WF041** 118

SAFE SYSTEMS OF WORK

42. THE USE OF STEPLADDERS **SSoW-002** 120
43. UNDERTAKING VEHICLE TYRE REPAIRS **SSoW-010** 124
44. RECOVERY OF TRAPPED WAGONS **SSoW-011** 127
45. CHANGING HGV AND TRAILER WHEELS AND TYRES **SSoW-012** 130
46. SECURING PLANT & ATTACHMENTS TO TRAILERS **SSoW-014** 137
47. USE OF VEHICLES ON CONSTRUCTION SITES **SSoW-047** 147
48. MAINTENANCE IN TRAILER BODIES **SSoW-054** 168
49. REFILLING HGV WITH DIESEL AND ADBLUE **SSoW-069** 170

RISK MATRIX

Risk matrix		LIKELIHOOD OF HARM			
SEVERITY OF HARM	1. Remote *e.g. <1 in 1000 chance*	2. Very unlikely *e.g. 1 in 200 chance*	3. Unlikely *e.g. 1 in 50 chance*	4. Possible *e.g. 1 in 10 chance*	5. Likely *e.g. >1 in 3 chance*
1. Negligible *small bruise, negligible*	1	2	3	4	5
2. Slight *first aid injury*	2	4	6	8	10
3. Moderate *lost time injury (over 3 days)*	3	6	9	12	15
4. Severe *major injury or illness (over 7 days)*	4	8	12	16	20
5. Catastrophic *death, permanent disability*	5	10	15	20	25
	1-3	4-7	8-14	15-19	20-25
RESIDUAL RISK RATING (RR)	ACCEPTABLE LOW	ACCEPTABLE MODERATE	ACCEPTABLE (Constant Review)	ADDITIONAL CONTROL MEASURESREQUIRED	STOP

Risk Assessment No: WF001	**Task:** Abrasive Wheels	
Prepared By: Derick Bibby	**Date:** 15.01.2025	**RA Review Date:** Annually
	Reviewed By: Lee Hardy	**Date:** 16.01.2025

PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers

Activity	Hazards	S	L	R	Control Measures	L	S	R
Using abrasive wheels in handheld / portable grinding equipment	Disc shatters, particles flying of	3	4	12	• Visual inspection of power supply prior to use • Electrical items to be PAT tested and in date. • All safety decals to be legible and in place. • Manufacturers guidance and instructions for use to be followed. • Equipment to be used in safe area.	3	2	6
Using abrasive wheels in handheld / portable grinding equipment	Noise	3	4	12	• Identify correct disc for material. • Use equipment in dedicated workshop areas. • Comply with mandatory hearing signs. • Wear hearing protection correctly. • Ensure the wheel runs true - ring test and dressing. • All trained in hearing protection use.	3	2	6

Using abrasive wheels in handheld / portable grinding equipment	Contact with operator	3	4	12	• Loose clothing to be removed, ties etc. • Long hair to be tied back / covered by PPE. • Gloves to be worn. • Work pieces to be held in vice. • Workshop areas to be segregated - hazard warning signs legible and visible. • Site rules to be observed - no horseplay. • Operator to be trained and competent to use equipment. • Equipment should be inspected for wear and serviceability.	3	2	6
Changing Abrasive Wheels	Incorrect Fitting of wheels	3	4	12	• Operators to be able to identify unserviceable / damaged discs / • wheels. • Carry out ring tests on vitrified wheels. • Understand fitting and removal techniques. • Diagnose common faults. • Understand reporting procedures for repairs and servicing. • Practical training in the use, storage. Handling, and inspection of wheels. A list of approved authorised operators assigned.	3	2	6

Risk Assessment No: WF002	**Task:** Compressed Gas Cylinders	
Prepared By: Derick Bibby	**Date:** 15.01.2025	**RA Review Date:** Annually
	Reviewed By: Lee Hardy	**Date:** 16.01.2025

PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers

Activity	Hazards	S	L	R	Control Measures	L	S	R
Handling, Storage & use of compressed gas cylinders	Impact from the blast of a cylinder explosion or a rapid release of gas Impact from parts of cylinders that fail. Contact with released gasses. Fire resulting from the escape of flammable gasses.	4	4	16	• Only approved cylinders designed to meet the standards of the Pressure Equipment Regulations 1999 are to be used. • Cylinders only to be used by competent persons trained in the safe use, handling and storage of pressurised cylinders. • Inspections of cylinders in accordance with an examination scheme. Daily pressure checks. • Movement of cylinders in accordance with an approved safe system of work either by trolley or lifting appliance.	4	2	8
Handling, Storage & use of compressed gas cylinders	Impact from falling cylinders. Manual handling injuries or muscular/skeletal	4	4	16	• Cylinders to remain vertical and secured in an approved cage or trolley at all times. • Valve protector caps to be fitted at all times when not in use or when cylinder is being transported. • All mechanical lifting of cylinders to be by competent persons in accordance with an approved lifting plan. No lifting of cylinders by	4	2	8

	disorders				forklift unless secured in a cage designed for that purpose. • Cylinders are to be removed to an external storage cage overnight on a daily basis.			

Risk Assessment No: WF003		**Task:** Electrical Welding						
Prepared By: Derick Bibby		**Date:** 15.01.2025		**RA Review Date:** Annually				
		Reviewed By: Lee Hardy		**Date:** 16.01.2025				
PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers								
Activity	**Hazards**	**S**	**L**	**R**	**Control Measures**	**L**	**S**	**R**
Welding or fabrication of components. Repair of fixed metal components	Inhalation of welding fumes, welding gases, both toxic & or asphyxiating from poor ventilation Radiated burns from ultra-violet light, infrared red light or heat Electric shock (**see also WF004 - Electricity**) Fire & Explosion (**see also WF005 - Hot works**)	4	4	16	• Welding operations should be conducted within the designated Hot Working / Fabrication areas. • Local Exhaust Ventilation (LEV) should be used during welding operations. • LEV Extraction ducts are to be positioned as close as possible to the work piece prior to / during welding. • For long welds, the duct may need to be repositioned to ensure efficient extraction is maintained. • LEV equipment should be inspected prior to use by the user - damage, poor extraction, clogged filters etc. are to be reported. • An annual inspection & performance test of all LEV equipment is to be completed. • Welding conducted outside is to be carried out in well-ventilated areas with care being taken not to expose others to fumes or ultraviolet light.	4	2	8

Welding or fabrication of components. Repair of fixed metal components	Inhalation of welding fumes, welding gases, both toxic & or asphyxiating from poor ventilation Radiated burns from ultra-violet light, infrared red light or heat Electric shock (**see also WF004 - Electricity**) Fire & Explosion (**see also WF005 - Hot works**)	4	4	16	• Screens or curtains should be manufactured to BS EN 1598 - these will positively filter UV glare and the other harmful blue/white radiation. • Mobile screens should be used for welding operations undertaken outside designated areas. • Access to welding areas should be limited. • Signage displayed to warn others when welding is undertaken. • Correct PPE must be worn. • Clothing. Operators should wear heavyduty cotton overalls manufactured to BS EN 470-1 The clothing must cover all parts of the body, arms, neck and chest that could otherwise be exposed to direct arc radiation. • Eye Protection. Eye protection is to be provided using full face welding helmet fitted with a suitable filter glass. • Lenses are to be tight fitting to avoid reflection into the helmet.	4	2	8
Welding or fabrication of components. Repair of fixed metal components	Inhalation of welding fumes, welding gases, both toxic & or asphyxiating from poor ventilation Radiated burns from ultra-violet	4	4	16	• BS EN 175 (requirements for basic shielding types) should be used • BS EN 169 specifies a range of permanent filter shades of gradually • increasing optical density which limit exposure to radiation emitted by a different process at different currents. • BS EN 379 defines requirements for the photosensitive variable density lenses that are now available. The overriding benefit of such reactive lenses is the welder's ability to see and position the electrode correctly before striking the arc. • Hand Protection: Gloves should be worn at all times as hands are usually the closest part of the body to the arc and the work piece.	4	2	8

	light, infrared red light or heat Electric shock (**see also WF004 - Electricity**) Fire & Explosion (**see also WF005 - Hot works**)				It is therefore important that welder's gloves provide thermal insulation as well as blocking out UV and visible light frequencies.			
Welding or fabrication of components. Repair of fixed metal components	Inhalation of welding fumes, welding gases, both toxic & or asphyxiating from poor ventilation Radiated burns from ultra-violet light, infrared red light or heat Electric shock (**see also WF004 - Electricity**) Fire & Explosion (**see also WF005 - Hot works**)	4	4	16	• The gloves should be designed to cover hand and wrist and overlap the sleeves. • Foot Protection: Footwear must give protection against the required level of impact & resist penetration by spatter & sharp objects. • High top boots with instep & toe protection are to be worn. • Rubber soles provide added protection from electrical shock. • Regular checking by line management undertaken to ensure compliance. • Installation of welding equipment should be carried out by suitably • qualified staff. • Equipment must be suitable for operation and be connected / installed in accordance with the manufacturer's recommendations. • The equipment should conform to BS 638 Part 10.	4	2	8

Welding or fabrication of components. Repair of fixed metal components	Inhalation of welding fumes, welding gases, both toxic & or asphyxiating from poor ventilation Radiated burns from ultra-violet light, infrared red light or heat Electric shock (**see also WF004 - Electricity**) Fire & Explosion (**see also WF005 - Hot works**)	4	4	16	• MMA welding DC is safer than AC welding. However, if AC is used the OCV or no-load voltage should be limited, where possible, by a voltage reduction device. • Safety critical devices must be checked periodically, and findings record. • Spraying from all directions - an RCD must be fitted to the unit. • Safety critical devices must be checked, and findings recorded. • The operator is responsible for checking the equipment (cable, • electrode holder and coupling devices) daily for damage and reporting defects. • External connections should be clean and tight and checked each time a reconnection is made. • Welding return clamps should be connected directly to the work piece, as close as possible to the point of welding or to the work bench on which the work piece is placed.	4	2	8
Welding or fabrication of components. Repair of fixed metal components	Inhalation of welding fumes, welding gases, both toxic & or asphyxiating from poor ventilation Radiated burns from ultra-violet	4	4	16	• In MMA welding, the electrode holder should be isolated when changing the electrode. • Operators should not wear jewellery (especially rings) or metallic watch straps. • Electrical supplies / feeds are to be routed to minimise the risk of trips and where appropriate installed in proprietary channels or conduits. • For welding operations in temporary locations, barriers & duck boards should be used to reduce risk of trips. • Equipment is to be installed at a practicable height for all	4	2	8

	light, infrared red light or heat Electric shock (**see also WF004 - Electricity**) Fire & Explosion (**see also WF005 - Hot works**)				operational staff. All staff are to wear the correct footwear within workshop.			
Welding or fabrication of components. Repair of fixed metal components	Inhalation of welding fumes, welding gases, both toxic & or asphyxiating from poor ventilation Radiated burns from ultra-violet light, infrared red light or heat Electric shock (**see also WF004 - Electricity**) Fire & Explosion (**see also WF005 - Hot works**)	4	4	16	• In all cases prior to commencing welding activities combustible materials should be moved away from the welding area. • Additional protection from flame, heat, sparks, or hot slag must be provided using metal sheeting, mineral fibre boards or fire-retardant blankets where identified. • Welding operations required to be carried out on tanks, & drums must be separately Risk Assessed and completed under a permit to work.	4	2	8

Risk Assessment No: WF004	**Task:** Electricity	
Prepared By: Derick Bibby	**Date:** 15.01.2025	**RA Review Date:** Annually
	Reviewed By: Lee Hardy	**Date:** 16.01.2025

PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers

Activity	Hazards	S	L	R	Control Measures	L	S	R
All work activities involving the use of electricity	Contact with live electricity resulting in minor injury, major injury, or fatality due to electrocution, burns or other injuries. Fire or explosion resulting in loss of life, damage to property plant or equipment. Disruption to neighbours and other stakeholders through loss of power or fire	4	3	12	• All electrical services and equipment both fixed and portable are to be maintained and tested for safety and faults at regular intervals. • Any work on electrical installations or equipment is to conform to the Electricity at Work Regulations and the IEE 17th Edition and is only to be carried out by competent electricians. • Supply is to be isolated and locked off before any work is carried out on installations or equipment. • Portable electrical items are to be inspected daily prior to use by the user. Any items found to be damaged are to be withdrawn from service or quarantined until repaired or replaced. • Portable electrical items are to be labelled showing the date of the last test and next test due.	4	2	8

All work activities involving the use of electricity	Contact with live electricity resulting in minor injury, major injury, or fatality due to electrocution, burns or other injuries. Fire or explosion resulting in loss of life, damage to property plant or equipment. Disruption to neighbours and other stakeholders through loss of power or fire	4	3	12	• Where practicable, transformers are to be used to reduce the voltage of portable power tools to the minimum required e.g., 110V • Residual Current Devices (RCDs) are to be installed on electrical outlets where practicable to protect users from electrical shock. • Adequate warning signage is to be present in all area	4	2	8

Risk Assessment No: WF005		**Task:** Hot Works	
Prepared By: Derick Bibby		**Date:** 15.01.2025	**RA Review Date:** Annually
		Reviewed By: Lee Hardy	**Date:** 16.01.2025

PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers

Activity	Hazards	S	L	R	Control Measures	L	S	R
All activities involving hot works (burning or welding)	Fire or explosion resulting in major injuries, burns or fatality to personnel and/or damage to plant/vehicles and buildings. Eye damage Burnings from splatter	4	4	16	• Avoid hot works where possible by using cold cutting methods. • Remove all combustible materials from the work area prior to hot works. • All gas cylinders to be fitted with flash back arrestors and used in accordance with **WF002**. • All users of welding/burning equipment are to be competent. • Inspect all hoses, cylinders, tanks, valves, tools and burning equipment daily prior to use. • Appropriate firefighting equipment to be close at hand and serviceable. • Protect at risk items with fire retardant material where possible or necessary. • Mandatory flame-retardant PPE must be worn. • Eye protection conforming to EN166:2001, EN169:2002, EN170:2002 • Welding caps to be worn during all hot works. • Full face screens to be worn if task requirements e.g., if hand tools are being used during hot works. • Leather Welders Gauntlets must be worn at all times. • Fire watch to be maintained for at least 1 hour after hot works cease.	4	2	8

Risk Assessment No: WF006	**Task:** Lifting Operations	
Prepared By: Derick Bibby	**Date:** 15.01.2025	**RA Review Date:** Annually
	Reviewed By: Lee Hardy	**Date:** 16.01.2025

PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers, Hard Hat

Activity	Hazards	S	L	R	Control Measures	L	S	R
Mechanical lifting using forklifts or excavators	Failure of lifting appliance Failure of lifting accessories Incorrect slinging techniques leading to loads or parts of loads dropping or slipping whilst being lifted. 3 rd party intrusion into dangerous areas during lifting Contact with overhead cables. Contact with	4	4	16	• All lifting appliances are to be serviceable with no defects and fit for task. • All lifting appliances are to be load tested as per statutory requirements and a valid thorough examination and load test certificate held in the plant office. • Daily user checks and inspections are to be carried out on all machines and lifting accessories prior to lifting. If defects are found the machine or accessory is not to be used and must be quarantined out of service until repaired. All lifting accessories are to have a valid thorough examination certificate held in the plant office. • All lifting operations are to be carried out by competent operatives. • All lifting operations are to be planned and supervised by a competent person except for generic or repetitive small-scale lifts. • Operators are to ensure that ASLIs or RCIs fitted to lifting appliances are working and switched on at all times during lifting operations to ensure that the Safe Working Load of the lifting appliance is not exceeded. • Operators are to ensure that the lifting appliance is operated at all times in accordance with the manufacturer's handbook and within	4	2	8

	structures. Personnel being struck or crushed by suspended loads PPE				the recommended safe working limits and duties chart displayed in the cab. • All suspended loads are to be controlled by using tag lines where practicable. • Exclusion zones which prohibit entry by unauthorised personnel are to be imposed where practicable, especially when lifting near or over pedestrian walkways. • PPE – Safety boots, Hi-Vis, safety helmet, gloves to be worn by all during lifting operations.			

Risk Assessment No: WF007		**Task:** Dust	
Prepared By: Derick Bibby		**Date:** 15.01.2025	**RA Review Date:** Annually
		Reviewed By: Lee Hardy	**Date:** 16.01.2025

PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers

Activity	Hazards	S	L	R	Control Measures	L	S	R
All activities involving dust being created by plant and vehicle movements in and around the depot and workshop. Air- borne contaminates dust. Restricted visibility	Breathing difficulties resulting from dust inhalation. Long term exposure can cause short/long term respiratory conditions. Physical harm to yard and workshop staff being hit by moving vehicles/plant on windy days. Adverse weather restricting plant/vehicle operator and pedestrian visibility.	4	4	16	• All vehicles to use traffic one-way system with only essential vehicles entering the workshop to reduce traffic movements. • 5mph speed limit to be enforced around depot and workshop with clear signage. • Filter Dust Monitors to be installed and monitored in depot and workshop. • LEV System to be restored to an operational condition and serviced regularly. • Water to be sprinkled at regular intervals by hose pipe in workshop. Road Sweeper to reduce any build-up of spoil/dirt on depot/workshop floor. • Stores to be stocked with Dust Mask and made available to all staff on request. (All masks provided must be CE marked and carry the standard EN:149 2001) • PPE – All persons entering the depot/workshop must wear safety boots and high visibility vest to increase their visibility at all times	4	2	8

Risk Assessment No: WF008	Task: Manual Handling (TILE Assessment)	
Prepared By: Derick Bibby	**Date:** 15.01.2025	**RA Review Date:** Annually
	Reviewed By: Lee Hardy	**Date:** 16.01.2025
PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers, Gloves		

Operative to use TILE to assess risk	Control Measures – From HSE Guidance
<u>Task</u> Does the task require: • Twisting of the trunk? • Stooping or poor posture? • Reaching upwards? • Holding or manoeuvring loads away from the trunk of the body? • Excessive carrying of loads? • Excessive lifting or lowering? • Excessive pushing or pulling? • A process forcing a rate of work? • Prolonged physical effort? • Insufficient rest and recovery?	To help prevent manual handling injuries in the workplace, you should avoid such tasks as far as possible. However, where it is not possible to avoid handling a load, employers must look at the risks of that task and put sensible health and safety measures in place to prevent and avoid injury. **For any lifting activity** Always take into account**:** • individual capability • the nature of the load • environmental conditions • training • work organisation **If you need to lift something manually** • Reduce the amount of twisting, stooping and reaching • Avoid lifting from floor level or above shoulder height, especially heavy loads • Adjust storage areas to minimise the need to carry out such movements • Consider how you can minimise carrying distances • Assess the weight to be carried and whether the worker can move the load safely or needs any help – maybe the load can be broken down to smaller, lighter
<u>Individual</u> • Does the manual handling require a certain level of strength?	

- Does the activity require a person of a certain height?
- Does the individual have a health problem?
- Is the individual pregnant?
- Have they been trained in safe manual handling and lifting technique?
- Do they know how to handle the load properly?

Load

- Is the load heavy?
- Is the load unstable?
- Is the load hazardous?
- Does it have sharp edges?
- Is there a risk of spillage of the load?
- Is it bulky or difficult to grasp?
- Is the load very hot or cold?
- Will the load reduce visibility?

Environment

- Is the ground stable?
- Is the floor slippery?
- Is the ground uneven?
- Are there variations in floor level?
- Are there extremes of temperature?
- Is the environment humid?

components

If you need to use lifting equipment

- Consider whether you can use a lifting aid, such as a forklift truck, electric or hand-powered hoist, or a conveyor
- Think about storage as part of the delivery process – maybe heavy items could be delivered directly, or closer, to the storage area
- Reduce carrying distances where possible

Good handling technique for lifting

There are some simple things to do before and during the lift/carry:

- Remove obstructions from the route.
- For a long lift, plan to rest the load midway on a table or bench to change grip.
- Keep the load close to the waist. The load should be kept close to the body for as long as possible while lifting.
- Keep the heaviest side of the load next to the body.
- Adopt a stable position and make sure your feet are apart, with one leg slightly forward to maintain balance

Think before lifting/handling. Plan the lift. Can handling aids be used? Where is the load going to be placed? Will help be needed with the load? Remove obstructions such as discarded wrapping materials. For a long lift, consider resting the load midway on a table or bench to change grip.

Adopt a stable position. The feet should be apart with one leg slightly forward to maintain balance (alongside the load, if it is on the ground). Be prepared to move your feet during the lift to maintain your stability. Avoid tight clothing or unsuitable footwear, which may make this difficult.

• Is there enough ventilation? • Are there strong winds? • Is the lighting poor?	**Get a good hold.** Where possible, the load should be hugged as close as possible to the body. This may be better than gripping it tightly with hands only. **Start in a good posture.** At the start of the lift, slight bending of the back, hips and knees is preferable to fully flexing the back (stooping) or fully flexing the hips and knees (squatting). **Don't flex the back any further while lifting.** This can happen if the legs begin to straighten before starting to raise the load. **Keep the load close to the waist.** Keep the load close to the body for as long as possible while lifting. Keep the heaviest side of the load next to the body. If a close approach to the load is not possible, try to slide it towards the body before attempting to lift it. **Avoid twisting the back or leaning sideways, especially while the back is bent**. Shoulders should be kept level and facing in the same direction as the hips. Turning by moving the feet is better than twisting and lifting at the same time. **Keep the head up when handling.** Look ahead, not down at the load once it has been held securely. **Move smoothly.** The load should not be jerked or snatched as this can make it harder to keep control and can increase the risk of injury. **Don't lift or handle more than can be easily managed.** There is a difference between what people can lift and what they can safely lift. If in doubt, seek advice or get help. **Put down, then adjust.** If precise positioning of the load is necessary, put it down first, then slide it into the desired position.

Risk Assessment No: WF009		**Task:** Power Tools	
Prepared By: Derick Bibby		**Date:** 15.01.2025	**RA Review Date:** Annually
		Reviewed By: Lee Hardy	**Date:** 16.01.2025
PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers			

Activity	Hazards	S	L	R	Control Measures	L	S	R
Use of mechanical and electrical power tools.	Cuts Abrasions Eye Injuries Electrocution Burns Muskoskeletal Injuries Fire/Explosion Crush injuries	4	2	8	• All power tools are to be tested, certified and maintained as per statutory requirements (PUWER 98) and manufacturers recommendations/instructions or guidelines. • All tools are to be inspected prior to use by users and withdrawn/quarantined from service until repaired or replaced if any defects are present. • Pat Tested every 3 months. • PPE appropriate to the tool or operation is to be worn at all times. • Abrasive wheels are to be inspected or changed by competent persons only. All guards and intrinsic safety devices on tools are to be fitted, correctly adjusted and serviceable during use.	4	1	4

Risk Assessment No: WF010		**Task:** Use of Vehicle Pit	
Prepared By: Derick Bibby		**Date:** 15.01.2025	**RA Review Date:** Annually
		Reviewed By: Lee Hardy	**Date:** 16.01.2025
PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers			

Activity	Hazards	S	L	R	Control Measures	L	S	R
Use of vehicle pit and mechanical props during the maintenance and repair of vehicles and plant	Falls of vehicles into the pit. Falls of people into the pit. Collapse of vehicle jacks. Asphyxiation from vehicle exhaust fumes Electrocution Slips, trips and falls. Fire resulting from hot works. Eye injuries Use of compressed air/lubrication lines. Contamination from fuel/oil spillages Dermatitis from contact with fuels, oils and lubricants Work at height	4	4	16	• Appropriate warning signage is displayed in the workshop. • Vehicles to be switched off, no idling where possible. • When entering/exiting the vehicle pit, ensure that the handrail is erected, secured and 3 points of contact is maintained. • **Chain erected around the pit and bay door when not in use.** • Do not cross over or jump over open pit	4	2	8

Risk Assessment No: WF011	**Task:** Vehicle and Plant Movements	
Prepared By: Derick Bibby	**Date:** 15.01.2025	**RA Review Date:** Annually
	Reviewed By: Lee Hardy	**Date:** 16.01.2025

PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers

Activity	Hazards	S	L	R	Control Measures	L	S	R
Vehicle and plant movements in and around yard, workshop and highways.	Personnel being struck, crushed, or run over by moving vehicles or plant resulting in major injury or death. Damage to vehicles resulting from collisions	4	4	16	• One-way traffic system to be enforced and observed by all drivers. • Site speed limit of 5 mph to be enforced. • Traffic signage to be obeyed by all drivers. • Eliminate the need for reversing wherever possible. All other reversing to be supervised by banksmen wherever possible. • Segregate vehicles and pedestrians by using robust physical barriers. • Provide adequate signage at entry/exit points. • Ensure good lighting at all times • Provide safe walking routes and crossing points for pedestrians to be used when possible. • Amber flashing beacons where fitted are to be on at all times when vehicles are moving around the yard or workshop. • Hi vis waistcoats or jackets to be worn by all personnel outside of the offices. • Safety footwear to be worn by all outside of the offices. • Provide designated parking areas for private vehicles	4	2	8

Vehicle and plant movements in and around yard, workshop and highways.	Personnel being struck, crushed, or run over by moving vehicles or plant resulting in major injury or death. Not wearing seatbelts in vehicles – legal requirement - reduce injury from vehicle impact. Adverse weather and speeding – risk of loss of control, impact with other vehicles and property.	4	4	16	• One-way traffic system to be enforced and observed by all drivers. • Site speed limit of 5 mph to be enforced. • Traffic signage to be obeyed by all drivers. • Eliminate the need for reversing wherever possible. All other reversing to be supervised by banksmen wherever possible. • Segregate vehicles and pedestrians by using robust physical barriers. • Provide adequate signage at entry/exit points. • Ensure good lighting at all times • Provide safe walking routes and crossing points for pedestrians to be used when possible. • Amber flashing beacons where fitted are to be on at all times when vehicles are moving around the yard or workshop. • Hi vis waistcoats or jackets to be worn by all personnel outside of the offices. • Safety footwear to be worn by all outside of the offices. • Provide designated parking areas for private vehicles • Ensure building exits do not open onto traffic routes. Provide signage to warn pedestrians of hazards of passing traffic • Seatbelts MUST be worn when driving all company vehicles in Lynch depots, customer sites and public highways. • Vehicle ergonomics are considered when procuring or hiring vehicles for staff. Vehicles have easily adjustable seats and head restraints etc, they are checked and maintained regularly to ensure they remain fit for purpose.	4	2	8

Vehicle and plant movements in and around yard, workshop and highways.	Personnel being struck, crushed, or run over by moving vehicles or plant resulting in major injury or death. Not wearing seatbelts in vehicles – legal requirement - reduce injury from vehicle impact. Adverse weather and speeding – risk of loss of control, impact with other vehicles and property.	4	4	16	• Ensure building exits do not open onto traffic routes. Provide signage to warn pedestrians of hazards of passing traffic • Seatbelts MUST be worn when driving all company vehicles in FOX depots, customer sites and public highways. • Vehicle ergonomics are considered when procuring or hiring vehicles for staff. Vehicles have easily adjustable seats and head restraints etc, they are checked and maintained regularly to ensure they remain fit for purpose. • Drivers have received information on the importance of maintaining good driving positions so as to avoid postural problems and back pain etc. • Journey scheduling allows sufficient time for drivers to take account of reasonably foreseeable weather and traffic conditions and to comply with speed limits at all times. Schedules seek to reduce night driving where possible. • Driving in adverse weather conditions, e.g., fog, very high winds, ice, snow, flooding etc is actively discouraged. Schedules and routes are rearranged where necessary. Employees are never pressurised to complete journeys where weather conditions are exceptionally difficult.	4	2	8

Vehicle and plant movements in and around yard, workshop and highways.	In-cab technology and driver distraction, loss of concentration, impact with property, pedestrians, collision with other vehicles. Playing loud music / wearing of headphones loss of concentration, impact with property, pedestrians, collision with other vehicles. Reading and writing loss of concentration, impact with property, pedestrians, collision with other vehicles. Reaching / leaning over (away from normal driving position)	4	4	16	• Only when the vehicle is stationary, out of gear and the handbrake is applied the operation of a Satnav for the purpose of setting or changing a destination or route setting is, of course, acceptable. • For hands free phones, a driver may choose to receive a call subject to ensuring that in doing so they are not distracted from focussing on driving. In the event of an accident the apportionment of blame, the police are likely to take into account if a driver was using a hands-free phone. • Playing of music is acceptable I the sound is at a level which does not prevent the driver from hearing external sounds such as emergency services vehicle sirens and horn warnings from other road users.	4	2	8

Vehicle and plant movements in and around yard, workshop and highways.	Operating/looking at non-essential vehicle controls, e.g. dash cameras, Excessively concentrating on the use of 360-degree camera system	4	4	16	• Drivers can read/write only when the vehicle is stationary with the engine switched off. • Drivers MUST not lean or over stretch away from their driving position when the vehicle is moving. • Only when the vehicle is stationary should the operator/driver look at/access non-essential controls. • When the vehicle is stationary or manoeuvring at a slow speed(<5mph) and the cameras have been fitted as an additional safety aide for such manoeuvring	4	2	8

Risk Assessment No: WF012		**Task:** Refuelling of Vehicles and Plant	
Prepared By: Derick Bibby		**Date:** 15.01.2025	**RA Review Date:** Annually
		Reviewed By: Lee Hardy	**Date:** 16.01.2025

PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers

Activity	Hazards	S	L	R	Control Measures	L	S	R
Refuelling of vehicles and plant using static and mobile pumps .	Fire and/or explosion Fuel splashes to hands, eyes, or skin Contact Dermatitis Fuel Spillage Slips, trips and falls. Vehicle collisions Work at height	4	4	16	• Inspect fuel station prior to use. • Remove all potential ignitions sources in the vicinity of the refuelling points. • Use Diesel as a fuel source – lower volatility than petrol. • Ensure that fuel station is kept clear from obstructions. • Ensure spill kit is adjacent to fuel station prior to refuelling and is well stocked. • Clear up any spillage immediately and maintain slip free surfaces. • Ensure there is clear access to a Foam or Dry Powder fire extinguisher to aid safe evacuation in event of fire. • Ensure clear access to the Fireman's isolation switches is maintained at all times. • Ensure that PPE is worn – gloves and eye protection.	4	2	8

Refuelling of vehicles and plant using static and mobile pumps .	Fire and/or explosion Fuel splashes to hands, eyes, or skin Contact Dermatitis Fuel Spillage Slips, trips and falls. Vehicle collisions Work at height	3	3	9	• Wash off any splashes of fuel immediately with hot soapy water. • Enforce one-way traffic circuit and supervise reversing to reduce collision risk. • Enforce a strict no smoking policy within 25 metres of fuel pumps. • All users are to ensure that the Safe System of Work for the use of fuel pumps is followed. • All work at height is to be in strict compliance with **WF013**	3	2	6

Risk Assessment No: WF013		**Task:** Work at Height	
Prepared By: Derick Bibby		**Date:** 15.01.2025	**RA Review Date:** Annually
		Reviewed By: Lee Hardy	**Date:** 16.01.2025
PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers			

Activity	Hazards	S	L	R	Control Measures	L	S	R
Work at Height	Falls of people from height from lorry bed, plant machines or when working from mobile steps, towers, or ladders. Falls of objects or materials from height as above	4	4	16	• Competent operatives are used. • Some machines/vehicles are fitted with limited integral fall protection measures. • When fuelling plant factory fitted access steps/platforms must be used. (maintain 3 x points of contact at all times) and remain within boxing ring / guardrails. • Works at height must be carried out on plant must be carried out within guard rails where possible. • Mobile Steps are to be fitted with guardrails. • Avoid work at height where possible. • Prevent falls by using suitable working platforms with integral edge protection and toe boards which conform to the Work at Height Regulations • All personnel to be competent in work at height procedures • Provide access scaffolding, mobile towers or podium steps before using ladders or step ladders. • Work off ladders only in areas where site conditions cannot be altered, and other platforms cannot be used because space is restricted.	4	2	8

Work at Height	Falls of people from height from lorry bed, plant machines or when working from mobile steps, towers or ladders. Falls of objects or materials from height as above	4	4	16	• Any work off ladders to be of short duration (max 30 mins in 1 position) and light in nature (max 10kgs) • No working from the top 3 steps • Maintain 3 points of contact at all times when on ladders. • All ladders to be Class 1 and conform to BS EN 131 • Inspect ladders before use. • Surfaces to be firm, level, dry, clear of obstructions. • Ladder locking devices to be engaged at all times. • No side on working or loading. • No over-reaching in any direction	4	2	8

Item	Hazard description	How exposed to hazard	Risk control measures	
1	**Human Factors** May occur through inexperience, user error, complacency, lack of supervision. Poses a risk of a fall resulting in serious Injury	Fall from height due to inexperience in this work task. Performing an ad hoc task without due diligence and planning.	• Appropriate training and instruction for those required to Work at height. This includes Competency Based Training such as: -IPAF *Card for Mobile Elevated Work Platforms* *-CSCS for working in a construction site* *-PASMA for scaffolding work* *-Inhouse Ladder training by suitably competent staff* • Work to be performed by competent and mentally alert staff • Supervision of work by responsible line manager • Established SOPs based upon Code of Practice used to perform the work • Review and discuss with a colleague how the work will be performed prior to commencing • Availability of appropriate PPE • Seek H&S engagement • Training records showing competency and currency	

2	**Falling from the working height**	Staff and students operating at height (could be on structures, equipment, scaffolding, EWP, ladders)	• Select appropriate equipment to enable access (ladder, scaffold, MEWP). • Training and instruction provided to staff required to work at heights • Work conducted at height to be in accordance with Unit's SOP for task • Supervision if required • PPE available • If using a fall prevention device (i.e. working platforms, edge protection, scaffolding) consider if additional control with a fall arrest system to limit and control the free fall distance is required. If so, training and supervision is required to ensure system is used correctly.	
3	**Ground or surface uneven and / or slippery**	Equipment becomes unstable due to nature of ground or surface and risk of a fall increases	• Inspection of work area prior to work to ensure surface is suitable and solid base for MEWP or ladder can be achieved • Set up on firm, stable and level ground • Established SOPs based upon Code of Practice used to perform the work	
4	**Inappropriate or faulty equipment / ladder for task**	Using an inappropriate or poor conditioned scaffold, EWP, ladder or safety system may increase likelihood of incident. e.g.: equipment may collapse causing injury to worker or others	• Consider task and select appropriate aid using hierarchy of control (eg: Does the work need to be done at height? Would scaffolding or an EWP assist? Is the ladder available appropriate for the task to be performed?) • Variety of ladders available to enable correct selection for task [Note: extension or single ladders should only be used as a means to access /exit a work area or for light work of short duration that can be carried out safely from the ladder]. • Regular inspection and maintenance of work at heights equipment in accordance with the manufacturer's recommendations • Pre-use equipment checks performed by operator prior to use. • Equipment certified and maintained	
5	**Working alone when at height**	A worker maybe alone while working at height that exposes them to additional risk	• Review / Assess with Supervisor how the work will be performed prior to commencing • Work to be in accordance with Unit's SOP for working at height • Ensure two workers available for the job • Second person provides supervision and look-out role • Work at heights training must be completed prior to undertaking work at height • Work at Heights Awareness training module available for staff	

6	**Reaching / overstretching on ladder**	Fall from over balancing due to extending centre of gravity to unsafe position	• Training and instruction for those required to Work at height in use of ladders, MEWP, scaffolding etc. • Appropriate equipment available for task (ladders, scaffold, MEWP). • Work to be performed by competent and mentally alert staff. • Supervision of work by responsible line manager • Established SOPs based upon Code of Practice used to perform the work *e.g. methods to secure ladders - especially for work on uneven ground* • Inspection of work site to ensure access equipment can be set correctly • Relocate ladder during course of work if required	
7	**Working near overhead power lines**	Worker or equipment coming into contact with overhead powerlines / electrical services therefore potential for electric shock	• Training and instruction in use of ladders, MEWP, scaffolding etc. • Observe / inspect work site prior to commencement to ensure clear unimpeded access and separation from electrical services • Worker to perform quick risk assessment of site hazards Work to be performed by competent and mentally alert staff. • On site supervision of work by responsible line manager • Established SOPs based upon Code of Practice including "*Look up & Live"* • On site supervision of work by responsible line manager • Use a Spotter in place to provide warning of proximity to electrical services	
8	**Carrying items up and down ladders**	Fall from loss of balance while carrying items up or down ladders	• Established SOPs based upon Code of Practice used to perform the work • Training and instruction for those required to Work at height • Supervision of work by responsible line manager • Use of tool belt / backpack / carry bag / pulley system to carry tools / equipment to enable maintaining three points of contact when accessing or exiting the work site • Lifting system to lift tools or equipment into place	
9	**Dropping objects or tools**	Person below is struck by a dropped object	• Establish 'No-Go' zone for foot traffic around ladder, MEWP etc by use of cones, bunting, safety signs. • Use of tool belt to ensure tools are retained securely • Use safety nets, kick boards or other means to prevent tools etc dropping from height • Instruction, training and supervision for those required to work at height	

			• Appropriate PPE (hard hats) when working under /near others working at height	
11	**Work surroundings**	Other activities occurring at or near the worksite, exposing the worker to increased risk of fall.	• Allow safe access around work site by use of fencing / barricading / lighting • Traffic Management and control • Use a Banksman if required • Signage	
12	**Manual handling**	Carrying heavy loads, repeated lifting, and / or poor technique can lead to muscular-skeletal injury	• Training and awareness to be provided to staff • Online Module – Manual Handling Safety available for staff • Work to be in accordance with Unit's SOP for task • Appropriate equipment available to minimise injury from moving loads • Work with buddy for lifting and carrying heavy loads	
13	**Working Outdoors** Tasks performed outdoors will be subject to weather conditions (wind, cold, heat)	Local weather could make a task more hazardous (eg: sun exposure; winds affecting stability of work platform)	• Weather conditions to be considered prior to work. Review and discuss with supervisor if weather conditions are suitable for work to be undertaken	

Risk Assessment No: WF014	**Task:** Noise	
Prepared By: Derick Bibby	**Date:** 15.01.2025	**RA Review Date:** Annually
	Reviewed By: Lee Hardy	**Date:** 16.01.2025

PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers

Activity	Hazards	S	L	R	Control Measures	L	S	R
Noise generated by the servicing and repair of plant and vehicles by fitters. Full range of activities usually associated with servicing and repair carried out in the workshop environment.	Hearing impairment, Hypertension, Ischemic heart disease, Annoyance Sleep disturbance. Inability to hear warning alerts of other hazards from others. Feeling of isolation.	4	4	16	• Depot Manager and workshop manager/supervisor must ensure that the risk from noise exposure is either eliminated or reduced to as low level as reasonably practicable. • It is not permitted to expose any person to noise levels above the **exposure limit value**. • Where this noise is exceeded, the activity must be stopped and immediately and action taken by the Workshop Manager and Compliance Manager to reduce exposure • Whenever a person's exposure to noise is likely to exceed the upper exposure action value, then the exposure must be reduced by the Workshop Manager and H&S Manager to as low level as is reasonably practicable using appropriate control measures, excluding the provision of personal hearing protectors.	4	3	12

Noise generated by the servicing and repair of plant and vehicles by fitters. Full range of activities usually associated with servicing and repair carried out in the workshop environment.	Hearing impairment, Hypertension, Ischemic heart disease, Annoyance Sleep disturbance. Inability to hear warning alerts of other hazards from others. Feeling of isolation.	4	4	16	**Ear Protection** • Depending on the noise exposure level, there may be a legal requirement to provided ear protection. The Depot and Workshop Manager are responsible for the provision of such ear protection as and when required. The following action is required with regard to ear protection. • Where the assessment shows noise exposure at or above a lower value [80Db daily or weekly exposure, or a peak sound pressure of 137dB], the person must be advised that there may be a risk of hearing damage, and that the wearing hearing protection **IS MANDATORY.** • Where the assessment shows noise exposure at or above an upper • exposure action value [85bB] daily or weekly exposure, or a peak sound pressure of 137dB], the person must be advised that there may be a risk of hearing damage, and that the wearing • hearing protection **IS MANDATORY**. • Depot and Workshop Managers are responsible for enforcing the use of hearing protection where it is mandatory. • Advice on the selection of suitable hearing protection can be obtained from the Health & Safety Services, PPE Provider or competent noise. • Assessor. Hearing protection must be suitable for the persons working environment and compatible with other protective equipment being worn by the person	4	3	12

Noise generated by the servicing and repair of plant and vehicles by fitters. Full range of activities usually associated with servicing and repair carried out in the workshop environment.	Hearing impairment, Hypertension, Ischemic heart disease, Annoyance Sleep disturbance. Inability to hear warning alerts of other hazards from others. Feeling of isolation.	4	4	16	**<u>Hearing Protection Zones.</u>** • If there is a area where a person is likely to be exposed to noise at or above the upper action level [85dB] daily or weekly exposure, or a peak sound pressure of 137dB], the area must be designated by the Workshop manager/supervisor as a **Hearing Protection Zone**. • The workshop manager must advise persons that a hearing protection zone is in operation and ensure that the area is demarcated and identified by the use of approved warning signs are in ample supply.	4	3	12
Noise generated by the servicing and repair of plant and vehicles by fitters. Full range of activities usually associated with servicing and repair carried out in the workshop environment.	Hearing impairment, Hypertension, Ischemic heart disease, Annoyance Sleep disturbance. Inability to hear warning alerts of other hazards from others. Feeling of isolation.	4	4	16	**<u>Maintenance and Use of Equipment.</u>** • Health and Safety Managers must ensure, so far as is practicable, that any noise-control equipment put in place is fully and properly used. • Such equipment must also be properly maintained. • Depot and Workshop Managers should ensure that all personnel are made aware of the purpose of such equipment and the importance of it being correctly used. • In the case of reusable hearing protectors, Workshop Managers must have arrangements for the inspection and repair/replacement of them and have provision for their proper storage and their cleaning as required. In the case where disposable ear protectors are used. • Depot and Workshop Managers must ensure that supplies of these	4	3	12

					are continuously available. • Workshop Managers should ensure that their staff are aware that they must report any damaged, defective, or lost protectors. • Workshop Managers must ensure, so far as is reasonably practicable that any employee who enters a hearing protection zone is wearing personal hearing protection.			
Noise generated by the servicing and repair of plant and vehicles by fitters. Full range of activities usually associated with servicing and repair carried out in the workshop environment.	Hearing impairment, Hypertension, Ischemic heart disease, Annoyance Sleep disturbance. Inability to hear warning alerts of other hazards from others. Feeling of isolation.	4	4	16	**<u>Provision of Information, Instruction and Training to Workshop and Yard Staff.</u>** Where an employee is exposed to noise at or above the lower exposure action Value, Health and Safety Managers must give information, instruction, and training on the following: • The likely noise exposure to individuals and the risk to hearing the noise creates • The measures that have been put in place to control noise exposure • Details of values and limits • Where and how to obtain hearing protection • How to report defects in hearing protectors and noise control equipment • The employee's duties under the Noise Regulations	4	3	12

					• What symptoms of hearing damage employees should look out for and how to report such symptoms. • Try to avoid early or late deliveries in built up areas – consider the environment. Ensure engine turned off			
Noise generated by the servicing and repair of plant and vehicles by fitters. Full range of activities usually associated with servicing and repair carried out in the workshop environment.	Hearing impairment, Hypertension, Ischemic heart disease, Annoyance Sleep disturbance. Inability to hear warning alerts of other hazards from others. Feeling of isolation.	4	4	16	**Employees Duties.** All employees have legal duties to comply with and use the measures the University provides under the Control of Noise at Work Regulations 2005. These duties include: • Using noise-control measures in accordance with instructions given • Wearing hearing protection in accordance with instructions when they are • Exposed at or above the upper exposure action value and at all times in areas marked as hearing protection zones. • Taking care of hearing protectors and noise-control equipment they need to use. • Reporting any defects found in the hearing protectors or other protective measures or any difficulties using them.	4	3	12

Noise generated by the servicing and repair of plant and vehicles by fitters. Full range of activities usually associated with servicing and repair carried out in the workshop environment.	Hearing impairment, Hypertension, Ischemic heart disease, Annoyance Sleep disturbance. Inability to hear warning alerts of other hazards from others. Feeling of isolation.	4	4	16	**Low-Noise Purchasing.** • Purchasing or hiring low-noise equipment and machinery is seen as an important measure in reducing noise in the workplace. • Depot and Workshop Managers who are authorising the purchase or hire of equipment must therefore, during the selection process prior to purchase or hire, give full consideration to the effects of noise emissions from the equipment or machinery. • To inform their decision, Depot and Workshop Managers should obtain information from the proposed supplier or manufacturer about the likely noise levels under the particular conditions in which the equipment will operate, as well as under standard test conditions. • Information regarding the reduction of noise through purchasing is available • on the HSE's "Buy Quiet" page.	4	3	12

Risk Assessment No: WF015		**Task:** Vibration	
Prepared By: Derick Bibby		**Date:** 15.01.2025	**RA Review Date:** Annually
		Reviewed By: Lee Hardy	**Date:** 16.01.2025
PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers			

Activity	Hazards	S	L	R	Control Measures	L	S	R
Handheld Tools Vibrations Hitachi Battery Operated Drill.	Hand-Arm Vibration Syndrome (HAVS) Vibration White Finger (VWF)	3	3	9	• Drills used in high-speed mode have a lower level of vibration, however under heavy use conditions may need to be monitored. Single Axis Vibration = 10.4m/s2. Time to reach EAV = 27 minutes. • Eliminate the risk by ensuring operative takes regular breaks from using the equipment and do not go over the recommended time of using the tool.	3	2	6

Handheld Tools Vibrations Metabo 110v Handheld grinder	Hand-Arm Vibration Syndrome (HAVS) Vibration White Finger (VWF)	3	2	6	• This tool is usually used infrequently and hence vibration levels are not too critical. Single Axis Vibration = 7.2 m/s2. Time to reach EAV = 3 hrs 50 mins. • Eliminate risk by ensuring regular PAT tests are done and only competent personnel should be allowed to operate equipment.	3	1	3
Handheld Tools Vibrations Hitachi battery operated grinder	Hand-Arm Vibration Syndrome (HAVS) Vibration White Finger (VWF)	3	2	6	• Vibration levels of this unit type are usually below 3.5M/s^2 and therefore do not normally represent a risk to the user. Time to reach Exposure Action Value (EAV) = Unlimited • Eliminate risk by ensuring regular PAT tests are done and only competent personnel should be allowed to operate equipment.	3	1	3

Risk Assessment No: WF016		**Task:** PPE	
Prepared By: Derick Bibby		**Date:** 15.01.2025	**RA Review Date:** Annually
		Reviewed By: Lee Hardy	**Date:** 16.01.2025

PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers

Activity	Hazards	S	L	R	Control Measures	L	S	R
Body Protection Foot Protection Head Protection	Contamination to personnel clothing and skin Impact to toes, and puncture wounds to sloes of the feet Impact to top of the Head	3	4	12	• Heavy duty poly cotton overalls with long sleeves, Flame resistance, clean and in good condition with vis bands • Heavy duty footwear with rubber soles and 200 Joule steel toe caps, strengthened insole conforming to EN345-1 • To be kept in good condition at all times, with no steel showing through on the toe cap. • Safety helmet conforming to CE EN 397 with facilities for attaching a chin strap and visor. • Helmets should only be close stored for 5 years and changed every year. • Do not paint or put unauthorised stickers and will replace if damaged. **FOX OPERATIVES are issued with a WHITE hard hat.**	3	2	6

Hand Protection Eye Protection High visibility vests or Coats	Impact, abrasions Cuts Piercings Dust and debris in the eyes Eye injuries Impact from Vehicles, Plant	3	4	12	• Heavy duty Nitrile gloves to EN388 the minimum cut resistance is 3 (eg4343). The heavy-duty gloves must also be puncture 5. Gloves must be upgraded for various tasks such as chemical protection and higher cut protection. • Light eye protection must be worn, Class 1 with polycarbonate lenses EN166. • These must be upgraded to goggles and face visors. • Keep lenses clean at all times, change if scratched. • Each Site Operative must be issued a hand-Held Radio before leaving the compound each day. • This must be in good working order and safe to use on a Petrochemical Site Operatives. • Place the radio on their overalls and monitor radio traffic. • Operatives use this radio to stay in contact with the site Supervisor and fellow members of the site team	3	2	6

Dust Masks	Breathing difficulties resulting from dust inhalation. Long term exposure can cause short/long term respiratory conditions. • Mucus • Asthma • Membrane irritation • Gastro-intestinal disorders.	4	4	16	• All workshop and yard employees to be briefed **WF007 Dust.** • Stores to be stocked with Dust Mask and made available to all staff on request (All masks provided must be CE marked and carry the standard EN:149 2001). • High risk activities e.g., spray booth operatives to wear half-face masks conforming to (BS EN 1827:2009+A1:2009) which must be fitted. Face fitting of half face masks to be carried out by a competent, trained person.	4	3	12

Risk Assessment No: WF017	**Task:** Slips, Trips and Falls	
Prepared By: Derick Bibby	**Date:** 15.01.2025	**RA Review Date:** Annually
	Reviewed By: Lee Hardy	**Date:** 16.01.2025

PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers

Activity	Hazards	S	L	R	Control Measures	L	S	R
Slip trip and fall same level	Slip on wet/slippery surface, trip over detritus or obstruction	4	3	12	• Light levels to be adequate for the task being completed • Housekeeping policy to be documented and communicated to all staff • Supervision of Housekeeping standards to be maintained to prevent trailing leads & hoses and build-up of detritus etc. • Designated walkways to be kept clear of obstructions • Spillages to be cleared immediately with suitable media • Wet floor safety signage to deployed where applicable • Safety footwear provided with non-slip soles • Toolbox talks & training of staff to ensure all staff have the right stop an activity if they think the conditions are unsafe	4	1	4
Slip, trip or fall accessing height	Access vehicle cabs Accessing vehicle load bed Accessing cabs of plant machinery	4	3	12	• Training and toolbox talks delivered on the principles of maintaining 3 points of contact • High visibility markings provided to plant machinery grab handles and steps • Particular care should be taken when accessing or egressing the load bed, the principle of maintaining three points of contact	4	1	4

					should be adopted where practicable. • Mandatory use of hard hats designed and tested specifically for working at height: - Conforming to standards EN 12492 for mountaineers, EN 50365 electrical insulation, EN 397 shock and penetration standard to withstand up to 50 joules of energy. • Walkway services on the lorries should be maintained and clean • Safety footwear should have none slip soles • Any defects should be logged on the daily check sheets and repaired as soon as practical • DO NOT climb on machinery - Use ladders/ steps to gain access to raised levels • Use working platforms with guardrails and toe boards			
Work at height	Fall from height	5	4	20	• Where practicable avoid working at height – eg: fold down ROPS to access beacons etc. Plant loaded on transport vehicle should be secured from ground level • Where applicable, ensure guard rails are erected on lorry beds – or where not fitted use fall arrest equipment such as safety nets/ air or bean bags as provided at customer site locations • Use PPE appropriate to the task including harness and fall arrest/restraint systems • Mandatory use of hard hats designed and tested specifically for working at height: - Conforming to standards EN 12492 for mountaineers, EN 50365 electrical insulation, EN 397 shock and penetration standard to withstand up to 50 joules of energy.	5	1	5

					• Working at height safety procedures must be regularly highlighted during toolbox talks, highlight the work at height hierarchy: Collective prevention before Personal protection. • Where applicable the correct tools should be used to reduce the need for working at height. • Working platforms must be stable and level during use. • Equipment used must be stable and secure • Brakes and outriggers etc. (where fitted) MUST BE used as directed in the operators instructions. • Vehicle access steps/ladders should be used whilst maintaining 3 points of contact • Vehicle inspections pits should be barriered to prevent persons accessing • Unauthorised persons should be prohibited to enter workshop areas			

Risk Assessment No: WF018	**Task:** Use of Washdown	
Prepared By: Derick Bibby	**Date:** 15.01.2025	**RA Review Date:** Annually
	Reviewed By: Lee Hardy	**Date:** 16.01.2025

PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers

Activity	Hazards	S	L	R	Control Measures	L	S	R
Use of vehicle wash down facilities and high pressure. washing equipment. Pollution control measures, environmental protection measures	Slips, trips and falls due to wet or oily surfaces. Injection injuries to hands and eyes from high pressure jetting equipment Eye/hand injuries from flying debris during high pressure washing Falls from height from vehicles during washing down operations. Electrocution Pollution/contamination of local water	4	3	12	• All operatives using high pressure washing equipment are to receive familiarisation training using the manufacturer's literature and be practically assessed to ensure they are competent. • All surfaces to be regularly cleaned and kept free of oils and debris. Wash down area to be cleared of debris and contaminants after wash. down operations are complete. Safety boots to be worn at all times. • Protective gloves/gauntlets/overalls/goggles to be worn at all times when using high pressure washing equipment. • All high level washing to be carried out from mobile steps fitted with guard rails. Steps to be moved around as necessary and wheels locked at all times when in use. No over- reaching from steps. Platform of steps to be kept clean and free from oils, fuels, lubricants or debris which could cause slips, trips or falls. • All equipment to be PAT tested at 3 monthly intervals. • Pre-use inspection to be carried out by operatives every time equipment is used. If any defects are found do not use and report to supervisor. Labels to be affixed to equipment showing date of last and next PAT test due. If label is out of date do not use equipment. RCD to be tested prior to use.	4	2	8

	courses and/or drains from oils, fuels, lubricants leaking from wash down facility.				• All cables, plugs, & sockets to be inspected for damage prior to use. If any defects are found do not use and report to supervisor. When washing down keep all electrical cables away from water and areas where they could be run over by other vehicles • When working at height **WF013** must be briefed. • Full PPE must be worn at all times including gloves, eye and hearing protection. • Oil separator to be emptied at regular intervals to prevent overflow			

Risk Assessment No: WF019	**Task:** Working under vehicles	
Prepared By: Derick Bibby	**Date:** 15.01.2025	**RA Review Date:** Annually
	Reviewed By: Lee Hardy	**Date:** 16.01.2025

PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers

Activity	Hazards	S	L	R	Control Measures	L	S	R
Working under vehicles general	Failure of lifting equipment, props, stands etc. Personal injury including crushing, entrapment and death. Property damage	4	3	12	• Only competent personnel are permitted to work under vehicles. • Ensure wheels are choked prior to works commencing to minimise the risk of vehicle rollaway/movement. • Ensure the vehicle is braked, engine off with chocks applied. • Ensure housekeeping is maintained to a high standard to minimise S/T/F risk. • Should any spillages occur, clean up immediately and report to line manager/site manager. • Works are to be segregated from other works with the use of physical barriers where possible. • Maintain good communication with others on site. • See **WF010** Use of Vehicle Pit	4	1	4
Use of lifting equipment, props, stands etc.	Failure of lifting equipment, props, stands etc.	4	4	16	• All lifting equipment is subject to thorough examination. **NEVER** use any lifting equipment that does not have a valid certificate in place. • All tools, equipment and lifting equipment to be visually inspected by the technician prior to use. • Any defects found, item to be quarantined and reported to Line	4	1	4

	Personal injury including crushing, entrapment and death. Property damage				Manager. Never use any equipment that is out of test date or has signs of damage. If in doubt, STOP and speak to line manager. • **NEVER** exceed the safe working load of tools and equipment. • Always use equipment in line with manufacturers instructions. • Correct storage of lifting equipment, tools and equipment. • Always use the correct pins for axle stands – screwdrivers, nuts and bolts are not acceptable. • Use lifting equipment including stands on a hard level surface. **DO NOT** lift on sloping, uneven, unstable ground. • Ensure that all lifting points for jacks and stands are correct for that vehicle – consult the vehicle manufacturers handbook for guidance. • Ensure that vehicles are always properly supports – do not rely on jacks alone			
Off-site works	Failure of lifting equipment, props, stands etc. Personal injury including crushing, entrapment and death. Property damage	5	2	10	• Induction and point of work risk assessment carried out at the worksite with customer. • Customer to advise where the works will be carried out. This must be on firm, level ground. • Works area to be segregated with physical barriers where possible. • Communication to be maintained with those in the vicinity and the customer. • If the working area is unsuitable, **STOP** and make arrangements for the vehicle to be moved to a safe location before any attempt is made to lift it to undertake repairs	5	1	5
Propping cabs and tipper trailers	Personal injuries including crushing, entrapment,	5	2	10	• Activities where cabs must be tilted are only to be carried out in Fox Group Depot Workshops. • **Lorry cabs must always be fully tilted, NEVER partially tilt the cab.**	5	1	5

Use of manual cab tilt systems Use of electrical cab tilt systems	Fatality.				• Cabs must be tilted in line with manufacturer instructions and user guides. • No work is to be carried out on cab suspension systems or cab tilting systems; this will be carried out externally by the manufacturer. • **Where there is a defect with any of the cab tilting components including the pump and ram, the cab must never be tilted.** • DO NOT raise or lower the cab if the front cab suspension anti-roll bar is removed • DO NOT raise or lower the cab if the vehicle is raised on jacks or axle stands or on a vehicle lift. • Where any defects are found with the cab tilting system, STOP and speak to your line manager. • All HGVs are fitted with cab lock sensors from factory. This displays a warning on the dash and audible warning if the cab lock is not Engaged **ALWAYS USE A BODY PROP WHEN WAGON BODY IS TILTED**			

Risk Assessment No: WF020	**Task:** Working with Batteries	
Prepared By: Derick Bibby	**Date:** 15.01.2025	**RA Review Date:** Annually
	Reviewed By: Lee Hardy	**Date:** 16.01.2025

PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers

Activity	Hazards	S	L	R	Control Measures	L	S	R
Moving/Handling batteries Accidental damage to casing, spills Contact with lead and acid. Battery charging Battery disposal	Contact with eyes and skin. Swallowing and inhalation. Lead causing damage to blood, nerves and kidneys. Can cause damage to unborn children. May lead to skin cancer. Electric shock. Explosion/fire Slips, trips and falls Manual handling related injuries such as musculoskeletal injuries.	4	3	12	• See COSHH assessment and associated material safety data sheet for batteries. • In the event of an emergency seek first aid treatment and contact the emergency services. Refer to COSHH and MSDS for first aid measures. • Ensure water, Co2 or dry powder extinguishers are available in the working area. • Where there are spills, clean up in line with manufacturers guidelines and local waste regulations. Refer to COSHH and MSDS. • Keep batteries away from sparks and naked flames. • Remove jewellery including rings, watches before commencing work. • Ensure battery terminals are not bought into contact with a conductor. • When charging flammable gas is given-off, ensure when disconnecting charging equipment leads are powered down. • Keep pregnant persons away from the work activity. • Wear the appropriate PPE including safety boots and safety gloves. • Maintain good hygiene standards, wash hand prior to eating,	4	1	4

					drinking and smoking. • Ensure that batteries are charged in the designated battery charging room. • Ensure batteries are disposed of correctly, use battery disposal boxes available. • Licenced hazardous waste battery disposal company to be used from approved supply chain. • See manual handling below			
Manual Handling	Musculoskeletal injuries	3	3	9	• Avoid manual handling operations so far is as reasonably practicable by designing the task to avoid manually moving the load. • Use mechanical aids wherever possible. • Adopt 2 man lifting techniques where possible. • Good housekeeping maintained and a clear route of travel. • Ensure that the correct lifting technique is adopted. • As a guide, do not lift more than 25kg. • All employees are trained in manual handling techniques.	3	1	3

Risk Assessment No: WF021	**Task:** Working on Electric Vehicles	
Prepared By: Derick Bibby	**Date:** 15.01.2025	**RA Review Date:** Annually
	Reviewed By: Lee Hardy	**Date:** 16.01.2025

PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers

Activity	Hazards	S	L	R	Control Measures	L	S	R
General electrical repairs Rewiring Installations of CB radios, beacons, lights etc. (add-ons)	Electric shock, fire, explosion, unexpected movement resulting in personal injury or damages. Musculoskeletal injuries. Electrical systems have the potential to interfere with medical devices such as pacemakers. Other vehicles and pedestrians Work at height	5	3	15	• Isolate circuit or disconnect the battery (unless it is not practical to do so for diagnosis) prior to commencing with the work activity. • During fault finding be aware of the vehicle being unpredictable in operation. • Only reconnect when testing. • Remove jewellery, rings, watches before commencing. • Use the correct tools and equipment for the task. Ensure tools and equipment are insulated as required. • All portable appliances must be subject to PAT. • Be aware of the explosive nature of battery gasses and take precautions as necessary. • Only competent personnel are authorised to work on electrical circuits. • Ensure the correct PPE is worn at all times including flame retardant overalls. • See **WF020** Working with batteries. • See **WF013** Work at Height	5	1	5

Working on electric and hybrid vehicles	Electric shock, fire, explosion, unexpected movement resulting in personal injury or damages. Musculoskeletal injuries. Electrical systems have the potential to interfere with medical devices such as pacemakers. Other vehicles and pedestrians	5	3	15	• Fox Group technicians only to carry out mechanical repairs and not to touch EV components. All electric and hybrid vehicles high voltage electrical systems must only be worked on by approved external specialists. • All works should be carried out in line with manufacturer instructions and training. • Remote operation keys should be kept away from the vehicle to avoid accidental operation of electrical systems and accident movement of the vehicle. Locks keys away with access controlled by the person working on the vehicle. • Battery packs are susceptible to high temperatures. Check the label and ensure that this is adhered to. Never exceed the defined maximum temperature. Should operations such as spraying be required, stop and report to your line manager for a separate risk assessment to be carried out.	5	1	5

Risk Assessment No: WF022		**Task:** Repairing Vehicle Brakes	
Prepared By: Derick Bibby		**Date:** 15.01.2025	**RA Review Date:** Annually
		Reviewed By: Lee Hardy	**Date:** 16.01.2025

PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers

Activity	Hazards	S	L	R	Control Measures	L	S	R
Replacing brakes general repairs	Failure of lifting equipment Incorrect use of tools and equipment Stuck components Pinch points, nips, cuts, trapping Dust inhalation Musculoskeletal injuries Vehicle rollaway/movement Slips/trips/falls	4	3	12	• All lifting equipment subject to thorough examination inspection, label present with test date. • **NEVER** exceed the safe working load of tools and equipment. • Never work beneath a vehicle supported only by a jack/s. • Use the correct jack for the load, applied to the correct jacking point as identified by the vehicle manufacturer. • Never rely on a jack as the sole support if work is to take place beneath the vehicle or if more than one axle is raised. It must be supplemented with appropriate stands and the wheels of the vehicle still in contact with the ground choked. • Only use jacks on firm, level ground. • Visual inspection of tools and equipment conducted prior to use. • All portable electrical appliances to be subject to PAT. • Any defects found, item to be quarantined and reported to Line Manager. Never use any equipment that is out of test date or has signs of damage. If in doubt, STOP and speak to line manager. • Correct storage of lifting equipment, tools and equipment. • Use appropriate tools to remove stuck components, use lubricant as required to free component. • See COSHH assessments and associated material safety data	4	1	4

	Contact with other vehicles/plant/persons. Technician competence				sheets for hazardous substances. • Wear correct PPE as defined in SSOW including hi vis top, safety boots, safety gloves, eye protection and FFP3 mask. • Always carry out works in line with manufacturer's instructions. Including the use of tools and equipment. • Ensure torque wrench has calibration and is in date. • Ensure components are cleaned prior to starting removal to minimise dust. • See **WF008** Manual Handling. • Ensure wheels are choked prior to works commencing to minimise the risk of vehicle rollaway/movement. • Ensure the vehicle is braked, engine off with chocks applied • Ensure housekeeping is maintained to a high standard to minimise S/T/F risk. • Should any spillages occur, clean up immediately and report to line manager/site manager. • Works are to be segregated from other works with the use of physical barriers where possible. • Maintain good communication with others on site. • Brakes and other components to be installed as per manufacturer instructions and guidelines. • Staff to be competent in carrying out brake replacement works			

Risk Assessment No: WF023	**Task:** Working on Cooling Systems	
Prepared By: Derick Bibby	**Date:** 15.01.2025	**RA Review Date:** Annually
	Reviewed By: Lee Hardy	**Date:** 16.01.2025

PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers

Activity	Hazards	S	L	R	Control Measures	L	S	R
Working on vehicle cooling systems	Personal injury from contact such as burns, scalds, fume inhalation. Spills/accidental release Disposal Musculoskeletal injuries	4	3	12	• Only competent technicians are permitted to work on cooling systems. • Ensure that the correct method of draining and filling is used appropriate to the machine to minimise spillage and contact. • Ensure that the engine is off, and the radiator coolant has cooled prior to work commencing. NEVER work with a hot engine or hot coolant. • Cover radiator/heater tank caps with rag prior to opening to avoid contact. • Appropriate PPE must be worn including hi vis top, safety boots, eye protection and safety gloves • Should there be any spillages, STOP and clean these up immediately as they will make the floor very slippery. • When working on the cooling system where the engine requires running, always keep hands, fingers, tools and clothing away from the moving fan. Avoid working on the cooling system when the engine is running where possible. • Should you make contact with antifreeze, wash the area immediately. If antifreeze is ingested, immediately seek professional help as this can lead to death in as little as 24hours.	4	1	4

					• Dispose of antifreeze and its containers through an approved licenced waste disposal contractor. • See COSHH assessments and material safety data sheets for hazardous substances. • Always use hazardous substances in line with manufacturer instructions. • See **WF008** Manual Handling. • See **WF013** Work at Height			

Risk Assessment No: WF024		**Task:** Tyre Maintenance						
Prepared By: Derick Bibby		**Date:** 15.01.2025		**RA Review Date:** Annually				
		Reviewed By: Lee Hardy		**Date:** 16.01.2025				
PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers								
Activity	**Hazards**	**S**	**L**	**R**	**Control Measures**	**L**	**S**	**R**
Use of external contractor to carry out tyre maintenance	Inexperience, quality of work	3	3	9	• Use of approved contractor who undergoes annual review. RAMS and training records to be reviewed. Spot checks on work completed by internal technicians.	3	1	3
Over inflation of tyres	Tyre explosion	4	3	12	• Competent workforce • Check for visual signs of damage to tyre prior to inflation. • Ensure all equipment used is in good condition and suitable for the task. • DO NOT use equipment for anything other than what it is intended. • Tyres to be inflated to manufacturers specification and instruction. • Remote inflation unit used. • Use tyre pressure gauge and set correctly. • The airline hose between the clip-on chuck and the pressure gauge control must be long enough for the operator to stand outside the	4	1	4

					likely trajectory of any explosion during inflation. • Ensure no personnel are in close proximity who are not carrying out the work. • Tyre safety zone established, use protective cage where possible. • Consider use of tyre contractor for removal of tyre/rim assemblies.			
Exposure to hot work	Tyre explosion	4	3	12	• Take adequate precautions to protect the tyre from overheating. • Hot works should never be done on wheels until after the tyre is removed. Refer to HSE information leaflet - Hot Works on Vehicle Wheels. • DO NOT expose rims to direct heat.	4	1	4
Jacking of wheel/uneven ground	Slipping off jack, crushing injuries	3	3	9	• Ensure firm level ground conditions. • Jacks only to be used by trained competent personnel. • Correct use of supports and blocks prior to removal of wheel. • Equipment to be used in line with manufacturers guidelines and instructions. • Jacking, props, supports to be placed on vehicles manufacturer Points. • Chocks to be used where required. • DO NOT exceed the rated capacity (safe working load) of any lifting equipment.	3	1	3

					• Ensure that vehicles are properly supports – do not rely on jacks alone. • Ensure lifting equipment is subject to thorough examination. • Pre-use checks to be completed by the user.			
Incorrect tyre lubricant	Explosive mixture when heated	2	3	6	• Select correct lubricant for task. If in doubt stop and ask line manager. • Ensure air supply is free of oil and water. • All personnel to familiarise themselves of COSHH assessments and associated material safety data sheets.	2	1	2
Contact with high pressure air line	Puncture wounds, blood poisoning, eye injuries, loss of sight	3	3	9	• Proprietary connections to be used as recommended by manufacturer. • Ensure pressure in system is correct for tooling. • Tools being used are in good condition and suitable for work. • No horseplay. Never point it at yourself or others. Never use it to clean clothing or hair. • Always follow pressure ratings and limitations. • Visual inspection of hoses, connections and lines prior to use. • Correct PPE to be donned including safety gloves, hearing protection and safety glasses.	3	1	3

Use of nitrogen to inflate tyres	Explosion, fire, death by asphyxiation	4	3	12	• Competent workforce • Check for visual signs of damage to tyre prior to inflation. • Ensure all equipment used is in good condition and suitable for the task. • DO NOT use equipment for anything other than what it is intended. • Tyres to be inflated to manufacturers specification and instruction. • Ensure no personnel are in close proximity who are not carrying out the work. • Tyre safety zone established, use protective cage where possible. • Consider use of tyre contractor for removal of tyre/rim assemblies. • No smoking or hot work to be carried out near wheels. • All personnel to familiarise • themselves of COSHH assessments and associated material safety data sheets. • Wear appropriate PPE at all times including safety gloves, hearing protection and safety glasses.	4	1	4
Contact with other vehicles operating in the vicinity.	Personnel injury, death	5	2	10	• Area to be segregated with physical barriers. • No unauthorised personnel in the area. • Signage in place	5	1	5

Noise from compressor	Noise induced hearing loss	3	3	9	• Select low noise equipment where possible. • Hearing protection to be available and worn where required. • Noise monitoring to be carried out.	3	1	3
Incorrect/overuse of air and hydraulic tools	Hand/arm vibration syndrome	3	2	6	• • Select low vibration equipment and ensure it is maintained. • Keep hand warm. • Wear vibration reducing gloves where possible when operation handheld vibrating tools and equipment. • Select the correct tool for the task. • Ensure that tools and equipment are in good order. Visually inspect prior to use. • Implement job rotation to minimise exposure. • Monitor and record exposure times. • Ensure personnel are aware of permitted exposure times of tools and equipment.	3	1	3

Manual Handling	Musculoskeletal injuries	3	3	9	• Avoid manual handling operations so far is as reasonably practicable by designing the task to avoid manually moving the load. • Use mechanical aids wherever possible. • Adopt 2 man lifting techniques where possible • Good housekeeping maintained and a clear route of travel. • Ensure that the correct lifting technique is adopted. • As a guide, do not lift more than 25kg. • All employees are trained in manual handling techniques.	3	1	3
Use of tools and equipment	Personal injuries such as cuts, scrapes, burns. Fatality due to incorrect use. Electrical burns, shocks	4	3	12	• Tools and equipment in good condition and used only for its intended purpose. • All equipment serviced and maintained in line with manufacturers recommendations. • All portable appliances subject to PATevery 3 months and deemed fit for purpose. • Transformers are to be used where possible. • Any defects found to be reported immediately and tool/equipment quarantined for repair or disposed of and replaced. • Pre-use checks to be completed by operative. • Guards must always be used and fitted correctly. Never remove or interfere with guards. • Cables must be in good condition. • Batteries must be in good condition. • Tools suitable maintained and stored. • Maintenance of electrical equipment will only be carried out by trained competent personnel. Fox Group will appoint an external electrician where required.	4	1	4

					• Machines/equipment will be isolated prior to maintenance on them. • Sufficient space around machines/ equipment for staff to operate safely. • Appropriate PPE donned, hi visibility top, steel toecap laced boots, gloves, glasses. • Hearing protection must be worn. 80 db(A) hearing protection is recommended. 85 db(A) hearing protection is mandatory.			

Risk Assessment No: WF025	**Task:** HGV Workshop Tyre Storage Facility	
Prepared By: Derick Bibby	**Date:** 15.01.2025	**RA Review Date:** Annually
	Reviewed By: Lee Hardy	**Date:** 16.01.2025

PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers

Activity	Hazards	S	L	R	Control Measures	L	S	R
Tyre storage activities Movement of tyres Stock checking tyres	Access/egress Slips/Trips/Falls	3	3	9	• Access and egress must be maintained at all times. At no point should the entrance/exit door be blocked. • Access to tyres must be maintained. To access tyres at the back of the store, ensuring that they are moved 1 at a time gaining access. • DO NOT use tyres as aids to reach tyres. DO NOT climb on them. Use appropriate access equipment. • Seek assistance from colleagues where required. • Maintain good housekeeping at all times. • When moving tyres – roll them in a controlled manner – DO NOT let go causing them to roll away. • DO NOT attempt to lift tyres wherever possible	3	1	3
Manual Handling of tyres	Musculoskeletal injuries	3	3	9	• All Fox Group personnel complete manual handling training. • Avoid manual handling operations so far as is reasonably practicable. • Use mechanical aids wherever possible. • Adopt 2 man lifting techniques. • Maintain good housekeeping standards. • As a guide, do not lift more 25kg.Use tyre pressure gauge and set correctly.	3	1	3

Lighting	Poor visibility – low lighting levels. Defective lighting.	3	2	6	• Ensure that the light is switched on upon entry/ off when exiting. • Should the light be defective, report this immediately to your manager for repairs. • DO NOT work in the tyre storage area without adequate lighting available.	3	1	3

Risk Assessment No: WF026	**Task:** General Jacking and Blocking	
Prepared By: Derick Bibby	**Date:** 15.01.2025	**RA Review Date:** Annually
	Reviewed By: Lee Hardy	**Date:** 16.01.2025

PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers

Activity	Hazards	S	L	R	Control Measures	L	S	R
Jacking and blocking on uneven or unsuitable ground. Ground giving way/sinking.	Vehicle slipping off jack resulting in crushing injuries, entrapment. Personal injuries including fatality. Blocks or stands collapsing.	4	3	12	• Ensure firm level ground which is suitable for the task. • Always follow manufacturer instructions for the correct use of jacks, blocks and stands. • Never carry out works under vehicles which are only support be jacks. • Ensure jacks, stands, blocks have sufficient capacity to support the load. Never exceed the safe working load of lifting equipment. • All lifting equipment to be visually inspected prior to use. • Should any defects be found, DO NOT use the equipment, quarantine it and report to your line manager.	4	1	4
Manual Handling of tyres	Musculoskeletal injuries	3	3	9	• All Fox Group personnel complete manual handling training. • Avoid manual handling operations so far as is reasonably practicable. • Use mechanical aids wherever possible. • Adopt 2 man lifting techniques. • Maintain good housekeeping standards. • As a guide, do not lift more 25kg.Use tyre pressure gauge and set correctly. • Where blocks are used, these must be clean, flat, without cracks	3	1	3

					and free from impregnated oil. • All engines switched off with parking brake applied. • All wheels on the ground must be choked appropriately. • Only authorised competent technicians are permitted to perform jacking and blocking operations. • Ensure that the works area is segregated using physical barriers where possible. • Ensure that the correct PPE is worn including hi vis top, safety boots, safety gloves and safety glasses. FFP3 face mask as required.			
Driver entering vehicle and driving off unaware of work carried out	Personal injury Property damage	4	2	8	• All non-workshop personnel are banned from workshop areas. See HGV workshops lock out procedure. • Lock out procedure is in place and briefed to all workshop personnel and drivers. • NO unauthorised entry permitted. • Communication to be maintained between workshop personnel. • Drivers to report to service office not workshop.	4	1	4
Collisions with other vehicles	Personal injury	4	2	8	• Work area to be segregated with physical barriers where possible. • Communication to be maintained with others in the vicinity of the works. • Ensure correct PPE is worn at all times.	4	1	4

Risk Assessment No: WF027	**Task:** Checking and Changing Hoses	
Prepared By: Derick Bibby	**Date:** 15.01.2025	**RA Review Date:** Annually
	Reviewed By: Lee Hardy	**Date:** 16.01.2025

PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers

Activity	Hazards	S	L	R	Control Measures	L	S	R
Visual inspection of both hired own plant and equipment for defects.	Failure of plant or breakages. No PDI Sheet	3	4	12	• Check certification of equipment. • Ensure machine has correct PDI sheet. • Look for defects of plant / machinery with operator. • Only use well maintained plant. • All hoses are to be visually checked at the start of each shift for signs of leaks. • No plant must operate if there are signs of leaks or weeps.	3	2	9
Changing, connecting and disconnecting hoses	Contamination from machine oils. Hand injury from hoses Back injury from manual handling	3	4	12	• Only qualified fitters to replace and repair any defective, perished or cut hoses. • Spill kits and drip trays on site ready for emergency use in case of pipe breakage or leak. **Follow WF040 Emergency Spill Response** • Wear PVC Oil resistant gloves when changing hoses with chemical resistant 3. • Place the excavator arm in the lowered position to allow easy access. • Ensure the plant is switched off and the hoses are depressurized before removing, banks man to control plant movement. • Avoid dropping or allowing the hose couplings to touch the ground	3	1	3

					or lay in dirt or grit, keep the ends clean at all times			
Checking Tyres	Flying debris	3	4	12	• Check all tyres before allowing vehicles to leave the site to ensure there are no stones or rubble wedged, remove if found	3	2	6

Risk Assessment No: WF028		**Task:** Repair and Maintenance of Sweeper Vehicles						
Prepared By: Derick Bibby		**Date:** 15.01.2025		**RA Review Date:** Annually				
		Reviewed By: Lee Hardy		**Date:** 16.01.2025				
PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers								
Activity	**Hazards**	**S**	**L**	**R**	**Control Measures**	**L**	**S**	**R**
Repairs and Maintenance - Donkey engine & vehicle engine General	Competence Ground conditions Vehicle pit use Working conditions Slips/Trips/Falls	4	4	16	• All repair and maintenance activities are to be carried out by trained, competent technicians in line with manufacturer instructions. • Works are to be carried out on firm level ground. • Where working over the vehicle pit ensure that a banksman guides you into position. • Good housekeeping is to be maintained. Ensure that the work area is free from trailing cables/hoses/airlines, S/T/F hazards, waste etc. • Ensure that the correct PPE is worn for the tasks, as a minimum safety boots, hi-vis top, nitrile gloves. If any additional PPE is required ensure that this is worn, i.e., hearing & eye protection • Maintain communication with others in the workshop at all times	4	1	4

Repairs and Maintenance - Donkey engine & vehicle engine Hazardous substances	Contact can lead to irritation, dermatitis, eye injuries, skin abrasions/burns, skin cancer	4	3	12	• Ensure that nitrile gloves provided are worn, if they get damaged, wash your hands and put on a new pair of gloves. • Ensure that protective clothing is worn at all times. Should they become soaked in substances, use shower rooms and wash off of your body and put on fresh clothing. • Ensure that you frequently wash your hands, particularly before eating, drinking or smoking. Use skin creams provided. • Ensure that you report any changes in skin condition to your line manager. • Ensure COSHH cupboards are locked when not in use. • See COSHH assessments via HSQE QR code on COSHH cabinets.	4	1	4
Repairs and Maintenance - Donkey engine & vehicle engine Fumes	Breathing difficulties, eye irritation	4	3	12	• Ensure adequate ventilation at all times • Turn off engines where not required to be running • Extractor systems to be used when running engines inside • Extractor systems maintained and tested to prevent leaks • All technicians trained in the correct use of extraction systems	4	1	4

Repairs and Maintenance - Donkey engine & vehicle engine Noise	Hearing damage, loss Distraction Not hearing other warning signals	4	3	12	• Where possible avoid operating the engine on maximum RPM with the cowl in raised position. If the cowl is raised, warn others in the area within a 8 meter radius. • Use a banksman where possible. • Hearing protection provided and available. • Noise monitoring conducted regularly.	4	1	4
Repairs and Maintenance - Donkey engine & vehicle engine Dust	Inhalation of airborne dust can result in breathing difficulties, chronic disease and fatality.	4	3	12	• Use dust suppression where possible • Keep tools and equipment clean and maintained. • Wash hand after work activities, especially prior to eating, drinking and smoking. • Use LEV systems available. • Use FFP3 face masks supplied. • Where dust levels are high, STOP and report to your line manager and HSQE department. • See **WF007** Dust.	4	1	4
Repairs and Maintenance - Donkey engine & vehicle engine Fire	Smoke inhalation, burns, fatality	5	3	15	• Fire alarm systems are in place at all depots, these are maintained and tested. • Fire extinguishers are in place in workshop areas which are inspected and tested ensuring that they are serviceable. • Special fire exits are not required as work areas have immediate access to outside areas. • Fire risk assessments are in place at all depots. • Spillages cleaned up immediately. • Fuel drip trays and tanks are to be used.	5	1	5

					• No smoking is permitted in workshop areas, use designated smoking areas. • No naked flames near engine components.			
Repairs and Maintenance - Donkey engine & vehicle engine Use of tools and equipment	Electric shocks, burns, fire, explosion Personal injuries such as cuts, bruises, entrapment.	4	3	12	• Low voltage tools and equipment used where possible • Residual current device built into main switch board • All 240v tools and equipment have industrial plugs and leads fitted. • All handheld tools and equipment subject to PAT annually. • Pre-use visual inspections carried out by user. Any defects found, remove item from use and quarantine. • Gloves to be worn to protect hands when using handheld tools and equipment. • Equipment must not be left running unattended • Guarding in place, must be used at all times • Additional PPE to be worn which is provided. i.e., gloves, eye protection, hearing protection. • Grinding wheels changed by competent persons. All technicians have abrasive wheels competency	4	1	4

Repairs and Maintenance - Donkey engine & vehicle engine Battery charging	Fire, explosion Chemical burns	5	2	10	• Battery charging it only to be carried out by trained competent technicians. • Batteries to be charged in the depot designated battery charging room. • See **WF020** Working with batteries.	5	1	5
Repairs and Maintenance - Donkey engine & vehicle engine Falling objects RAMS failure	Crush injuries, entrapment	5	3	15	• Road sweepers have an automated safety locking bar and pin to prevent the body falling when raised, i.e., in the event of RAM failure. This must be used. • Where this is not in place, as approved workshop prop must be used. • All vehicle lifts are subject to routine thorough examination and servicing. • All users carry out pre-use visual inspections on lifting equipment • The body may only be raised when parked on firm, level ground. • Lifting equipment including jacks, vehicle lifts and axle stands are only to be used on firm level ground. • Safe working loads must never be exceeded. • Should any defects be found, do not use and quarantine the item. Report all defects to your line manager.	5	1	5

Repairs and Maintenance - Donkey engine & vehicle engine Working at Height	Falls from height Falling objects	5	3	15	• All technicians are trained in work at height. • Avoid work at height where possible. • Use manufacturer fitted access points and steps. • DO NOT climb up the body of the vehicle. • All ladders must be inspected prior to use and the ladder tag completed. • Ensure ladders are correctly erected, do not work off the top 3 steps. These are only to be used to gain access or short duration activities max 30minutes. • Ensure 3 points of contact is maintained. • Mobile steps are to be fitted with guardrails. • Prevent falls by using suitable work platforms with integral edge protection and toe boards which conform to Work at Height Regulations. • DO NOT overreach or work side-on • See **WF013** Work At Height.	5	1	5
Repairs and Maintenance - Donkey engine & vehicle engine Compressed Air	Tyre explosion	5	3	15	• All tyres are to be changed by competent technicians. • Tyres are to be inflated as per the tyre inflation **WF024** Tyre Maintenance	5	1	5

Repairs and Maintenance - Donkey engine & vehicle engine Suction Fan	Serious injury, loss of limbs, cuts, burns, drawn in, entrapment.	5	4	20	• Ensure that the sweeper is parked on firm level ground and apply the handbrake. • The fan is heavy rotating mass, never attempt to slow or stop its rotation by using hands or inserting any item into the fan chamber, even at low speeds. • The suction fan should be low power/stropped prior to removing covers and working in close proximity. • No personnel should attempt to touch or expose the fan whilst it is operational. • Keep all hands, limbs clear of the area. • DO NOT work on the fan until it is stationary. • All works must be carried out in line with manufacturer instructions and training.	5	1	5
Repairs and Maintenance - Donkey engine & vehicle engine Donkey engine & vehicle engine	On-site working conditions Other personnel, contractors	5	3	15	• Upon arrival to site ensure that you attend any Client inductions, briefings etc. • A POWRA must be completed. • The working area must be firm, level ground and segregated from others on site. Where possible segregate with physical barriers. Where this is not possible, the driver must monitor the area and keep persons away. • Only small repairs are to be carried out on site, for any large tasks the sweeper must be taken back to the depot workshop for repairs and maintenance. • Always use manufacturer access steps. Carry out repairs and maintenance in line with manufacturer instructions and training	5	1	5

Access/Egress	Falls from height Slips/Trips/Falls Collisions Property Damage	4	3	12	• Ensure that the working area is segregated and made safe. Use physical barriers where possible. • Access the sweeper via the manufacturer fitted access steps. • Where access cannot be made via the steps alternative means such as steps or platforms must be used. • Ensure that 3 points of contact is made when entering/exiting the sweeper. Should any area of the sweeper not be accessible via means of manufacturer access/egress points. STOP and speak to your line manager and HSQE department.	4	1	4
Working under a raised body	Crushing, entrapment, fatality	5	4	20	• Always use the manufacturer provided body prop, if the integral body prop is not usable an approved workshop prop is used. • Turn the chassis and auxiliary engine off unless the operation is required. • The body must NEVER be left partially raised. • Keep hands, fingers and limbs clear of pinch points. • Maintain communication with others in the workshop at all times.	4	1	4
Vehicle Movements	Collisions with persons or other vehicles Property damage	5	3	15	• Adhere to traffic routes and speed limits. • Only workshop personnel are permitted in workshop areas. • All reversing movements must have a banksman in place. • Banksman must be used for accessing the vehicle pit. • Vehicles are only to be started from the driver's seat with both feet inside and the gear disengaged. • Only competent, trained drivers can drive sweeper vehicles.	5	1	5

Manual Handling	Musculoskeletal injuries	3	3	9	• Avoid manual handling operations so far is as reasonably practicable by designing the task to avoid manually moving the load. • Use mechanical aids wherever possible. • Adopt 2 man lifting techniques where possible. • Good housekeeping maintained and a clear route of travel. • Ensure that the correct lifting technique is adopted. • As a guide, do not lift more than 25kg. • All employees are trained in manual handling techniques.	3	1	3

Risk Assessment No: WF029		**Task:** Entry & Exit from Wagons	
Prepared By: Derick Bibby		**Date:** 15.01.2025	**RA Review Date:** Annually
		Reviewed By: Lee Hardy	**Date:** 16.01.2025

PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers, Hard Hat

Hazard	Persons at Risk	L	S	R	Control Measures	L	S	R
Fall from Height	Wagon driver	3	3	9	• Always enter and exit the vehicle in a safe manner • Never jump down from the vehicle cab or climb onto a moving vehicle. • Always use the access steps or ladders provided, • Open the door, • Face the vehicle, • Grab the handhold • Step down backwards • Always Maintain 3 points of contact • Never climb into the vehicle with anything in your hands, place items on the seat before entry. Use the proper handholds, do not use the steering wheel and maintain your three points of contact. • Do not use parts of the vehicle that are not designed as handholds or footholds to access the vehicle such as mudguards or bumpers which are not weight bearing parts. Do not rely on ropes, sheets or loads to support your weight as they can rip or tear • Always wear any Personal Protective Equipment. Wear appropriate footwear that is in good condition and has good treads and ankle support. Keep footwear soles clean. • Report any defective, worn or damaged equipment to your employer immediately such as damaged steps or handholds.	1	3	3

Risk Assessment No: WF030	**Task:** Driving in Fox Group Yards	
Prepared By: Derick Bibby	**Date:** 15.01.2025	**RA Review Date:** Annually
	Reviewed By: Lee Hardy	**Date:** 16.01.2025

PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers, Hard Hat

Hazard	Persons at Risk	L	S	R	Control Measures	L	S	R
Collision with Pedestrian	Drivers Pedestrians Site Visitors	5	4	15	• 5 MPH Speed Limit enforced • No U Turns on site • Audible alarms to vehicles & plant • Drivers remain in cab whilst loading/unloading • Visitors escorted when on site • High Visibility Clothing to be worn at all times • Adequate Site Lighting installed • Pedestrians to use designated walkways	1	5	5
Collision with other Vehicles	Drivers Pedestrians Site Visitors	4	3	12	• 5 MPH Speed Limit enforced • Report to Plant Operator before entering processing area if applicable • Banksman utilised when reversing if required • No U Turns on site • Audible alarms to vehicles & plant • Adequate Site Lighting installed •	1	2	2

Collision with objects/buildings	Drivers Pedestrians Site Visitors	3	3	9	• 5 MPH Speed Limit enforced • No U Turns on site • Adequate Site Lighting installed	1	2	2

Risk Assessment No: WF031	**Task:** Working Under Propped Body (Maintenance & Cleaning)	
Prepared By: Derick Bibby	**Date:** 15.01.2025	**RA Review Date:** Annually
	Reviewed By: Lee Hardy	**Date:** 16.01.2025

PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers, Hard Hat, Gloves, Eye Protection

Hazard	Persons at Risk	L	S	R	Control Measures	L	S	R
Falling Body/Skip	Operative	3	5	15	• Engine must be switched off, handbrake applied, and keys removed, to prevent accidental movement of wagon/machine. • Vehicle must be parked on firm, level ground, away from pedestrian access/egress routes. • Always check for overhead obstacles before raising tipper bed/skip. • Use **props** to safely lock booms, rams, arms, and skips. • Stay well clear of crush area until fully raised. • Ensure trailer body/skip is empty before raising to work underneath, to prevent any unnecessary weight on the prop. • Always inspect condition of rams, arms etc when doing any work. • Ensure pedestrians cannot approach vehicle while body/skip is being raised.	1	5	5
Falling objects	Operative	3	3	9	• No loads left in tipper body/skip. • Ensure outside of vehicle is clean and free of lumps of stuck material that could fall and hit operative. • Remove any loose signs, tools or associated kit before raising up for maintenance/cleaning.	1	3	3

Falls From Height	Operative	3	4	12	• When working on wagon above ground level (e.g., at body/chassis level), ensure feet are positioned in designated safe/anti-slip areas, as instructed in machine manual. • Never jump from the body or chassis. • Always use integral climbing/access points to gain access to bed/chassis. Inspect steps, grips, handles on daily checks and before use. • Where fitted, ensure hand rails/handles are secure and clean	2	4	8
Other vehicles/machines	Fitter	2	5	10	• Where possible, all maintenance and cleaning work should be carried out in a designated, secure area, with no passing traffic. • If not possible, an exclusion zone must be established around machine, and plant and vehicles redirected. Site manager to inform site operatives of temporary traffic redirection. • Clean hi-vis clothing to be worn when working on or near wagon.	1	5	5
COSHH & Environmental Hazards	Operative Site personnel Pedestrians	4	3	12	• Ensure engine is switched off when working on raised bed/skip. • Only perform maintenance or cleaning in approved, designated area. • Always wear gloves when handling any fuel or oils. • Always wear gloves and eye protection when pressure washing. • Contain any oil or fuel spillages as soon as they are spotted. • Report all spillages immediately.	2	3	6

Risk Assessment No: WF032	**Task:** Forklift Truck Operations	
Prepared By: Derick Bibby	**Date:** 15.01.2025	**RA Review Date:** Annually
	Reviewed By: Lee Hardy	**Date:** 16.01.2025

PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers, Hard Hat

Hazard	Persons at Risk	L	S	R	Control Measures	L	S	R
Unauthorised/inexperienced operator	FLT driver Persons in the vicinity Material damage	5	5	25	• All FLT operators to be fully trained in the specific category of machine in use • Training to accredited training by either RTITB or ITSSAR • All trained operators and authorised operators to be included on depot location noticeboards with photographs. • **NO** person may operate a FLT without the appropriate training and authorisation unless they are undergoing close supervised training by a qualified instructor • The key must be removed from the FLT when not in use and returned to the foreman's office.	1	5	5
Overturning of vehicle	FLT driver and any persons in area Crush injuries Significant property damage	4	5	20	• Fork lifts to be operated by trained authorised personnel only • Ensure load is evenly distributed • Driver to wear operator restraints at all times • Travel at speeds suitable to the location, a 5mph speed limit is in force at all CRH depots • Avoid excessive or sudden braking • Slow down at corners • Travel with load low to ground but avoiding obstacles • Avoid traversing across slopes	1	5	5

					• Ensure tyre pressures are even and in accordance with the manufacturer's recommendations • Only lift/carry loads within the vehicles specified SWL • Unloaded FLT's should travel with forks downhill when traveling on slopes • When loaded FLT's should travel with forks uphill when traveling on slopes			
Failure of lifting equipment including FLT	Workshop staff, any person in the work area, FLT operator Significant property damage Serious personal injuries	3	5	15	• All equipment must be checked before use for any obvious signs of damage • The FLT shall be subjected to a pre-use check, the check must be recorded, a copy shall be filed in the appropriate inspection record folder. • Any damaged lifting equipment should be quarantined or destroyed to prevent accidental use. • All lifting equipment must have a valid thorough examination report, conducted in adherence to Regulation 9 of the Lifting Operations Lifting Equipment Regulations 1999, this must have been written by a qualified inspection engineer. • The FLT should be regularly maintained, copies of maintenance reports should be recorded and filed for future inspection	1	5	5
Slinging loads	FLT driver, workshop personnel Unsecured loads falling	4	4	16	• Mandatory use of purpose designed and tested fork lift hook attachment • All slings or chains must be checked before use • All lifting equipment must have a valid test certificate issued by a qualified inspection engineer.	1	4	4

	Contact / crush injuries							
Unintended operation of controls	Workshop staff Contact injuries Puncture wounds Crush injuries	3	4	12	• When not in use the FLT should be parked with the mast lowered and tilted forward, the engine should be switched off with the key removed • Never stand on the or near the controls to access the load or anything else outside the cab • Never operate the controls from outside the cab	1	4	4
Personnel carrying	Injuries associated with falls from height Contact injuries, Crush injuries	3	5	15	• Never carry passengers on a FLT • Never use FLT as a personnel lift unless a specific man riding cage is attached. • Be aware of overhead obstructions including roof height, and any objects such as suspended lighting etc. • Be aware of any obstructions between the ground level ant the required operating height of the basket • Any person carried in a man riding basket should be equipped with harness and lanyard suitably anchored prior to lift.	1	5	5

Forks of unused FLT	Trip hazard Contact injuries, trip and fall injuries	3	4	12	• FLT to be parked away from pedestrian work, walkway areas • FLT to be parked with the forks lowered to and the mast forward to ensure the fork tips touch the ground	1	4	4

Risk Assessment No: WF033		**Task:** Operation of vehicle lift table							
Prepared By: Derick Bibby			**Date:** 15.01.2025			**RA Review Date:** Annually			
			Reviewed By: Lee Hardy			**Date:** 16.01.2025			
PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers, Hard Hat									
Hazard	**Persons at Risk**	**L**	**S**	**R**	**Control Measures**		**L**	**S**	**R**
Striking of objects or persons during lifting/ lowering operations	Persons in the vicinity	2	5	10	• Lift operator to visually check the lift table is free from obstructions prior to operating. • Interlocked switch to operate lift movement.		1	5	5
Failure of vehicle lift	Injuries to person in the vicinity, potential for significant machine damage.	3	5	15	• Lifting table is subject to 6 monthly statutory inspections • The SWL is clearly identified at the entrance to the lift table • Service records for the lift are maintained, any observations made during pre-use or statutory inspections are rectified prior to the lift being put into service		1	5	5

Unintended operation of the lift	Persons working on plant raised on the lift	4	5	20	• The lift operation is a two handed operation, the lift mechanism is in a neutral position at rest; it cannot be operated by somebody accidentally knocking the control lever.	1	5	5
Accidental roll off of machines	Person in the machine	4	5	20	• Roll off guards must be in place whilst a machine is on the lift. • Machines with parking brakes should have them fully engaged where practicable. • All machines should be suitably chocked to prevent movement. • The vehicle lift must never be operated with a machine driver is in-situ.	1	5	5
Falling debris from raised machines	Plant maintenance fitter working on raised machine. Eye injuries caused by falling rust etc.	4	3	12	• Fitters to wear protective eyewear whilst working on raised plant equipment • Provision of eyewash station within 10 seconds of work area.	1	3	3

Equipment falling through the ramps	Machine operator Contact injuries	3	4	12	• Ensure plant equipment is suitable for the gauge of the ramps prior to driving on • Where applicable ensure crab/ 4 wheel steering is disabled prior to driving on to the ramp • No tools to be stored/kept on ramps	1	4	4

Risk Assessment No: WF034		**Task:** Operation of Radial arm drill	
Prepared By: Derick Bibby		**Date:** 15.01.2025	**RA Review Date:** Annually
		Reviewed By: Lee Hardy	**Date:** 16.01.2025
PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers, Hard Hat			

Hazard	Persons at Risk	L	S	R	Control Measures	L	S	R
Improper operation	Machine operator	3	4	12	• Only trained staff will use radial arm drilling machines. • All staff will be adequately supervised.	2	4	8
Unsecured workpiece	Machine operator Persons in the vicinity	3	4	12	• Staff will ensure that all workpieces are adequately clamped in position to the work table before the drill is switched on. • All clamps and vices will be maintained in a serviceable condition. • Staff will report all faulty workpiece clamps to their supervisor.	1	4	4

Entanglement	Machine operator	3	4	16	• Staff will ensure that all electrical trip devices are working before using the drilling machine. • Faulty trip devices will be reported and the machine placed out of use until faults are rectified. • Supervisors will carry out regular checks of trip devices. • Staff will ensure that all guards where applicable are in place before using the drilling machine. • Staff will report all damaged or missing guards to their supervisor. • Supervisors will carry out regular checks to ensure that guards are being used.	2	4	8
Ejection of materials	Machine operator Persons in the vicinity	3	5	10	• Staff will ensure that the tapered shanks of drill bits are smooth and free from burrs and are of the correct size for the drill chuck. • All drill bit shanks will be kept free from grit that may cause slipping. • Stop drive when clearing swarf from workpiece / workarea • Use brush / rake to clear away swarf	1	5	5

					• Eye protection must be worn when using radial arm drill			

Risk Assessment No: WF035		**Task:** Gantry Crane Operations						
Prepared By: Derick Bibby			**Date:** 15.01.2025		**RA Review Date:** Annually			
			Reviewed By: Lee Hardy		**Date:** 16.01.2025			
PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers, Hard Hat								
Hazard	**Persons at Risk**	**L**	**S**	**R**	**Control Measures**	**L**	**S**	**R**
Untrained staff	Employee's	3	4	12	• All crane operatives to be in possession of a valid training certificate • Refresher training to be provided on a 5 year basis • Photo boards contained in each workshop environment showing the entitlement to use specific equipment	1	4	4
Equipment or control failure	Employee's	2	5	10	• Check all controls are functioning correctly before proceeding. • Do not exceed safe working load • Remotes must be checked against specific cranes	1	5	5

Failure of lifting accessories	Employee's Material damage	4	4	16	• All lifting accessories to have a valid engineering inspection report conforming to LOLER regulations • All lifting equipment used to be visually inspected prior to commencement of lifting operations	2	4	8
Impact / Crushing	Employee's	2	5	10	• Ensure work area is clear, and access and egress allow room to avoid trapping situation.	1	5	5
Unexpected movement	Employee's	3	4	12	• Emergency procedures should be in place in case of load movement. • Position slings correctly and check load balance, lower and re-sling if not balanced.	2	4	8
Slinging	Employee's	4	4	16	• Only qualified persons to sling the load. • Use correct slings for load taking into account load weight and sling angles	1	4	4

Pedestrian / employee interface	Employee's	3	5	15	• Be aware of other workshop staff. • Do not allow anyone to walk under loads. Exclude everyone from the working area. • Ensure pedestrian walkways are maintained at all times	1	5	5
Obstructed view		2	4	8	• Do not lift any loads if you cannot see others in the vicinity, ask for a competent person to give you clear verbal & physical instructions. • Do not travel with the load blocking the view. • Ensure travel path is clear prior to commencing the procedure.	1	4	4

Risk Assessment No: WF036		**Task:** Working at Height with podium Platforms	
Prepared By: Derick Bibby		**Date:** 15.01.2025	**RA Review Date:** Annually
		Reviewed By: Lee Hardy	**Date:** 16.01.2025

PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers

Activity	Hazards	S	L	R	Control Measures	L	S	R
Working at Height with podium Steps/Platforms	Overhead utilities can cause shock, electrocution. Fall from height, slip, trip, on uneven or unstable ground. (fracture, cuts, sprains, lacerations, crush points	4	4	16	• User must check for overhead hazards where work is to be carried out. • Podium steps must be erected on a firm level base at all times. • The podium steps MUST be erected in accordance with the manufacturer's instructions. Once erected, the user must check the podium steps to ensure all components, hooks and locking mechanisms fit and operate correctly prior to use	4	2	8
Working at Height with podium Steps/Platforms	Podium turning over accessing incorrectly, during repositioning, user slipping off steps causing injury to themselves and others	4	4	16	• Access must via the steps and serrated rungs where provided. Climbing up the outside of the podium steps is not permitted • Podiums are provided with swivel castors. Each castor is fitted with a brake. The brakes must all be 'on' when the steps are in use. This means that men and materials must not be on the platform when the podium steps are moved. • The user must move the podium steps by pushing horizontally near the base ensuring the route is clear at both ground level and up to the height of the steps before starting to push. • Extra care is essential is outriggers are in use. Outriggers are only	4	2	8

					to provide extra stability to the podium steps. Only raise outriggers by the minimum amount possible when moving the steps. If in doubt about stability, get assistance to steady the frame whilst moving the steps. • Work end on if possible and NEVER overreach when working.			
Working at Height with podium Steps/Platforms	Overloading Podium or working platform collapse causing injury, tools falling from height causing injury to others.	4	4	16	• Check safe working load for the working platform. Do NOT overload the steps - one man and hand tools. User **NOT TO** store materials on the steps. • User to always work with the guard rail gate fully closed in the locked position. Never work with the gate open, there is a high risk of falling from height. • Ladders must not be leant against podium steps or stood on the platform to gain extra height. • Never stand on the frame to gain extra height. • When working on podium steps, pushing or pulling work actions such as heavy spanners with torque need to be undertaken with due thought as to where you are to avoid the risk of overturning.	4	2	8

Working at Height with podium Steps/Platforms	Other precautions to avoid injury.	4	4	16	• Do not use another contractor's podium steps. It may not be correctly erected, it may be damaged or incomplete, etc. Use only podium steps provided by your company and erected by the user. • If in doubt about any application, refer to the supplier or manufacturer for advice. • PPE to be worn as per work activity risk assessment.	4	2	8

Risk Assessment No: WF037	**Task:** Operation of pillar drill	
Prepared By: Derick Bibby	**Date:** 15.01.2025	**RA Review Date:** Annually
	Reviewed By: Lee Hardy	**Date:** 16.01.2025

PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers

Activity	Hazards	S	L	R	Control Measures	L	S	R
Operation of a pillar drill	Unfamiliarity of user	4	4	16	• All persons should be familiarised in the use of workshop machinery • Competence should be signed off during workshop induction	4	1	4
Operation of a pillar drill	Entanglement	4	3	12	• Ensure guard is fitted and is correctly adjusted • Do NOT use if any moving parts are unguarded • Wear overalls • Long hair MUST be tied back • Use clamp to secure work piece ensuring hands and clothing are kept well clear of moving parts • Familiarise yourself with the location of the emergency stops	4	1	4

Operation of a pillar drill	Ejection of materials being drilled / broken drill bits / tools	3	3	9	• Adhere to all safety signs • Ensure guard is fitted and adjusted correctly • The use of impact resistant safety goggles is mandatory • Wear overalls • Ensure the drill speed is appropriate to the task • Never leave the chuck key in the drill when finished.	3	1	3
Operation of a pillar drill	Electric shock from drill	4	2	8	• All electrical appliances to be annually PAT tested • Ensure the drill is visually inspected for obvious signs of damage prior to use • Report any issues to the foreman • The drill should be isolated from use until any reported issues are repaired	4	1	4
Operation of a pillar drill	Unstable drill	3	3	12	• Inspect the drills stability prior to use. • Report any issues to the foreman • The drill should be isolated from use until any reported issues are repaired	3	1	3

Operation of a pillar drill	Hot metal	2	3	6	• Select correct drill speed for the task • Allow sufficient time for items to cool • Spray cutting oil on to bit/work piece during drilling when drilling heavy gauge material or large diameter holes to prevent the pieces getting too hot.	2	1	2
Operation of a pillar drill	Build-up of metal cuttings	3	3	9	• Correct drill speed selection, and correctly sharpened drill bits will reduce swarf risk • Observe the need for good house keeping • The drill should be cleaned down after every use • All drill debris/drill bits should be removed	3	1	3

Risk Assessment No: WF038	**Task:** Safe use of Harness	
Prepared By: Derick Bibby	**Date:** 15.01.2025	**RA Review Date:** Annually
	Reviewed By: Lee Hardy	**Date:** 16.01.2025

PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers

Activity	Hazards	S	L	R	Control Measures	L	S	R
Safe use of Harness	Unsafe anchorage point Lack of awareness/training Misuse of equipment Defective/damaged Equipment Use of harness on slopes/unstable ground Combined use of incompatible safety equipment	4	4	16	• Only trained operatives are permitted to use harnesses for work at height operations. • All harnesses undergo routine inspection by an approved competent tester. • Pre-use inspections completed and documented by user. • When any device be it a single point anchor, horizontal safety line system or fall arrest apparatus which has arrested a fall it must be taken out of service. The advice of the manufacturer of the • device / system must be sought and remedial measures as specified undertaken before re-commissioning of the system. • Emergency rescue plan in place and briefed to all operatives.	4	1	4

Safe use of Harness	Unsafe anchorage point Lack of awareness/training Misuse of equipment Defective/damaged equipment Use of harness on slopes/unstable ground Combined use of incompatible safety equipment	4	4	16	• At no point is work to be carried out on unstable/uneven ground. • Should any defects be found, this must be quarantined immediately, and line manager notified. • Should any changes in conditions occur, stop work immediately for risk assessment to be re-evaluated and reissued. • Harness must be attached at the highest point. Attach the lanyard above yourself wherever possible. • In a full harness, free-fall should not exceed 2metres, in other types, no more than 0.6 metres..	4	1	4
Safe use of Harness	Pre-existing medical conditions which may be worsened by fall in harness Use of harness when operative weighs more than 100kg (15st	4	2	8	• All personnel complete medical selfdeclaration forms during the onboarding process. • The manufacturer must be consulted for specific data, i.e., body weight limits prior to use. • Ensure harnesses fit workers properly and are comfortable, should and back pads can reduce harness pressure.	4	1	4

	10lb) Body strain discomfort							

Risk Assessment No: WF039	Task: Emergency Response Procedure	
Prepared By: Derick Bibby	Date: 15.01.2025	RA Review Date: Annually
	Reviewed By: Lee Hardy	Date: 16.01.2025

PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers

Activity	Hazards	S	L	R	Control Measures	L	S	R
Site Accident or Incident at Operator Trials, and events	Accident or incident on the site.	3	4	12	• Assess situation - ensure NO ONE puts themselves in DANGER. • Try and make the scene safe, If possible • Take calm and clear action to active the care management systems within the company.	3	2	6
First aid.	Incorrect help. Non trained First Aiders Correct Assessment of Patient	4	4	16	• Trained first aider to administer first aid on scene whilst HCP is called to scene via 999 or 112 system. • Ensure only trained first aiders carry out treatment to the skill set qualified. • Follow first aid training and the DRABC system. (Danger Response Airway Breathing Circulation)	4	1	4

Call relevant emergency services to scene	No phone number. Incorrect phone number. Lack of information	3	4	12	• Nearest phone location and emergency phone numbers to be in the site cabin at designated first aid point. • First aid location to be advised in the site induction to all personnel. • Correct Number for Emergency in the UK is **999** or **112** • • Try and give as much information as • you can about the incident or accident. • • Stay on the line until the operator has • completed all questions and repeated • your details.	4	1	4

Risk Assessment No: WF040	Task: Emergency Spill Response	
Prepared By: Derick Bibby	**Date:** 15.01.2025	**RA Review Date:** Annually
	Reviewed By: Lee Hardy	**Date:** 16.01.2025

PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers

Activity	Hazards	S	L	R	Control Measures	L	S	R
Correct PPE	Lack of PPE Incorrect or unsuitable PPE Misuse of PPE	3	4	12	• ALL Operatives must follow Minimum PPE Required • All Operatives Must wear correctly fitting PPE. • Extra PPE of protective TIVEK Suits and Wellington Boots, oil resistant must be worn before work starts. • Brother Keeper and check each other's PPE.	3	2	6
Protection of Water courses / drains	Risk of Spill entering the water course or any underground drains / service pipes. Environmental Damage Pollution	3	4	12	• All Drain covers must be covered with spill lids • Spill barriers must be placed to keep the spill away from water course and contain within an area • Spills should not be left unattended, and Fox Personal should remain at the spill site • Site drawing will help highlight key areas of services and should be taken from site safety file if needed.	4	1	4

Limiting spread of spill area Assessment of Spill	Increasing the amount of pollution or environmental damage Not getting the correct form of help and support for the spill Lack of information on the site	3	4	12	• STOP AT SOURCE • Ensure that site operatives place all of the spill kit suppliers around the area. • Ensure that the spill pads are placed flat on the floor for best soaking up. • Assessment of the amount of product spill to see if the site can manage or if it is deemed an Emergency. • Ensure you know all the facts before contacting the office	3	2	6
Cleaning up spill / making safe	Poor cleaning operation Slips, trips falls. Members of the Public entering spill zone	3	4	12	• Ensure that all materials are cleared away correct and placed into bins. • Ask the Event Supervisor to double check before opening up the area to the public or other site operatives. • Ensure the that the area has been washed down correctly to reduce slips, trips and falls. • In larger spills Grit mating can me supplied for smooth surfaces but arrange date and time for collection (If required) • Keep public away from the spill with clearly marked fencing	3	2	6

Disposal of waste from site	Correct information Informing the correct members of the team	3	4	12	• Ensure you have the full information and facts about the spill before phoning into the office. Including date, time, location, products involved, areas effected, staff involved, roughly the volume spill and current site action. • IN THE EVENT YOU FEEL IT IS AN EMERGENCY SPILL, FOLLOW CASE/ INCIDENT MANAGEMENT STEPS INFORMATION ON **WF039** • Report the incident of a spill within 30 mins of incident. • Contact the Operations team on the office number and they will contact all 3 rd Parties including the client	3	2	6

Risk Assessment No: WF041	**Task:** First Aid	
Prepared By: Derick Bibby	**Date:** 15.01.2025	**RA Review Date:** Annually
	Reviewed By: Lee Hardy	**Date:** 16.01.2025

PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers

Activity	Hazards	S	L	R	Control Measures	L	S	R
This assessment will consider the first aid requirements/ needs of the business	Aggravation of injuries or illness due to the lack of provision of First Aid. The risks in not providing suitable first aid assistance and associated management procedures include inadequate identification and treatment of injuries or ill health and potential litigation claims and prosecution	4	3	12	• Sufficient number of First Aiders present (in accordance with guidance and overall assessment of employee numbers and activities. • Medical plans are assessed when deciding the level of First Aid cover required. • Specialised trained First Aiders are on site if the depot has a member of staff or a visitor with specific medical need e.g. asthma, physical disabilities, epilepsy or severe allergy. • Employee medical declarations are assessed when deciding the level of First Aid cover needed. • A member of staff that has received epi-pen training is available at all times. • HSQE Dept record all accidents on the Compliance Drive, investigate root cause and corrective actions if any this information is shared to the relevant persons via email, TBT communication • There is sufficient cover for premises departments. • First Aid kits will be checked and replenished regularly. • 999 – 112 numbers displayed around the building	3	3	9

This assessment will consider the first aid requirements/ needs of the business	Insufficient number of First Aiders due to multiple buildings and buildings with split levels	4	3	12	• First Aid cover is available in the building at all times. • More than one First Aider are located in on the premises. • First Aider can cover one or two levels of the build. • First aid kits are available on each floor these are placed in accessible locations, which all first aiders are aware.	3	3	9
This assessment will consider the first aid requirements/ needs of the business	Office location – accessible A&E Department.	4	3	12	• The office / Workshops nearest hospital is: • **Chorley and South Ribble Hospital, Preston Rd, Chorley PR7 1PP Tel: 01257 261222**	3	3	9

Safe System of Work
The Use of Step Ladders

Ref. SSoW-002	Author.	Lee Hardy	Date:	01.09.2022

Reviewed By: Name	Derick Bibby	Date of Review:	29.08.2026
Record of Amendments			

	Next Review Due Date:	31.08.2027

Overview

The following information provides guidance on the company's Safe System of Work for works that involve the use of Step Ladders.

Falls from height are one of the biggest causes of workplace fatalities and major injuries. One of the most common causes are falls from ladders.

All employees have a responsibility for their safety and the safety of others by adhering to these safety systems.

The Operative must always refer to any associated Risk Assessment and Method Statements prior to starting works.

Hazards Identified

- Adverse weather
- Cuts and abrasions
- Falls from height.
- Slips & Trips.

Personal Protective Equipment (PPE) Requirements









Rules when using Stepladders.

- Check all four stepladder feet are in contact with the ground and that the Steps are level;
- Only carry light materials and tools;

- Do not overreach;
- Do not stand and work on the top three steps (including a step forming the very top of the stepladder) unless there is a suitable handhold;
- Ensure any locking devices are engaged;
- Try to position the stepladder to face the work activity and not side on. However, there are occasions when a risk assessment may show it is safer to work side on when you cannot engage the stepladder locks to work face on because of space restraints in narrow aisles, but you can fully lock it to work side on;
- Try to avoid work that imposes a side loading, such as side-on drilling through solid materials (e.g. bricks or concrete);
- Where side-on loadings cannot be avoided, you should prevent the steps from tipping over, e.g. by tying the steps. Otherwise, use a more suitable type of access equipment;
- Maintain three points of contact at the working position. This means two feet and one hand, or when both hands need to be free for a brief period, two feet and the body supported by the stepladder.

Do's and Don'ts in the Use of Stepladders

Do's

- **Check step ladder is safe to use.**
- **Ensure mechanisms operate / engage correctly.**
- **Free from damage**
- **Right height for job**
- **Steps are clean.**
- **All four feet are attached and in good condition.**
- **Only use on firm and level base**
- **Ensure all for feet on ground.**
- **Use non-slip device when using on smooth surfaces.**
- **Wear appropriate footwear.**
- **Maintain three points of contact.**
- **Always face the work area**


Don'ts

- **Never overreach.**
- **Never exceed the ladder duty rating**
- **Never stand higher than the third rung from top of the step ladder unless it has a designated hand hold.**

Things to look for:


Check the locking bars.

Do not use the stepladder if locking bars are bent or the fixings are worn or damaged as the ladder could collapse.

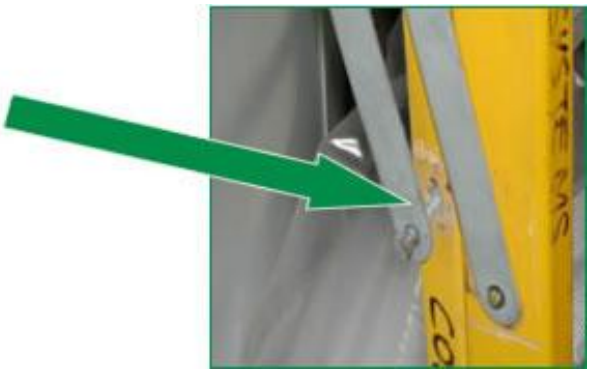


Check the feet.

Do not use the stepladder if feet are missing, worn or damaged as the ladder could slip.

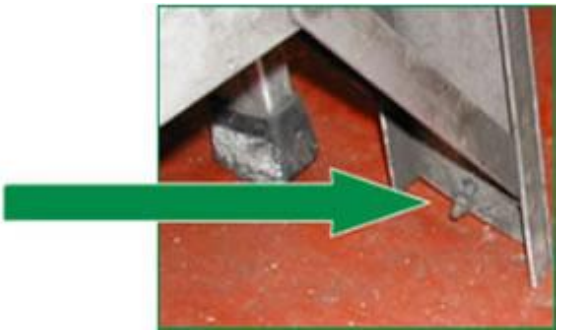

Check the stepladder platform.

Do not use the stepladder if the platform is split or buckled, the stepladder could become unstable or collapse.

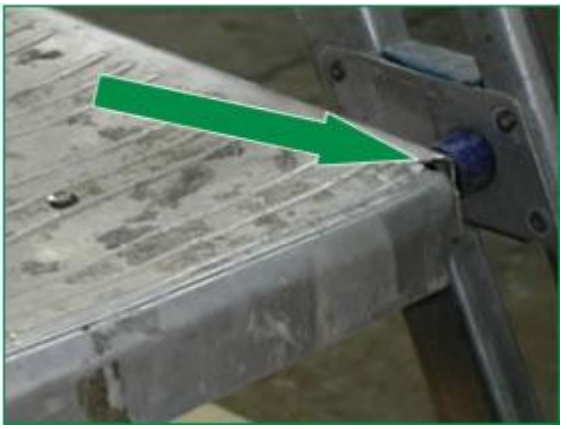

Check the steps/treads.
Do not use the stepladder if the steps/treads are contaminated as they could be slippery.


Check the steps for strength and stability.

Do not use the stepladder if the fixings are loose as they could collapse.



Check the stiles.

Do not use the stepladder if stiles are bent or damaged as the ladder could buckle or collapse.

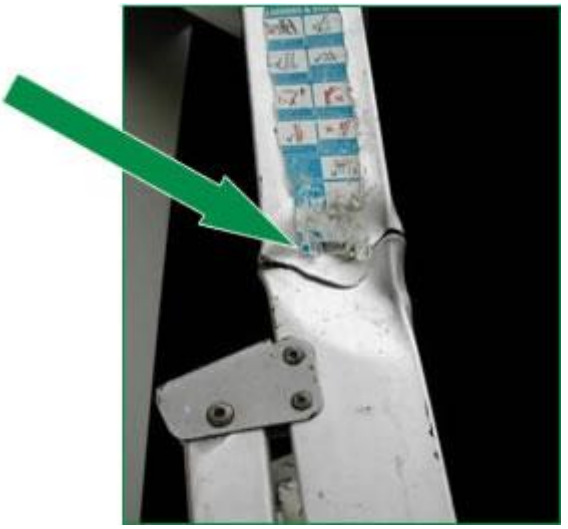

Safe System of Work
Undertaking Vehicle Tyre Repairs

Ref. SSoW-010	Author.	Lee Hardy	Date:	01.09.2022

Reviewed By: Name	Derick Bibby	Date of Review:	29.08.2026
Record of Amendments			

	Next Review Due Date:	31.08.2027

O v e r v i e w

Explosive energy

Inflated tyres contain a large amount of stored energy. For example, the sidewall of a typical commercial vehicle (CV) tyre has over 34 tonnes of force acting on it. Tyres are designed to withstand this but if they are damaged or used while flat, or significantly underinflated, they may fail. The force can then be released explosively at an angle of up to 45 degrees from the rupture (which is often, but not always, the face of the sidewall), resulting in a destructive air blast and the ejection of high-speed particles. If the wheel is not restrained, it can fly metres through the air.

Personal Protective Equipment (PPE) Requirements







Safe Workplaces

The information below specifically deals with the Risks relating to tyre inflation. WF024 Tyre Maintenance and WF026 General Jacking and Blocking in the Fox Group Wagon Fitters Handbook (FG1.0) cover all Risks associated with Tyre Repairs and the necessary Control Measures.
Risks Associated with Tyre Repairs include:
■ manual handling of the tyre and wheel;
■ collapse of an elevated vehicle;
■ being struck by other vehicles (roadside);
■ explosion of the tyre or disintegration of the wheel during inflation. Risk of failure During Inflation
There will be an increased risk of failure:

■ following tyre repair;
■ where there has been sidewall damage (e.g. after a tyre has been run flat or significantly underinflated);
■ when fitting a tyre to a split-rim wheel.

Safety during tyre inflation

Cuts and splits should be clearly visible by inspection and there are industry standards on whether a repair should be attempted. However, damage to the internal steel or textile cords may not be obvious. This can be caused by impact (e.g. hitting a kerb or pothole) or if the tyre is run significantly underinflated (normally taken as below 80% of its recommended pressure). When significantly underinflated, the tyre's sidewall flexes excessively and the cords become increasingly damaged the longer the wheel is run. Also, deflation may not be detected for some time, particularly on multi-wheel axles, where the exterior tyre is undamaged.
This internal damage may not become obvious until the tyre is reinflated and a bulge occurs. At this stage, the additional strain placed on the adjacent cords can cause them to break in rapid succession, spreading around the sidewall until the casing splits apart violently. This is commonly known as a 'zipper-failure'. To reduce this risk:
■ Before deflating a tyre, check the pressure and chalk the reading on the tyre wall. Remember, low tyre pressure may have caused tyre wall damage.
■ Do not inflate any tyre that has been significantly underinflated until it has been adequately checked. Examine wheels and tyres (externally and internally) for signs of damage, e.g. cracks, 'marbling' (black lines), bulging, soft spots or exposed steel cord in the tyre carcass. If in doubt, do not reinflate the tyre.
■ When reinflating, take particular care to stay outside the likely explosion trajectory. Watch and listen for signs that might indicate a zipper failure. If you suspect a problem, do not approach the tyre to deflate it – use the quick-release connection at the operator's end of the hose.
■ Use a clip-on chuck to connect the airline with a quick release coupling at the operator's end (this allows tyre deflation from a safe position if problems occur).
■ Use airline hoses long enough to allow the operator to stay outside the likely explosion trajectory during inflation.
■ Use enough bead lubricant when seating the tyre. Consider removing the valve core or using a 'beadblaster' if seating is difficult.
■ Remove the airline after use to prevent air seepage and possible over inflation.
■ Don't use valve connectors that require the operator to hold them in place.
■ Don't exceed the manufacturer's recommended tyre pressure for the size and rating of the tyre.
■ Don't use 'unrestricted' airlines (ie without a gauge or pressure control device).
■ Don't allow the control valve to be jammed open (which could allow the operator to leave the inflating tyre unattended).

Tyres on commercial vehicles

Extra safety measures are needed for inflating larger, well-based (ie single-piece) CV tyres above 15 psi. This includes some light CV tyres which are inflated to around 70 psi and may cause serious injury in the event of failure. The extra measures include using a restraining device such as:
■ a strong, firmly secured tyre inflation cage. Consider lining this with mesh to retain debris. For fixed installations, it is helpful to mark the safety exclusion zone on the workshop floor as a reminder to staff;
■ a secured horizontal stool and associated clamping mechanism;
■ a portable restraint. Examples include a lightweight cover that encloses the tyre and wheel rim. This

may be particularly useful for off-site repairs. In the event of an explosion the fabric contains projected debris. Fabric devices may need to be replaced after an explosion.

Safe System of Work
Recovery of Trapped Wagons

Ref. SSoW-011	Author.	Lee Hardy	Date:	01.09.2023

Reviewed By: Name	Derick Bibby	Date of Review:	29.08.2026
Record of Amendments			

	Next Review Due Date:	31.08.2027

Overview

The following information provides guidance on the company's Safe Systems of Work for the Recovery of Trapped Wagons.

Wagons can become trapped in mud, which can present a difficult and dangerous job to get them moved. The task of recovery needs to be properly managed and controlled.

All employees have a responsibility for their safety and the safety of others by adhering to these safety systems.

AUTHORISED PERSONNEL ONLY TO PARTICIPATE IN THE RECOVERY ACTIVITIES

Hazards Identified

- Crushing
- Cuts and abrasions
- Adverse weather
- Vehicle movements
- Manual handling
- Slips & Trips
- Snap-back of chains, straps or shackles under load

Personal Protective Equipment (PPE) Requirements









Operations

Upon arrival at site:

Report to the site office and sign in.

The recovery operative will take charge of the task and the wagon driver will cooperate fully.

Make sure that the site manager is aware that the wagon is to be recovered and all persons not involved to be clear of the area.

Initial Assessment

Is the wagon recoverable with the equipment available?
If not, contact third party recovery company.
If recovery operator concludes that the wagon is recoverable, they will start the process to move it.

Must consider:

Condition of wagon – Is it road worthy? Will it need to be towed back to the yard? Is it clean enough to be driven/towed on the public highway?

Weather – Is heavy rain or snow going to impede the recovery process?

Ground conditions – Is the wagon stuck in deep mud? How much mud is there surrounding the wagon? Once moved, can it move on its own, or will it need towing to another area?

Level ground – Is the wagon on a level surface? Is the wagon sunk in at an angle? Is there level ground from which to make a safe recovery?

Overhead hazards – Are there any overhead cables, GS6 goalposts or bridges that will prevent recovery in a certain direction?

Passing traffic – Are there moving vehicles close by? Is there a pedestrian walkway nearby? Is the wagon currently adjacent to a public highway? Is there any mobile plant passing close by?

Slips/Trips – Is the recovery area accessible by foot? Are the any serious concerns regarding access by foot?

Equipment – Size of excavator? Capability of chains/straps? Condition of equipment? Is all equipment fit for purpose?

Equipment:

360 Excavator

- CPCS Operative
- Suitable for job (weight capacity)
- Safe condition (daily checks done, no issues flagged)
- In-date certification

Chains/Straps

- Correct weight rating (metal tag, strap label)
- Pre-use visual checks (no cracks, stretches, warps etc)
- Good condition

Recovery:

If recovery with excavator and chains/straps is suitable and safe, the recovery operative can begin the process of freeing the wagon.

Initially, an attempt may be made to nudge the wagon out, using the designated bar across the back of the wagon. If this does not work, use the following steps:

- Clear immediate area of pedestrians, vehicles, and machines that are not part of recovery process.
- Excavator operative to manoeuvre machine into place, as directed by recovery operative.
- Both wagon and excavator to be switched off and isolated, with hand brakes applied.
- Shackle to be fixed to excavator, in correct position.
- Chain/Strap to be fixed to towing eye on wagon
- Chain/Strap to be fixed to shackle on excavator
- Recovery operative to move back to safe area, ensuring line of sight with all parties involved.
- Recovery operative to then provide step-by-step instructions to excavator operative and wagon driver, dependant on the individual situation and how they wish to proceed.
- Wagon will be freed and then moved to a safe area.

Once the wagon has been moved to a safe area, an assessment must be made of any damage caused and roadworthiness.

No machines or wagons shall be allowed on the public highway in a dangerous or unsafe condition. If there is any damage that gives cause for concern, a recovery will be undertaken.

Snap-Back and Exclusion Zone:

A chain, strap, shackle or towing eye that fails under load can whip back with enough force to kill or seriously injure anyone in its path. The following controls apply to every recovery:

- Only use equipment rated and marked for towing or recovery (towing chains, recovery straps, bow shackles) with a capacity suitable for the gross weight of the wagon.
- Lifting chains, slings and other lifting accessories must never be used for towing or recovery.
- Only attach to the manufacturer's towing eyes or rated recovery points – never to axles, springs, bumpers or tow balls.
- Set an exclusion zone of at least 1.5 times the length of the chain/strap on all sides of the line of pull. Nobody may enter the zone or stand in line with the chain/strap while it is under tension.
- The wagon driver stays in the cab with the door closed; the recovery operative directs from outside the zone.
- Fit a recovery damper or blanket over the centre of the chain/strap to absorb energy if it fails.
- Take up the slack slowly and pull steadily – no snatching or jerking.
- Stop if equipment shows damage or stretching, or an anchor point deforms. Quarantine damaged or overloaded equipment.

Safe System of Work

Changing HGV and Trailer Wheels and Tyres

Ref. SSoW-012	Author.	Lee Hardy	Date:	01.09.2022

Reviewed By: Name	Derick Bibby	Date of Review:	29.08.2026
Record of Amendments			

	Next Review Due Date:	31.08.2027

Overview

The following information provides guidance on the company's Safe System of Work for changing wheels and tyres on HGVs, tractor units and trailers, both in Fox Group depot workshops and off-site at customer sites or the roadside.

Vehicles slipping off jacks, collapsing supports and wheels falling from the hub can cause crushing injuries, entrapment and death. Wheel changes carried out off-site on unsuitable ground carry the greatest risk.

All employees have a responsibility for their safety and the safety of others by adhering to these safety systems.

The Operative must always refer to any associated Risk Assessment and Method Statements prior to starting works, including WF019 Working Under Vehicles, WF024 Tyre Maintenance and WF026 General Jacking and Blocking in the Fox Group Wagon Fitters Handbook (FG1.0).

Hazards Identified

- Vehicle slipping off a jack or support
- Collapse of jacks, axle stands or packing
- Crushing and entrapment under the vehicle
- Wheel falling off the hub during lifting or removal
- Soft, uneven or sloping ground
- Vehicle rollaway or unexpected movement
- Moving traffic and plant at customer sites and the roadside
- Tyre explosion or rim failure during inflation
- High-pressure air lines
- Manual handling of heavy wheels
- Noise and vibration from impact tools
- Cuts, abrasions and trapped fingers
- Property damage to wheel arches, mudguards and lamps

Personal Protective Equipment (PPE) Requirements










Gloves, safety footwear, hi-vis clothing and safety glasses must be worn at all times. Wear head protection where there is a risk of head injury, and hearing protection when using impact wrenches or compressors.

Rules Before Lifting Any Vehicle

- Only trained, competent and authorised fitters may jack vehicles or change wheels;
- Complete a point of work risk assessment before starting. At customer sites, agree the work location with the customer and follow their site rules;
- Only lift on firm, level hardstanding. If the ground is soft, uneven or sloping, STOP and arrange for the vehicle to be moved to a safe location before any lift;
- Apply the parking brake, switch the engine off and remove the keys. Display “Do Not Drive / Work in Progress” at the cab;
- Segregate the work area with cones and barriers. Use hazard lights and a beacon at the roadside;
- Use only jacks, axle stands and base plates that are rated for the load, visually inspected before use and in date for thorough examination (LOLER);
- Jacks and stands must only be placed at the vehicle manufacturer’s jacking points;
- Never use sockets, tools, bricks or other improvised items as jack spacers or packing;
- Never rely on a jack alone. Fit axle stands before removing a wheel, and never go under a vehicle supported only by jacks;
- Where safe jacking cannot be achieved on site, use the approved tyre contractor.

How to Change a Wheel Correctly

Step 1 – Choose a safe location and segregate the area.
Position the vehicle on firm, level hardstanding away from traffic. Set out cones and barriers around the

work area. Parking brake on, engine off, keys removed.



Illustrative image

Step 2 – Chock the wheels.
Chock the wheels that will stay on the ground, on the opposite side and axle to the wheel being changed, to stop any movement.



Illustrative image

Step 3 – Loosen the wheel nuts with the wheel on the ground.
Crack each wheel nut loose by about a half turn while the tyre is still carrying load on the ground. Do

NOT remove the nuts at this stage – they must keep the wheel on the hub while the vehicle is lifted.



Illustrative image

Step 4 – Jack at the manufacturer's jacking point.

Place a rated jack on a flat steel base plate, directly under the manufacturer's jacking point (normally the axle beam). Operate the jack from the side, never from underneath the vehicle.



Illustrative image

Step 5 – Raise the wheel and fit an axle stand.

Raise the axle until the tyre is just clear of the ground. Fit a rated axle stand with the correct locking pin

under the axle next to the jack. Lower the load onto the stand. Do not rely on the jack alone.



Illustrative image

Step 6 – Remove the nuts and the wheel.
Only now remove the wheel nuts. Use a wheel dolly or lifter to support the wheel and roll it off the studs. Stay to the side and never put any part of your body under the vehicle.



Illustrative image

Step 7 – Refit the wheel and torque the nuts.
Clean the hub and studs and check them for damage. Fit the replacement wheel and run the nuts on by hand. Lower the vehicle, remove the stand and jack, then tighten the nuts in a diagonal (star) pattern to

the manufacturer's specified torque using a calibrated torque wrench. Fit wheel nut indicators.



Illustrative image

Step 8 – Check the tyre pressure and re-check the torque.
Inflate to the manufacturer's pressure using a clip-on chuck with a long hose and in-line gauge, standing outside the line of the tyre wall. Any tyre removed from its rim must be inflated in a safety cage. Re-check the wheel nut torque after the settling period stated by the manufacturer and record the work.



Illustrative image

Do's and Don'ts When Changing Wheels

Do's

- **Complete a point of work risk assessment.**
- **Lift only on firm, level hardstanding.**
- **Chock the wheels that stay on the ground.**
- **Loosen nuts with the wheel on the ground.**
- **Use rated, inspected and in-date jacks and stands.**
- **Use base plates under jacks and stands.**
- **Jack only at manufacturer's jacking points.**
- **Fit axle stands before removing the wheel.**
- **Use a wheel dolly or lifter for heavy wheels.**

- Torque nuts with a calibrated torque wrench.
- Re-check torque after the settling period.
- Stand outside the tyre wall line when inflating.

Don’ts

- Never remove all wheel nuts before lifting.
- Never go under a vehicle supported only by jacks.
- Never use sockets, tools or bricks as jack spacers.
- Never jack on soft, uneven or sloping ground.
- Never jack on bumpers, underrun bars or body panels.
- Never exceed the safe working load of a jack or stand.
- Never inflate a tyre fitted to a rim without a cage.

Safe System of Work

Securing Plant & Attachments to Trailers

Ref. SSoW-014	Author.	Lee Hardy	Date:	01.09.2022

Reviewed By: Name	Derick Bibby	Date of Review:	29.08.2026
Record of Amendments			

	Next Review Due Date:	31.08.2027

Overview

The following information provides guidance on the company's Standard Operation Procedures for works involving the securing of Plant, Machinery & Attachments to Vehicle Trailers prior to Transportation.

All employees have a responsibility for their safety and the safety of others by adhering to these codes of practice.

Hazards Identified

- Adverse weather
- Crushing
- Cuts and abrasions
- Vehicle movements
- Falls from height
- Manual handling
- Slips & Trips

Personal Protective Equipment (PPE) Requirements









This document provides guidance on the measures necessary for the safe carriage of tracked and wheeled engineering plant by vehicles constructed to comply fully with the Motor Vehicles (Construction and Use) Regulations 1986 and thereby permitted unrestricted use of the roads. It does not deal with the carriage of large machines etc. on special purpose vehicles whose use on the roads is restricted by current regulations. However, the general advice contained in this section will apply in many cases.

It is recommended that manufacturers of plant equipment either fit lashing points or provide a recommended lashing scheme for each of their vehicles.

Heavy engineering plant is normally transported on purpose-built vehicles which are specifically designed to provide easy loading and unloading facilities and are usually provided with adequate anchorage points for attaching the lashings. Lighter engineering plant may in some circumstances be carried on general-purpose vehicles. However, in these cases the method used to secure the load should provide equal security to that obtained by using purpose-built vehicles.

High loads may endanger bridges etc. over roads, so when these are carried it is essential that the driver know the exact height of the load, and the width of the load at that height. Also, loads with a high centre of gravity can seriously affect the vehicle's stability and such items of engineering plant should only be transported on vehicles with a low platform height.

A wheeled or tracked vehicle must be lashed down in position on the carrying vehicle, with the parking brake applied. The effectiveness of the parking brake on its own will be limited by the frictional resistance between the vehicle and the deck of the carrying vehicle, and even in normal driving conditions this will be inadequate and the vehicle will therefore require additional restraint. This additional restraint should take the form of a lashing system and some arrangement whereby the load is prevented from moving either forward or to the rear by an obstacle (or obstacles) securely fixed to the vehicle. These should butt against the wheels or tracks or some other part of the equipment carried.

All moveable assemblies such as jibs, brackets, booms and cabs etc. must be left in the position recommended for transportation by the manufacturer and must be secured to prevent movement relative to the main body of the machine.

Before the machine is moved onto the trailer all loose dirt that may otherwise come off and obstruct the highway or damage other vehicles must be removed. The ramp, the tyres of the machine and the bed of the trailer itself should all be free from oil, grease, ice etc. so that the machinery cannot slip. The transporter wheels should be chocked at the front and rear.

When the machine has been stowed and the engine stopped, the pressure in the hydraulic system should be relieved by moving all of the control levers through all their positions. This operation should be done at least twice. Controls should be set so as to prevent movement of ancillary items during transit.

Bags, tool kits, or other heavy objects should not be left loose in the operator's cab of the plant being carried.

The positioning of the engineering plant and any of its detached assemblies should be arranged so that the legal axle weight limits are not exceeded and the safe handling of the vehicle is not impaired. The clearance between the undersides of low loading vehicles and the road surface should be checked before moving off.

The machine should be positioned on the carrying vehicle's platform so that forward movement is prevented either by part of the main body of the vehicle, e.g. swan neck, step or headboard, or by an attached transverse member securely attached through the platform to the vehicle's chassis frame.

All items removed from the machine such as buckets, grabs, blades, shovels and lifting appliances should be lashed to the deck of the vehicle.

Wheeled and light tracked machines should be restrained so that the effect of bouncing caused by road shocks transmitted from the carrying vehicle and amplified by the machine's tyres or suspension units is minimised. Where possible the suspension unit of the machine should be locked and vertical movement limited by lashings or other means of restraint. Otherwise the machine's frame or chassis should be

supported on blocks.

Unless the machine is supported, the full contact area of its tyres, tracks, or drums should rest on the deck of the carrying vehicle. If the tracks extend outside the frame of the carrying vehicle then the machine's frame or chassis should be supported.

The machine should be restrained against forward, backward and sideways movement by chain or webbing lashings attached to anchorage points on the vehicle. All lashings should incorporate some form of tensioning device.

In deciding the number of anchorage points to be used when arranging a restraint system, the following factors should be considered:

- The need to position the machine to achieve the correct load distribution to meet the legal axle load requirements and to ensure that the vehicle's handling is not impaired.
- The extent to which other load restraint features is incorporated in the design of the vehicle.
- Whether the machine has wheels, tracks or rollers.
- The weight of the machine to be carried.
- A minimum of four separate anchorage points should be used.

The following guidelines apply to mobile engineering plant, that is vehicles fitted with hoists, working platforms, support legs and so on.

- High loads may endanger bridges and it is essential that the driver knows the height of the vehicle and has it displayed inside the vehicle cab.
- All moveable assemblies must be placed in the position and locked, where possible, as recommended for transportation by their manufacturer.

Restraining Devices

Apart from specialised fixing devices, the selection of materials for use in tie down schemes for engineering plant will be limited to chains, steel wire rope, webbing and their associated tensioning and coupling devices.

Where a transverse (side to side) beam is used as a baulk it should be securely fixed so that all loads imposed on it are transmitted to the carrying vehicle's chassis frame. Where individual wheels or drums are chocked with blocks or scotches these must be robust enough to resist crushing and be securely attached to the vehicle's platform where possible.

The lashings or securing devices should only be attached to those parts of the engineering plant, which are of sufficient strength to withstand the stresses likely to be imposed on them.

Where engineering plant comes equipped with dedicated lashing points for use when being transported, these points should be used and the vehicle secured as per manufacturer instructions. Care should be taken before lashing to lifting points as these may not be suitable for restraint purposes.

The loaded machine should be inspected after the vehicle has been driven for a short distance in order to check that no movement has taken place and that restraining devices are fully secure. Periodic inspections


should be made during the course of the journey.

Suggested Tie Down Schemes


The tie down schemes described in the following diagrams and related schedules are typical systems which might be adopted for the securing of the various types of engineering plant. Variations to any of these schemes would be acceptable provided that all the basic safety precautions outlined earlier have been complied with.


For simplicity, the figures show mainly chains used for lashings but in practice other lashing materials may be substituted.


Tractors	**Control Measure / Precaution**
Possible hazard	
1. Forward movement of machine	**A.** Front wheels butted against bulkhead or against chocks against trailer bulkhead. **B.** Lashing chains from rear towing hook to anchorage points on trailer side members. **C.** Rear wheels butted against chocks.
2. Rearward movement of machine	**A.** Rear wheels butted against bulkhead or against chocks against trailer bulkhead. **B.** Lashing from front axle or towing hook to anchorage points on trailer side members. **C.** Front wheels butted against chocks.
3. Sideways movement of machine	**A.** Restraint provided by lashings used for forward and rearward restraint.
4. Movement of ancillaries	**A.** Lashings across bulking to anchorage points on trailer side members.

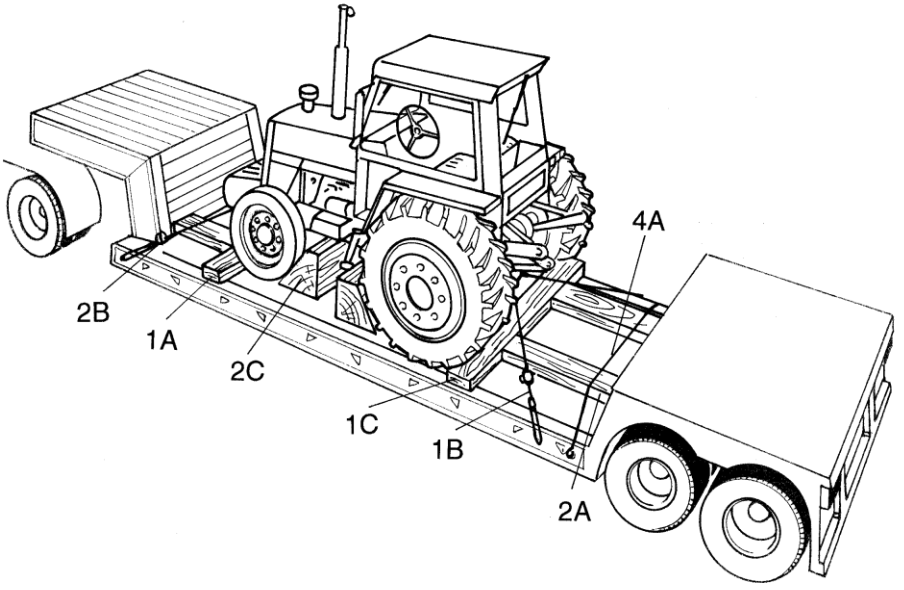


Fork Lift Trucks	Control Measure / Precaution
Possible hazard	
1. Forward movement of machine	**A.** Front and rear wheels of truck butted against chocks fixed to trailer bed.
	B. Truck lashed to trailer using manufacturers lashing points.
2. Rearward movement of machine	**A.** As **A.** and **B.** above.
	B. Forks lowered on to deck and hydraulic pressure relieved by operation of controls twice with engine switched off.
	C. Lashing from lashing point to anchorage points on trailer side members.
3. Sideways movement of machine	**A.** Restraint produced by lashings used for forward and rearward restraint.

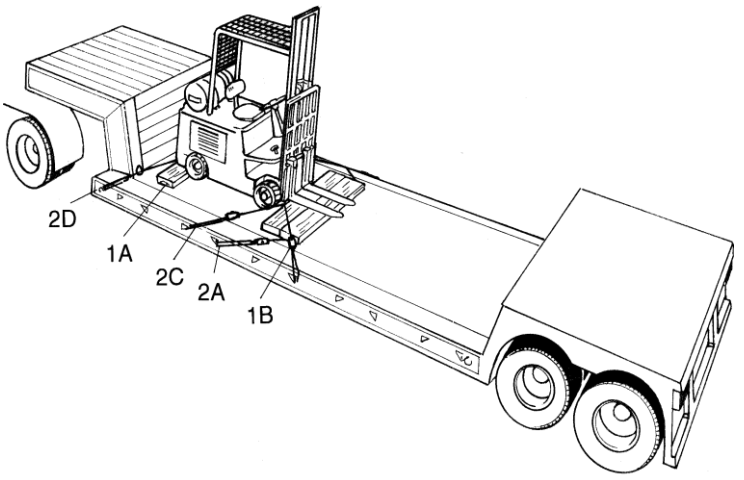


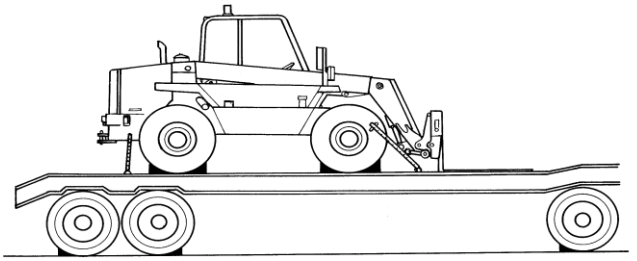

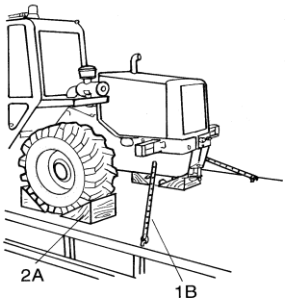


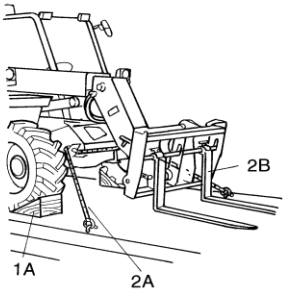


Ride-On Roller	Control Measure / Precaution
Possible hazard	
1. Forward movement of machine	**A.** Front roll butted against bulkhead or against chocks against trailer bulkhead. **B.** Lashing from frame and/or across member to anchorage points on trailer side members. **C.** Lashing from rear frame or towing hook to anchorage points on trailer side members.
2. Rearward movement of machine	**A.** Rear roll butted bulkhead or against chocks against trailer bulkhead. **B.** Lashing from frame and/or cross member to anchorage points on trailer side members. **C.** Lashing from front frame or towing hook to anchorage points on trailer side members.
3. Sideways movement of machine	**A.** On articulated equipment engaging the pivot lock mechanism will prevent articulation. **B.** Sideways movement will be prevented by the diagonal lashings used to prevent forward and rearward movement.

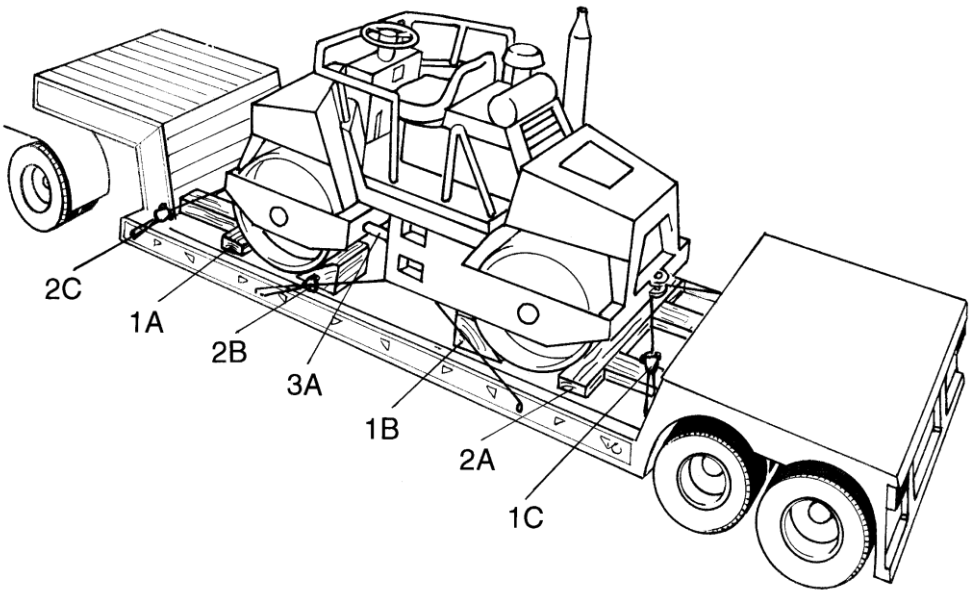


Towed Roller	Control Measure / Precaution
Possible hazard	
1. Forward movement of machine	**A.** Front roll butted against bulkhead or against chocks against trailer bulkhead. **B.** Lashing from and across the front of the machine body to anchorage points on trailer side members. **C.** Lashing around and across the rear of the rear wheel strut to anchorage points on trailer side members.
2. Rearward movement of machine	**A.** Rear roll butted against chocks. **B.** Lashing from and across the rear of the machine body to anchorage points on trailer side members.
3. Sideways movement of machine	**A.** Restraint provided by restraints to prevent forward and rearward movement.
4. Movement of ancillaries	**A.** Lashing across bulking.

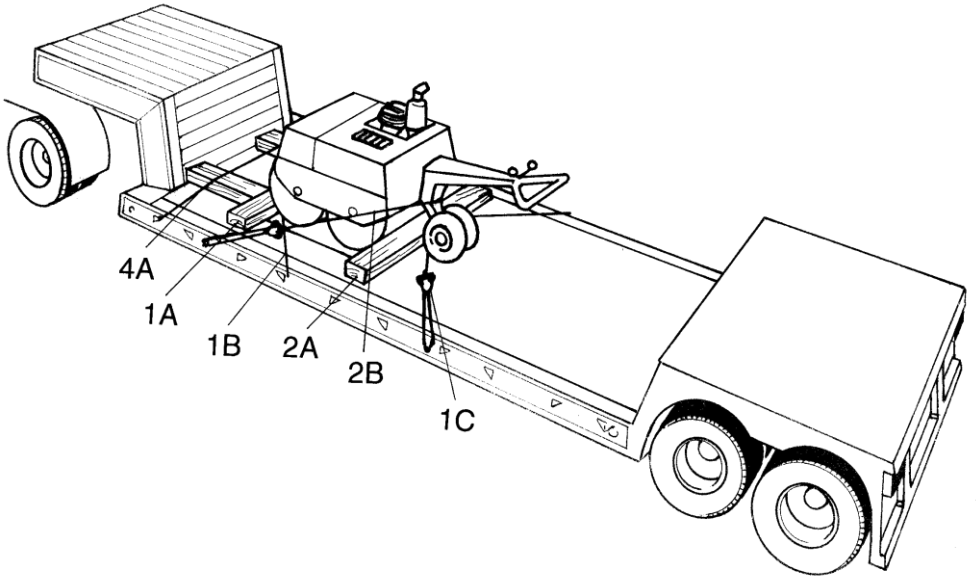


Wheeled Shovel	Control Measures/Precautions
Possible hazard	
1. Articulation of front part of machine relative to rear part	**A.** Pivot locking bar bolted in position, in the case of pivot steer machines.
2. Movement of bucket assembly	**A.** Relieve hydraulic pressure in system by operating all controls twice, with the engine switched off. **B.** Lashings to secure bucket to the anchorage points on the trailer side members.
3. Forward movement of machine	**A.** Rear wheels butted against chocks against trailer bulkhead, or rear ballast weight butted against tractor bulkhead if strong enough. **B.** Lashing from front axle or towing hook to anchorage points on trailer side members.
4. Rearward movement of machine	**A.** Front wheels butted against chocks or bucket butted against rear bulkhead. **B.** Lashing from rear axle or towing hook to anchorage points on trailer side members.
5. Sideways movement of machine	**A.** Restraint provided by diagonal lashings used to prevent forward and rear movement.

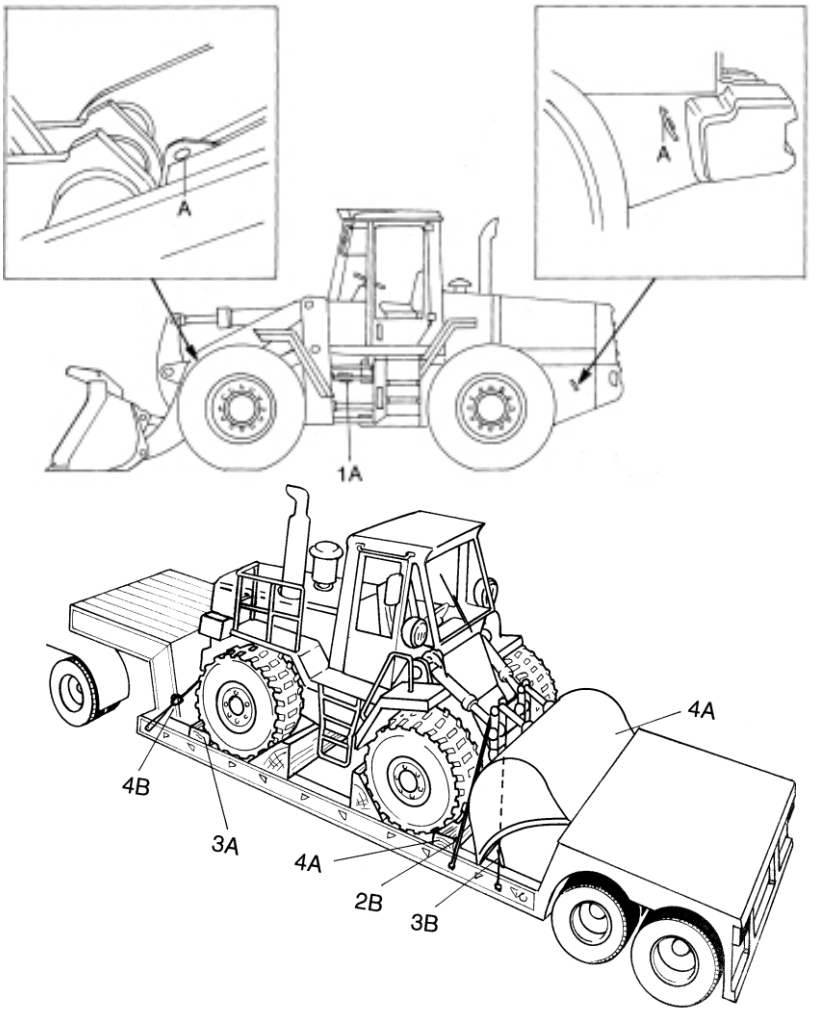

Excavator (Tracked and Wheeled)	Control Measures/Precautions
Possible hazard	
1. Machine striking overhead obstruction	**A.** Stow equipment in position to give lowest overall height.
2. Movement of cab and superstructure relative to chassis of machine	**A.** Relieve hydraulic pressure by operating all controls twice, with engine switched off.
	B. Apply slew lock on slewing ring.
3. Movement of dipper arm away from stowed position	**A.** Lashing securing the bucket to anchorage points on the trailer side members.
4. Forward movement of machine	**A.** Tracks or wheels butted against the trailer bulkhead where weight distribution allows or butted against chocks.
	B. Lashing chains from excavator front towing point or chassis cross member to anchorage points on trailer side members.
5. Rearward movement of machine	**A.** Tracks or wheels butted against chocks.
	B. Lashing chains from excavator rear towing point or undercarriage lashing point to anchorage points on trailer side members.
6. Sideways movement of machine	**A.** Restraint provided by lashing chains used to prevent forward and rearward movement. Do not wedge heavy objects between the bucket and the machine chassis.
7. Movement of ancillaries	**A.** Lashings over baulking's.

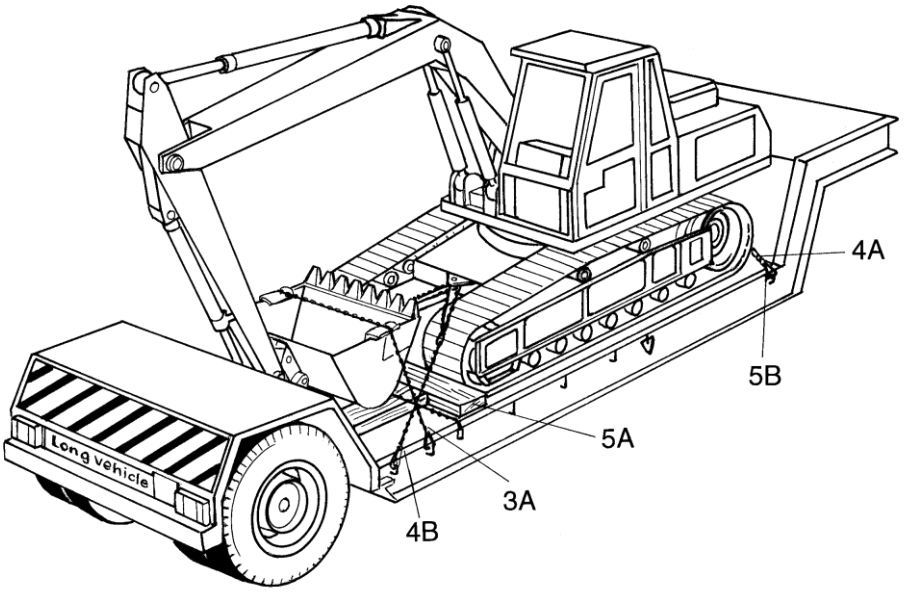

Bulldozer	Control Measures/Precautions
Possible hazard	
1. Forward movement of machine	**A.** Bulldozer blade removed placed on front deck of trailer. **B.** Tracks butted against chocks against trailer bulkhead. **C.** Lashing from bulldozer blade U-frame trunnions to anchorage points on trailer side members.
2. Rearward movement of machine	**A.** Tracks butted against chocks against trailer bulkhead. **B.** Lashing from towing point to trailer side members.
3. Sideways movement of machine	**A.** Restraint provided by restraints to prevent forward and rearward movement. **B.** Lash from side members to trailer anchorage points.
4. Movement of ancillaries	**A.** Bulldozer blade stowed on front deck. Lashing across blade to trailer side members. **B.** Lashing across bulking.

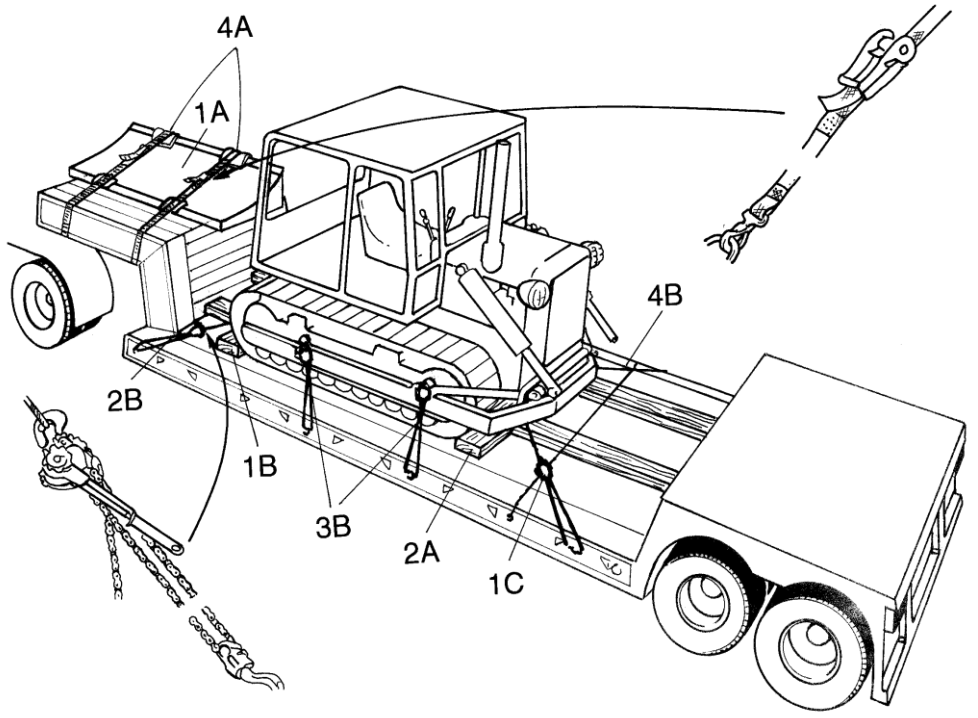

Safe System of Work

Use of Vehicles on Construction Sites

Ref. SSoW-047	Author.	Lee Hardy	Date:	01.09.2022

Reviewed By: Name	Derick Bibby	Date of Review:	29.08.2026
Record of Amendments			

	Next Review Due Date:	31.08.2027

Overview

Every year in the construction industry, people are killed or injured as a result of being struck by moving plant. Accidents can occur throughout the construction process, from groundworks to finishing works. Managers, workers, site visitors and the public can all be at risk if construction vehicle activities are not properly managed and controlled.

Many construction transport accidents result from the inadequate segregation of pedestrians and vehicles. This can usually be avoided by careful planning, particularly at the design stage, and by controlling vehicle operations during construction work. Inadequate planning and lack of control are the root causes of many construction vehicle accidents, which often involve:

- Vehicles or their loads striking people, particularly when reversing;
- Vehicles striking services and obstructions;
- Manufacturers' instructions for safe use being disregarded;
- Inadequate training of drivers and Marshall; and
- Unsafe loading and transportation of materials on vehicles.

Successful, safe management of construction vehicle activities is based on the provision and maintenance of workplaces, vehicles, drivers and work practices.

Much of the occupational health and safety law relating to construction transport operations is qualified by the term 'so far as is reasonably practicable', the same qualification applies to most of the guidance given here. The precautions that are required in a specific situation will depend on the extent and nature of the particular risks involved. High-risk situations require higher standards of precautions than low-risk situations. The examples of hazard elimination and risk control given in this guidance do not cover every possible situation and may not be relevant to all sites, but they can still be good practice.

The following is practical guidance on how to prevent vehicle accidents on construction sites. It provides information on planning and managing vehicle operations; selecting and maintaining vehicles, and safe driving and working practices. It will be useful to clients, designers, employers, managers, the self-employed, employees, safety representatives and plant hirers.

The key message of the guidance is:

Construction vehicle accidents can be prevented by the effective management of transport operations throughout the construction process.

This guidance is divided into four main sections:

1. Safe workplaces;
2. Safe vehicles;
3. Safe driving and work practices; and
4. Managing construction transport.

Relevant Legislation

A legal framework for the management of construction transport risks is contained in the following legislation. This list is not exhaustive.

- Health and Safety at Work etc Act 1974 (HSW Act) or Health and Safety at Work (Northern Ireland) Order 1978;
- Management of Health and Safety at Work Regulations 1999
- Construction (Design and Management) Regulations 2015 (CDM);
- Work at Height Regulations 2005; and
- Provision and Use of Work Equipment Regulations 1998 (PUWER)

For more detailed guidance, please look to the regulations and any approved codes of practice. Make sure to also consider other health and safety regulations that may apply

Personal Protective Equipment (PPE) Requirements










Safe Workplaces

Planning a safe site should begin before the construction phase. There are specific duties placed on all individuals involved in the construction process, including clients, designers, CDM coordinators and contractors. The section 'Managing Construction Transport' explains these roles in more detail.

This section gives guidance on how to establish a safe workplace for vehicle operations. The overall message is simple—safe workplaces are achieved by separating pedestrians and vehicles and providing hazard-free traffic routes.

Pedestrian and Vehicle Separation

Regulation 36 of CDM requires that 'every construction site shall be organised in such a way that, so far as is reasonably practicable, pedestrians and vehicles can move safely'.

Principal contractors should ensure that pedestrians and vehicles are adequately separated by establishing:

- Pedestrian-only areas from which vehicles are completely excluded;
- Designated pedestrian routes to work locations;
- Vehicle-only areas, especially where space is limited or traffic is heavy; and
- Vehicle routes around the site.

Pedestrian Routes

Establish pedestrian routes on-site that provide safe pedestrian access to work areas. Pedestrian routes should either be located a safe distance away from areas of vehicle activity or should be provided with appropriate physical protection, such as substantial fencing and/or kerbs, in order to prevent pedestrians from being struck by vehicles or their loads. Pedestrian routes should:

- Be clearly separated from vehicle routes by fencing and/or a kerb, or other suitable means;
- Be wide enough to safely accommodate the number of people likely to use them at peak times;
- Allow easy access to work areas;
- Be kept free from obstructions and tripping hazards;
- Have clear signs;
- Ensure pedestrian safety where they cross main vehicle routes;
- Provide pedestrians with a clear view of traffic movements at crossings and where gates used by pedestrians lead onto traffic routes; and
- Clearly mark separate access points for pedestrian use at loading bays and site gates that are used regularly by construction vehicles.

Chestnut paling, metal barriers or plastic fencing will be adequate to separate pedestrian routes that are a safe distance away from the edge of vehicle routes. Where vehicles are present for only short periods, and the work
presents little risk to pedestrians, satisfactory segregation can be achieved by using traffic cones and warning tape or similar means to identify the working area from which pedestrians are prohibited.

At points where large numbers of pedestrians cross busy vehicle routes—eg near site welfare facilities, appropriate traffic control measures should be implemented, such as designated

pedestrian crossing points and traffic control systems. Vehicle movements around the site can be restricted to specified times. Pay special attention to pedestrian routes that individuals with disabilities may use, in order to ensure their safety—for example, by providing ramps for people in wheelchairs and tapping boards for the visually impaired.

In some circumstances, it may not be reasonably practicable to achieve physical segregation between pedestrians and vehicles—eg during infrequent, short-duration, low-risk unloading operations. In such cases, Marshall and safe systems of work should be used to control vehicle and pedestrian movements. Systems of work should ensure that:

- Drivers and Marshall are in contact at all times;
- Drivers and Marshall understand the appropriate signals and site rules;
- The Marshall controls the vehicle movements and gives clear warnings to pedestrians; and
- The Marshall is in a safe place.

Vehicle Routes

Establish vehicle routes on-site that:

- Are segregated from pedestrian routes;
- Minimise the need for reversing operations with one-way systems and turning points;
- Are adequate for the number, type and size of the largest vehicles that may use them;
- Have firm surfaces, adequate drainage and safe profiles to allow for safe vehicle movements;
- Are kept clear of obstructions and other hazards;
- Avoid steep gradients and tight bends;
- Avoid hazards such as excavations, edges of structures, and fuel or chemical storage areas;
- Have the minimum necessary number of junctions;
- Are clearly signed with signposts, and where appropriate, road markings (eg on concrete or tarmac roads) showing the right of way, etc;
- Have speed limits and speed control measures specific to site conditions and the types of vehicles using the route—eg some lift trucks may be unsuitable for passing over road humps; and
- Keep site vehicles, delivery vehicles and private vehicles apart, where possible, by establishing private vehicle parking areas, specified delivery routes and storage areas.

Primary vehicle routes should be established to handle the most common vehicle movements on site—eg deliveries and access to principal work areas. Primary vehicle routes should be located away from the main pedestrian routes, wherever possible. Where risks are high because of the number and nature of vehicle movements, control measures can include setting up different routes for different vehicle types and activities— eg for muck-away operations and material delivery. Establish secondary vehicle routes leading to temporary work areas that ensure vehicle and pedestrian safety.

Common Vehicle Route Hazards On-site	Control Measures
Contaminated land and muddy sites	Establish primary routes which avoid hazardous areas and prevent vehicles from becoming bogged down. Provide vehicle wash-down facilities and road sweeping machines to maintain site transport routes (and the public motorway) in a safe condition.
Areas of restricted visibility, width or weight limits	Prevent unsuitable vehicles from using routes. Provide warning signs, visibility aids, such as mirrors, and suitable traffic control measures—eg traffic lights, passing points or one-way systems.
Temporary structures, liquefied petroleum gas (LPG) storage areas, areas of limited headroom, electric cables, pipelines, etc	Provide physical protection and warning signs in all situations which have significant danger potential if struck by vehicles—eg safety barriers to protect LPG storage areas as well as goalposts, bunting and barriers where there is a risk of overhead services and other hazards being struck by vehicles.
Edges of roadways, excavations, pits, watercourses, spoil heaps, etc	Provide physical barriers such as safety banks or stop blocks to restrain vehicles. Timber baulks and wheel stops should be fixed in position to avoid displacement.

Signs should be provided to warn pedestrians and drivers of hazards, to give instructions on safe work practices and to indicate the correct routes to follow. Signs and road markings should be clear, follow the standard road traffic signs and comply with the Health and Safety (Safety Signs and Signals) Regulations 1996 (also 1996 in Northern Ireland).

Loading and Storage Areas

On-site work should be planned to minimise vehicle movements and to avoid unnecessary deliveries as well as the double-handling of materials on-site. The location of loading and storage areas needs to be carefully considered. When there is little on-site storage space, off-site storage areas may be required for the temporary storage of materials. Loading and storage areas should:

- Be located away from pedestrian-only areas and main pedestrian routes;
- Exclude pedestrians so far as reasonably practicable;
- Have one-way systems and safe exit points;
- Have sufficient room for vehicle movements; and
- Have adequate fixed lighting, signs and appropriate visibility aids for drivers.

Public Protection

Relevant precautions should be taken in order to prevent construction vehicle operations from endangering the public. Depending on the nature of the site and work, include the provision of:

- Suitable vehicles;
- Appropriate pedestrian and vehicle traffic management systems;
- Site fencing;
- Marshall or security guards; and
- Effective vehicle immobilisation systems with key custody procedures.

Measures need to be taken to protect members of the public where vehicles cross the public footway, and control their movement to ensure safety—eg by using barriers and a Marshall. Drivers, particularly when working in public areas, should always remove the keys from the ignition when they park and leave their vehicles.

Where there are many pedestrians or vulnerable groups passing the site—eg close to schools, hospitals and major shopping centres, restrictions may have to be placed on traffic movements to and from the site. Deliveries to the site can be restricted to specific times in order to prevent congestion at peak times. Site security measures should ensure unauthorised persons, especially children, do not have access to sites.

Traffic routes on partially occupied housing sites require careful management to protect the public, particularly children, from construction vehicle operations. The following measures can reduce the risks to the public on partially occupied sites:

- Phase occupation of dwellings so that site traffic can be excluded from occupied areas;
- Segregate public vehicle and pedestrian routes from site vehicle and site worker routes;
- Provide safe places for public parking and safe access to show homes;
- Provide relevant information for visitors on public safety; and
- Update information to take account of any changes in traffic routes that may affect the visiting public and residents.

Information

All drivers and pedestrians entering a site need to be informed of any site transport hazards and relevant site rules, including the correct traffic routes to use. The amount and detail of information given needs to reflect the nature of site hazards. Information can be provided by:

- Verbal instructions upon arrival at site;
- Site induction;

- Issue of site maps to drivers;
- Giving site-specific delivery instructions when ordering materials from suppliers; and
- Displaying maps and site rules at site entrance points and elsewhere—eg in canteens.

Any changes made to site traffic routes need to be communicated to site workers and visiting drivers. Workers and their safety representatives should be consulted on any changes which may significantly affect their health and safety. The information on transport management contained within the workplace transport plan will need to be updated as the project progresses and traffic routes and site rules change.

Summary of Control Measures to Ensure Safe Site Traffic Routes

Description	Vehicle Routes	Pedestrian Routes
Site entrance and exit	Ensure adequate sight lines, signs, maps, security and vehicle management procedures.	Separate entrance point, signs and instructions.
Parking areas	Separate site vehicle, delivery and worker parking areas. Provide a temporary lorry parking/holding area by the site entrance to manage deliveries and allow vehicles to turn away from the site if not allowed to enter the site.	Provide safe pedestrian routes from parking areas to offices, welfare facilities and workplaces. Provide clear signs and instructions to workers.
Offices and welfare facilities	Establish offices and welfare facilities and other areas of frequent pedestrian activity away from primary site traffic routes. Provide signs and pedestrian and vehicle control measures where vehicle routes cross pedestrian routes.	Provide safe pedestrian routes from parking areas to workplaces. Provide clear signs and instructions to pedestrians.
Primary traffic routes	Primary traffic routes should allow the safe passage of site and delivery vehicles away from pedestrian routes. Establish one-way systems where possible.	Establish primary pedestrian routes that provide safe access to work areas away from main vehicle routes where reasonably practicable. Provide physical protection where pedestrians are at risk of being struck by vehicles or their loads. Establish crossing points and pedestrian control measures where necessary.
Secondary traffic routes	Define safe routes for all vehicle operations on-site.	Provide protected pedestrian routes in areas where vehicles regularly pass.
Storage areas and loading bays	Establish storage and loading areas away from areas of frequent pedestrian activity.	Provide separate pedestrian access, clear signs and instructions for workers.

Vehicle facilities	Establish vehicle washing areas, sheeting gantries and weighbridges off primary vehicle routes.	Provide safe pedestrian access across vehicle routes to all places of work.

Safe Vehicles

This section provides guidance on health and safety aspects of selecting and maintaining construction vehicles.

Vehicle Selection

The design of some vehicles presents hazards, such as restricted visibility and lack of driver protection from the effects of overturning, noise and vibration. Some old designs of site dumpers allowed the vehicle to be knocked easily into gear as the driver dismounted.

Choosing the right vehicle for the job is an essential part of effective vehicle management. The selected vehicle needs to be capable of performing its designated tasks safely. The following are important factors to consider:

- Stability under all foreseeable operating conditions;
- Safe access to and from the cab and other working locations on the vehicle;
- Effective braking systems;
- Adequate visibility for the driver all around the vehicle;
- Headlights, a horn, windscreen wipers and warning devices—eg reversing alarms;
- Physical guards to protect dangerous parts such as power take-off shafts, chain drives, trapping points and exposed exhaust pipes;
- Protection for the driver from work hazards—eg working at height and falling from the vehicle, falling objects and the effects of the vehicle overturning; and
- Protection for the driver from the weather, noise, vibration, noxious fumes and dusts.

Manufacturers' specifications need to be considered when choosing vehicles for construction and civil engineering work. In particular, load and stability limits need to be taken into account when choosing vehicles for use on uneven and sloping ground. Some vehicles, especially those involved in lifting operations (such as some lift trucks and telescopic handlers) require flat, compacted surfaces to operate safely.

Effective braking systems, including parking brakes, are essential for the safe use of vehicles. Parking brakes should be fitted on trailers over 0.75 tonnes maximum gross capacity. Where parking brakes are not fitted, trailer wheels need to be chained or locked to prevent movement when the trailer is parked. Wheel chocks should be used to prevent unintended vehicle and trailer movements when parked on sloping ground. Trailers with maximum gross weights between 0.75 tonnes and 3.5 tonnes should have at least an overrun brake (ie an inertia brake), while trailers over 3.5 tonnes should be fitted with braking systems linked to the towing unit.

Where the risk of vehicles overturning is significant—eg dumpers used on sloping ground, vehicles should be fitted with rollover protective structures (ROPS). Where there is a significant risk of falling materials endangering the driver, e.g. excavators used in demolition work, vehicles should be fitted with falling-object protective structures (FOPS).

Adequate visibility for the driver is a key factor in the safe use of vehicles on-site. Adequate visibility from the driving position is judged on the basis of risk and the state-of-the-art technology. Visibility aids such as closed- circuit television (CCTV) and convex mirrors should be fitted to vehicles to overcome significant blind spots along the sides and at the rear of large vehicles, particularly where pedestrians are at risk.

Vehicle Inspection and Maintenance

Construction vehicles are used in harsh environments and require effective maintenance regimes to prevent defects from developing. A programme of daily visual checks, regular inspections and servicing schedules should be established according to the manufacturer's instructions and the risks associated with each vehicle.

Plant hire companies need to provide information with all plant and equipment they supply in order to enable it to be used and maintained safely. Contractual arrangements between user and employer should set out who is responsible for maintenance and inspection during the hire period—these should be made clear to allparties.

Vehicles should have a maintenance log to help manage and record vehicle maintenance operations. Employers should establish procedures designed to encourage drivers to report defects or problems, and ensure that problems with vehicles are corrected. Planned inspection and maintenance needs to follow the manufacturer's instructions and include, where appropriate:

- Braking systems;
- Seat belts;
- Tyres, including condition and pressures;
- Steering;
- Convex mirrors, CCTV and other visibility aids;
- Lights and indicators;
- Safety devices such as interlocks;
- Warning signals;
- Windscreen washers and wipers;
- Firefighting equipment;
- Condition of cab protection devices, eg ROPS and FOPS;

- Functional checks on the vehicle, including controls and starting systems;
- Correct location of guards and panels on the vehicle; and
- Other accessories, such as quick couplers and their locating pins, correctly fitted and in place.

Safe Driving and Work Practices

This section gives advice on safe work practices. It contains guidance on managing the risks arising from the use of vehicles, including reversing, loading and vehicle signalling. It briefly covers safe work practices relating to types of construction vehicles, but in all cases the manufacturer's guidance on safe use should be followed.

The main duty to manage transport risks on-site rests with the principal contractor. However, subcontractors, drivers and Marshall all need to follow safe working practices. All employers need to carefully select, train and supervise drivers and Marshall, and monitor working practices.

Reversing

Vehicle reversing operations cause a third of all fatal transport accidents in the construction industry, producing an average of five deaths and 20 major injuries per year. The most effective way of managing the risks from reversing is to avoid the need for reversing manoeuvres by providing one-way systems, turning areas and drive- through loading and unloading areas.

When planning and controlling site vehicle operations, the hierarchy of control measures for reversing operations (below) should be followed. Vehicles required to reverse on-site should provide adequate visibility around the vehicle for the driver to ensure safety. Safe systems of work need to be devised and followed for all reversing operations, particularly when Marshall are used to control third-party risks or assist in the accurate positioning of the vehicle. Warning systems offer the lowest level of protection in the hierarchy and, if they are the only precaution used, are only appropriate for low-risk situations.

Hierarchy of control measures for reversing operations

1. Eliminate the need to reverse.
    - Implement one-way systems around the site and in loading and unloading areas.
    - Provide designated turning areas.
2. Reduce reversing operations.
    - Reduce the number of vehicle movements as far as possible.
    - Instruct drivers not to reverse, unless absolutely necessary.
3. Segregate vehicles and pedestrians.
    - Design vehicle reversing areas that allow adequate space for vehicles to manoeuvre safely, exclude pedestrians, and are clearly signed to have

physical stops or buffers to warn drivers that they have reached the limit of the safe reversing area.

4. Ensure safe systems of work are followed.
    - Fit CCTV, convex mirrors, Fresnel lens, etc in order to overcome restrictions of visibility from the driver's seat, particularly at the sides and rear of vehicles.
    - Fit radar proximity devices to vehicles to indicate to drivers when there are objects near the vehicle.
    - Ensure everyone on-site understands site rules on vehicle safety.
    - Drivers and Marshall need to be in constant communication during reversing operations.
    - Marshall should not be put at risk from vehicle movements—eg by standing directly behind reversing vehicles.
    - Ensure all vehicles on-site are fitted with appropriate warning devices.
5. Provide warnings when vehicles are reversing
    - Ensure reversing warning lights and alarms are in good working order, and instruct workers to keep clear of moving vehicles.

Loading of Vehicles

Load and unload vehicles on level ground in areas away from passing traffic, pedestrians and overhead hazards—eg bridges, pipelines or electrical cables. Loads need to be:

- Of suitable height and width for the vehicle and road conditions on-site;
- Secured to prevent movement;
- Evenly loaded and distributed to keep the centre of gravity as low as possible and to prevent stresses on vehicle structures;
- Positioned on vehicles and transported so that they do not adversely affect vehicle stability; and
- Checked to ensure they will not fall uncontrollably when restraints are removed during unloading.

No vehicle should be loaded beyond its safe working capacity. Loads that project out from the body of the vehicle should be indicated by a warning flag or sign.

Gantries that fit closely to the vehicle can provide safe means of access for workers during the manual sheeting of wagons. They are particularly appropriate for regular sheeting operations on similar vehicles.

The precautions necessary for managing the risks presented by hazardous loads when transported by road need to be followed on-site and supplemented as necessary in relation to

site risks; for example, lorries carrying LPG cylinders should not be parked near scaffolds where there is a risk of falling objects striking them. Site rules should require visiting drivers to inform site management of any hazardous loads on their vehicles.
Appropriate fire precautions need to be instituted for loads that contain substances with specific fire hazards— eg fuels and solvents. Information about the hazards of dangerous loads and necessary precautions in the event of an accident should be issued to all site drivers.

Where vehicles are transported on-site on low-loaders, they should be:

- Dismantled so far as possible to keep them within the dimensions of the carrying vehicle;
- Emptied of fuel, so far as possible;
- Relieved of hydraulic pressure by moving all control levers through all positions, twice, before transportation; and
- Secured and restrained to prevent movement, with their parking brake applied and wheels and rollers chocked. Moveable assemblies, such as jibs, dismantled parts and ancillary equipment, need to be secured following the manufacturer's recommendations.

Loading and offloading areas should be of sufficient size to allow vehicles to move without striking obstructions or causing hazards to others. Access ramps used for getting vehicles on and off low-loaders should be of adequate strength and size.

Drivers

Many accidents are the result of untrained or inexperienced workers driving construction vehicles. Employers need to ensure that all drivers are competent to perform the work they are given.

Driver competence may be judged on the basis of experience, recognised training and testing of knowledge and ability. Certificates of training from recognised training schemes help demonstrate competence. Driver training records should be kept up to date.

The following points need to be considered when selecting people to drive construction vehicles:

- Drivers should be competent in the safe operation of the vehicles and their daily maintenance checks;
- Training certificates should be checked for validity;
- Training alone is not competence and you should ensure that the operator has enough experience on the class of the machine to operate it safely and enough time to familiarise themselves with a new machine, if appropriate;
- Caution should be exercised with drivers who may be unfamiliar with the hazards of construction sites, including trainees and new staff; and
- No one under the influence of alcohol or drugs should be permitted to drive any vehicle.
- Drivers should ensure that they are familiar with the use of all the additional

attachments on the machinery that they are operating, such as lifting points and quick hitches on excavators, as these may vary.

- Drivers should be aware of their own responsibilities and avoid taking risks and shortcuts.

Driver's Safe Work Practices Checklist

- Only operate vehicles if you are competent and authorised to drive them.
- Do not drive when your abilities are impaired by ill health, poor vision, prescribed or illegal drugs or alcohol.
- Make sure you fully understand the operating procedures of the vehicles you control and all of the accessories you are using.
- Know the site emergency procedures.
- Understand the system of signals used on-site.
- Visiting drivers: seek appropriate authority to enter the site and operate vehicles.
- Know the safe operating limitations of your vehicle, particularly relating to safe maximum loads and gradients.
- Carry out daily checks on your vehicles and report all defects immediately to supervisors.
- Follow site procedures and comply with all site rules.
- Do not drive at excessive speeds.
- Follow established site traffic routes.
- Ensure that windows and mirrors are kept clean and clear.
- Keep the vehicle tidy and free from items that may hinder the operation of vehicle controls.
- Do not allow passengers to ride on vehicles unless safe seating is provided.
- Park vehicles on flat ground wherever possible with the engine switched off, the handbrake and trailer brake applied, and where necessary, use wheel chocks.
- Do not reverse without checking behind the vehicle for pedestrians, vehicles or obstructions.
- Where visibility from the driving position is restricted, use visibility aids or a Marshall. Stop if you lose sight of the Marshall or the visibility aid becomes defective.
- Do not remain on vehicles during loading operations, unless the driver's position is adequately protected.
- Ensure loads are safe to transport.
- Do not attempt to get on or off of moving vehicles.

- Do not make adjustments with the engine running and guards removed.
- Do not smoke during refuelling operations.

Marshall

Marshall used to direct pedestrian and vehicle movements need to be competent in the methods used to ensure everyone's safety. Safe systems of work need to be provided to prevent Marshall being struck by vehicles. The provision of refuges, observation positions, control rooms, radio communications and CCTV systems can help remove Marshall from areas of vehicle movement. Marshall should be authorised by site management and easily distinguished on-site by the use of colour-coded helmets, clearly labelled high-visibility jackets, etc.

Marshall' Safe Work Practices Checklist

- Ensure you know and understand relevant safety procedures and the correct signalling system.
- Ensure drivers understand the correct signalling systems.
- Signal instructions clearly.
- Ensure you are visible to the driver and the driver is visible to you; if not, stop the moving vehicle.
- Stand in a safe location at all times.
- Warn pedestrians, and make sure they are kept away from vehicle operations.
- Wear appropriate protective equipment, including high-visibility clothing.
- Report work hazards to supervisors.
- Make sure you can get to and from your work location safely.
- Do not ride on the vehicle you are directing unless you are in a designated safe position.
- Do not direct vehicles if your ability is affected by alcohol or drugs.

Safe Working Practices for Specific Vehicles

The following provides brief details of safe work practices for several types of common construction vehicles. Before using any vehicle for the first time, drivers should refer to the manufacturer's instructions for safe use.

Site Dumpers

Site dumpers are involved in many fatal and major accidents in the construction industry resulting from:

- Using site dumpers on gradients beyond their safe working capacity;
- Overturning;

- Inexperienced and untrained drivers operating site dumpers;
- Inadequate maintenance of braking systems;
- Carrying passengers in unsafe positions; and
- Failing to provide stop blocks at the edges of excavations and spoil heaps.

Safe Use of Site Dumpers Checklist:

- Do not drive on gradients in excess of those safe for the dumper (see manufacturer's instructions).
- Allow only competent people to drive site dumpers.
- Provide wheel stops at the edges of excavations, pits, spoil heaps, etc in order to prevent site dumpers falling when tipping. The blocks provided need to be positioned a sufficient distance away from any unsupported edges and slopes to prevent the weight of the vehicle causing collapse.
- Provide purpose-built platforms for regularly transported items—eg large drums.
- Implement safe systems of work at all times, and monitor their effectiveness.
- Do not operate the site dumper's controls unless seated on the driving seat.
- Do not carry passengers unless purpose-built seats are provided.
- Manoeuvre carefully on sloping ground.
- Drive at appropriate speeds for site conditions.
- Load on flat ground with brakes applied.
- Get off the dumper when it is being loaded.
- Ensure loads are distributed evenly and do not let them obscure your vision.
- Securely fix loads which may cause danger if they move.
- Stop the vehicle, take it out of gear and apply the handbrake before tipping loads.
- Do not drive around with the skip in the vertical discharge position.
- Use the appropriate towing pins (not bent pieces of reinforcement bar).
- Do not leave the engine running when you leave the vehicle.
- Be aware of the differences in performance of site dumpers when loaded and unloaded, particularly speed, braking and stability on slopes.
- Be aware of the different handling and braking characteristics of the vehicle in wet or icy

conditions.

- Do not alter tyre pressures outside the manufacturer's specifications.
- When using a starting handle ensure:
    - Neutral gear is selected, the handbrake is firmly applied and the area is clear of obstructions.
    - The starting-handle is the correct type and in good condition with a handle grip that rotates freely.
    - Your thumb is kept on top of the grip of the handle to prevent injury in case of kickback.

Lift Trucks and Telescopic Handlers

Material handling vehicles are at risk of overturning when:

- Overloaded;
- Working on sloping, uneven or unstable ground;
- Driving with raised loads; and
- Driving at excessive speed around corners.

Telehandler visibility to the rear may present a significant hazard. This may be remedied by fitting additional visibility aids. Similarly, when in operation with the boom raised and other configurations, there may be a significant 'blind spot' to the front right-hand side of the vehicle. Both of these hazards should be identified within a risk assessment and suitable control measures should be put in place.

These types of vehicle normally require prepared, flat, graded surfaces to operate safely. Even rough-terrain lift trucks have strict operational limits that need to be observed. Contractors should limit the use of these machines to competent drivers in safe environments.

Excavators

Excavators are involved in many accidents. They commonly occur when excavators slew around, reverse and move around site. To prevent such accidents:

- Excavators should be equipped with adequate visibility aids to ensure drivers can see areas where people may be at risk from the operation of the machine;
- People should be kept away from the areas of excavator operation by the provision of suitable barriers;
- A Marshall should be provided and in a safe position to direct the excavator's operation and any pedestrian movements; and
- A clearance of over 0.5 metres needs to be maintained between any part of the

machine, particularly the ballast weight, and the nearest obstruction.

Accidents commonly occur during reversing and digging operations. If pedestrians are liable to approach temporary work areas, bunting or fencing or other appropriate means need to be used to create and maintain a pedestrian exclusion area. Plan work to include the appropriate use of competent Marshall to control third- party risks and to help the driver to accurately position the machine. At sites where space is limited—eg the loading of muck-away vehicles near the public motorway, sufficient room and appropriate traffic management systems should be provided to allow excavators to operate safely.

To prevent excavators overturning on sloping ground, create level work areas and carefully control the swing of the bucket downhill. All earth-moving vehicles should be parked with their buckets, blades, etc lowered to the ground.

Tipper Lorries and Lorry Loaders

Rear-tipping lorries can overturn during tipping operations. On unmade or uneven ground, tipper-trucks of Stability Category A or equivalent should be used. To prevent overturning:

- Always tip on firm, level ground;
- Never tip on a slope;
- Never tip during high winds;
- Ensure the load is evenly distributed in the body of the truck;
- For articulated vehicles, ensure that the tractor is in line with the trailer body;
- Ensure a competent Marshall is on hand to supervise tipping operations;
- Tip the load gradually so that it is discharged in a controlled manner; and
- Watch out for loads sticking, which could cause instability during tipping.

Visibility from the driving position during reversing operations can be improved by fitting visibility aids such as convex mirrors and CCTV. Warning devices—eg alarms and lights, should operate when lorries and lorry loaders are reversing.

During maintenance operations under tipper-lorry bodies or cabs, proprietary props designed to withstand the lowering forces should be used to secure them in the raised position and prevent their collapse.

Lorry loaders should be operated on firm, level ground with their stabilisers fully extended and the parking brake applied when loading and unloading.

Delivery Lorries and Goods Vehicles

A large proportion of accidents that occur on construction sites involve the delivery of plant and material to the site. Statistics show that the most common causes of accidents involving

goods vehicles are:

- Being struck by a moving vehicle;
- Falls from vehicles while getting in and out of the truck or during loading/unloading operations; and
- Materials falling from vehicles during the unloading process, due to load movement during transit to site.

To control the risks caused by these hazards, the following steps should be taken:

- The site should be designed and laid out, so far as is reasonably practicable, to ensure that people and vehicles cannot come into contact with each other through physical segregation. Physical segregation involves using barriers to keep pedestrians away from manoeuvring vehicles;
- Adequate means of access and egress to the vehicle should be provided. This is not only important for the driver getting in and out of the cab, but also to anyone accessing the vehicle bed to load/unload goods;
- Refuse to accept uneven loads or loads that have moved significantly: competent logistics operators will only send appropriately strapped loads.

Managing Construction Transport

This section examines different duty holders' roles in managing construction vehicle safety using the framework of the Construction (Design and Management) Regulations 2015 (CDM).

The earlier in the life of a project that health and safety issues are considered, the greater the potential for accident prevention. Successful health and safety management details the principal requirements for effective health and safety management that include setting policy, organising staff, planning and setting standards, measuring performance and learning from experience. Key elements of successful health and safety management include:

- Senior management's commitment;
- Clear objectives;
- Competent and trained personnel;
- Effective work planning, including risk assessment;
- Positive implementation in the workplace; and
- Checking and reviewing performance.

Clients

Clients need to ensure that those they appoint are competent to manage transport-related

risks. Clients should consider, in particular, candidates':

- Previous experience and understanding of logistics, such as booking time slots for deliveries and off- site waiting areas where appropriate, and past performance in this area;
- Health and safety management systems; and
- Systems for assessing the competence of their appointees.

CDM requires the client to provide relevant health and safety information with the pre-construction information. When the project is notifiable, the client should provide the CDM coordinator with this information. Transport- related information could include:

- The extent of site occupation by those not involved in construction work;
- Anticipated vehicle and pedestrian traffic movements, including deliveries;
- Speed, height, width and parking restrictions;
- Requirements for safe public and emergency vehicle access;
- Exclusion zones, routes, crossings, traffic calming measures and designated car parks;
- Restrictions on working times or temporary diversions during peak traffic hours;
- Location of gas and electricity services, adjacent railways, etc; and
- Hazardous ground features—eg contaminated landfill areas, burial grounds, underground streams, surface watercourses, etc.

Designers

Designers need to examine, assess and reduce the risks associated with their designs. Considering the following measures at the design stage can assist with safe site vehicle operations:

- Allowing space around structures and site boundaries for safe traffic movement;
- Designing one-way systems and drive-through areas to reduce the need for reversing;
- Removing hazardous gradients and embankments;
- Specifying suitable profiles, surfaces and traffic management for site roads, and the early installation of permanent roads with safe site access to and from the public motorway;
- Considering how site traffic routes can avoid hazards such as overhead electricity lines, railway lines, etc, and how routes need to change as work progresses on-site;
- Indicating the maximum loading limits of floors used by vehicles, particularly during construction, demolition and refurbishment;

- Relocating or protecting vulnerable services such as gas pipes and electricity cables; and
- Passing on information about any features of the design presenting significant transport risks to other project team members as necessary, including significant risks during future construction work or maintenance.

Designers' responsibilities extend beyond the construction phase of the project. They also need to consider health and safety aspects for the users of the workplace in accordance with the Workplace (Health, Safety and Welfare) Regulations 1992 (1993 in Northern Ireland).

CDM Coordinators

CDM coordinators should ensure project designs take account of the issues facing clients and designers above, and that there is pre-construction information on specific transport risks. Pre-construction information may also include things such as:

- The need for crash decks for works over railways;
- Phasing works to minimise risk to the public; and
- Local or statutory authority restrictions—eg in relation to access on and off the public motorway.

Principal Contractors

Principal contractors should ensure the safe management of pedestrian and vehicle movements on-site. Key tasks for principal contractors include:

- Provide relevant information from the construction phase plan to contractors to allow them to adequately plan their work and identify safe systems of work and prepare methodstatements;
- Planning, managing and monitoring transport activities including establishing site rules and giving reasonable directions to contractors;
- Implementing systems of work which ensure that pedestrians and vehicles are kept as far apart as possible;
- Ensuring subcontractors make adequate provision for the selection and supervision of drivers and general vehicle safety;
- Making specific reference to vehicle safety in the construction phase plan, including traffic and pedestrian routes, vehicle access and site rules;
- Setting standards for driver competence, vehicle safety and maintenance, and maintaining a site register of authorised drivers;
- Ensuring coordination and cooperation between contractors;

- Coordinating the views of safety representatives and workers;
- Ensuring all workers receive site induction training covering safe traffic routes and site rules for operating vehicles;
- Establishing safety monitoring procedures for the use of vehicles on-site—eg checking vehicle maintenance, key custody and permit-to-work systems, drivers' work practices, and the use of high- visibility clothing; and
- Reviewing the health and safety performance of everyone on-site.

Compliance with site rules needs to be monitored and necessary action taken when they are breached. Appropriate disciplinary action may be necessary against contractors and individuals who ignore them.

Contractors

Contractors should assess and minimise the transport risks associated with their work, institute safe systems of work, follow the site rules as well as the guidance applicable to them above in the principal contractor section.

To prevent death and injury ensure that you have:

- A safe workplace;
- Safe vehicles; and
- Safe driving and work practices.

Safe System of Work
Maintenance in Trailer Bodies

Ref. SSoW-054	Author.	Lee Hardy	Date:	01.09.2022

Reviewed By: Name	Derick Bibby	Date of Review:	29.08.2026
Record of Amendments			

	Next Review Due Date:	31.08.2027

Overview

The following information provides guidance on the company's Standard Operation Procedures for entering and working in trailer bodies.

All employees have a responsibility for their safety and the safety of others by adhering to these codes of practice.

Hazards Identified

- Respiratory
- Vehicle movements
- Falls from height
- Manual handling
- Crushing
- Slips & Trips
- Explosion

Personal Protective Equipment (PPE) Requirements










This document provides guidance on the measures necessary to perform maintenance inside the skip area of tipping and waling floor trailers.

Cleaning of wagon skips will depend on the types of goods carried and the residues remaining.

Grain and other food/animal stuffs transported under the TASCC scheme are subject to strict rules and regulatory control. The cleaning regimes are stipulated by the IDTF (International Database Transport for Feed) and must be carried out after each load is carried.

If unsure, visit www.icrt-idtf.com and enter the transported material in the search box. It will take you straight to the page containing the cleaning requirements for that load.

Safety Precautions

- All wheels must be chocked before entering skip.
- Park wagon away from any loading areas, to avoid unintentional loading occurring while in skip bed.
- Park on flat, level ground, in an area of sufficient lighting, and away from any access/egress points.
- Always observe site traffic management plans (where provided).
- Never block emergency access routes.
- 5-point PPE (gloves, boots, hat, hi-vis, goggles) must worn when performing task. Mask may also be required, depending on the material residue remaining (this will be identified in the risk assessment).
- Remove keys and keep on person, to prevent third party moving vehicle with operative in skip area.
- Inspect steps and handles before use. Any damage must be reported immediately.
- Access will be gained via steps built into skip body.
- Where this is not possible, suitable, certificated ladders will be used to gain entry at wagon manufacturer's designated entry point.
- NEVER prop open the rear gate of a skip bed, unless there is a built-in prop system that has been fitted.
- NEVER gain entry through the rear gate – always use integral steps or approved ladders at the correct entry points.
- To visually inspect a skip bed, use inspection hatches, or climb the integral steps to view.
- Always maintain three points of contact when climbing any ladder system.
- Always carry a mobile phone on your person, to ensure you can call for help or contact emergency services.

Dust

Dust is dangerous to health and is covered by the Control of Substances Hazardous to Health (**COSHH**) Regulations.
Dust can cause irritation to eyes, skin and the respiratory system.

The Workplace Exposure Limit (**WEL**) of silica dust is:

0.1mg per m3 over 8-hour time-weighted average (TWA)

The Workplace Exposure Limit (**WEL**) of asphalt dust is:

5mg per m3 over 8-hour time-weighted average (TWA)
10mg per m3 over 15 minutes

Masks and goggles MUST be worn at all times when sweeping out.

The COSHH assessment and associated HSE Guidance Note will provide comprehensive detail on the effects of each dust on your health.

Operatives must **NEVER smoke** while sweeping out trailers.

Safe System of Work
Refilling HGV with Diesel and AdBlue

Ref. SSoW-069	Author.	Derick Bibby	Date:	11.10.2024

Reviewed By: Name	Lee Hardy	Date of Review:	29.08.2026
Record of Amendments			

Next Review Due Date:	31.08.2027

O v e r v i e w

This Method Statement is intended to provide, as far as is reasonably practicable, a safe system of work for refilling Heavy Goods Vehicles with diesel and/or AdBlue. It details the steps to be taken and the method used to carry out the task safely. All personnel carrying out this activity are expected to co-operate fully with the methods described and follow the risk control measures identified in the associated risk assessment

Hazards Identified

- Cuts and abrasions
- Skin / Eye Contact
- Slips & Trips.
- Fire or explosion

Personal Protective Equipment (PPE) Requirements








Personal Protective Equipment The driver/fueler is equipped with the following:
▪ Safety Footwear (not rigger boots)
▪ Gloves (1 pair chemical resistant & 1 pair multi-purpose)
▪ Full Length High Visibility Clothing
▪ Safety Glasses
The driver/fueler will ensure that all relevant items of PPE are worn at all times whilst on site. The driver will ensure that all site-specific driving regulations are adhered to

Equipment or Machinery Used.
Diesel filling pump / AdBlue filling pump.

COSHH Relevant.
COSHH assessments are within the RAMS and available on request.

Emergency Procedures.

Should an accident or incident occur on fox group sites, it will be reported to the site responsible person and the fox group accident reporting procedure will be followed. The incident must also be reported through the near miss QR code on the front page of the RAMS and up around Sandham House.

Emergency Contact.

Emergency Contact Details (IN CASE OF EMERGENCY OR INCIDENT)
Fox Group Breakdown – 07923447383

Description of Activity/Task.

Fox Group expects all sites to comply with the statutory requirements of health and safety legislation and inform us of all known hazards and risks that may affect the health and safety of our employees whilst at that site. For fuel stations this may be in the form of on-site signage making drivers / fueler aware of the risks involved. The fuelers will report to the site office, supervisor (responsible person) for instructions on arrival at site.

Statutory Examinations.

All Vehicles are subject to 6-weekly inspections and annual tests. All on site Diesel and AdBlue equipment Is checked and monitored by site staff. Certificates are available on request. Fuel pumps are subject to their own safe methods of working.

METHOD STATEMENT

Re-filling with Diesel or AdBlue

- Diesel tanks must be kept above ¼ full.
- Fuel is only to be taken on from known certified sources.
- When re-filling from site diesel bunkers, fuel is only to be taken on from specified HGV tanks
- Re-filling is not to be completed with any form of container, due to risk of spillage, injury, or contamination.
- Full PPE must be worn at all times when re-fuelling, this includes chemical resistant gloves and safety glasses.
- Any Diesel or AdBlue that comes into contact with skin, must be washed off as soon as possible with soap and water.
- No smoking in or around fuelling areas. Smoking must only take place in designated areas on site.
- No mobile phone is to be used in and around fuelling areas.
- If diesel or AdBlue is ingested or makes contact with eyes, then inform site immediately for first aid and medical attention to be sought.
- Diesel / AdBlue pump must be kept attended at all times when filling, one hand must always be on the pump securing it to the vehicle tank.
- Site management must be informed immediately if any fuel or AdBlue is spilt so site spillage procedures can be followed.
- Once re-filling is complete, your vehicle fuel cap must be securely fitted, and vehicle checked to ensure no fuel leaks are apparent.
- Inform your transport office immediately if diesel or AdBlue is spilt on the site. If risk to the public is identified, emergency services must be informed.

Under the Health and Safety at Work Act, you are required to inform your Manager of any Health

and Safety issues you may have that would affect or endanger yourself or others whilst carrying out your contracted duties

DRAFT SECTIONS – PENDING REVIEW AND APPROVAL – NOT YET PART OF THE SIGNED HANDBOOK

CONTENTS SUPPLEMENT — PAGE NUMBER

Workshop health and fabrication – November 2026

RISK ASSESSMENTS

50. WELDING FUME AND LEV **WF042** 174

SAFE SYSTEMS OF WORK

51. COSHH – HAZARDOUS SUBSTANCES **SSoW-070** 178

52. ISOLATION AND STORED ENERGY **SSoW-071** 182

These sections close gaps identified for fitters and fabrication workshops. WF042 supersedes the outdoor-welding ventilation control in WF003 Electrical Welding. Risk ratings use the risk matrix on page 4. Editable Word versions are held by the FoxSafe Health & Safety Team.

DRAFT FOR REVIEW. Not yet approved for issue. Reviewer sign-off and compliance-register update required before this section is added to the handbook.

Risk Assessment No: WF042	**Task: Welding Fume and Local Exhaust Ventilation (LEV)**	
Prepared By: Derick Bibby	**Date:** 10.11.2026	**RA Review Date:** Annually
	Reviewed By: [Reviewer – pending]	**Date:** [pending]

PPE: Safety Footwear, High Visibility Jacket, High Visibility Trousers, Flame-retardant welding overalls, Welding gauntlets, Welding helmet with suitable filter shade, Respiratory Protective Equipment (RPE) as specified below – powered air-purifying (PAPR) welding helmet as standard

Activity	Hazards	S	L	R	Control Measures	L	S	R
Welding indoors in the workshop or fabrication bay (MIG/MAG, MMA/stick, TIG, flux-cored) – fabrication, chassis and body repair	Inhalation of welding fume – all welding fume, including mild steel, is a human carcinogen (lung cancer) Manganese in fume – neurological damage Gases: ozone, nitrogen oxides, carbon monoxide Metal fume fever, asthma, COPD Exposure of others working nearby	5	4	20	• **Legal position:** HSE will not accept any welding without suitable exposure control, regardless of duration. General ventilation or open doors on their own are NOT adequate control. • **Reduce first:** consider bolting or other cold-joining methods; use lower-fume processes and consumables (e.g. pulsed MIG, solid wire instead of flux-cored where suitable); keep current/voltage to the lowest effective setting. • **Clean the metal:** remove oil, grease, paint, underseal and galvanising from the weld area before welding (see row 4). • All workshop welding is to be carried out in the designated Hot Works / Fabrication area unless a hot work permit covers another location (see WF005 Hot Works). • **LEV is mandatory for all indoor welding:** use on-torch extraction for MIG/MAG where fitted; otherwise use the extracted bench/booth or a movable capture hood on an extraction arm. • Position the capture hood close to the weld (within the capture distance marked on the hood or stated in the LEV user manual) and to the side, so fume is drawn away from the breathing zone. Reposition the hood as the weld progresses. • Switch LEV on before striking the arc and leave it running until the fume has cleared. • Check the airflow indicator / gauge before use. If the LEV is not working, damaged, or the indicator shows low flow – do not weld. Tag it out and report it to the Workshop Supervisor. • Do not position your head in the fume plume. Arrange the workpiece so you can work to the side of the rising fume. • Mechanical general ventilation (roof/wall extract fans) is to be kept running during welding to clear residual fume. • Use welding screens/curtains (BS EN ISO 25980) and signage to keep others out of the welding area.	2	5	10
Residual fume where LEV alone does not give	Inhalation of residual fume that escapes capture	5	3	15	• **RPE is required in addition to LEV** wherever LEV cannot fully control the fume (e.g. large or awkward workpieces, overhead or positional welding, work inside trailer bodies, or where an exposure survey shows residual exposure).	2	5	10

adequate control	Ineffective RPE due to poor fit, facial hair, flat batteries or blocked filters				• **Standard issue for regular welders:** powered air-purifying respirator (PAPR) welding helmet with particle filter. Loose-fitting PAPR does not need a face-fit test and can be worn with facial hair. • **Short, infrequent tasks only:** a tight-fitting half mask with P3 filters or an FFP3 disposable mask (assigned protection factor 20) worn under the welding helmet. Tight-fitting RPE must be face-fit tested to the wearer, and the wearer must be clean shaven where the mask seals. • Before each use: check PAPR battery charge and airflow (using the manufacturer's flow indicator), filter condition and expiry, seals and visor. Do not use defective RPE – report it. • RPE is personal issue. Store it clean, out of the welding area, and replace filters to the manufacturer's schedule. • Fit-test records, RPE issue records and training records are kept by the Workshop Supervisor as part of the RPE programme.			
Welding outdoors – yard, quarry, site or roadside repairs to wagons, trailers and plant	Inhalation of welding fume – LEV cannot capture fume effectively outdoors Wind blowing fume into the welder's or others' breathing zone	5	3	**15**	• **RPE is mandatory for all outdoor welding** – PAPR welding helmet as standard (or FFP3/P3 for short tasks if face-fit tested). Being outside is NOT a substitute for RPE. • Position yourself upwind of the weld where practicable and keep others away from the fume; use mobile screens. • Site welding to be planned with the site responsible person, under their hot work permit where required (see WF005 and SSoW-047). • This row supersedes the outdoor welding control in WF003 Electrical Welding ("well-ventilated areas").	2	5	**10**
Welding, cutting or grinding on painted, coated, galvanised, stainless or contaminated metal (wagon bodies, chassis, tanks, trailers)	Isocyanates released from 2-pack (2K) paints when heated – occupational asthma Zinc oxide fume from galvanised steel – metal fume fever Hexavalent chromium and nickel from stainless steel – cancer, asthma Toxic gas (e.g. phosgene) from	5	4	**20**	• Assume vehicle bodies and chassis are coated with 2K paint unless known otherwise. • Strip paint, underseal and coatings back from the weld/cut area before hot work, using methods that minimise dust (wire wheel or abrasive disc with extraction, or chemical strippers under COSHH assessment – see WF001, WF007 and SSoW-070). • Always use extraction AND RPE when hot working on painted, galvanised or stainless steel. Only trained staff are to carry out hot work on painted panels. • Stainless steel welding and cutting: on-torch or close-capture LEV plus PAPR; keep others out of the area. • Do not use chlorinated solvent degreasers in or near the welding area. Make sure degreased parts are completely dry before welding. • Tanks, drums and containers that have held fuel, oil or other flammable or toxic substances must not be welded or cut until separately risk assessed and cleared under a permit to work (see WF003 and WF005).	2	5	**10**

	chlorinated degreaser residues exposed to the arc Lead from old paint							
Thermal cutting and gouging – plasma cutting, oxy-fuel cutting, arc-air gouging	High volumes of metal fume Nitrogen oxides from plasma cutting Noise (see WF014)	5	4	**20**	• Use downdraught / extracted cutting tables for plasma cutting of plate in the workshop wherever possible. • For hand-held cutting and gouging, use a movable capture hood or extracted bench plus RPE (PAPR as standard). • Gouging is high-fume – carry out in the designated fabrication area with LEV and RPE, and keep others clear. • Gas cylinder controls as WF002 Compressed Gas Cylinders.	2	5	**10**
Welding in vehicle pits, inside trailer bodies, tanks or other poorly ventilated spaces	Build-up of fume and shielding gases (argon, CO2) which are heavier than air and can collect in pits – asphyxiation Oxygen enrichment from leaking oxy-fuel equipment – fire	5	3	**15**	• Do not weld or use gas equipment in a vehicle pit or enclosed body unless it has been specifically assessed and authorised by the Workshop Supervisor (see WF010 Use of Vehicle Pit and SSoW-054). • Where authorised: use LEV that discharges outside the space, PAPR, gas cylinders kept outside the space, and a second person in attendance. • Never use oxygen to 'freshen the air' or blow down clothing. • Any space that meets the definition of a confined space must not be entered without a confined-space risk assessment and permit.	1	5	**5**
LEV examination, testing and maintenance	LEV deteriorates without anyone noticing – workers exposed while believing they are protected Dust and fume exposure during filter changes	4	4	**16**	• Every LEV unit (fixed, mobile and on-torch) is listed on the workshop LEV register with its user manual, commissioning report and log book. • **Weekly:** visual check of each LEV unit by the user (hood, arm, ducting, filters, airflow indicator) – recorded in the log book. • **At least every 14 months:** statutory thorough examination and test (TExT) by a competent ventilation engineer. Act on the report's recommendations. Keep TExT records for at least 5 years. • Filters are to be changed or cleaned to the manufacturer's schedule. Wear RPE (FFP3 minimum) and disposable gloves, bag used filters and dispose of them as hazardous waste. • Defective LEV is to be tagged "DO NOT USE" and taken out of service until repaired. Welding in that bay stops until suitable alternative extraction is in place.	2	4	**8**
Health monitoring, training and	Ill health not detected early	4	3	**12**	• All welders and fabricators receive instruction and training on welding fume risks, correct use of LEV, and fitting and checking of RPE before starting work. Training is recorded.	2	4	**8**

supervision	Controls not used correctly				• Health surveillance (respiratory questionnaire and lung function testing via the occupational health provider) for those who regularly weld, cut or work with stainless steel or 2K-painted metal. Report any breathing symptoms (cough, wheeze, breathlessness) to your supervisor. • Occupational hygiene exposure monitoring to be arranged to confirm that LEV and RPE controls are adequate, and repeated after any significant change in work or equipment. • Supervisors check during routine workshop inspections that LEV is switched on and correctly positioned and RPE is being worn.			

Risk rating key

S = Severity (1–5), L = Likelihood (1–5), R = Risk rating (S × L). Initial rating shown left of the controls; residual rating (with all controls in place) shown right. Bands follow the handbook risk matrix (page 4): 1–3 Acceptable – low (green); 4–7 Acceptable – moderate (blue); 8–14 Acceptable – constant review (yellow); 15–19 Additional control measures required (red); 20–25 Stop (dark red).

Related sections

WF002 Compressed Gas Cylinders · WF003 Electrical Welding · WF005 Hot Works · WF007 Dust · WF010 Use of Vehicle Pit · WF014 Noise · WF016 PPE · SSoW-054 Maintenance in Trailer Bodies · SSoW-070 COSHH in the Workshop (draft)

References

- HSE Safety Alert – Change in enforcement expectations for mild steel welding fume: https://www.hse.gov.uk/safetybulletins/mild-steel-welding-fume.htm
- HSE – Controlling the risks from welding: https://www.hse.gov.uk/welding/welding-controls.htm
- HSE WL3 – Welding fume control: https://www.hse.gov.uk/pubns/guidance/wl3.pdf
- HSE MR6 – COSHH essentials: Hot work on painted panels: https://www.hse.gov.uk/pubns/guidance/mr6.pdf
- HSE – LEV frequently asked questions (14-month TExT): https://www.hse.gov.uk/lev/faqs.htm
- HSE INDG479 – Guidance on RPE fit testing: https://www.hse.gov.uk/pubns/indg479.htm
- Control of Substances Hazardous to Health Regulations 2002 (COSHH), regulations 7, 9 and 11

DRAFT FOR REVIEW. Not yet approved for issue. Reviewer sign-off and compliance-register update required before this SSoW is added to the handbook.

Safe System of Work

COSHH – Hazardous Substances in the Workshop

Ref. SSoW-070	Author.	Derick Bibby	Date:	10.11.2026
Reviewed By: Name	[Reviewer – pending]		**Date of Review:**	[pending]
Record of Amendments				
v0.1 – 10.11.2026 – First draft for review (D. Bibby)				
			Next Review Due Date:	**12 months from issue**

Overview

This Method Statement is intended to provide, as far as is reasonably practicable, a safe system of work for the use, storage and disposal of substances hazardous to health in Fox Group wagon fitters and fabrication workshops, and during mobile and site repairs. It details the steps to be taken and the method used to carry out the task safely. All personnel carrying out this activity are expected to co-operate fully with the methods described and follow the control measures identified in the associated COSHH assessments.

Scope

- All fitters, fabricators, apprentices, drivers and visitors working in Fox Group workshops or carrying out mobile repairs.
- All hazardous substances used or produced in the workshop: oils, fuels, AdBlue, coolants, brake fluid, solvents and aerosols, adhesives, sealants, fillers, paints, battery acid, welding fume, dusts and diesel engine exhaust.

Hazards Identified

- Skin contact – dermatitis, oil acne, and skin cancer from prolonged contact with used engine oil
- Inhalation of vapours, mists, fume and dust – irritation, asthma, lung disease, cancer
- Eye contact – splashes from fluids, acids and aerosols
- Ingestion – contaminated hands, decanting into drinks bottles
- Fire or explosion – flammable solvents, aerosols, fuels and vapours
- High-pressure injection of oil, grease or fuel through the skin
- Environmental pollution from spills and incorrect disposal

Personal Protective Equipment (PPE) Requirements



Personal Protective Equipment – each fitter / fabricator is equipped with the following:

- Safety Footwear
- Overalls (changed when contaminated – never put oily rags in pockets)
- Full Length High Visibility Clothing in yard and on site
- Chemical-resistant gloves as stated on the COSHH assessment – disposable nitrile for oils and fuels as standard (not latex); heavier-duty nitrile or neoprene for solvents and acids
- Safety Glasses; goggles or face shield when decanting, handling acid, or there is a splash risk

- RPE where the COSHH assessment requires it (e.g. FFP3 for dusts, A2P3 combined filters for solvent spraying) – tight-fitting RPE must be face-fit tested

Equipment or Machinery Used.

- Workshop COSHH register and Safety Data Sheets (SDS)
- Labelled dispensing containers, funnels, oil drainers and fluid recovery units
- Metal flammable-liquid storage cabinet; bunded oil and chemical storage
- Tailpipe exhaust extraction (where fitted) and workshop ventilation
- Spill kits, eye-wash station, hand-washing facilities with skin cleanser and after-work cream
- Lidded metal bins for oily rags; segregated hazardous-waste containers

COSHH Relevant.

COSHH assessments for each product and process are held in the workshop COSHH register and are available from the Workshop Supervisor and on request. Read the COSHH assessment and SDS before first use of any product. Welding fume is covered separately by WF042 Welding Fume and Local Exhaust Ventilation; diesel and AdBlue refuelling by SSoW-069.

Emergency Procedures.

Should an accident or incident occur on Fox Group sites, it will be reported to the site responsible person and the Fox Group accident reporting procedure will be followed. The incident must also be reported through the near miss QR code on the front page of the RAMS and up around Sandham House.

Emergency Contact.

Emergency Contact Details (IN CASE OF EMERGENCY OR INCIDENT)

Fox Group Breakdown – 07923447383

Emergency services – 999 · First aid: see WF041 First Aid · Spills: see WF040 Emergency Spill Response

Description of Activity/Task.

Fox Group expects all workshops and sites to comply with the Control of Substances Hazardous to Health Regulations 2002 (COSHH). Exposure to hazardous substances must be prevented, or where that is not reasonably practicable, adequately controlled. The order of control is: eliminate or substitute the product; use engineering controls (extraction, enclosed systems, tools that keep a working distance); then safe working practice; and finally PPE.

The Workshop Supervisor is responsible for keeping the COSHH register up to date, making sure no new product is brought into the workshop without an SDS and COSHH assessment, and making sure controls are in place and used.

Statutory Examinations.

- LEV (including welding extraction, tailpipe extraction, spray booths and dust extraction): thorough examination and test at least every 14 months; weekly user checks recorded (see WF042).
- RPE: face-fit test for tight-fitting facepieces before first issue and on change of model/size; pre-use checks by the wearer; maintenance of reusable RPE at least monthly where used.
- Health surveillance via the occupational health provider where the COSHH assessment requires it – e.g. skin checks for those regularly in contact with oils and solvents; respiratory surveillance for isocyanate, stainless-steel welding and other asthmagen exposure.
- Storage cabinets, bunds and spill kits inspected monthly by the Workshop Supervisor.

METHOD STATEMENT

Before using any substance

- Check the product is on the workshop COSHH register. If it is not, do not use it – speak to the Workshop Supervisor.
- Read the label and the COSHH assessment. Know the hazard symbols, the PPE required, and the first aid and spill actions.
- Use the least hazardous product that will do the job (e.g. water-based degreaser instead of solvent, brush-on instead of aerosol).
- Never decant into unlabelled containers, food or drink containers. All dispensing containers must carry the product name and hazard label.
- Do not eat, drink, smoke or vape in the workshop. Wash hands before breaks and at the end of the shift.

Common workshop substances and key controls

Substance / process	Main risks	Key controls
Used engine oil, gear and hydraulic oil	Dermatitis, oil acne, skin cancer (used engine oil)	Nitrile gloves; drain into oil drainers or recovery units, not open trays; wipe spills immediately; change contaminated overalls; no oily rags in pockets; wash skin promptly.
Diesel and AdBlue	Skin irritation, eye irritation, flammable (diesel)	Follow SSoW-069. Nitrile gloves and glasses; no containers for refilling; fuel line work only with fuel retriever / sealed container, away from ignition sources.
Brake and parts cleaners, aerosols, solvents, degreasers	Vapour inhalation (dizziness, headaches), dermatitis, highly flammable	Prefer water-based cleaners or brush-on products; use in a ventilated area; never near welding, grinding or other hot work; no aerosol use in pits; store in the flammables cabinet; empty aerosols in the designated waste.
Antifreeze / coolant	Toxic if swallowed (ethylene glycol); hot coolant scalds	Only open cooling systems when cold (WF023); nitrile gloves; collect in labelled containers; never leave coolant in open trays.
Brake fluid	Eye and skin irritation; damages paint	Nitrile gloves and glasses; bleed into a sealed container.
Battery acid / batteries	Burns to skin and eyes; hydrogen gas – explosion	Follow WF020. Goggles or face shield and acid-resistant gloves; eye-wash available; no sparks or naked flames near charging batteries.
Grease and high-pressure hydraulics	Injection through skin – can cause loss of limb	Isolate and release pressure before work (SSoW-071). Never feel for leaks with hands – use card. Any injection injury is a medical emergency: go to A&E straight away.
Adhesives, sealants, fillers, 2K paints and hardeners	Dermatitis; isocyanates – asthma	Only trained staff; brush/roller application under COSHH assessment; spraying of isocyanate paints only in a suitable spray booth by staff under respiratory health surveillance – otherwise do not spray.
Dusts – brake dust, grinding and sanding dust, sweeper debris	Lung damage; possible asbestos in older brake linings and gaskets	Never use compressed air to blow out brake drums or clean clothing; use wet-wipe or brake-cleaning equipment; extraction for grinding (WF001, WF007). Suspect asbestos – stop, do not disturb, report to supervisor.
Diesel engine exhaust (DEEE) in the workshop	Lung cancer, respiratory irritation	Keep engine running inside to a minimum; use tailpipe extraction where fitted; open doors and use ventilation; do not run engines in pits or near people working.
Welding and cutting fume	Lung cancer and other lung disease	Follow WF042 – LEV for all indoor welding, RPE where LEV is not adequate and for all outdoor welding.

Protecting your skin

- Avoid contact first – use tools, funnels, drainers and enclosed systems rather than hands.
- Wear the gloves stated on the COSHH assessment. Change gloves when torn or contaminated inside, and do not reuse disposable gloves.
- Clean skin with the workshop skin cleanser and water – never with solvents, fuel, thinners or abrasive powders.
- Use after-work cream to replace skin oils. Pre-work "barrier" creams are not a substitute for gloves.

- Check your hands regularly for redness, dryness, itching, cracking or rashes and report any symptoms to your supervisor straight away.

Storage

- Flammable liquids and aerosols are stored in the metal flammables cabinet, kept closed when not in use, away from hot works, heaters and electrical equipment.
- Only the quantity needed for the job (no more than one shift's supply) is kept at the workbench or vehicle.
- Oils and chemicals in drums or IBCs are stored on bunds or in bunded stores. Keep acids, oxidisers and flammables segregated.
- Gas cylinders stored and secured as WF002 Compressed Gas Cylinders.

Spills and waste

- Contain spills immediately with the spill kit and inform the Workshop Supervisor (see WF040 Emergency Spill Response). Do not wash spills into drains.
- Waste oil into the bunded waste-oil tank; used oil filters drained and placed in the filter bin; oily rags and absorbents in the lidded metal bin.
- Coolant, brake fluid, batteries, aerosols and contaminated filters (including LEV filters) are hazardous waste – segregated and collected by a licensed carrier with a consignment note.

If something goes wrong

- Skin contact: remove contaminated clothing, wash skin with soap and water.
- Eye contact: rinse at the eye-wash station for at least 10–15 minutes and seek first aid.
- Inhalation: move to fresh air; seek first aid if symptoms continue.
- Swallowed: do not induce vomiting – seek medical attention and take the SDS or label with you.
- High-pressure injection injury: treat as a medical emergency – go to A&E immediately even if the wound looks minor.
- Report all incidents and near misses through the Fox Group reporting procedure.

Under the Health and Safety at Work Act, you are required to inform your Manager of any Health and Safety issues you may have that would affect or endanger yourself or others whilst carrying out your contracted duties.

Related sections

WF001 Abrasive Wheels · WF002 Compressed Gas Cylinders · WF007 Dust · WF012 Refuelling · WF016 PPE · WF020 Working with Batteries · WF023 Working on Cooling Systems · WF040 Emergency Spill Response · WF041 First Aid · WF042 Welding Fume and LEV (draft) · SSoW-069 Refilling HGV with Diesel and AdBlue · SSoW-071 Isolation and Stored Energy (draft)

References

- Control of Substances Hazardous to Health Regulations 2002 (as amended)
- HSE – Used engine oil (motor vehicle repair): https://www.hse.gov.uk/mvr/topics/oil.htm
- HSE – Common motor vehicle repair topics / COSHH essentials: https://www.hse.gov.uk/mvr/topics/index.htm
- HSE INDG356 – Reducing ill health and accidents in motor vehicle repair: https://www.hse.gov.uk/pubns/indg356.pdf
- HSE – Preventing skin problems: https://www.hse.gov.uk/skin/employ/prevention.htm
- HSE – Health surveillance in the motor vehicle industry: https://www.hse.gov.uk/mvr/bodyshop/health-surveillance.htm
- HSE – LEV frequently asked questions: https://www.hse.gov.uk/lev/faqs.htm

DRAFT FOR REVIEW. Not yet approved for issue. Reviewer sign-off and compliance-register update required before this SSoW is added to the handbook.

Safe System of Work

Isolation and Stored Energy – Vehicles, Plant and Workshop Machinery

Ref. SSoW-071	Author.	Derick Bibby	Date:	10.11.2026
Reviewed By: Name	[Reviewer – pending]		**Date of Review:**	[pending]
Record of Amendments				
v0.1 – 10.11.2026 – First draft for review (D. Bibby)				
			Next Review Due Date:	**12 months from issue**

Overview

This Method Statement is intended to provide, as far as is reasonably practicable, a safe system of work for isolating vehicles, trailers, plant and workshop machinery, and making all stored energy safe, before inspection, maintenance, repair, cleaning or fabrication work starts. It details the steps to be taken and the method used to carry out the task safely. All personnel carrying out this activity are expected to co-operate fully with the methods described and follow the risk control measures identified in the associated risk assessments.

Scope

- HGVs, tippers, trailers, sweepers, low loaders, hook-loaders and vehicles fitted with cranes or other hydraulic equipment.
- Mobile plant brought into the workshop or repaired on site.
- Workshop machinery: pillar and radial arm drills, saws, grinders, compressors, vehicle lift tables, gantry crane, washdown equipment and fabrication machinery.
- Work in the workshop, in Fox Group yards, on customer or construction sites, and at the roadside.

Hazards Identified

- Unexpected starting, movement or rolling of a vehicle or machine – crushing, entanglement, run-over
- Gravity – raised tipper bodies, cabs, cranes, attachments or chassis falling
- Hydraulic pressure – sudden movement, hose failure, high-pressure injection injury
- Compressed air – air tanks, brake systems, spring brake chambers and air suspension releasing energy
- Electrical – vehicle 12/24 V systems (burns, arcing, fire), mains-powered machinery (shock), high-voltage electric/hybrid vehicles
- Mechanical – rotating parts that run on (fans, sweeper brushes, flywheels, PTOs), springs under tension
- Thermal – hot engines, exhausts and pressurised cooling systems
- Someone else re-energising equipment while you are working on it

Personal Protective Equipment (PPE) Requirements







Personal Protective Equipment – each fitter / fabricator is equipped with the following:

- Safety Footwear
- Full Length High Visibility Clothing in yards, on site and at the roadside

- Gloves (multi-purpose; chemical-resistant where fluids are present)
- Safety Glasses (face shield when working near pressurised hydraulic or air systems)
- Hard hat where required by site rules or overhead hazards

Equipment or Machinery Used.

- Personal safety padlock with a single key, marked with the fitter's name (one person – one lock – one key)
- Multi-lock hasps, lockable battery isolator covers, plug lock-out boxes, circuit-breaker and valve lock-outs
- "DANGER – VEHICLE UNDER REPAIR – DO NOT START OR MOVE" and "DO NOT OPERATE" tags
- Lockable key safe for vehicle and plant keys
- Wheel chocks, axle stands, body props, cab-tilt supports, crane/boom supports
- Spring brake caging (wind-off) bolts, air-line gauges, approved voltage indicator and proving unit (electrician use)

COSHH Relevant.

Hydraulic oil, brake fluid, coolant and battery acid may be released during isolation. Follow SSoW-070 COSHH – Hazardous Substances in the Workshop and the product COSHH assessments.

Emergency Procedures.

Should an accident or incident occur on Fox Group sites, it will be reported to the site responsible person and the Fox Group accident reporting procedure will be followed. The incident must also be reported through the near miss QR code on the front page of the RAMS and up around Sandham House.

High-pressure hydraulic or air injection injuries, even if they look minor, are a medical emergency – go to A&E immediately and tell them it is an injection injury.

Emergency Contact.

Emergency Contact Details (IN CASE OF EMERGENCY OR INCIDENT)

Fox Group Breakdown – 07923447383

Emergency services – 999 · First aid: see WF041 First Aid · Spills: see WF040 Emergency Spill Response

Description of Activity/Task.

Before anyone works on a vehicle, machine or item of plant, it must be stopped, isolated from all energy sources, and all stored energy must be released or restrained. The isolation must then be secured so it cannot be undone by anyone else, and proved to be effective before work starts.

Emergency stops, interlocks, control switches and simply "turning it off" are NOT isolation. Never rely on hydraulics alone to hold anything up.

The Workshop Supervisor is responsible for issuing personal locks, maintaining lock-out equipment, and authorising isolation of fixed workshop electrical supplies. Work on high-voltage (electric or hybrid) vehicle systems is only to be carried out by persons trained and authorised for that work (see WF021).

Statutory Examinations.

- Vehicle lift tables and vehicle lifts: thorough examination under LOLER by a competent person – six-monthly as recommended by HSE for lifts that people work beneath.
- Gantry crane and lifting accessories (chains, slings, shackles): thorough examination under LOLER – lifting accessories at least every 6 months; other lifting equipment at least every 12 months, or per the examination scheme.
- Trolley and bottle jacks: thorough examination annually; axle stands and body props inspected annually and checked before each use.
- Air receivers and compressors: examined in accordance with the written scheme of examination under the Pressure Systems Safety Regulations 2000.

- Vehicles are subject to 6-weekly inspections and annual tests. Lockable isolators on workshop machinery are checked during the monthly workshop inspection.

METHOD STATEMENT

Key rules

- **One person – one lock – one key.** Every person working on the equipment fits their own personal lock. Never work under someone else's lock.
- **Only the person who fitted a lock removes it.** Keep the key on you at all times.
- **Isolate – lock – tag – release – prove.** Do not start work until every step is complete.
- **If in doubt, stop and ask** the Workshop Supervisor.

Step 1 – Plan the isolation

- Identify every energy source on the vehicle, plant or machine: electrical, hydraulic, pneumatic (air), mechanical, gravity, thermal and fuel. Use the manufacturer's information where available.
- Inform the Workshop Supervisor and anyone else working on or around the vehicle or machine.

Step 2 – Position and secure the vehicle or plant

- Park on level, firm ground in the designated workshop bay or a safe area away from traffic (see WF011 and WF030).
- Apply the parking brake, put the gearbox in neutral and chock the wheels on both sides of an axle that is not being lifted.
- Lower attachments, buckets, forks and cranes to the ground or onto supports.

Step 3 – Switch off and control the keys

- Stop the engine and remove the ignition key. Keep the key on your person or lock it in the key safe using your personal lock.
- Fit the "VEHICLE UNDER REPAIR – DO NOT START OR MOVE" tag to the steering wheel and cab door.
- For keyless or push-button start vehicles, keep the fob well away from the vehicle in the locked key safe.

Step 4 – Isolate electrical energy

- Vehicles: switch off the battery master isolator and lock it with your personal lock where it is lockable. Where there is no lockable isolator, disconnect the battery earth (negative) lead first and insulate it (see WF020).
- Workshop machinery: switch off at the local isolator and lock it in the OFF position with your personal lock and tag. For plug-in equipment, unplug and fit a plug lock-out box, or keep the plug under your control.
- Fixed electrical installations: isolation and proving dead by a competent electrician only.
- Electric/hybrid vehicles: high-voltage isolation only by trained and authorised persons following the manufacturer's procedure (WF021).

Step 5 – Support raised loads (gravity)

- Tipper bodies must be fully lowered, or propped with the correct body prop before anyone goes under them (see WF031 Working Under Propped Body and SSoW-054).
- Tilt cabs must be fully tilted to the locked position with the cab-tilt support engaged.
- Never work under a vehicle supported only on a jack – use axle stands of suitable rated capacity on firm ground (see WF019 and WF026).
- Cranes, booms and hook-loader arms are stowed or supported mechanically. Never rely on hydraulic rams or valves to hold a load.

Step 6 – Release hydraulic pressure

- With the engine stopped, operate the hydraulic controls through their full range to relieve residual pressure, following the manufacturer's procedure. Discharge accumulators where fitted.
- Slacken fittings slowly with a rag over the joint and your face away from the line. Never use your hand to search for leaks – use a piece of card.
- Allow hot hydraulic oil to cool before opening the system.

Step 7 – Release or restrain air pressure

- Before working on brake, suspension or air systems, drain the air tanks and confirm zero pressure on the gauge.
- Spring brake chambers: wind off (cage) the spring using the caging bolt before removing the chamber or releasing the park brake mechanically. Never dismantle a spring brake chamber.
- Air suspension: support the chassis on axle stands before disconnecting air bags or levelling valves.
- Workshop compressors: isolate electrically, close the outlet valve and vent the receiver before working on the compressor or air lines.

Step 8 – Mechanical and thermal energy

- Wait until all rotating parts have stopped – fans, sweeper brushes, PTOs, drill spindles and saw blades can run on.
- Release or restrain springs and tensioned belts in line with the manufacturer's instructions.
- Let engines, exhausts and cooling systems cool down. Do not open a hot pressurised cooling system (WF023).

Step 9 – Prove the isolation

- Try to start the vehicle or machine and operate the controls to prove nothing moves. Return all controls to OFF / neutral afterwards.
- Check gauges read zero pressure and that raised parts are secure on their mechanical supports.
- Only now may work start.

Step 10 – Multiple workers and shift handover

- Where more than one person is working, fit a multi-lock hasp to the isolation point. Each person fits their own lock.
- At shift handover, the incoming fitter fits their lock BEFORE the outgoing fitter removes theirs. Pass on the job status verbally and on the job card.

Step 11 – Return to service

- Check all tools, equipment and people are clear; guards, covers and panels are refitted.
- Remove your own lock and tag. Reconnect batteries and restore supplies in the reverse order.
- Re-pressurise air and hydraulic systems, check for leaks and test the function before the vehicle or machine is released.
- Remove body props, axle stands and chocks only when it is safe to do so. Update the job card and tell the Workshop Supervisor.

Lost key or lock left on

A lock may only be removed by someone other than its owner when ALL of the following are complete:

- The Workshop Supervisor or Workshop Manager has confirmed the lock owner is not on site and has attempted to contact them.
- The supervisor has personally checked that the vehicle or machine is safe and no one is working on it.
- The removal is recorded with the date, time, reason and name of the person authorising it, and the lock owner is told before they next start work.

Mobile, site and roadside repairs

- The same principles apply away from the workshop. Remove and keep the key, fit the tag, chock the wheels and support raised parts before starting work.

- Follow the site's own isolation or permit rules where they exist, and SSoW-047 Use of Vehicles on Construction Sites.
- At the roadside, follow SSoW-012 Changing HGV and Trailer Wheels and Tyres and Fox Group breakdown arrangements.

Under the Health and Safety at Work Act, you are required to inform your Manager of any Health and Safety issues you may have that would affect or endanger yourself or others whilst carrying out your contracted duties.

Related sections

WF004 Electricity · WF006 Lifting Operations · WF010 Use of Vehicle Pit · WF011 Vehicle and Plant Movements · WF019 Working Under Vehicles · WF020 Working with Batteries · WF021 Working on Electric Vehicles · WF022 Repairing Vehicle Brakes · WF023 Working on Cooling Systems · WF026 General Jacking and Blocking · WF027 Checking and Changing Hoses · WF028 Sweeper Vehicles · WF031 Working Under Propped Body · WF033 Vehicle Lift Table · WF034 Radial Arm Drill · WF035 Gantry Crane · WF037 Pillar Drill · SSoW-012 · SSoW-047 · SSoW-054 · SSoW-070 COSHH (draft)

References

- Provision and Use of Work Equipment Regulations 1998 (PUWER), regulation 19 (isolation from sources of energy)
- HSE – Maintenance of work equipment (safe isolation): https://www.hse.gov.uk/work-equipment-machinery/maintenance.htm
- HSE – Vehicle inspection, maintenance and repair: https://www.hse.gov.uk/workplacetransport/vehicles/inspection.htm
- HSE INDG434 – Working safely under motor vehicles being repaired: https://www.hse.gov.uk/pubns/indg434.pdf
- HSE – Working under vehicles (vehicle lift examination): https://www.hse.gov.uk/mvr/mechanical-repair/under-vehicles.htm
- HSE – Thorough examinations and inspections of lifting equipment: https://www.hse.gov.uk/work-equipment-machinery/thorough-examinations-lifting-equipment.htm
- HSE HSG253 – The safe isolation of plant and equipment: https://www.hse.gov.uk/pubns/books/hsg253.htm
- HSE – Electric and hybrid vehicles: https://www.hse.gov.uk/mvr/topics/electric-hybrid.htm