

μMult Assembly Guide

This document will guide you in the assembly of the μMult dual buffered multiple module kit. The steps shown focus on the mechanical assembly of the main board and panel.



Assemble the module following the steps in the order shown. Please read and follow these instructions carefully to avoid incorrect assembly or damage to the module.




Note that some components on the main board assembly are ESD sensitive. Care should be taken when handling the main board and components during assembly.


1 Main Board Assembly



1.1 Start by soldering the power header to the main board.

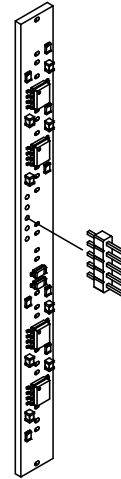

1.2 Ensure that the power header sits flush to the back side of the board to prevent interference with the jacks.


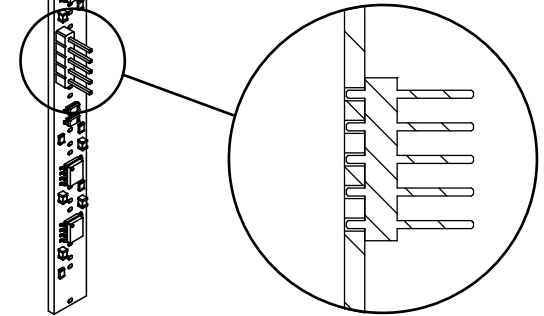


2 Final Assembly

2.1 Place jacks on the main board and lightly thread them into the panel to ensure they line up before soldering.

Note that the top 4 jacks and the bottom 4 jacks face in opposite directions.

2.2 Once all the jacks have been oriented correctly, solder them into place on the main board. Fully tighten all jacks to the panel.

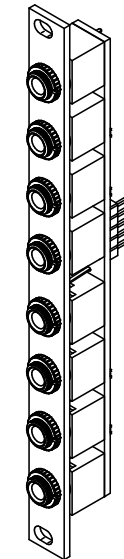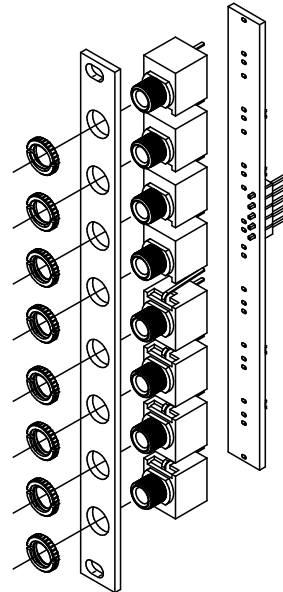

Completed module.